

## Instruction manual

MP3 PLAYER  
MP02 16G



## You'll soon be enjoying your new MP3 PLAYER

It all begins here, with your instructions. Don't worry, there's nothing too technical coming up. Just simple, step-by-step guidance to get you up and running quickly. Sound good? Then let's get started.

### Help and Guidance

We're here to help you get the most from your MP3 player. Should you require any guidance, a simple solution often can be found online at:

[www.argos-support.co.uk](http://www.argos-support.co.uk)

If you still require further assistance, call one of our experts on **0345 604 0105**.

### Led indicator

Device Status	Led Indicator Action
Paused	Long lit in blue
Play Music	Slow blinks in blue
Low Battery	Quick blinks in blue
Charging	Long lit in red, goes off when fully charged
Connecting to PC	Long lit in red

### Definition for Actions

Action	Operation
Short Press	Press time shorter than 2 seconds
Long Press	Press time longer than 2 seconds
Press and Hold	Press and hold the key

Note: If without specific instruction, any action in this manual refers to short press

## 1 Safety information

**Important** - Please read these instructions fully before installing or operating

### NOTE

Below contents are for how to use the device properly and keep it in good condition, please read carefully

- Avoid serious impact to the device.
- Avoid contact of Benzene or any diluents.
- Avoid closing to strong powerful magnetic or electric fields.
- Avoid direct sunshine or heating devices.
- Do not try to disassemble, repair, or modify the device.
- Do not use the device with earphone while bicycling, driving, or motorcycling.
- Do not listen to music with high volume to avoid damage to your hearing.
- Assort and dispose with care the used packing, used batteries, used electrical devices.

### WARNING:




To prevent possible hearing damage, do not listen to this radio at high volume levels for long periods of time.

## 2 Using your MP3 PLAYER

Let's get started

### Device Layout

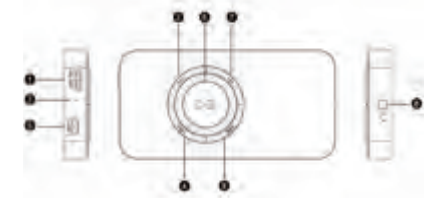

### Keys' Functions

1. **Power Switch**: Push to ON position turn on device, OFF position to turn off device.
2. **⏮ / ⏭**: Short press for previous track, long press for fast backward
3. **Indicator**: Blue or Red for different status, see below chart.
4. **VOL-**: Decrease volume
5. **Micro USB Port**: Connect to charger for charging, to PC to download music
6. **▶**: Short press for play, long press for turning on/off device
7. **⏭**: Short press for next track, long press for fast forward
8. **Standard 3.5MM earphone jack**
9. **VOL +**: Increase volume

### PC Connection

#### System Requirement

Operation System: Windows 98/7/10/ME/2K/XP/Vista/Linux9/Linux6.2/Mac os 10



CPU: at least Pentium-133MHz

Ram: at least 32MB

Spare Hard disk space: at least 100MB

USB port

#### Connecting with PC

1. When the device is either at ON or OFF status, use the USB cable that comes with the device to connect to PC. If the right down corner of the PC screen shows a green arrow  that means the device is connected with the PC successfully as a hard disk, user can find it in My Computer and edit it's content or copy files or music into it.
2. If user want to disconnect/unplug the device from the PC, user should double click the green arrow  again and choose the Stop from the prompt out Safely Remove Hardware window to disconnect it with the PC safely before unplug the USB cable, otherwise might cause data loss.

### Turn on/off device

Push the power switch to ON position to turn on the device, to OFF position to turn off the device.

### Play Music

Push the power switch to ON position, device will turn on and go into music play mode, and indicator blinks in blue, short press VOL - key to decrease volume, press VOL + key to increase volume, short press **⏮** / **⏭** key for previous track and long press for fast backward, short press **▶** key for next track, long press for fast forward, short press **⏸** key to pause/play, long press it will turn on/off device.

### Resume Play function

Long press the play/pause button to turn off the device, next time when the device is on, it can remember the place last stop and resume playing.

### 3 Other information

Helpful technical information

#### Specification

<b>USB</b>	Micro USB 5Pin , USB 2.0 high speed transfer, USB charging	
<b>ROM</b>	16 GB NAND FLASH	
<b>Battery</b>	Polymer Lithium battery 3.7V, Capacity: 120MAH	
<b>Audio Specification</b>	Max. Audio Jack Output	(L) 10 mW+(R) 10 mW (32Ohm)
	F/R	20Hz-20KHz
	Support Music Format	MP3/WMA
<b>Environmental Temperature</b>	-40°C-60°C	
<b>Support OS</b>	Windows 98/7/10/ME/2K/XP/Vista/Linux9/Linux6.2/Mac os 10	

### 4 Help is always at hand

#### Troubleshooting

##### 1. Device fail to turn on

Please check whether the battery is run out of power, user can try again after connecting it to a PC or charger with the USB cable or after charging the device.

##### 2. No sound from earphone

well plug in

##### 3. Serious Noise

Please check whether the earphone plug is clean as a dirty one might have poor connection and cause noise. Please check whether the music file is damaged, user can try other music to verify this, a damaged music file can cause serious noise or pop sounds.

##### 4. Unable to download files

Please make sure the device is well connected with the PC Please check whether the storage space of the device's memory is full Please check whether the USB cable is damaged

#### Help and assistance

If you require any technical guidance or find that your MP3 PLAYER is not operating as intended, a simple solution can often be found in the Troubleshooting section of these instructions or online at [www.argos-support.co.uk](http://www.argos-support.co.uk)

If you still require further assistance, call one of our experts on

**0345 604 0105.\***

Local call rates applies\*

**Lines open 8am-7pm Monday to Saturday and 10am-4pm Sunday.**

\*Calls to Argos enquiry lines may attract a charge and set up fee from residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see [www.bt.com/pricing](http://www.bt.com/pricing) for details.

For Security and training purposes, telephone calls to and from customer service centres maybe recorded and monitored. Calls from Republic of Ireland will attract international call charges.

### 5 Product support

Help is always at hand

#### Disposal

The symbol on the product or its packaging indicates that this product may not be treated as household waste. Instead it should be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For your household waste disposal service or the shop where the product was purchased.



8

9

10

11

# BUSH

## Call us now and activate your 12 month guarantee

Thank you for choosing Bush. Your new product is guaranteed against faults and breakdowns for 12 months. Don't forget to register it with us today so we can provide you with our best possible after-sales service and useful updates.

[www.bushregistration.co.uk](http://www.bushregistration.co.uk)

FREEPHONE\*

**0800 597 8548**

Lines are open 8am - 8pm, 365 days a year.

\*Calls may be recorded and monitored.

12

#### Your Bush Guarantee

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will be repaired free of charge (or if applicable the product will be replaced or the purchase price refunded) where possible during this period by the dealer from whom you purchased the unit.

#### The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in the manual.
- It must be used solely for domestic purposes. The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- Bush disclaims any liability for loss or damage arising from the breakdown of the product.
- This guarantee is in addition to and does not diminish your statutory or legal rights.

13

#### Important Data Protection Information

If you provide us with information about another person, you confirm that they have appointed you to act for them, to consent to the processing of their personal data including sensitive personal data and that you have informed them of our identity and the purposes (as set out in the Important Data Privacy notice displayed overleaf) for which their personal data will be processed.

You are entitled to ask for a copy of the information we hold about you (for which we may charge a small fee) and to have any inaccuracies in your information corrected.

For quality control and training purposes, we may monitor or record your communications with us.

If your personal details change, if you change your mind about any of your marketing preferences or if you have any queries about how we use your information, please let us know by contacting our Data Protection Officer, Domestic & General, Leicester House 17 Leicester Street, Bedworth, Warwickshire, CV12 8JP.

Guarantor: Argos Limited - 489 - 499 Avebury Blvd. - Milton Keynes - MK9 2NW

14

15