


## Instruction manual

MP3 PLAYER  
MP04C 8G BLACK

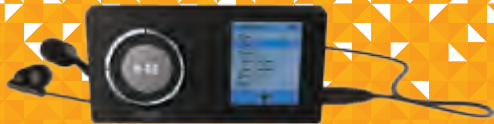

## You'll soon be enjoying your new MP3 PLAYER

It all begins here, with your instructions. Don't worry, there's nothing too technical coming up. Just simple, step-by-step guidance to get you up and running quickly. Sound good? Then let's get started.

### Help and Guidance

We're here to help you get the most from your MP3 player. Should you require any guidance, a simple solution often can be found online at:

[www.argos-support.co.uk](http://www.argos-support.co.uk)

If you still require further assistance, call one of our experts on **0345 604 0105**.

### Turn on/off device

Push the power switch to ON position to turn on the device, to OFF position to turn off the device.

### PC Connection

#### System Requirement

Operation System: Windows 98/7/10/ME/2K/XP/Vista/  
Linux9/Linux6.2/Mac os 10  
CPU: at least Pentium-133MHz  
Ram: at least 32MB  
Spare Hard disk space: at least 100MB  
USB port

### Connecting with PC

When the device is either at ON or OFF status, use the USB cable that comes with the device to connect to PC to copy files into the device.

### Music Mode

#### Main Menus

Choose Music in the main window, and press **▶** to show main menus: Now playing (this menu won't exist if there is no play history, same for other functions), All Music, Artist, Album, Genre, My Music List.

#### Basic operation

User can press **▶** for play or pause, and press **◀** or **▶** for previous or next track. Long press **◀** or **▶** for skip fast backward or forward. For volume change, press **Vol Select** to show volume change menu, and press **◀** or **▶** to decrease or increase volume.

#### Sub Menus

During music playing, long press **MENU** key to show sub menus: Select EQ, Play mode, Screen Mode, Add to My Playlist, AB Repeat, Delete, Advanced, Information.

## 1 Safety information



**Important** - Please read these instructions fully before installing or operating

### NOTE

Below contents are for how to use the device properly and keep it in good condition, please read carefully

- Avoid serious impact to the device.
- Avoid contact of Benzene or any diluents.
- Avoid closing to strong powerful magnetic or electric fields.
- Avoid direct sunshine or heating devices.
- Do not try to disassemble, repair, or modify the device.
- Do not use the device with earphone while bicycling, driving, or motorcycling.
- Do not listen to music with high volume to avoid damage to your hearing.
- Assort and dispose with care the used packing, used batteries, used electrical devices.

### WARNING:




To prevent possible hearing damage, do not listen to this radio at high volume levels for long periods of time.

## 2 Using your MP3 PLAYER

Let's get started

### Device Layout

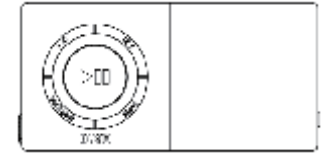

### Keys' Functions

- 1. Menu Key:** Short press to exit and return to upper menu, long press to show sub menus.
- 2. ◀:** Short press for previous track or option, long press for fastwind.
- 3. ▶:** Short press for next track or option, long press for fast forward.
- 4. ⏸:** Play/ Pause key, also act as confirm key, long press for shutting off device.
- 5. VOL Select key:** Volume control, use **◀** / **▶** key to decrease /increase volume.

### Video Mode

Main Menus: Choose Video in the main window, and press **▶** to show Directory list, press **▶** again to enter and show all the files in the list.

**Sub Menus:** During video playing mode, long press **MENU** to show sub menus: Play mode, Delete, Information.

### Photos Mode

Main Menus: Choose Photos in the main window, and press **▶** to show main menus: Directory List, Scan Mode.

**Sub Menus:** During photo viewing, long press **MENU** key to show sub menus: Rotate, Zoom, Slideshow Interval, Delete, Information.

### Camera Mode

Choose Camera in the main window, and press **▶** to enter this function.

**Sub Menus:** During photo taking mode, long press **MENU** key to show sub menus: White Balance, Brightness, Exposure Mode, Special Effect, Resolution, Memory Free Space, Self-timer, Shutter Sound, Date Stamp.

### Video Camera Mode

Choose Video Camera in the main window, and press **▶** to enter this function. Short press **▶** to start/pause video recording, short press **MENU** key to save video clip. Video Camera function does not support screen rotate function.

**Sub Menus:** Long press **MENU** key to show sub menus: White Balance, Brightness, Exposure Mode, Special Effect, Memory Free Space.

### FM Radio

#### Basic Operation

Press **▶** key to toggle between manual seeking mode and preset mode.

1. Manual seeking mode: Press **◀** or **▶** for backward or forward manual seeking.
2. Preset mode: Press **◀** or **▶** to switch from scanned and saved channels

#### Sub menus

During FM radio listening mode, long press **MENU** key to show sub menus: Save Channel, Auto Search, Channel List, Region, Mute, Exit.

## E-Book

Main Menus: Choose E-Book in the main window, and press **⏪** to show main menus: Directory List, Bookmarks.

Sub Menus: During E-Book reading, long press MENU key to show sub menus: Skip to, Auto Flip Time, Add Bookmark, Languages, Font Size, Font Color, Page Effect, Delete File.

## Files Browser

Choose Files in the main window, and press **⏪** to show main folders: E-Book, Music, Photos, Playlist, Video. Press **⏪** to enter any folder and choose a file, and press **⏪** again to open or play it.

## Settings

Main Menus: Display, Power Saving, Time & Date, Languages, Updating Music Library, Advanced.

### Sub Menus of Advanced:

1. Information,
2. Key Tome
3. Menu Display Effects,
4. Format Internal Memory,
5. Default Settings.
6. Factory Reset.

Date setting: Enter Set Date, Long press Menu key to switch between columns of Year, Month and Day, use **⏪** or **⏩** key to decrease or increase figures. Short press **⏪** to save and exit. Time setting: Long press Menu key to switch between columns of Hour and Minute, AM, PM. Use **⏪** or **⏩** key to decrease or increase figures, Short press **⏪** to save and exit.

## Extra

3 useful small tools: Calendar, Calculator and Stopwatch.

## 3 Other information

Helpful technical information

### Specification

USB	Micro USB 5Pin , USB 2.0 high speed transfer, USB charging
ROM	8GB NAND FLASH
Battery	Polymer Lithium battery 3.7V 300MAH
Music	Support MP3, WMA, OGG, APE, FLAC, AAC formats.
Picture	Support JPEG, BMP, GIF formats.
Video	Support FLV, RM, RMVB, 3GP, Avi formats.
Environmental Temperature	-40°C-60°C
Support PC OS	Windows 98/7/10/ME/2K/XP/Vista/Linux9/Linux6.2/Mac os 10

### Troubleshooting

Device fail to power on	Make sure the power is switched on and battery has power
No sound from earphone	Make sure the volume level is not at 0. and earphone is well plug in
Unreadable screen display	Make sure you choose the right language
Bad FM receiving	Adjust earphone cable's position
Cannot copy files to the device	Make sure the USB cable is well connected Check whether the device's memory is full

## Help and assistance

If you require any technical guidance or find that your MP3 PLAYER is not operating as intended, a simple solution can often be found in the Troubleshooting section of these instructions or online at [www.argos-support.co.uk](http://www.argos-support.co.uk)

If you still require further assistance, call one of our experts on

**0345 604 0105.\***

Local call rates applies\*

**Lines open 8am-7pm Monday to Saturday and 10am-4pm Sunday.**

\*Calls to Argos enquiry lines may attract a charge and set up fee from residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see [www.bt.com/pricing](http://www.bt.com/pricing) for details.

For Security and training purposes, telephone calls to and from customer service centres may be recorded and monitored. Calls from Republic of Ireland will attract international call charges.

## 4 Product support

Help is always at hand

### Disposal

The symbol on the product or its packaging indicates that this product may not be treated as household waste. Instead it should be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For your household waste disposal service or the shop where the product was purchased.



# BUSH

## Call us now and activate your 12 month guarantee

Thank you for choosing Bush. Your new product is guaranteed against faults and breakdowns for 12 months. Don't forget to register it with us today so we can provide you with our best possible after-sales service and useful updates.

[www.bushregistration.co.uk](http://www.bushregistration.co.uk)

FREEPHONE\*

**0800 597 8548**

Lines are open 8am - 8pm, 365 days a year.

\*Calls may be recorded and monitored.

### Your Bush Guarantee

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will be repaired free of charge (or if applicable the product will be replaced or the purchase price refunded) where possible during this period by the dealer from whom you purchased the unit.

### The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in the manual.
- It must be used solely for domestic purposes. The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- Bush disclaims any liability for loss or damage arising from the breakdown of the product.
- This guarantee is in addition to and does not diminish your statutory or legal rights.

### Important Data Protection Information

If you provide us with information about another person, you confirm that they have appointed you to act for them, to consent to the processing of their personal data including sensitive personal data and that you have informed them of our identity and the purposes (as set out in the Important Data Privacy notice displayed overleaf) for which their personal data will be processed.

You are entitled to ask for a copy of the information we hold about you (for which we may charge a small fee) and to have any inaccuracies in your information corrected.

For quality control and training purposes, we may monitor or record your communications with us.

If your personal details change, if you change your mind about any of your marketing preferences or if you have any queries about how we use your information, please let us know by contacting our Data Protection Officer, Domestic & General, Leicester House 17 Leicester Street, Bedworth, Warwickshire, CV12 8JP.

Guarantor: Argos Limited - 489 - 499 Avebury Blvd. - Milton Keynes - MK9 2NW

8

9

10

11

12

13

14