



## The Cordless, Handheld Power Scrubber!

# Turbo Scrub™

## Deluxe Kit

### INSTRUCTION MANUAL

- ✓ **75 Minutes of Cordless Cleaning!**
- ✓ **400 RPMs of Power**
- ✓ **2 Turbo Speeds!**
- ✓ **BONUS Large Flat Brush!**
- ✓ **4 Unique Brush Heads**



PLEASE READ AND UNDERSTAND THIS ENTIRE MANUAL BEFORE ATTEMPTING TO OPERATE THE PRODUCT.  
PLEASE RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

### INSTRUCTIONS PERTAINING TO A RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS.

#### SAFETY INSTRUCTIONS

**WARNING:** When using electric appliances, basic precautions should always be followed, including the following:

- Prior to first operation, read this manual carefully and keep it for future use.
- This product is not a toy. Close supervision is required when any appliance is used by or near children. Store out of reach of children.
- If the charger cord is damaged, the charger cannot be repaired and it must be replaced. Do not use the charger if damaged.
- To protect against the risk of electric shock, do not put the battery charger in water or other liquid. Do not charge battery if it is wet or shows signs of corrosion. Do not place or store appliance where it can fall or be pulled into a tub or sink.
- Do not incinerate the battery. It can explode in a fire. A small leakage from the battery cell may occur under extreme usage, charging or temperature conditions. This does not indicate a failure. However, if the outer seal is broken, cracked or damaged and this leakage gets on your skin: wash quickly with soap and water or neutralize with mild acid such as lemon juice or vinegar. If the liquid gets into the eyes, flush them immediately with clean water for a minimum of ten minutes. Seek medical attention.
- Do not use an extension cord. Plug the charger directly into a standard 240V power outlet.
- Do not attempt to use this charger with any other product. Do not attempt to charge this product with any other charger. Use only the charger supplied by the manufacturer to recharge.
- Do not charge the unit outdoors, store indoors after each outdoor use. Do not use the charger in wet or damp conditions. It is intended for indoor use only. Do not use charger near sinks or tubs. Do not immerse in water.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

- Do not allow the cord to hang over the edge of a table or counter or touch hot surfaces. The charger should be placed away from sinks or hot surfaces.
- Do not operate charger if it has received a sharp blow, been dropped, or otherwise damaged in any way. Do not disassemble the charger for any reason.
- For best results, do not charge a battery when it or the air temperature is below 40°F (5°C) or above 105°F (40°C).
- Unplug the charger when not in use and before cleaning.
- Do not abuse the cord. Do not carry the charger by the cord or yank the cord to disconnect. Grasp the charger plug and pull to disconnect. Keep charger cord away from heat and sharp edges.
- Do not operate in the presence of explosives and/or other flammable fumes or liquids.
- If abnormal noise, smell, smoke or any other failure or breakage is found during the operation, turn off the switch and unplug it. Then, contact the customer service team immediately. Do not repair by yourself.
- Do not store or use close to high temperatures.
- Always use proper eye protection when using the Turbo Scrub™ with irritating substances. Rubber gloves are also recommended.
- When changing accessories, please make sure to turn off the machine first.
- Please make sure to charge the machine when in the OFF position.
- This appliance is only for household use, not for commercial or industrial use.
- Always store the unit indoors.
- Keep hair, loose clothing, and all parts of the body away from moving
- A hazard may occur if the appliance runs over the supply cord.

**WARNING:** For the purposes of recharging the battery, only use the detachable supply unit provided with this appliance. The plug must be removed from the socket outlet before cleaning or maintaining the appliance.

**WARNING:** The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction

- WARNINGS CONTINUED ON BACK

## The Cordless, Handheld Power Scrubber!

# Turbo Scrub™

## Deluxe Kit

### For Parts & Accessories:



✓ Brushes ✓ Battery ✓ Charger ✓ and More!

[www.highstreettv.com](http://www.highstreettv.com)

DISTRIBUTED BY:  
High Street TV,  
PO Box 724,  
Altrincham,  
WA15 5BJ

high  
street tv



TSINST20816-TVP

3.6V Ni-Mh battery 1800mAh



- Always store the unit indoors.
  - Keep hair; loose clothing, and all parts of the body away from moving parts.
  - Do not use the appliance when charging cover is open.
  - Do not submerge the handle in water or other liquid.
  - Use only as described in this manual. Use only recommended parts.
  - Only use attachments recommended or sold by the manufacturer.

- To disconnect, turn all controls to the OFF ("O") position, then remove plug from outlet .
  - Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or is dropped or damaged in any manner. Return appliance to the nearest author ized service facility for examination, repair, or electrical or mechanical adjustment.

PLEASE RETAIN THESE INSTRUCTIONS

CHARGING INSTRUCTIONS:

- Do NOT exceed 12 hours of consecutive charging. Doing so may lead to shortened overall battery life. It is not necessary to wait until battery power is fully depleted before recharging.

1. Be sure ON / OFF button on "Handle" is in OFF position .


2. Open "Charging Port Cover" located on bottom of "Handle" of unit.

3. Insert cable end of "Wall Charger " into "Charging Port."

4. Plug "Wall Charge r" into wall outlet . Red light next to "Charging Port" will blink RED to show unit is charging .

5. Allow Turbo Scrub™ to charge for 3 hours and 30 minutes. Red light will remain lit when battery is completely charged.

6. When done, remove "Wall Adapter " from unit and wall, and close "Charging Port Cover".

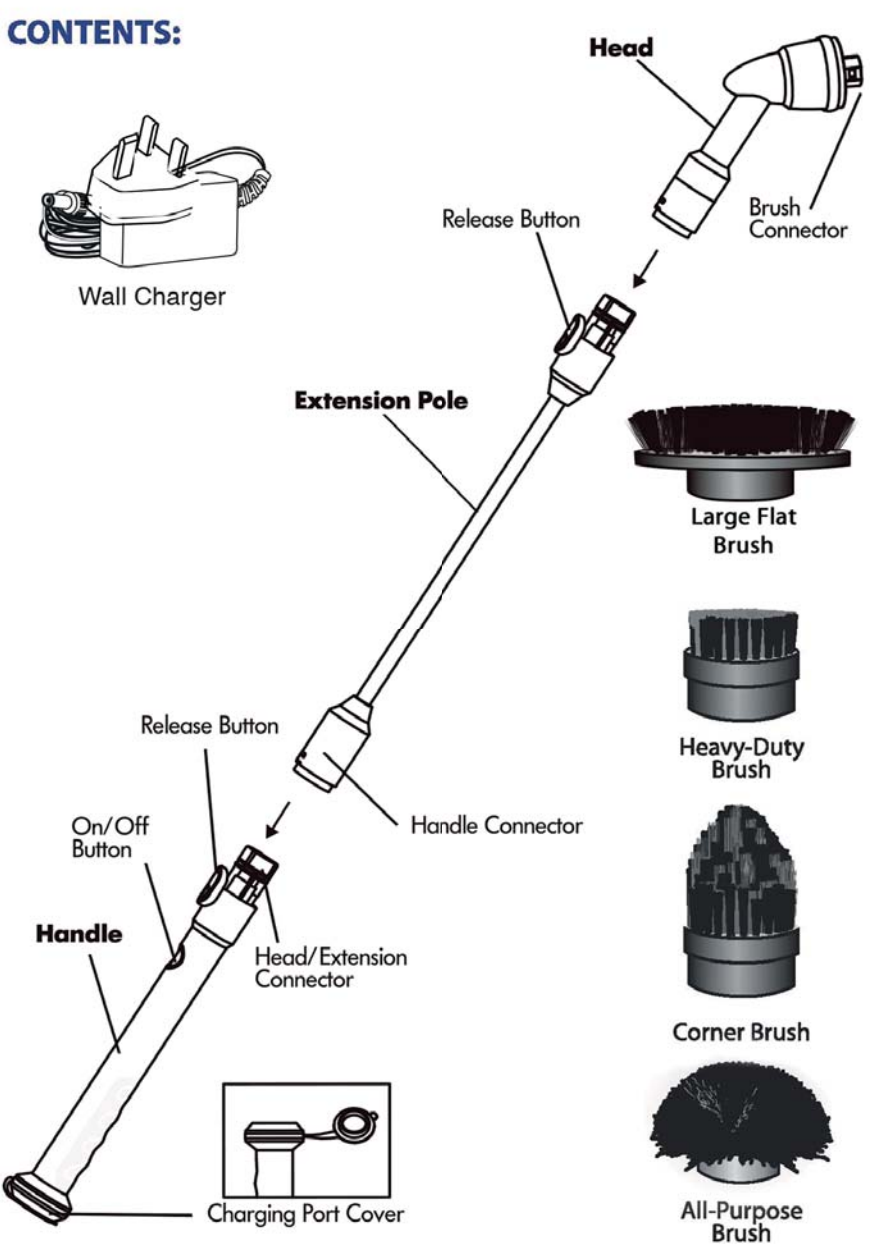

- ASSEMBLY INSTRUCTIONS:

If using Extension Pole:

1. Be sure ON/OFF button on "Handle" is in OFF position.

2. Line up connection tab of "Extension Pole" and "Release Button" of "Handle". Press together until you hear a "click."

3. Line up connection tab of "Head" and "Release Button" on Extension Pole. Press together until you hear a "click."

4. To attach brush attachment of your choice, simply line up tabs of "Brush Attachment" and "Brush Connector" on "Head" and press together until you hear a "click."

Without Extension Pole:

1. Be sure ON/OFF button on "Handle" is in OFF position.

2. Line up connection tab of "Head" and "Release Button" on Handle. Press together until you hear a "click."

3. To attach brush attachment of your choice, simply line up tabs of Brush Attachment and "Brush Connector" on "Head" and press together until you hear a "click."
- OPERATION INSTRUCTIONS:

WARNING:

- Always use rubber gloves and proper eye wear to avoid contact from splashing of soaps or detergents on skin and/ or eyes while head is spinning and when brushes are removed or attached.
  - When done using Turbo Scrub™ , turn unit off while brush is still in contact with surface to avoid getting splashed with soaps or detergents .
  - Always test on a small, inconspicuous area before using on a larger area. Always follow surface manufacturer's guidelines for cleaning and maintenance.
  - Do not use with abrasive cleaners on any surface.
  - Avoid exposing the unit to excessive water. If Turbo Scrub™ accidentally becomes submerged in water or water gets into "Charging Port", shake out liquid and allow Turbo Scrub TM to dry overnight .

- I. Choose proper Brush Attachment and attach to Turbo Scrub™ as directed in Assembly Instructions."


- All-Purpose Brush: Best for large jobs, cleaning tile, and grout.
  - Corner Brush: Best for corners, door tracks, and tight spaces .
  - Heavy Duty Brush: Best for tough jobs, where you need to focus power on a certain area .

2. Wet the intended area and apply desired cleaning product.


3. Place tip of brush on surface to be cleaned.


4. Being sure you have a firm hold of the handle, press ON/OFF button once for HIGH speed or twice for LOW speed. If using on HIGH speed, you will need to press ON/OFF button twice to turn off.

- NOTE: DO NOT apply pressure. Turbo Scrub™ works best when lightly applied to surface.

5.  Press this button to turn the unit on/off.

6. When done, press ON/OFF button to turn off. Clean Turbo Scrub™ as directed.

7.  Press this button to select the High/Low speed .



CARE & MAINTENANCE:

\* Use a damp, non-abrasive cloth to clean Turbo Scrub™ unit. If needed, use a mild detergent. Let air dry.
  - o Do NOT immerse or run under water.
  - o Do NOT clean with alcohol or petrol.

• Rinse Brush attachments under water and clean thoroughly after use. Let air dry.

Correct Disposal of this product:

This product uses a Ni-Mh rechargeable and recyclable battery. When it can no longer be recharged, it should be removed from the unit and recycled. The battery must not be incinerated or composted.

BDV1