

_

_

Instruction Guide and 2 Year Guarantee

IS02

o nue e sassed no snommuni 3. Reset the time and date settings by following the itele elockwise and stops. it was. The chronograph 1/10 second hand turns a run half a circle counterclockwise and then returns to where nd then resease, i ne enronograph second nand turns Keep PB1 and PB2 pressed at the same time for 2 seconds, position "C" (5 eye with date models). Pull button out to position "B" (3 and 4 eye models), or

therefore, be sure to reset the hands to the "0" position by may not correspond with each other. Before using the watch, When the battery is replaced, the time information stored by the BALLERY CHANGE

tonowing the procedure below.

RESELLING THE OPERATING FUNCTIONS AFTER

Service and Repairs/ Setting the Time - AM/PM Water Resistancy

For free bracelet adjusting service, return the watch

T.P. (UK) Ltd, Alexander House, Chartwell Drive, Wigston, Leicester LE18 2FZ

For maximum protection, please keep your watch

is important to identify your watch correctly.

If after reading this Instruction Guide you have any

further questions regarding the use, operation or ad justment of your watch, please call us during office

in its presentation box when not in use.

Important Note

hours on 0116 288 2500

IMPORTANT - Not covered by Guarantee Operation and Adjustment

Available at a reasonable charge after an estimate has been

DATE WATCHES

12 o'clock, the time shown is "am". If the DATE does not change, the time shown is "pm".

Automatic end of month correction Switching between 12 & 24 hour Digital - Alarm Monitor ADDITIONAL FEATURES

Hour, Minute, Second Digital (Upper) DUAL DIGITAL DISPLAY FUNCTIONS

DICITAL DISPLAYS MULTI-FUNCTION SERVICE AND REPAIRS

Your SEKONDA watch is guaranteed against defects in materials and workmanship for a period of 2 years from the date of purchase. During this period, we will exchange or renai at our discretion, any defective components free of charge.

 Batteries, straps and bracelets.
 Damage caused by accident, misuse or lack of care. 3. Water penetration except in watches marked as "Water Resistant". (see page 2).

SERVICING AND REPAIRS UNDER GUARANTEE Please post your watch, together with the Retailer's Sales Receipt or Proof of Purchase, the completed Guarantee slip on the back cover of this booklet, and a brief note to explain the nature of the fault, by Registered Post or Recorded Delivery to the address shown. Do not send the presentation box as this will not be re-

SERVICING AND REPAIRS OUTSIDE OF GUARANTEE or Recorded Delivery to the address shown on the inside front

SETTING THE CORRECT TIME (AM/PM) -If the DATE changes when the hands are turned past

lo return to normal time/ Press PB2 PB3 for selection Press PB2 12hr/24hr selection will flash PS to advance day of week Press PB2 PB5 to advance date PB3 to advance month Date will flash -- dealt litw dinol/ Press PB2 PB3 to advance hours - nasii iiw siiori Press PB2 Minutes will flash -Press PB2 Press and hold PB2 Press PB3 I O reset seconds CVTEVDVK WODE Select NORMAL TIME/ & CALENDAR (LOWER DISPLAY) HOW TO ADJUST TIME (UPPER DISPLAY) CALENDAR mode TO DESIGN TO NORWALL LIMITAL

To enter the DUAL TIME mode

To enter the STOP WATCH mode

to enter the 11MEK mode

To enter the ALARM mode

HOW TO SELECT THE FUNCTION

NORMAL TIME mode KESE I spirt time for the split/time function To READ split time. Press PB2 to PECT only time Press PB3 dois/liels e se pasn ag uez 79. If the stop watch is running, PB2 will RESET the stopwatch. the stop watch is stopped, To start or stop - the stop watch Twice to enter STOP WATCH HOW TO OPERATE STOP WATCH Note: When alarm sounds, press PB5 to stop. Alarm will stop au-Four times to return to normal Alarm is set Press PB2 PB3 to advance minutes THEST LIPT ATTURICS WILL TIASH -STORY STORY OF SALES - dealt linw stuor FOF ALARM UN/UFF SCIECTION Once to enter ALARM mode HOW TO SET ALARM

WATER RESISTANCY

"Water Resistant" or have a static water pressure

WATER RESISTANT or RESISTANT

to be used while bathing or swimming.

WATER RESISTANT TO 50 METRES

As 30 metres plus bathing or swimming

but NOT highboard or scuba diving.

WATER RESISTANT TO 100 METRES

Suitable for normal everyday use and will resist

exposure to splashes and rain: it is NOT designed

As 50 metres plus poolside diving and snorkelling,

MODELS WITH A SCREW-DOWN BUTTON

Unlock the button by turning it anti-clockwise until free

Lock it by pressing in while turning clockwise, WATER

RESISTANCE is lost when the button is in the UN-

TO 30 METRES

LOCKED position.

allowed to come into contact with water or be worn in

conditions that could expose it to moisture (eg washing

OPERATING AND ADJUSTING YOUR WATCH If your watch is water resistant, it will clearly state

Your quartz analogue watch is powered by a batter indication (eg "30/50/100 metres") on the dial and/or which was inserted at the time of manufacture and will require periodic replacement. New batteries can be If it is NOT marked as water resistant it should not be supplied and fitted by your nearest SEKONDA stockis

heavy rain etc). Certain chemicals in water may damage the watch seals. To maintain its water IMPORTANT Buttons must not be operated while in

> The instructions and diagrams on the following pages are designed to demonstrate the adjustment of all

Your watch may not have all of the characteristics shown and may have other buttons and dials in addition to those shown on individual diagrams. QUARTZ ANALOGUE CHRONOGRAPHS -DISPLAYS AND BUTTON OPERATION

Quartz analogue watches do NOT

require winding.
The button is used for hand/function setting only. When in use, ensure that the button is pushed FULLY IN to position "A". Failure to do so can result in excessive battery drain or damage to the hand setting/date

models within our range.

Return button to position "A"

Advance hands to correct time "a" nortisoq ot tuo nottud llu'

SELLING HANDS TO TIME

Press PB1

Press PB2

Press PB2

Press PB1

Press PB3

Press PB3

Press Pb2

LICSS LD I

upper digital display, to indicate whether the chime function has

NO LE: A Dell Symbol Will appear in the top right corner of the

Select NOKMAL 11ME/CALENDAR mode. Press and hold PB5

to return to normal time/

DUAL TIME is set

Minutes will flash.

PB5 to advance hours

- Four times to enter DUAL TIME

To resume timer countdown

for countdown duration

TIMER SETTING mode

I DITCE TIMES TO CRICE

(samming operations) in minimage)

To start or pause timer countdown

hen press PB2 - To turn chime tunction ON/OFF.

HOW TO SET THE CHIME FUNCTION

Press and hold PB2 - Hours will flash.

duration. If the timer is running, - press PB3 to pause

It the timer is stopped, press PB2 to reset timer countdown

HOW TO SET DUAL TIME

HOW TO OPERATE THE TIMER

ADJUSTING THE CHRONOGRAPH HAND POSITION

There are two push buttons PB1 and PB2 and a hand/function setting button.
3 AND 4 EYE MODELS BUTTON OPERATION

Setting the hour, minute and 24-hour hands

3 EYE MODELS WITH DATE BUTTON OPEN
A - Normal position : free
B - First click : date setting
C - Second click
• Setting the hour and minute hands
• Activating the chronograph hand position

Activating the chronograph hand position adjusting function. Note: 24-hour hand only

applies to 4 eye models.
3 EYE MODELS WITH DATE BUTTON OPERATION

from model to model.

If the chronograph is in use, press the buttons in the following order to reset it, and then check if the hands

"0" position of the chronograph 1/10 second hand may differ return to the "0" position. If the chronograph is counting PB1 – PB2

Refore setting the time, he sure to check if the chronograph hands

are in the "0" position when the chronograph is reset. Note: The

 If the chronograph is counting PB1 = PB2
 If the chronograph is stopped PB2
 If the split time is displayed PB2 = PB1 = PB2 If any of the chronograph hands do not return to the "0" position when the chronograph is reset, adjust the setting

Pull the button fully out, position "B" (3 and 4 eye models), position "C" (3 eye with date) Press PB1 repeatedly to reset the chronograph 1/10 second hand to the "0" position. Press PB2 repeatedly to reset the chronograph second and minute hands to the "0" position.

The chronograph minute advances one minute for every completed cycle of the chronograph second hand. Note: Press and hold PB1 or PB2 for faster advance

NORMAL TIME mode

time will flash

Day will flash -

- Date will flash

Month will flash -

PB2 for selection

SEC TO Advance date

To begin again or Press PB2

Return button to position "A"

TIME SETTING FOR 1/10 SECOND 3 AND 4 EYE MODELS

1 Pull button out to position "R"

hour, minute and 24-hour hands to the desired time. When setting the hour hand, be sure to check that the 24-hour hand is set to AM or PM as required. 3. Return button to position "A"

TIME/CALENDAR SETTING FOR 1/10 SECOND 3 EYE MODELS WITH DATE

1. Pull button out to position "B", and turn it clockwise until the previous day's date appears, "Do not attempt to set the date between 9.00 pm and 1.00 am as the day/date change cycle is in progress. Pull button out to position "C"

Turn the button clockwise until the desired date appears, and set the hour and minute hands to the desired time. 4. Return button to position "A".

Note: When setting the minute hand, first advance it to 5 minutes ahead of the desired time and then turn it back to the exact minute.

CHRONOGRAPH OPERATIONS

To stop - Press PB1 - Press PB2 2. Accumulated elapsed time measurement To start To stop To restart Drace DR 1 - Press PB1 - Press PB1 - Press PB2 To reset to "0 Split time measurement To start - Press PB2 - Press PB2 - Press PB1 - Press PB2

Note: After one minute, the 1/10 second hand will remain in the

Attach Receipt or Proof of Purchase; failure to attach may invalidate guarantee. This guarantee does not affect your statutory rights.

Retailers Stamp if required or full name and address

DOTH ALAKM and UTIME are off Only ALARM is on Press PB2 Press PB2 Both ALARM and CHIME are on blod bnA Alarm/Chime can only be set in normal time and/or

Press PB1

Press PB1

HOW TO SET ALARM

SINCEE DICITAL DISPLAY

HOW TO SET ALARM ON/OFF AND automatically after approx. 20 seconds NOTE: When alarm sounds, press PB2 to stop. Alarm will stop

Alarm set

Press PB2 - Twice to enter the ALARM setting

Minutes will flash -

Viarm ON symbol automatically

To advance hours

Three times to return to normal time

Press PB2 -HOW TO ADJUST TIME AND CALENDAR

DISPLAYS SINCLE DIGITAL

210pwatch

Hour, Minute, Second

Calendar/Alarm/Chime

Digital - Alarm Monitor

ADDITIONAL FEATURES

spued & - sugolenA

FUNCTIONS

Switching between 12 of 24 hour display

Automatic end of month correction

Press PB1 Press PB1 Press PB1 Press PB1 Press PB1

PB2 to advance hours - desh lliw enuoH Press PB1 PB2 to advance minutes - MINUTES WILL HASH to reset seconds. seconds will flash -Press PB1 – To begin SETTING mode – Three times to enter the SETTING mode – time will Press PB2 - Back to normal TIME function

SETTING mode
Enter the CALENDAR mode Press PB2 Enter the normal LIME Enter the ALARM mode Press PB2 Press PB2 Enter the STOPWATCH mode HOW TO SELECT THE FUNCTION

urther information on service under guarantee. This guarantee does not affect your statutory rights. rease rerei to page 1 or misminismuchon guide for stage when service under guarantee is require

> T.P. (UK) Ltd, Alexander House, Chartwell Drive, Оау тіте Ріопе

SELLING HVNDS TO TIME - Four times - back to NORMAL TIME I o stop stopwatch Press PB1 Enter the STOP WATCH mode

HOW TO OPERATE THE STOP WATCH

WITH THE WATCH AND JO UU. OU TO COVET HANDING AND A WAICH AING SHOULD BE SELL TO SEKONDA 1055HIP his guarantee should be retained by the owner of mportant

Wigston, Leicester LE18 2EZ

Post Code

Advance hands to correct time "B" notition out to position "B"

Guarantee

Block Capitals