

BUSH

Instruction manual

Bluetooth Micro System CD608





You'll soon be enjoying your new Bluetooth Micro System.

It all begins here, with your instructions. Don't worry, there's nothing too technical coming up. Just simple, step-by-step guidance to get you up and running quickly. Sound good? Then let's get started.



Help and Guidance

We're here to help you get the most from your Bluetooth Micro System. Should you require any guidance, a simple solution can often be found online at:

www.argos-support.co.uk

If you still require further assistance, call one of our experts on **0345 600 3021**.

BUSH



Contents

1 Safety Information

General safety information	8
Moisture and water	8
Heat sources and flames	8
Ventilation	9
Positioning the Bluetooth Micro System	9
Power source	10

2 Getting to know your Bluetooth Micro System

Power connection	17
Initial set-up	17
Change the mode	17
Adjusting the volume	17
Mute	18
Equalizer or EQ setting	18
Set the clock	18
Sleep timer	18
Using headphones	19
Connect to a Bluetooth device	19

3 Using your Bluetooth Micro System

CD Mode	24
Play a CD	24
CD controls	24
Programmed play mode	25
Repeat and Random modes	26
Remove the CD	26

Contents

Caring for compact discs	27
FM Radio mode	27
Wire radio aerial	27
Tuning to an FM station	28
Storing an FM station preset	28
Tune to an FM station preset	29
Bluetooth mode	29
Listening to Music/Audio using Bluetooth	30
Delete all paired Bluetooth device records	31
Aux in mode	31

4 Other information

Technical specification	34
-------------------------	----

5 Product support

 
Troubleshooting	38
Help and assistance	39
Disposal	41
Your Bush Guarantee	42

This page is left intentionally blank



Safety information

1

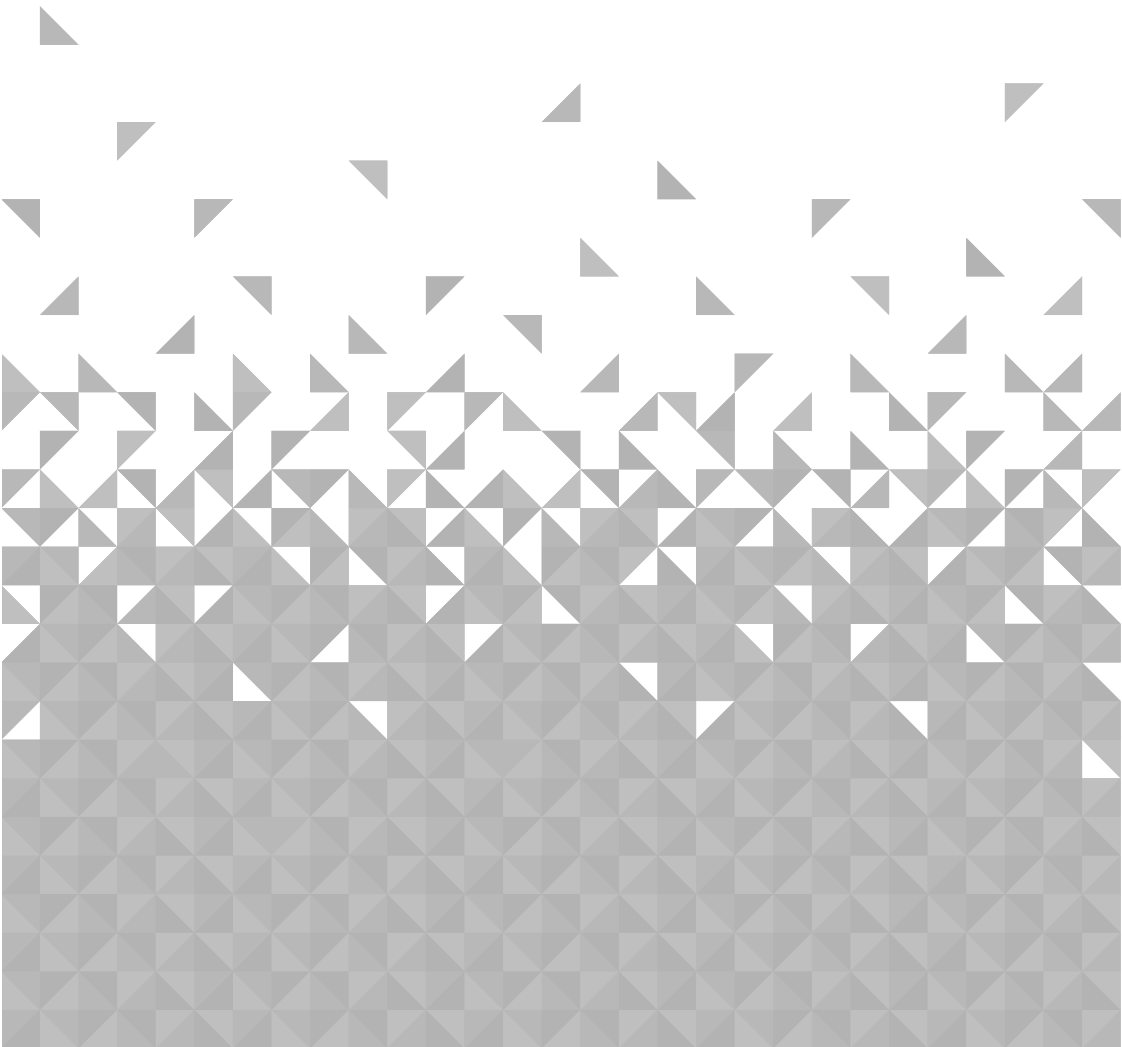



Safety information

Important - Please read these instructions fully before installing or operating

General safety information

- Keep the product and all its parts out of reach of small children.
- This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Do NOT place foreign objects into the CD compartment.



CAUTION

Never touch or look into the optical lens within the CD compartment.



This is a CLASS-1 laser product.

Use of controls or adjustments other than those specified herein, may result in hazardous laser light beam exposure. Do NOT open the cover and do NOT attempt to repair it yourself. Refer servicing to qualified personnel. This product does not contain any user serviceable parts. Unauthorised handling of the device may damage it and will void your warranty.

Moisture and water

- Do not leave it in low temperatures as moisture can form inside the product, which may damage the circuit board.
- To reduce the risk of fire or electric shock, do not expose this product to rain or moisture. Do not place objects filled with water, such as a vase, on the product.

Heat sources and flames

- Do not leave it in high temperatures as electronic devices and plastic parts may warp in heat.
- No naked flame sources, such as lit candles, should be placed on the product.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**



Safety information

Important - Please read these instructions fully before installing or operating

Ventilation

- Do not block or cover slots, holes or openings on the product by placing on soft furnishings such as carpets, rugs or beds as these are provided for functionality and/or ventilation to ensure safe operation of the product.
- The underneath and sides of this product may become warm after a long period of use. This is normal.

Positioning the Bluetooth Micro System

It is important that you consider carefully in advance where your Micro System and speakers will be situated and make sure that they are:

- on a flat and stable surface.
- within 1.4 metres of a power socket. Please ensure that the mains power lead and speaker cables are not a trip hazard.
- at least 1 metre away from other electrical appliances to avoid interference.
- where it will be in range of the connected or 'paired' bluetooth device (e.g. iPod/iPhone/iPad/Android/other phone/computer, which is about 10 metres or less (33 feet or less) in line of sight.
- where there is enough height for the Micro System wire radio aerial.
- Never place your Micro System directly onto antique or polished surfaces.



CAUTION

To avoid possible hearing damage, do not listen to this Micro System at high volume levels for long periods of time. Always keep the volume within reasonable limits.



Safety information

Important - Please read these instructions fully before installing or operating

Power source

- Only use the power supply that came with the product. Using an unauthorised power supply will invalidate your guarantee and may irrecoverably damage the product.
- Disconnect your Micro from the mains power supply during thunderstorms.
- Always check that you have completely switched off your Micro System, before you change or disconnect the power supply.
- Where the mains power plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- If the Micro System will not be used for a long period of time, remove the CD and make sure that the mains power is unplugged and the battery is removed from the remote control.
- Only use recommended batteries or those of the same or equivalent type in the remote control.
- Batteries are to be inserted with the correct polarity.
- The supply terminals are not to be short-circuited.
- Never throw batteries in a fire or attempt to open the outer casing. Do not expose them to excessive heat, such as sunshine.
- Batteries are harmful if swallowed, so keep away from young children.



CAUTION

Danger of explosion if batteries are incorrectly replaced. Replace only with the same or equivalent type.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**



Safety information

Important - Please read these instructions fully before installing or operating



WARNING

Do not ingest the battery, Chemical Burn Hazard.

The remote control supplied with this product contains a button cell battery. If the button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.

Keep new and used batteries away from children.

If the battery compartment does not close securely, stop using the product and keep it away from children.

 
If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.



This page is left intentionally blank



Getting to know your Bluetooth Micro System 2

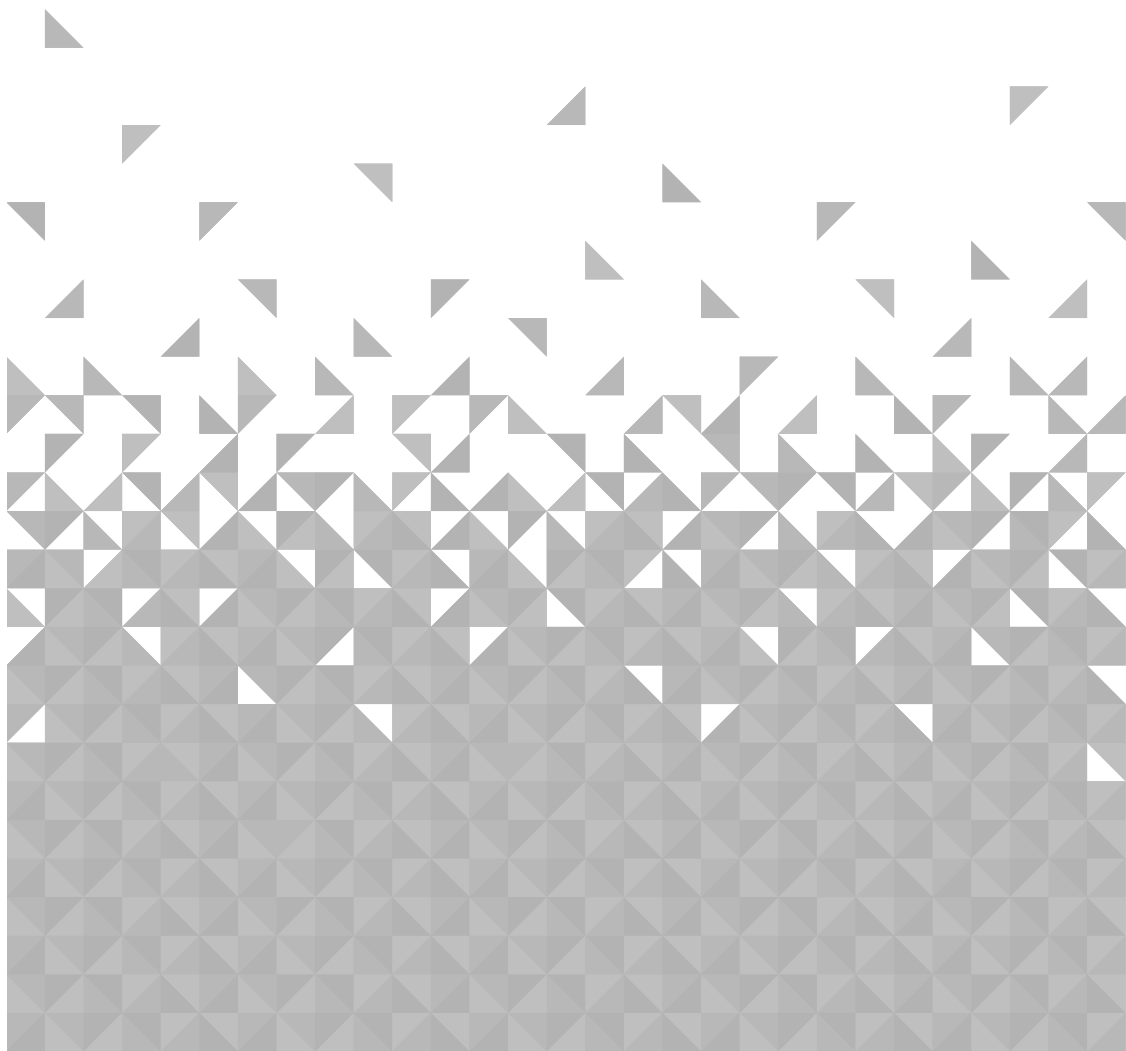



Getting to know your Bluetooth Micro System

You'll be up and running in no time

Ready? Let's begin...

Please read these instructions carefully. They contain important information which will help you get the best from your product and ensure safe and correct installation and operation.

If you require any further assistance, our technical experts are happy to help. For full details, refer to the product support section at the end of these instructions.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Getting to know your Bluetooth Micro System

You'll be up and running in no time

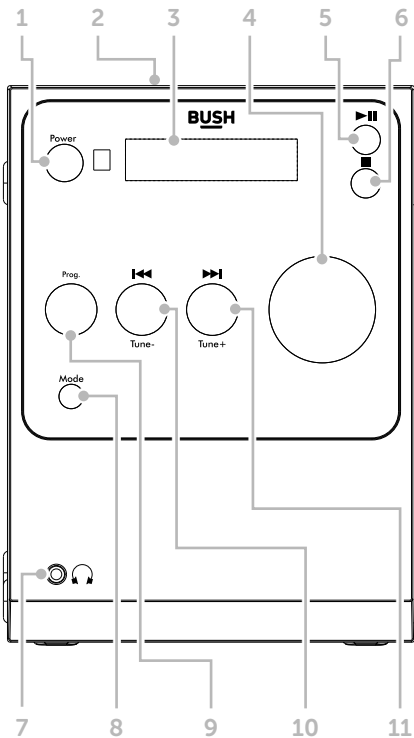 


Fig 1.

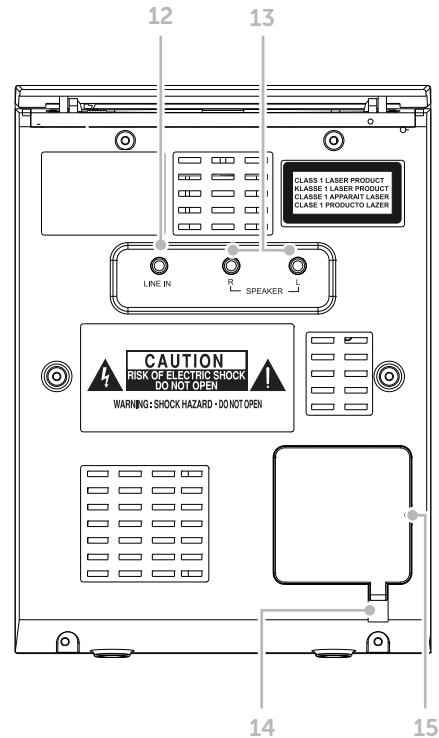 


Fig 2.

1. Power on/off (standby)
2. CD Compartment
3. Backlit display
4. Rotary volume control (push to Select)
5. Play/Pause
6. Stop
7. Headphone socket
8. Mode
9. Prog.
10. Skip back/Tune -
11. Skip forward/Tune +
12. Line in
13. Left and Right speaker sockets
14. Mains power cable
15. Wire radio aerial

section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 600 3021

Getting to know your Bluetooth Micro System

You'll be up and running in no time

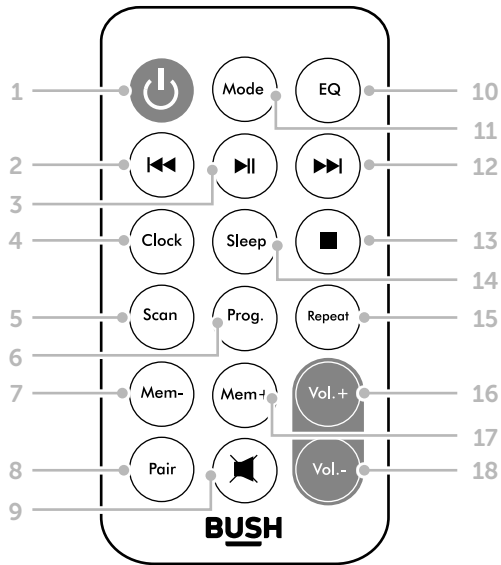 


Fig 3.

1. Power on/off (standby)
2. Skip back
3. Play/Pause
4. Clock
5. Scan
6. Program
7. Memory -
8. Pair
9. Mute
10. Equalizer
11. Mode
12. Skip forward
13. Stop
14. Sleep
15. Repeat
16. Volume +
17. Memory +
18. Volume -

Note: The remote signal may not be received if there is an obstacle between the remote and the Micro. Direct sunlight or other bright light sources shining on the remote sensor next to the Micro display, may affect the performance of the remote control.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Getting to know your Bluetooth Micro System

You'll be up and running in no time

Power connection

1. Connect the speakers to the Left and Right speaker sockets on the back of the Micro. Please note that the speakers are shaped and so you will need to view them from the front before you connect them to the speaker sockets.
2. Fully extend the wire radio aerial on the back of the Micro to receive the best possible radio reception and sound quality.
3. Open the CD compartment (push and release the lid on the front right), and remove the cardboard shipping protector. Close the CD lid.
4. Plug the mains power plug into the mains power wall socket and switch on. Your Micro will now be in 'Standby' mode.
5. Pull out the safety strip on the remote control to activate the battery.

Initial set-up

Press and release the Power button on the front of your Micro System. The first time you switch on your Micro it will start in CD mode, subsequently it will start in the mode you were last using unless it has been unplugged from the mains power supply.

Change the mode

Press and release the Mode button to change between CD, FM Radio, Bluetooth and Aux in modes. Please check the display, which will confirm the mode.

Adjusting the volume

Turn the rotary volume control clockwise to increase the volume and anti-clockwise to decrease the volume.

Check the display, which will confirm the volume setting. The maximum volume is level 30.

section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 600 3021

Getting to know your Bluetooth Micro System

You'll be up and running in no time

Mute

Press and release the Mute button on the remote control to mute the sound. '00' will flash in the display.

Press and release the Mute button again to turn this feature off and unmute the sound.

Equalizer or EQ setting

You can change the sound of your Micro using the EQ setting, there are 4 options available (Classic, Rock, Pop and Jazz).

Press and release the EQ button on the remote control to change the EQ setting.

Set the clock

In standby mode:

Press and hold the Clock button on the remote control, then use the **◀◀** and **▶▶** buttons to scroll and the clock button to confirm, to select 12H/24H and set the clock time. Once set, the clock time is displayed in standby mode.

Sleep timer

You can set your Micro to turn off automatically using the sleep timer. You can choose from 10, 20, 30, 40, 50, 60, 70, 80, 90 minutes or OFF.

Continuously press and release the Sleep button on the remote control to cycle through the available options, stop when the sleep time you would like is displayed.

Note: To cancel the sleep time, follow the steps to set the sleep time but stop when 'OFF' is displayed.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Getting to know your Bluetooth Micro System


You'll be up and running in no time

Using headphones


You can connect headphones with a 3.5mm plug (not included) to the socket on the front of the Micro. When you have headphones connected the Micro speakers are switched off and all sound is via the headphones.

Note: Always keep the volume within reasonable limits.

Connect to a Bluetooth device

Check that your Micro is in Bluetooth (BT) mode. If you are not already in BT mode, repeatedly press and release the Mode button on the front of the Micro or on the remote control until you are in BT mode (check the display).  will flash in the display, whilst your product searches for Bluetooth devices.


In Bluetooth (BT) Mode:

1.  will flash in the display, whilst your product searches for Bluetooth devices.
2. On the device that you would like to connect to your Micro via Bluetooth (e.g. iPhone/iPad/Android/other phone/Tablet/Computer), turn on Bluetooth connectivity and ensure that it is 'discoverable'.

Note: If necessary, refer to the instructions for your device to add or set up Bluetooth.

3. Select to 'Add new device', if necessary.

Note: Some products will automatically search for a new device and so the 'Add new device' option is not available.

4. When found, your Micro will be displayed as 'BUSH FM MICRO'. Select the device name to begin pairing.
5. When pairing is complete  will stop flashing in the display, and will be constantly displayed.

section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 600 3021

Getting to know your Bluetooth Micro System

You'll be up and running in no time

6. Now that you have paired your device with the Micro, it will connect to it when it is within range, which is about 10 metres or less (33 feet or less), line of sight.
7. Your device will remain paired with the Micro unless you decide to disconnect or 'unpair' it.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

This page is left intentionally blank

section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 600 3021

BUSH

 


This page is left intentionally blank



Using your Bluetooth Micro System

3

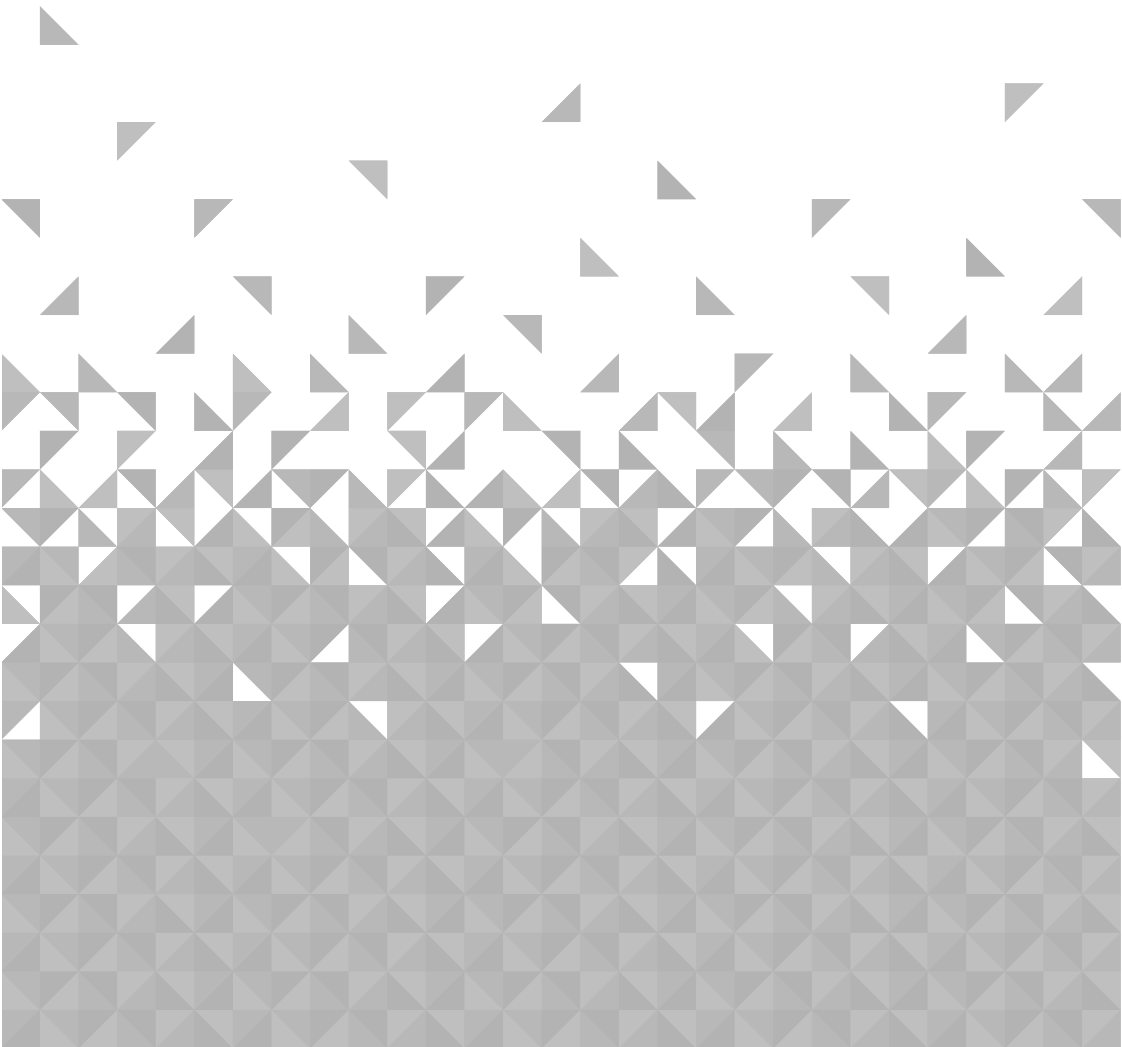

Using your Bluetooth Micro System

Let's get started

CD Mode

Note: Please make sure that you remove the cardboard shipping protector from within the CD compartment before you try to use CD player.

Check that your Micro is in CD mode. If you are not already in CD mode, repeatedly press and release the Mode button on the front of the Micro or on the remote control, until you are in CD mode (check the display). The display will show 'Cd', followed by 'LOAD'. If the CD compartment is empty 'NO' will then be displayed.

Play a CD

Note: It is not possible to play DVD or computer CDs.

1. Press and release the lid of the CD player on the front right edge, where 'Push to Open' is printed. 'OPEN' will be displayed.
2. Place an audio CD, label side up, into the CD compartment. Please ensure that you line up the hole in the centre of the CD, with the central spindle and press down into place.
3. Close the lid of the CD player, pressing down on the front right edge, ensuring that it 'clicks' shut. 'LOAD' will be displayed and after a short delay the first track will begin to play; the elapsed time of the track will be displayed.

CD controls








You can use the following controls on your Micro in CD mode.

- Play
Press and release the ►|| button on the Micro or on the remote control. The first track will begin to play and the track number and the elapsed time of the track will be displayed.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Using your Bluetooth Micro System

Let's get started





- Pause
Press and release the  button on the Micro or on the remote control. The elapsed time of the track will flash in pause mode. Press and release the  button again to continue to play the track/CD.
- Next track:
Press and release the  button on the Micro or on the remote control.
- Previous track:
Press and release the  button on the Micro or on the remote control.
- Fast forward within a track:
Press and hold the  button on the Micro or on the remote control.
- Fast backward within a track:
Press and hold the  button on the Micro or on the remote control.
- Stop
Press and release the  button on the Micro or on the remote control.

Programmed play mode

In programmed play mode, you can program the play order of the tracks on your CD. You can program up to 20 tracks in total.

Note: To set up programmed play mode, the CD must be stopped in the CD compartment and must not be paused or playing.

In CD mode, with the CD you wish to programme in the CD compartment and stopped:

1. Press and release the Prog. button on the Micro or on the remote control to enter CD programmed play mode.   will be displayed.
2. Use the  or  buttons on the Micro or on the remote control to go to the track number that you would like to program to play first. Press and release the Prog. button on the Micro or the Prog. button on the remote control to confirm.

section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 600 3021.

Using your Bluetooth Micro System

Let's get started

3. '0200' will now be displayed and you can select the second track that you would like to programme. Continue to select each track as in Step 2 above, up to a total of 20 tracks.

Note: After you have selected track 20 in the programmed play list 'FULL' will be displayed.

4. Press and release the Prog. button on the Micro or the Prog. button on the remote control again to confirm the last track in the programmed play mode list.
5. Press and release the ►|| button on the Micro or on the remote control to play the programmed tracks.
6. To exit programmed play mode, press and release the ■ button twice on the Micro or on the remote control.

Repeat and Random modes

1. Press and release the Repeat button on the remote control. A **REPEAT** icon is displayed. Continuously press and release the Repeat button to cycle through the available options of :

- **REPEAT** Repeat (current track)
- **▶REPEAT** Repeat all (all the tracks on the CD)
- **↻** Random (random play order)

Press and release the Repeat button one more time to turn off Repeat and Random modes.

Remove the CD

Press and release the lid of the CD player on the front right edge, where Push to Open is printed. 'OPEN' will be displayed.

Put your thumb on the central spindle and put your fingers under the outside edge of the CD and lift off and remove the CD from the compartment.

Close the lid of the CD player, pressing down on the front right edge, ensuring that it 'clicks' shut. 'LOAD', followed by 'NO' will be displayed.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Using your Bluetooth Micro System

Let's get started

Note: If you stop or pause playing a CD for approximately 30 minutes, your Micro will go to Standby mode automatically.

Caring for compact discs

- Do NOT touch the playback side of the CD.
- Do NOT attach paper or tape or any other material to the disc.
- Fingerprints and dust on the disc will cause sound deterioration. Wipe the disc from the centre outwards with a soft cloth. Always keep the disc clean.
- If dust or marks cannot be removed with a soft cloth, wipe the disc lightly with a slightly damp soft cloth and then wipe with a soft dry cloth.
- Do NOT use any type of solvent, commercially available cleaners or antistatic spray for vinyl as it may damage the disc.
- Do NOT store discs in a place subject to direct sunlight or near a heat source.
- Do NOT store discs in a place subject to moisture or dust, such as a bathroom or near a humidifier.
- Always store discs vertically in a case, stacking or placing objects on discs may cause warping.

FM Radio mode

If you are not already in FM mode, repeatedly press and release the Mode button on the front of the Micro or on the remote control to go to FM mode (check the display). If you were listening to an FM station when you switched the Micro off then this station will be automatically selected when you switch the Micro back on.

Wire radio aerial

Please make sure that the wire aerial on the back of the Micro is fully extended and adjusted before you attempt to tune to an FM radio station (a vertical position is recommended). This will ensure that the maximum signal strength is available when the Micro begins to scan. Extending the aerial also ensures the best possible sound quality.

section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 600 3021

Using your Bluetooth Micro System

Let's get started

Tuning to an FM station

In FM mode:

Press and hold the Tune+ on the front of the Micro or the **▶▶** button on the remote control to scan up the frequency band, your Micro will search for the next available station and then stop on that station.

Press and release the Tune+ on the front of the Micro or the **▶▶** button on the remote control to scan up the frequency band in 0.05MHz steps

Press and hold the Tune- button on the front of the Micro or the **◀◀** on the remote control to scan down the frequency band, your Micro will search for the next available station and then stop on that station.

Press and release the Tune- button on the front of the Micro or the **◀◀** button on the remote control to scan down the frequency band in 0.05MHz steps.

Note: If reception is poor check that the wire aerial is fully extended or try moving the Micro to another location.

Storing an FM station preset

Your Micro can store up to 20 FM stations in its preset memories for instant access to your favourite stations.

1. Tune the Micro to the FM radio station that you wish to preset.
2. Press and hold the Prog. button on the front of the Micro or on the remote control until 'P XX' starts flashing on the display (where XX is the preset number).
3. Use the **▶▶** and **◀◀** buttons on the Micro or on the remote control to move to the preset number that you would like to store the radio station to (1-20).
4. Press and release the Prog. button on the Micro or the 'Prog' button on the remote control, 'P XX' will stop flashing confirming that the preset has been stored.

Your Micro can automatically search for and store FM radio stations.

1. Press and release the **▶▶** button on the Micro or the Scan button on the remote control.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Using your Bluetooth Micro System

Let's get started

Your Micro will now scan for, and store, all of the available FM stations.


Note: If there is already an existing FM station stored under a preset, it will be overwritten when you store new stations.

Tune to an FM station preset


In FM mode:

Press and release the Mem+ or Mem- buttons on the remote control to move to the preset location and station that you would like to listen to (1-20). When you pause between each press the frequency stored under each preset location will be displayed and the Micro will tune to and play the stored station.

Bluetooth mode

Check that your Micro is in Bluetooth (BT) mode. If you are not already in BT mode, repeatedly press and release the Mode button on the front of the Micro or on the remote control until you are in BT mode (check the display).  will flash in the display, whilst your product searches for Bluetooth devices.

In Bluetooth (BT) Mode:

1.  will flash in the display whilst your product searches for Bluetooth devices.
2. On the device that you would like to connect to your Micro via Bluetooth (e.g. iPhone/iPad/Android/other phone/Tablet/Computer), turn on Bluetooth connectivity and ensure that it is 'discoverable'.

Note: If necessary, refer to the instructions for your device to add or set up Bluetooth.

3. Select to 'Add new device', if necessary.


Note: Some products will automatically search for a new device and so the 'Add new device' option is not available.

4. When found, your Micro will be displayed as 'BUSH FM MICRO'. Select the device name to begin pairing.

section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 600 3021

Using your Bluetooth Micro System

Let's get started

5. When pairing is complete  will stop flashing in the display, and will be constantly displayed.
6. Now that you have paired your device with the Micro, it will connect to it when it is within range, which is about 10 metres or less (33 feet or less), line of sight.
7. Your device will remain paired with the Micro unless you decide to disconnect or 'unpair' it.

Note: If your device should be come unpaired for any reason, follow the steps above to 'pair' it again. You can press and release the Pair button on the remote control to restart the Bluetooth pairing process

Listening to Music/Audio using Bluetooth



In Bluetooth (BT) Mode:

1. Select and start the music or audio that you wish to listen to on your paired Bluetooth device, it will now be heard through the Micro speakers. Adjust the volume on the connected device and/or your Micro.

Note: If your previously paired device is within range but does not automatically connect, go to the Bluetooth connectivity settings on your device and select 'BUSH FM MICRO' to reconnect. Alternatively, press and release the 'Pair' button on the remote control to restart the Bluetooth pairing process.

2. You can use the controls on your paired Bluetooth device as well as those on the front of the Micro or on the remote control when listening to music via Bluetooth.

Controls available on your Micro and the remote control are:

- Play/Pause
 Press and release to play/pause.
- Skip back
 Press and release to skip back to the previous track.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Using your Bluetooth Micro System

Let's get started

Note: If you press and hold the ►|| button on the Micro or the Pair button on the remote control for 3 seconds, you can pair and unpair the connected bluetooth device.

- Skip forward
►► Skip forward. Press and release to skip forward to the next track.

Delete all paired Bluetooth device records

Press and hold the ■ button on the Micro or on the remote control to delete all the Bluetooth device records from your Micro. 📶 will flash in the display. See page 28 to connect or 'pair' a new device with your Micro.

Note: If you do not use or pause your Micro for approximately 30 minutes and no audio signal is received, it will automatically go to Standby mode.

Aux in mode

Check that your Micro is in Aux in mode. If you are not already in Aux in mode, repeatedly press and release the Mode button on the front of the Micro or on the remote control, until you are in Aux in mode (check the display).

Using a 3.5mm audio input connection cable (not included), Aux in allows for a quick and easy connection to an external sound source.

1. Connect one end of the 3.5mm audio connection cable to the headphone (or auxiliary out) socket of your secondary device, connect the other end to the Line in socket on the back of your Micro.
2. Press the Play button on your external device to start playback through the Micro speakers.

To gain optimal volume levels, adjust the output volume level on both the secondary device and on the Micro.

Note: It is recommended that you unplug the Audio cable from the Line in socket after you have finished listening to your external device.

section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 600 3021



 
This page is left intentionally blank





Other information

4

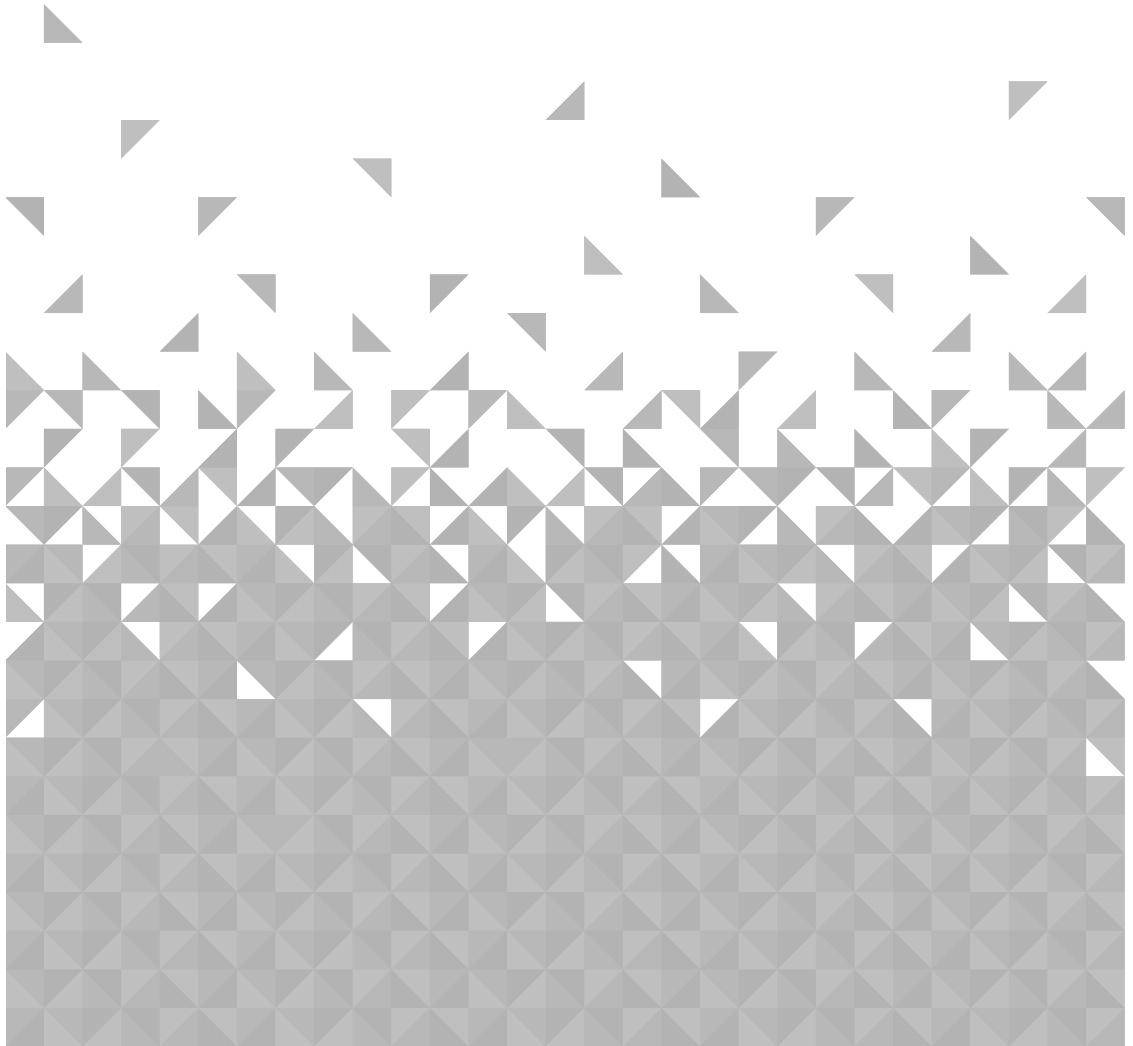

Other information

Helpful technical information

Technical specification

Power:	Input AC 230-240V/50Hz
Battery:	1 x 3V CR2025 for the remote control
Output:	2 x 3W RMS
Frequency range:	FM: 87.5 MHz to 108 MHz
Bluetooth:	Version 2.1 Profiles A2DPV1.2, AVRCPV1.4 Frequency range: 2.4GHz-2.480GHz
Pairing name:	BUSH FM Micro



This product is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

This page is left intentionally blank

section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 600 3021

BUSH

 


This page is left intentionally blank



Product support

5

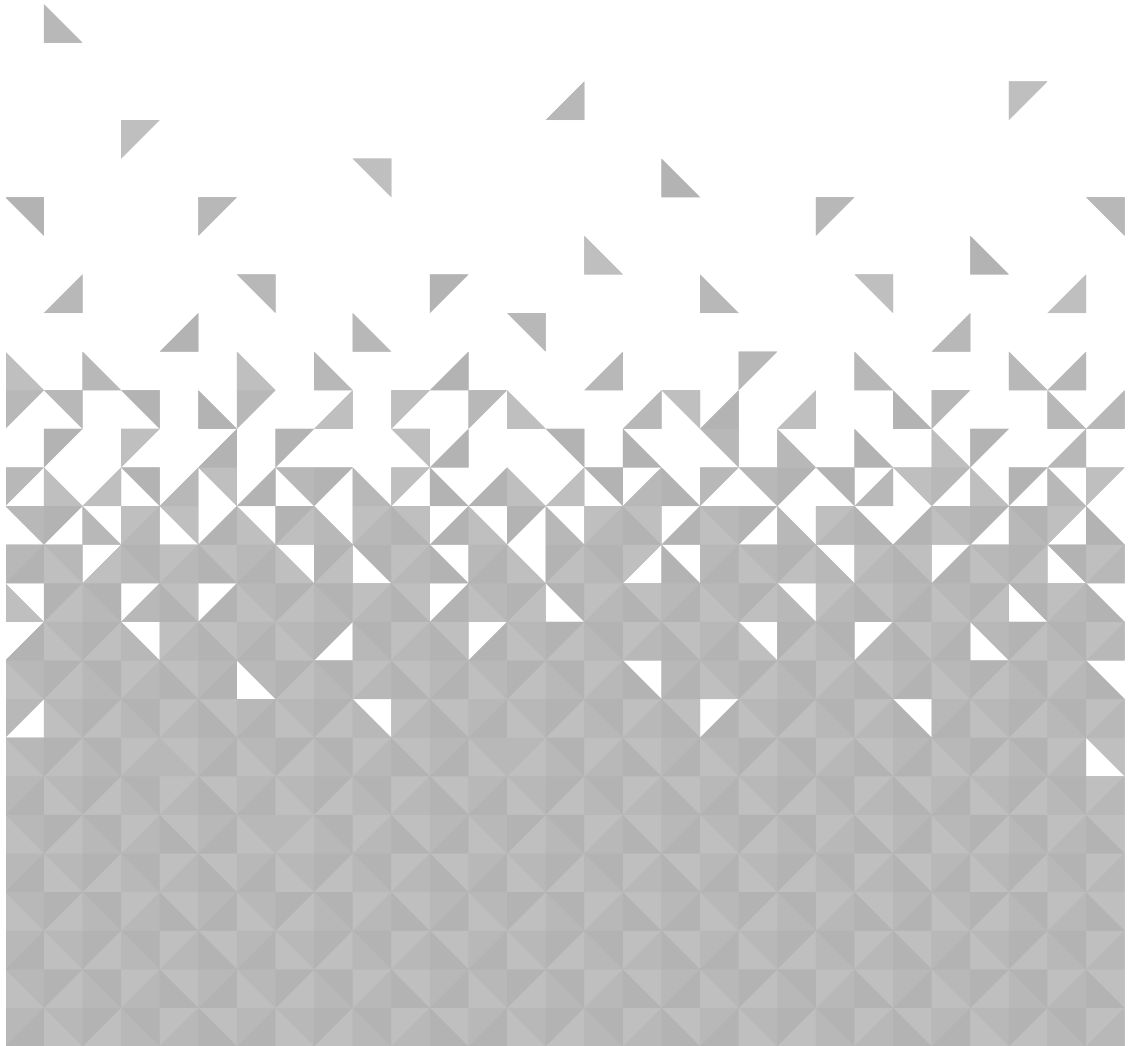

Product support

Help is always at hand

Troubleshooting

If you are experiencing problems with your Micro, there are some quick and easy checks that you can do, which may help to solve the problem.

CD Does not play:

- Check that you are in CD mode. Press and release the Mode button on the Micro or on the remote control to change the mode (check the display).
- Take out the CD and check that it is not marked or scratched. Damaged CDs cannot be played in the Micro or may skip or not rotate correctly.
- Please check that you are using an original audio CD and not a copy. Often copied CDs will not play.

No sound / power:

- Adjust the volume using the rotary control on the Micro or the Vol + and Vol - buttons on the remote control.
- Check that the speakers are plugged fully home into the sockets on the back of the Micro.
- Check that the mains power wall socket is switched on and that the Micro is not in Standby mode.
- You may have headphones connected. Either use the headphones to listen to your Micro or unplug the headphones.
- Check that you are trying to use the function buttons for the mode that you are in.
- If you are using a Bluetooth connected device or an external sound source via Line in. Increase the volume on the secondary device and on the Micro.

Radio reception is poor:

- Fully extend the wire aerial to get the best reception and sound quality.
- Retune the radio station/s.
- Try moving your Micro to another location to see if reception improves.
- Check that you do not have other electrical equipment too close to your Micro, causing interference.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Product support

Help is always at hand

Unable to pair with a Bluetooth device:

- Check that you are In Bluetooth (BT) Mode.
- Ensure that you are within range of the radio for Bluetooth functionality, 10 metres or less (33 feet or less).
- Move the Micro and Bluetooth device away from other Bluetooth devices/electrical equipment.
- If possible, turn off other nearby Bluetooth devices or disable their Bluetooth functionality.

The function buttons do not respond:

- Check that mains power wall socket is switched on and that the Micro is not in Standby mode.
- Check that you are trying to use the function buttons for the mode that you are in.

section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 600 3021

Product support

Help is always at hand

Help and assistance

If you require any technical guidance or find that your Bluetooth Micro System is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions or online at www.argos-support.co.uk

If you still require further assistance, call one of our experts on **0345 600 3021***. To help give us help you a fast and efficient service please have the following information ready:

Model Ref.

Serial number

You can find these on the rating plate - a small information panel (usually a sticker or metal plate) on the rear or base of your product.

Date of purchase

This will be shown on your receipt

Local call rates applies*

Lines open 8am-7pm Monday to Saturday and 10am-4pm Sunday.

*Calls to Argos enquiry lines may attract a charge and set up fee from residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see www.bt.com/pricing for details.

For security and training purposes, telephone calls to and from customer service centres may be recorded and monitored. Calls from Republic of Ireland will attract international call charges.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Product support

Help is always at hand

Disposal



- Disposal of your old product. Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.
- When this crossed out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2012/19/EC..
- Please make yourself aware of the local collection system for electrical and electronic products.
- Please act according to your local rules and do not dispose of your old products with your normal household waste.
- The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.



This product is intended for use within the UK. This equipment complies with the essential requirements of the Radio Equipment Directive 2014/53/EU.

Declaration of Conformance

Hereby, Argos Ltd, declares that this Bluetooth Micro System is in compliance with the essential requirements and other relevant provisions of the Radio Equipment Directive 2014/53/EU. The complete declaration of conformity can be obtained by contacting <http://www.argos-support.co.uk/>

Product support

Help is always at hand

BUSH

Call us now and activate your 12 month guarantee

Thank you for choosing Bush. Your new product is guaranteed against faults and breakdowns for 12 months. Don't forget to register it with us today so we can provide you with our best possible after-sales service and useful updates.

www.bushregistration.co.uk

FREEPHONE*

0800 597 8548

Lines are open 8am - 8pm, 365 days a year. *Calls may be recorded and monitored.

Your Bush Guarantee

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will be repaired free of charge (or if applicable the product will be replaced or the purchase price refunded) where possible during this period by the dealer from who your purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in the manual.
- It must be used solely for domestic purposes. The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- Bush disclaim any liability for loss or damage arising from the breakdown of the product.
- This guarantee is in addition to and does not diminish your statutory or legal rights.

Important Data Protection Information

If you provide us with information about another person, you confirm that they have appointed you to act for them, to consent to the processing of their personal data including sensitive personal data and that you have informed them of our identity and the purposes (as set out in the Important Data Privacy notice displayed overleaf) for which their personal data will be processed.

You are entitled to ask for a copy of the information we hold about you (for which we may charge a small fee) and to have any inaccuracies in your information

corrected.

For quality control and training purposes, we may monitor or record your communications with us.

If your personal details change, if you change your mind about any of your marketing preferences or if you have any queries about how we use your information, please let us know by contacting our Data Protection **Officer, Domestic & General, Leicester House**
17 Leicester Street, Bedworth, Warwickshire
CV12 8JP.

Guarantor: Argos Limited - 489 - 499 Awebury Blvd. - Milton Keynes - MK9 2NW

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

This page is left intentionally blank

section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 600 3021

BUSH

BUSH

Contact:

www.argos-support.co.uk

Helpline: 0345 600 3021