

Instruction manual

MP3 PLAYER
MP06 16G BLACK



You'll soon be enjoying your new MP3 PLAYER

It all begins here, with your instructions. Don't worry, there's nothing too technical coming up. Just simple, step-by-step guidance to get you up and running quickly. Sound good? Then let's get started.

Help and Guidance

We're here to help you get the most from your MP3 player. Should you require any guidance, a simple solution often can be found online at:

www.argos-support.co.uk

If you still require further assistance, call one of our experts on **0345 604 0105**.

1 Safety information

Important - Please read these instructions fully before installing or operating

NOTE

Below contents are for how to use the device properly and keep it in good condition, please read carefully

- Avoid serious impact to the device.
- Avoid contact of Benzene or any diluents.
- Avoid closing to strong powerful magnetic or electric fields.
- Avoid direct sunshine or heating devices.
- Do not try to disassemble, repair, or modify the device.
- Do not use the device with earphone while bicycling, driving, or motorcycling.
- Do not listen to music with high volume to avoid damage to your hearing.
- Assort and dispose with care the used packing, used batteries, used electrical devices.

WARNING:



To prevent possible hearing damage, do not listen to this radio at high volume levels for long periods of time.

INTRODUCTION

- Music: Support MP3, WMA, OGG, APE, FLAC formats.
- Picture: Support JPEG, BMP, GIF formats
- Video: Support AMV, AVI(need to use special software to convert) formats.
- FM Radio function.
- E-Book function.
- Blue tooth transmission function
- Capacitive touch control.

Regulatory Conformance (RED)

Hereby, Argos Limited declares that the radio equipment type MP06 is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following website:

<http://www.argos.co.uk>

Manufacturer: Argos Limited
Address: 489-499 Avebury Boulevard, Milton Keynes MK9 2NW


Radio specification

Frequency Range	Max.RF power
2402-2480MHz	4.6 dBm

2 Using your MP3 PLAYER

Let's get started

Device Layout

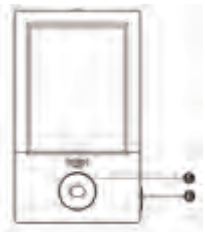

Keys' Functions

- 1. Touch by finger tip:** Choose an application or icon or menu to operate.
- 2. Slide to right by finger tip:** exit and return to upper menu
- 3. Slide to left by finger tip:** During play mode, slide to left to enter sub menu.
- 4. Slide upward or downward:** Increase or decrease volume during Music, Movie, Bluetooth, FM radio playing mode, or turn to next or previous picture or page during photo viewing or E-book reading..
- 5. Return Key:** Short press to return to upper menu, long press to turn off screen backlight, press again to turn on the backlight again.
- 6. Power Switch:** Push to on position to turn on device and to off position to turn off.

PC Connection

System Requirement

Operation System: Windows98/7/10/ME/2K/XP/Vista/Linux9/Linux6.2/Mac os 10
CPU: at least Pentium-133MHz
Ram: at least 32MB
Spare Hard disk space: at least 100MB
USB port

Connecting with PC

When the device is either at ON or OFF status, use the USB cable that comes with the device to connect to PC to copy files into the device.

Music Mode

Main Menus

Choose Music in the main window, and main menus will show up: All songs, Artists, Albums, Genres, Playlists, Create Playlist.

Basic Operation:

During music playing, ► or || is for play or pause, ◀ is for previous track and ▶ is for next track. Long press ◀ or ▶ for fast rewind or fast forward.

For changing volume, slide upward/downward to increase or decrease volume.

During Music playing, slide to right to show list of files.

Sub Menus

During music play or pause, slide left to show sub menus: Play mode, Sound settings, Add to playlist, Remove from Playlist, Delete.

Video

Operations are similar to those of Music, please refer them for reference.

Main Menus

- 1, Bluetooth Search: Search for available Bluetooth devices and add to Bluetooth Device List.
- 2, Bluetooth Device List: Choose any available device for pairing/unpairing.
- 3, Music List: Show list of all music in different category: All songs, Artists, Album, Genres. Choose to play.
- 4, Music: Back to music playing window.

Bluetooth Headset Instruction Manual:

Function Introduction

1. power on: Long press 🔊 for 2 seconds, voice prompts "power on".
2. power off: Long press 🔊 for 2 seconds, voice prompts "power off".

Pairing:

1. Initial pairing: Bluetooth: Headset will enter pairing mode automatically, voice prompts: "Ready to pair". Turn on the Bluetooth function of the device and use Bluetooth search function, When the pairing ID "MP06BT" appears, choose it for pairing. Voice prompts "device connected" when pairing successfully.

- 2. Repairing: long press** for about 2 seconds in power off mode, headset enter pairing mode with red and blue LED flash alternately
- Bluetooth headset will automatically pair the already paired before device once power on.

Operating Guide:

- Answer phone call: Single press
- Hang up phone call: Single press
- Re-dial last phone call: Double press
- Play/pause music: Single press
- Volume +/-: Long press + or -
- Previous /next song: Short press + or -

LED Indicator:

- Charging: Red lit on when is being charged, goes off when fully charged.
- Power on: Blue flash for 1 time.
- Pairing mode: Red and blue flash alternately.
- Paired mode: Blue flash every 1.5 seconds.
- Pause mode: Blue flash every 1.5 seconds.
- Play mode: Blue flash every 1.5 seconds.

Notice: Please charge the Bluetooth headset when voice prompts: "Battery low".

Photo

Choose the Photo icon to enter and show list of all photos. During photo viewing, slide your finger upward or downward over the screen to change different photos, slide to left to show sub menus: Slideshow settings, Delete picture.

8

Radio

Notice: This device need to use a wired earphone, as its cable will be used as an antenna, for using the radio function. Enclosed Bluetooth earphone is not suitable for radio function.

Main menus

On the radio listening window, slide to left to show main menus: Auto tune, Presets, Save to preset, Clear preset, Tuner Region. This device can save up to 30 channels.

Ebook

Touch the Ebook icon on the main window to enter and show list of all Ebooks.

During Ebook reading, slide upward or downward to change pages, and slide to right to show list of Ebooks, to left to show main menus: Play setting, Delete ebook, Bookmark Select, Delete bookmark, Add bookmark, Page select.

Folder

Choose to show all folders and files. Choose a file to play it.

Set

Choose to show available settings and information such as: Backlight timer, Brightness, sleep timer, Date and time, Language, Information, Factory Reset, Format device, Factory settings.

Setting Time & Dates

Click Set time to enter time setting, slide upwards to increase figures, slide downwards to decrease figures. Slide to left to switch between different columns. Slide to right to save and exit. Operation of setting dates is similar to that of setting time.

9

3 Other information

Helpful technical information

Specification

USB	Mic o USB 5Pin , USB 2.0 high speed transfer, USB charging
ROM	16GB NAND FLASH
Battery	Device: Polymer Lithium battery 3.7V 300MAH
Music	Support MP3, WMA, OGG, APE, FLAC formats.
Picture	Support JPEG, BMP, GIF formats.
Video	Support AMV. AVI(need to use special software to convert) formats.
Environmental Temperature	-40°C-60°C
Support PC OS	Windows98/7/10/ME/2K/XP/Vista/Linux9/Linux6.2/Mac os 10

Troubleshooting

Device fail to power on	Make sure the power is switched on and battery has power
No sound from Bluetooth headset	Make sure the Bluetooth has power and also paired with the device successfully
Unreadable screen display	Make sure you choose the right language
Bad FM receiving	Adjust earphone cable's position
Cannot copy files to the device	Make sure the USB cable is well connected Check whether the device's memory is full

10

Help and assistance

If you require any technical guidance or find that your MP3 PLAYER is not operating as intended, a simple solution can often be found in the Troubleshooting section of these instructions or online at www.argos-support.co.uk

If you still require further assistance, call one of our experts on

0345 604 0105.*

Local call rates applies*

Lines open 8am-7pm Monday to Saturday and 10am-4pm Sunday.

*Calls to Argos enquiry lines may attract a charge and set up fee from residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see www.bt.com/pricing for details.

For Security and training purposes, telephone calls to and from customer service centres may be recorded and monitored. Calls from Republic of Ireland will attract international call charges.

11

4 Product support

Help is always at hand

Disposal

The symbol on the product or its packaging indicates that this product may not be treated as household waste. Instead it should be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For your household waste disposal service or the shop where the product was purchased.



12

BUSH

Call us now and activate your 12 month guarantee

Thank you for choosing Bush. Your new product is guaranteed against faults and breakdowns for 12 months. Don't forget to register it with us today so we can provide you with our best possible after-sales service and useful updates.

www.bushregistration.co.uk

FREEPHONE*

0800 597 8548

Lines are open 8am - 8pm, 365 days a year.
*Calls may be recorded and monitored.

13

Your Bush Guarantee

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will be repaired free of charge (or if applicable the product will be replaced or the purchase price refunded) where possible during this period by the dealer from whom you purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in the manual.
- It must be used solely for domestic purposes. The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- Bush disclaims any liability for loss or damage arising from the breakdown of the product.
- This guarantee is in addition to and does not diminish your statutory or legal rights.

10

Important Data Protection Information

If you provide us with information about another person, you confirm that they have appointed you to act for them, to consent to the processing of their personal data including sensitive personal data and that you have informed them of our identity and the purposes (as set out in the Important Data Privacy notice displayed overleaf) for which their personal data will be processed.

You are entitled to ask for a copy of the information we hold about you (for which we may charge a small fee) and to have any inaccuracies in your information corrected.

For quality control and training purposes, we may monitor or record your communications with us.

If your personal details change, if you change your mind about any of your marketing preferences or if you have any queries about how we use your information, please let us know by contacting our Data Protection Officer, Domestic & General, Leicester House 17 Leicester Street, Bedworth, Warwickshire, CV12 8JP.

Guarantor: Argos Limited - 489 - 499 Awebury Blvd. - Milton Keynes - MK9 2NW

14

15