 


BUSH

Instruction Manual

NE-2600





You'll soon be enjoying your new Kitchen DAB/FM Radio.

It all begins here, with your instructions. Don't worry, there's nothing too technical coming up. Just simple, step-by-step guidance to get you up and running quickly. Sound good? Then let's get started.

Help and Guidance

We're here to help you get the most from your Kitchen DAB/FM Radio. Should you require any guidance, a simple solution can often be found online at:

www.bush-support.com

If you still require further assistance, call one of our experts on **0345 604 0105**.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

BUSH

Contents

1 Safety information

Safety information	6
--------------------	---

2 Getting to know your Kitchen DAB/FM Radio

Ready? Let's begin	10
Product Overview	10
FIXING THE BOARD FOR WALL MOUNTING	11

3 Using your Kitchen DAB/FM Radio

POWER SOURCE	14
BASIC OPERATION	14
DAB OPERATION	14
FM OPERATION	16
ALARMS and SNOOZE	18
SYSTEM SETTINGS	20
USING EARPHONES	21

4 Other information


Specifications	24
----------------	----

5 Product support

Help and assistance	27
Disposal	28
Guarantee	29

section of these instructions, or online at www.bush-support.com If you still require further assistance, call one of our experts on 0345 604 0105

 Safety information **1**

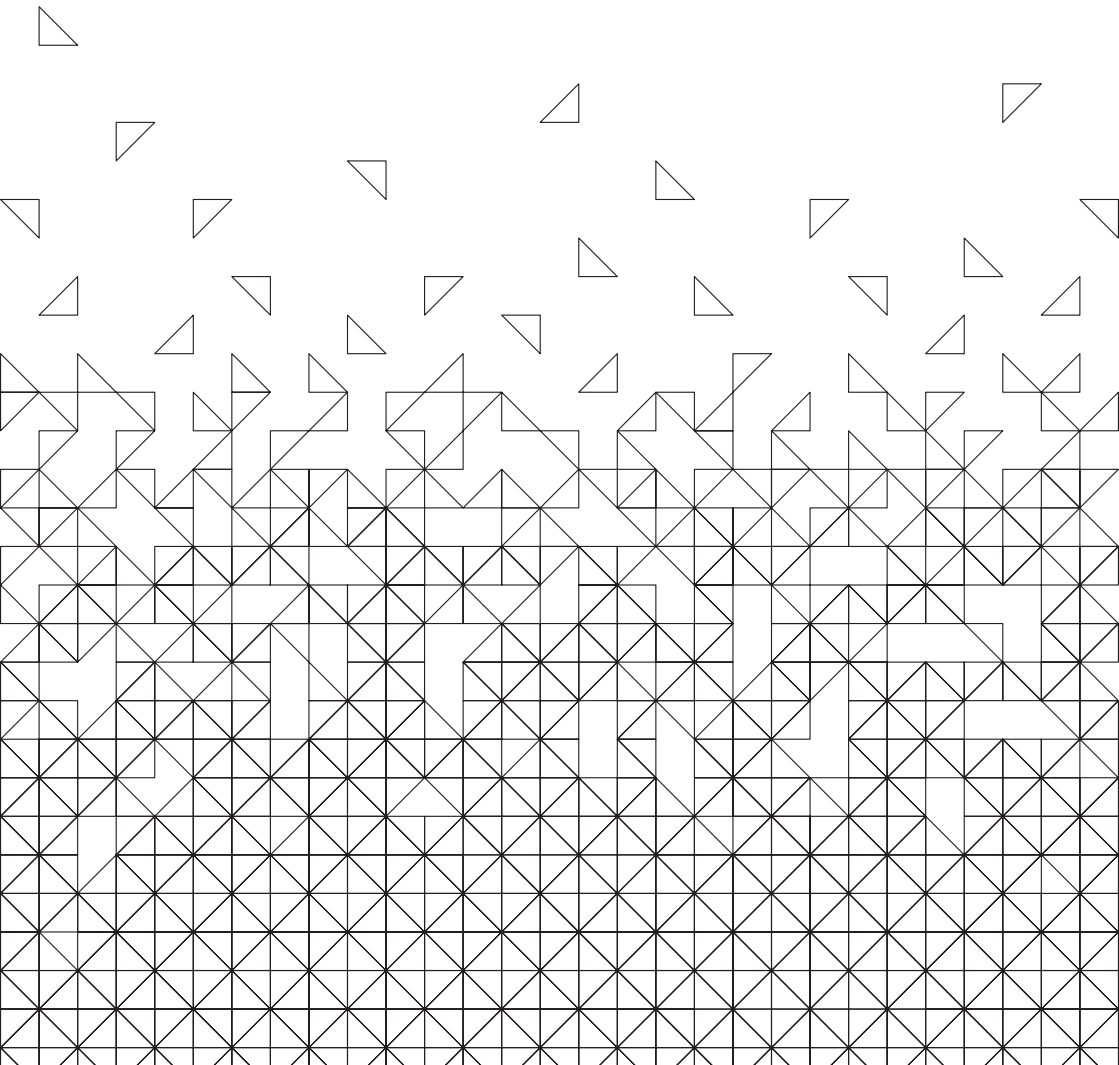



Safety information

Important - Please read these instructions fully before installing or operating

SAFETY PRECAUTIONS

- Read all the instructions carefully before using the unit and keep them for future reference. Check that the voltage marked on the rating label matches your mains voltage.
- The unit must be placed on a flat stable surface and should not be subjected to vibrations.
- Do not place the unit on sloped or unstable surfaces as the unit may fall off or tip over.
- The mains socket must be located near the unit and should be easily accessible.
- Avoid extreme degrees of temperature, either hot or cold. Place the unit well away from heat sources such as radiators or gas/electric fires. Avoid exposure to direct sunlight and other sources of heat.
- Never place any type of candle or naked flame on the top of or near the unit.
- To reduce the risk of fire, electric shock or product damage, do not expose this unit to rain, moisture, dripping or splashing. No objects filled with liquids, such as vases, should be placed on the unit.
- If you spill any liquid into the unit, it can cause serious damage. Switch it off at the mains immediately. Withdraw the mains plug and consult your dealer.
- To prevent the risk of electric shock or fire hazard due to overheating, ensure that curtains and other materials do not obstruct the ventilation vents.
- Do not install or place this unit in a bookcase, built-in cabinet or in another confined space. Ensure that a minimum of 10cm should be kept around the unit for ventilation.

Safety

- Always disconnect the unit from the mains supply before connecting/disconnecting other devices or moving the unit.
- Unplug the unit from the mains socket during a lightning storm.
- This unit will become warm when used for a long period of time. This is normal and does not indicate a problem with the unit.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the unit's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the manual accompanying the unit.



Safety information

Important - Please read these instructions fully before installing or operating

Mains Adapter

- Make sure the unit is not resting on top of the mains cable, as the weight of the unit may damage the cable and create a safety hazard.
- If the mains cable is damaged it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.

Interference

- Do not place the unit on or near appliances which may cause electromagnetic interference. If you do, it may adversely affect the operating performance of the unit, and cause a distorted sound.

Supervision

 
- Children should be supervised to ensure that they do not play with the unit.
- Never let anyone especially children push anything into the holes, slots or any other openings in the case - this could result in a fatal electric shock.

Service/Maintenance

- To reduce the risk of electric shock, do not remove screws. The unit does not contain any user serviceable parts. Please leave all maintenance work to qualified personnel.
- Do not open any fixed covers as this may expose dangerous voltages.
- Ensure to unplug the unit from the mains socket before cleaning.
- Do not use any type of abrasive pad or abrasive cleaning solutions as these may damage the unit's surface.
- Do not use liquids to clean the unit.

Getting to know your Kitchen DAB/FM Radio

2

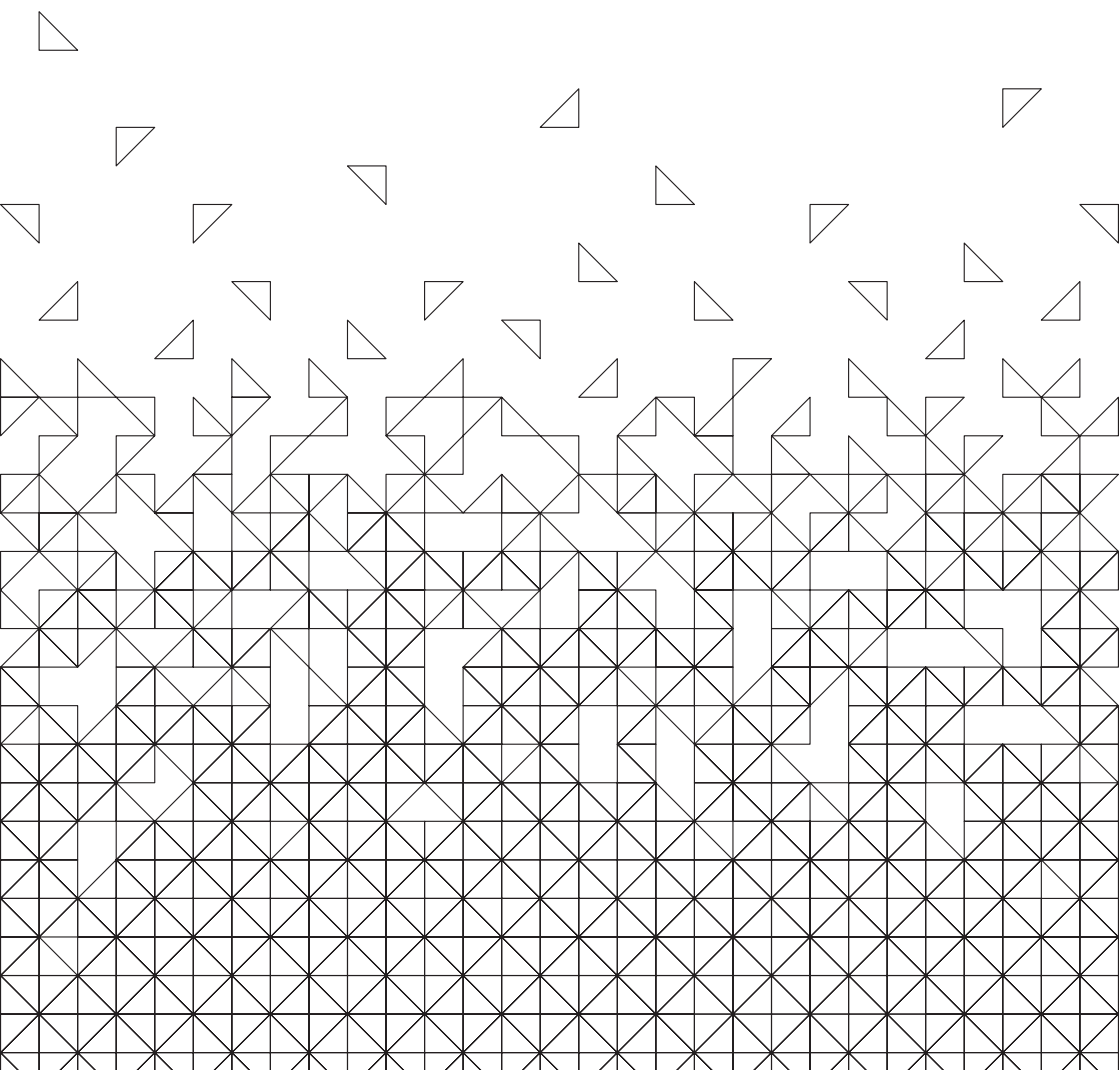

Getting to know your Kitchen DAB/FM Radio

You'll be up and running in no time

Ready? Let's begin...

 
Please read these instructions carefully. They contain important information which will help you get the best from your product and ensure safe and correct installation and operation.

If you require any further assistance, our technical experts are happy to help. For full details, refer to the product support section at the end of these instructions.


Product Overview

1. VOLUME DIAL
2. STANDBY BUTTON
3. MODE BUTTON
4. DISPLAY
5. MENU BUTTON
6. INFO BUTTON
7. SCROLL/SELECT DIAL
8. ALARM BUTTON
9. SNOOZE/DIMMER BUTTON
10. SPEAKER
11. SLEEP BUTTON
12. PRESET BUTTON
13. AERIAL
14. EARPHONE JACK
15. DC IN SOCKET

top view

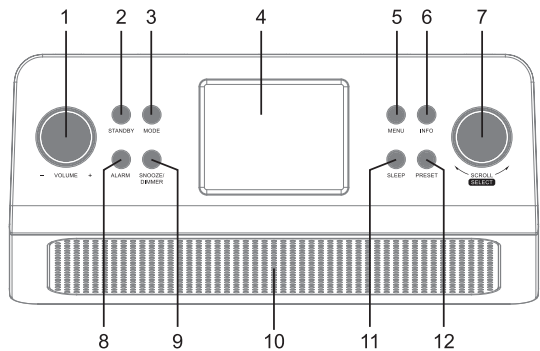

bottom view

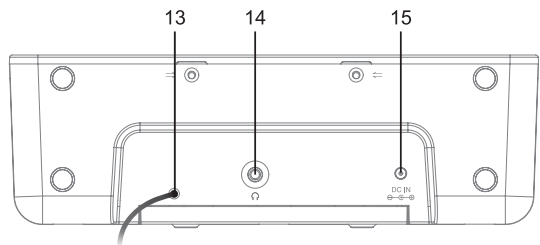 


Getting to know your Kitchen DAB/FM Radio

You'll be up and running in no time

16. MOUNTING HOLES

 17. MOUNTING PLATE

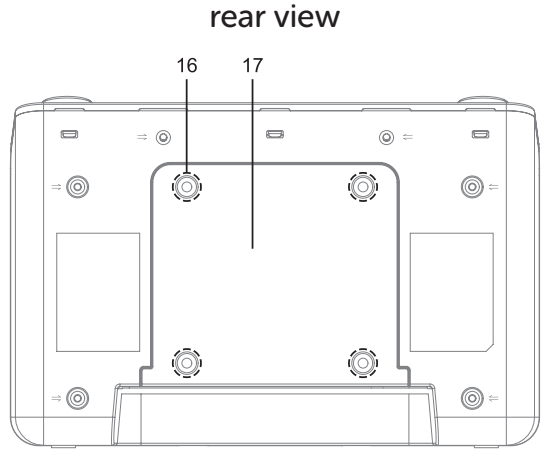


FIXING THE BOARD FOR WALL MOUNTING

How to assembly the unit for wall mounting


The device can stand alone or mount under the shelves.

****Screws included****

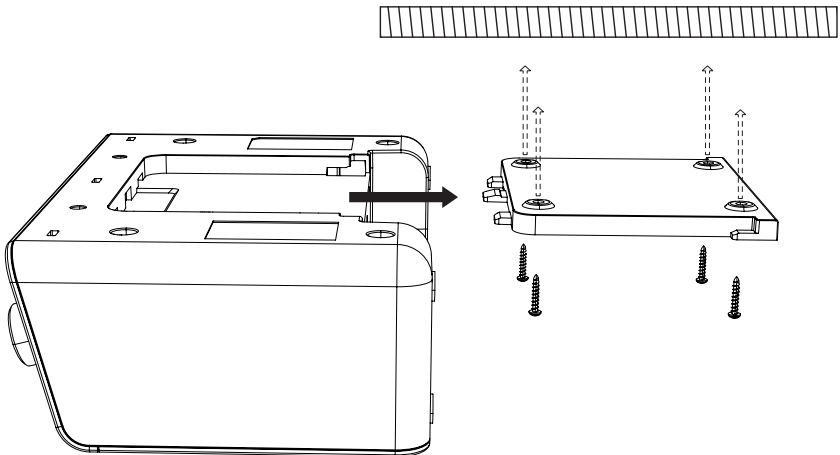 

Using your Kitchen DAB/ FM Radio

 3

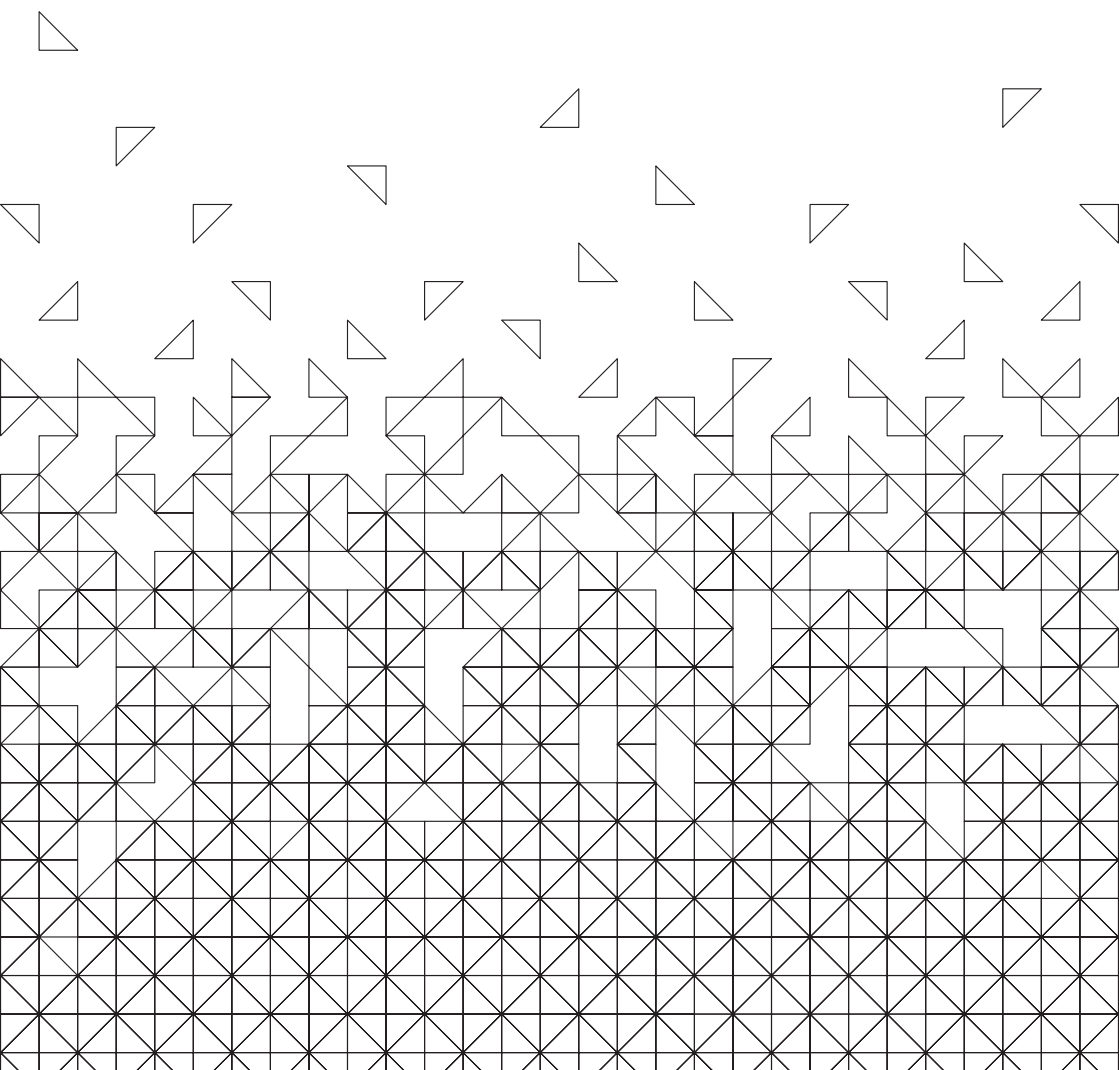


Using your Kitchen DAB/FM Radio

Let's get started

POWER SOURCE

Mains Power

1. Connecting the unit to any other power source may cause damage to the unit. Unwind the mains adapter cable to its full length. Connect the end of the cable to the **DC IN**  Socket at the rear of the unit and then connect the mains adapter to the mains socket. Make sure the mains adapter is firmly inserted into the mains socket. The unit is now ready to use.
2. To switch the unit off completely, unplug the mains adapter from the mains socket.

BASIC OPERATION

Powering ON/OFF

After connecting the mains adapter to the unit and the mains socket, the unit will enter Standby mode.

1. Press the **STANDBY** button to switch on the unit.
2. Press the **STANDBY** button again to switch the unit back to Standby mode.
3. Disconnect the power cable of the mains adapter from the mains socket if you want to switch the unit off completely.

Selecting Modes

Press **MODE** button repeatedly to switch between modes (**DAB** or **FM**).

Adjusting the Volume

Turn the **VOLUME** dial to adjust the volume.

Automatically Setting the Clock

The clock will be updated automatically if you can receive DAB/FM signal in your location.

In order to synchronize to the current local time, you must leave the unit to receive signals from the DAB/FM station for a period of time.

 
Using your Kitchen DAB/FM Radio

Let's get started

DAB OPERATION

If the unit is connected to the mains power and then switched on for the first time, the unit will automatically enter into the DAB mode and perform full scan. During the scan the display will show "Scanning..." together with a slide bar that indicates the progress of the scan and the number of stations that have been found so far.

Once the scan has finished, the unit will select the first alphanumerically found station. To explore the found stations, Press the **SCROLL** Dial and then press the same the Dial **SELECT** to confirm selection.

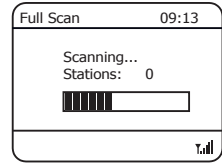

Full Scan

The full scan will search for the entire DAB Band III channels. After the scan has finished, the first alphanumerically found station will be automatically selected.

1. To activate Full Scan, press **MENU** then turn **SCROLL** Dial to select **<Full scan>**. Press the same the Dial **SELECT** to confirm. The display will show "Scanning..." and a progressing slide bar.
2. All the stations that have been found will be stored automatically. To explore and listen to the found stations, turn **SCROLL** Dial and then press the same the Dial **SELECT** to confirm selection.

Manual Tune

As well as the normal method of scanning, you can also manually tune to a particular channel / frequency. This can be useful for adjusting your antenna to achieve the best possible reception and scanning a particular channel to update the station list.

1. Press **MENU** and then turn **SCROLL** Dial to select **<Manual Tune>**. Press the same the Dial **SELECT** to confirm selection.
2. Turn **SCROLL** Dial to scroll through the DAB channels, which are numbered from **5A** to **13F**.
3. Press the same the Dial **SELECT** to select the station that you would like to listen.
4. To listen to any stations found, return to the now playing screen and turn **SCROLL** Dial to select the required station from the station list as normal.

Now playing information (Slideshow)

While a station is playing, the screen shows its name and DLS (Dynamic Label Segment) information broadcast by the station such as programme name, track title and contact details.

Press the Dial **SELECT** to cycle through the following slideshow displays:

1. Station name, slideshow image and DLS text being broadcast by the current station.
2. Full screen version of the slideshow image and DLS
3. Slideshow image only.



If no slideshow image is available a default DAB thumbnail image is displayed.

Using your Kitchen DAB/FM Radio

Let's get started

DAB Display Modes

Every time you press **INFO**, the display will show the following display modes:

DLS text

This is a scrolling message giving real-time information, e.g. song titles, news headlines, etc.



DL Plus information - This is only displayed if broadcast by the station.

Programme Type

This describes the "style" or "genre" of the programme that is being broadcast.

Ensemble Name

This display the name of the multiplex that contains the station you are listening to. A multiplex is a collection of radio stations that are bundled and transmitted on one frequency. There are national and local multiplexes. Local ones contain stations that are specific to that area.

Channel Number/Frequency

This display the frequency of the present station, such as "11C 220.352MHz".

Signal Strength

This shows a slide bar to indicate the signal strength, the stronger the signal, the longer the bar will be from left to right.

Date

This display the current date provided automatically by the broadcaster.

Prune Invalid

You may remove all unavailable stations from the list.

1. During DAB mode, press **MENU** button, and then turn **SCROLL** Dial to select <Prune Invalid>. Press the same the Dial **SELECT** to confirm selection.
2. Turn **SCROLL** Dial to select <YES> to confirm delete. Or select <NO> to cancel.

Using your Kitchen DAB/FM Radio

Let's get started

FM OPERATION

Switching from DAB to FM Mode

To switch the unit from **DAB** to **FM** mode, press **MODE** once.

Auto Scan

To search for an FM station, turn **SCROLL** Dial and then press the same the Dial **SELECT** to start the forward or reverse scanning.

Once a station has been found, the scanning will stop automatically.

Manual Scan

To search for FM stations manually, turn **SCROLL** Dial repeatedly until your desired frequency is reached.



With FM radio, it may be necessary to fine tune each station by turn **SCROLL** Dial to your desired by adjust the frequency by 0.05 MHz. If reception is still poor, adjust the position of the aerial or try moving the radio to another location.

Scan Setting

This is a scanning option to scan all stations, or just scan stations with strong signal.

1. Press **MENU** and then turn **SCROLL** Dial to select **<Scan Setting>**. Press the same the Dial **SELECT** to confirm selection.
2. Turn **SCROLL** Dial to select **<Strong Stations Only>** or **<All stations>**. Press the same the Dial **SELECT** to confirm selection.

Audio Setting

FM is able to search for Stereo or Mono stations.

1. Press **MENU** and then turn **SCROLL** Dial to select **<Audio setting>**. Press the same the Dial **SELECT** to confirm selection.
2. Turn **SCROLL** Dial to select **<Stereo Allowed>** or **<Forced Mono>**. Press the same the Dial **SELECT** to confirm selection.



The unit will automatically switch between stereo and mono when **<Stereo allowed>** is selected depending on the signal strength, but you can override this and switch this function manually. This is helpful when receiving poor signal reception.

Using your Kitchen DAB/FM Radio

Let's get started

FM Display Modes

Every time you press **INFO** button, the display will show the following display modes:

RDS RadioText

This is a scrolling message information about the current programme.

Programme Type

This describes the "Style" or "genre" of programme that is being broadcast.

Name/Frequency

This display the frequency of the present station, such as "87.50 MHz".

Mono/Stereo

This displays if the station being received is in mono or stereo.

Date

This displays the current date provided automatically by the broadcaster.

Presetting Stations

You can store up to 10 of your favorite DAB or FM stations to the memory. This will enable you to access your favorite stations quickly and easily.

1. To store a preset, you must first be listening to the station that you would like to save.
2. Press and hold **PRESET** button located at the top of the unit, turn **SCROLL** Dial to select preset location and press the same the Dial **SELECT** to confirm selection. The display will show "Preset # saved."

Recalling a Preset Station

1. Once you have saved a station, you can recall it by pressing the **PRESET** button located at the top of the unit, turn **SCROLL** Dial to select target preset station and press the same the Dial **SELECT** to confirm selection.
2. If you choose a preset station number that has not been allocated a station, "**Preset Empty**" will be displayed.

Using your Kitchen DAB/FM Radio

Let's get started

ALARMS and SNOOZE

As well as a clock/calendar, there are two wake-up alarms with snooze facility. The alarm sound for each alarm can use a Buzzer, Digital Radio or FM.

Alarms (Mains Power only)

1. Press **ALARM** button to enter Alarm menu
2. Turn **SCROLL** Dial to select <Alarm 1> or <Alarm 2> and press the same the Dial **SELECT** to confirm selection.
3. Turn **SCROLL** Dial to select the option below:

Alarm

Press the Dial **SELECT** button to select On / Off, then turn **SCROLL** Dial to select to next parameter.

Frequency

Turn **SCROLL** Dial to select Daily, Once, Weekends or Weekdays to active the alarm, then press the same the Dial **SELECT** to confirm selection.



If you choose 'Once', you are prompted to enter the required date.

Wake Up time

Turn **SCROLL** Dial to select Daily, to adjust the hour and minute, then press the Dial **SELECT** to confirm.

Source

Turn **SCROLL** Dial to select Buzzer, Digital Radio or FM, then press the same Dial **SELECT** to confirm.

If DAB or FM is chosen as the audio source you will also be prompted to select the Last Listened or preset station (if set).

Duration

Turn **SCROLL** Dial to select alarm duration 15, 30 45, 60, 90 or 120 minutes, then press the Dial **SELECT** to confirm.

If the alarm is not cancelled, the unit returns to standby after this time period.

Using your Kitchen DAB/FM Radio

Let's get started

Volume

Turn **SCROLL** Dial to adjust the alarm volume(9-31), then press the Dial **SELECT** to confirm. Initially the alarm sounds at a low volume and gradually gets louder to the set volume.

In all listening modes active alarms are indicated by displaying the relevant Alarm 1 and/or Alarm 2 icons.

At the set time, the alarm will sound, quietly at first, then gradually building up to the set volume.

To cancel a sounding alarm and switch the radio to standby, press the **STANDBY** or **ALARM** button.

Snooze

To temporarily silence a sounding alarm, press **SNOOZE/DIMMER** button. You can change the snooze period by repeatedly pressing **SNOOZE/DIMMER** button. Snooze periods are 5, 10, 15 and 30 minutes. The radio returns to standby for the set time period with a snooze countdown displayed. When the countdown reaches 0 (zero) the alarm is triggered again.

Press **STANDBY** or **ALARM** button to fully cancel a sounding alarm and switch the radio to standby.

Display Backlight

There are four backlight levels to choose.

To set the backlight level, repeatedly press the **SNOOZE/DIMMER** button and the brightness of the display will change in sequence: Off>Low>Medium>High

SYSTEM SETTINGS

Sleep

1. To set the sleep timer, press **SLEEP** into sleep menu
2. The sleep delay time in minutes from: Sleep Off / 10 / 20 / 30 / 60 /70/80/ 90 minutes, when you release the button the sleep time will be set accordingly.

Once you select a sleep delay period, and returns to the now playing. The screen will display a crescent moon icon to indicate that the sleep function is activated.

Time/Date

1. To set the time & date, press **MENU** to display the menu.
2. Turn **SCROLL** Dial to select <System Settings>, and then press the same Dial **SELECT** to confirm selection. Turn **SCROLL** Dial to select <Time/Date>, then press the same Dial **SELECT** to confirm.
3. Turn **SCROLL** Dial to select the option below:

Set Time/Date

Turn **SCROLL** Dial to adjust the time and date, then press the same Dial **SELECT** to confirm

Using your Kitchen DAB/FM Radio

Let's get started

Auto Update

Turn **SCROLL** Dial to select **Update from Any**, **DIGITAL RADIO**, **FM** or **No Update** then press the same Dial **SELECT** to confirm

Set 12/24 Hour

Turn **SCROLL** Dial to select 12 Hour or 24 Hour, then press the same Dial **SELECT** to confirm.

Set Date Format

Turn **SCROLL** Dial to select MM-DD-YYYY or DD-MM-YYYY, then press the same Dial **SELECT** to confirm.

Clock Style

Turn **SCROLL** Dial to select Normal Digital, Big Digital, Classic Analog or Modern Analog then press the same Dial **SELECT** to confirm

4. Press **MENU** to exit the menu.

Factory Reset

1. To perform factory reset, press **MENU** to enter Menu.
2. Turn **SCROLL** Dial to select **<System Settings>** and press the same Dial **SELECT** to confirm
3. Turn **SCROLL** Dial to select **<Factory Reset>** and press the same Dial **SELECT** to confirm.
4. Turn **SCROLL** Dial to select **<Yes>** to perform factory reset or **<No>** to cancel.

Software Version

1. To view the software version, press **MENU** to enter Menu.
2. Turn **SCROLL** Dial to select **<System Settings>** and press the same Dial **SELECT** to confirm
3. Turn **SCROLL** Dial to select **<Software Version>** and press the same Dial **SELECT** to confirm

 
USING EARPHONES

You can connect your earphones by plugging into the earphone socket at the rear of the unit. Turn down the volume before connecting earphones. Slowly raise the volume with the earphones on until you reach your desired level.



Long-term exposure to loud music may cause hearing damage. It is best to avoid extreme volume when using earphones, especially for extended periods of time.

Other information 4

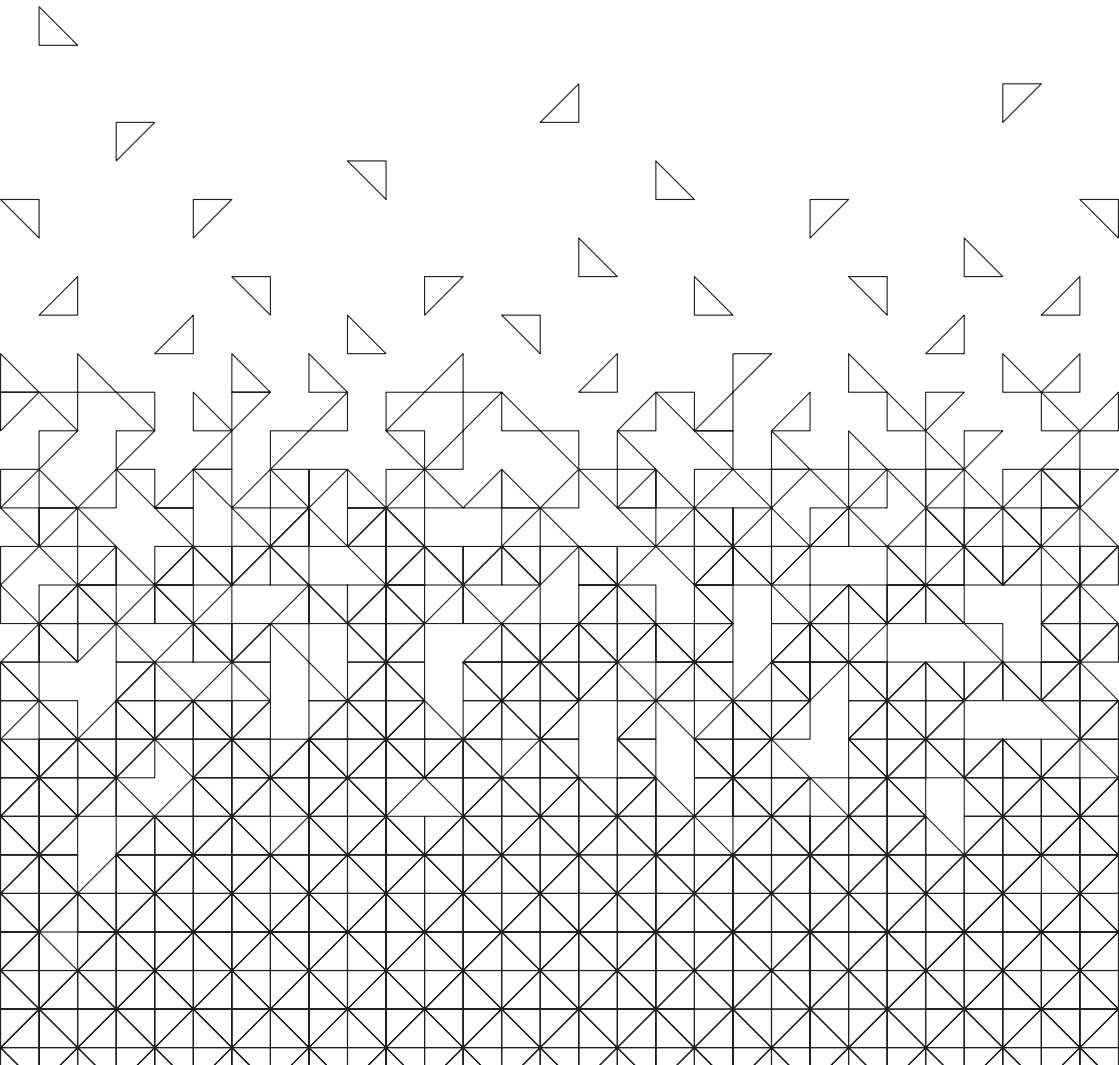

Other information


Helpful technical information

Specifications

Mains Adapter	Input AC 100–240V ~50/60Hz, 0.3A
Output	DC 6V 1.0A
Speaker Output Power	2.0W RMS
Radio Frequency	FM 87.5 – 108 MHz DAB 174 – 240 MHz
Dimension	225 (L) × 150 (W) × 73 (H) mm
Net Weight	(approx.) 0.67kg

Features and specifications are subject to change without prior notice.

 Product support 5

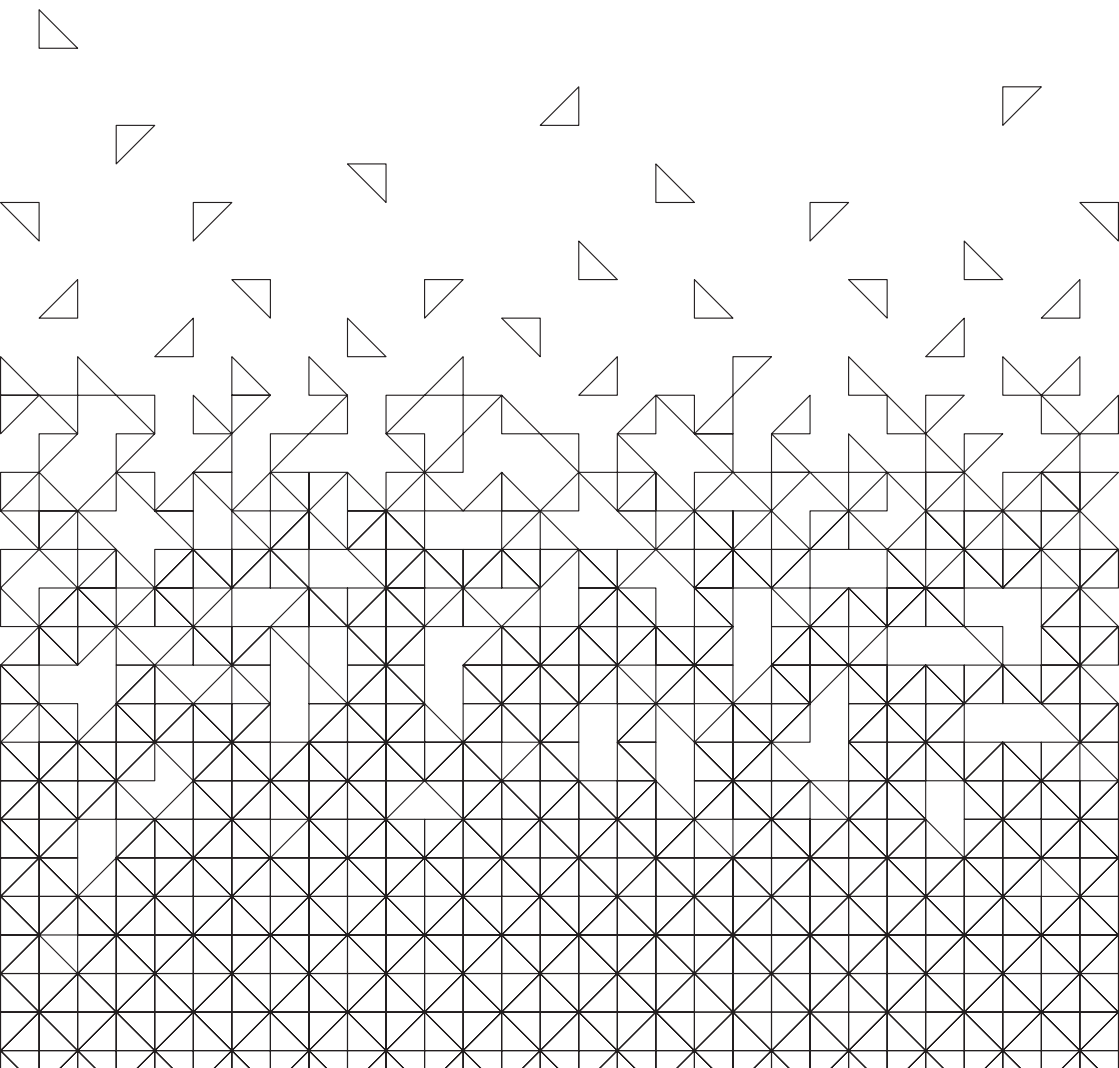

Product support

Help is always at hand

Help and assistance

If you require any technical guidance or find that your Kitchen DAB/FM Radio is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions or online at www.argos-support.co.uk

If you still require further assistance, call one of our experts on **0345 604 0105**. To help give us give you a fast and efficient service please have the following information ready:

Model Ref.

Serial number

Date of purchase

You can find these on the rating plate - a small information panel (usually a sticker or metal plate) on the rear of your product.

This will be shown on your receipt

Local call rates applies*

Line open 8am-7pm Monday to Saturday and 10am-4pm Sunday

*Calls to Argos enquiry lines may attract a charge and set up fee from residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see www.bt.com/pricing for details.

For security and training purposes, telephone calls to and from customer service centres may be recorded and monitored. Calls from Republic of Ireland will attract international call charges.



Product support

Help is always at hand

Disposal



This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the EU. For more information, please contact the local authority or your retailer where you purchased the product.

Notes for battery disposal

The batteries used with this product contain chemicals that are harmful to the environment.

To preserve our environment, dispose of used batteries according to your local laws or regulations.

Do not dispose of batteries with normal household waste.

For more information, please contact the local authority or your retailer where you purchased the product.

All trademarks are the property of their respective owners and all rights are acknowledged.

This product is intended for use within the UK. This equipment complies with the essential requirements for the Radio Equipment and Telecommunications Terminal Equipment Directive 2014/30/EC.

Declaration of Conformance

Hereby, Argos Ltd, declares that this Band II LPD device is in compliance with the essential requirements and other relevant provisions of Directive 2014/30/EC. The complete declaration of conformity can be obtained by contacting <http://www.argos-support.co.uk/>

Product support

Help is always at hand



Call us now and activate your 12 month guarantee

Thank you for choosing Bush. Your new product is guaranteed against faults and breakdowns for 12 months. Don't forget to register it with us today so we can provide you with our best possible after-sales service and useful updates.

www.bushregistration.co.uk

FREEPHONE*
0800 597 8548

Lines are open 8am - 8pm, 365 days a year. *Calls may be recorded and monitored.

Your Bush Guarantee

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will be repaired free of charge (or if applicable the product will be replaced or the purchase price refunded) where possible during this period by the dealer from who you purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in the manual.
- It must be used solely for domestic purposes. The guarantee will be rendered invalid if the product is
 - re-sold or has been damaged by inexpert repair.
 - Specifications are subject to change without notice.
 - Bush disclaim any liability for loss or damage arising from the breakdown of the product.
 - This guarantee is in addition to and does not diminish your statutory or legal rights.

Important Data Protection Information

If you provide us with information about another person, you confirm that they have appointed you to act for them, to consent to the processing of their personal data including sensitive personal data and that you have informed them of our identity and the purposes (as set out in the Important Data Privacy notice displayed overleaf) for which their personal data will be processed.

You are entitled to ask for a copy of the information we hold about you (for which we may charge a small fee) and to have any inaccuracies in your information corrected.

For quality control and training purposes, we may monitor or record your communications with us.

If your personal details change, if you change your mind about any of your marketing preferences or if you have any queries about how we use your information, please let us know by contacting our Data Protection Officer, Domestic & General, Leicester House 17 Leicester Street, Bedworth, Warwickshire CV12 8JP.

BUSH

Contact:

www.bush-support.com

Helpline: 0345 604 0105



MP3



DAB Digital
Radio