


29 INCH TOWER FAN

INSTRUCTION MANUAL Model No. FZ10-19MA

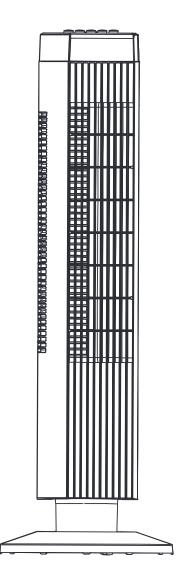

IMPORTANT SATETY INSTRUCTIONS

CAUTION


Read all instructions before using this appliance. Carefully retain these instructions for future reference.

WARNING

- 1. If the supply cord is damaged, it must be replaced by manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- 2. To protect against the risk of electrical shock, do not immerse the unit, cord or plug in water or other liquid.
- 3. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- 4. Keep electrical appliances out of reach from Children or infirm persons. Do not let them use the appliances without supervision.
- 5. When the appliance is not in use and before cleaning, unplug the appliance from the outlet.
- 6. Trip Hazard. Beware of trailing cables when in use and while in storage.
- 7. Strangulation Hazard. Children have STRANGLED in cords. Keep power cords out of reach of children. Never leave a cord positioned where a child could reach it.
- 8. Do not use in wet or damp locations.
- 9. For indoor and household use only.
- 10. This appliance is not intended to be used in: staff kitchen areas in shops, offices and other working environments; farm houses; by clients in hotels, motels and other residential type environments; bed and breakfast type environments.

RULES FOR SAFE OPERATION


- 1. Never insert fingers, pencils, or any other object through the grille when the fan is running.
- 2. Disconnect the fan when moving from one location to another.
- 3. Be sure the fan is on a stable surface when operating to avoid overturning.
- 4. DO NOT use the fan by the window, rain may cause electrical hazard.
- 5. Do not use outdoors.

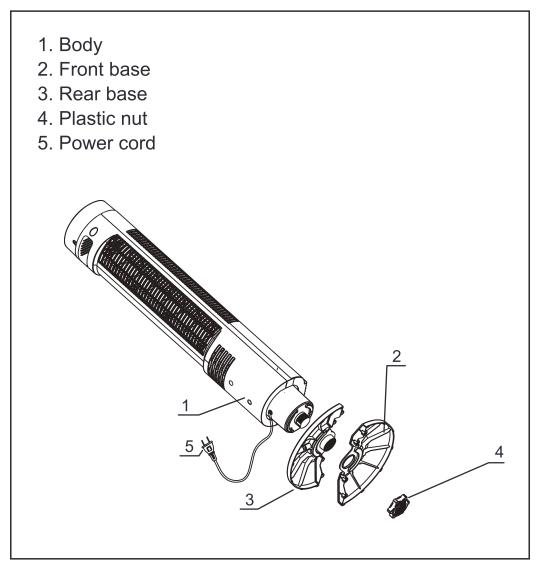


Note: All the pictures in this manual are for explanation purpose only. Any discrepancy between the real object and the illustration in the drawing shall be subject to the real subject.

ASSEMBLY INSTRUCTIONS

- 1. Take out the fan body and the spare parts from the box. Put the front base onto the rear base and join them together. (See Fig. 1)
- 2. Unscrew the plastic nut from the fan body. (See Fig. 2)
- 3. Pass the power cord through the outlet trough of the rear base, then insert the fan body into the base.
- 4. Fix the fan body on the base with the plastic nut. (See Fig. 3)

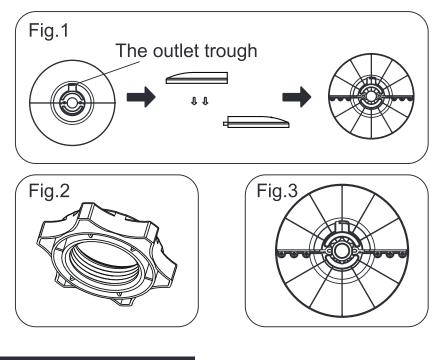

OPERATION INSTRUCTION

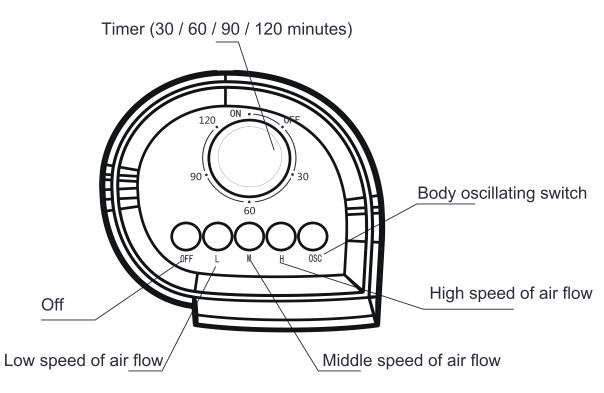

MAINTENANCE INSTRUCTION

The fan requires little maintenance. Do not try to fix it by yourself. Refer it to qualified service personnel if service is needed.

- 1. Before cleaning and assembling, fan must be unplugged.
- 2. To ensure adequate air circulation to the motor, keep vents at the rear of the motor free of dust. Do not disassemble the fan to remove dust.
- 3. Please wipe the exterior parts with a soft cloth soaking a mild detergent.
- 4. Do not use any abrasive detergent or solvents to avoid scratching the surface. Do not use any of the following as a cleaner: gasoline, thinner.
- 5. Do not allow water or any other liquid into the motor housing or interior parts.

CLEANING

- 1. Be sure to unplug from the electrical supply source before cleaning.
- 2. Plastic parts should be cleaned with a soft cloth moisten with mild soap. Thoroughly remove soap film with dry cloth.

RECYCLING ELECTRICAL PRODUCTS

You should now recycle your waste electrical goods and in doing so help the environment. This symbol means an electrical product should not be disposed of with normal household waste. Please ensure it is taken to a suitable facility for disposal. Visit www.recycle-more.co.uk click on "bank locator" and enter your postcode to find your nearest recycling site.



TECHNICAL SPECIFICATION

Description	Symbol	Value	Unit
Model no.		FZ10-19MA	
Voltage		230	VAC
Maximum fan flow rate	F	6,93	m ³ /min
Fan power input	Р	35,0	W
Service value	Sv	0,21	(m ³ /min)/W
Standby power consumption	P _{SB}	_	W
Off power consumption	POFF	0	W
Fan sound power level	LWA	53,06	dB(A)
Maximum air velocity	С	6,24	meters/sec
Seasonal electricity consumption	Q	10,56	kWh/a
Measurement standard for service value	EN ISO 5801: 2008		
Contact details for obtaining more information	Customer helpline 0345 640 2020		

CONNECTION TO POWER

Before Switching on make sure that the voltage of your electricity supply is the same as that indicated on the rating plate

MAIN CORD

This appliance may be fitted with a non-rewireable plug.

If it is necessary to change the fuse in a non-rewireable plug the fuse cover must be refitted. If the fuse cover is lost or damaged, the plug must not be used until a replacement is obtained.

It is important that the color of the replacement fuse cover corresponds with the colour marking on the base of the plug.


If the plug has to be changed because it is not suitable for your socket, or becomes damaged, it should be cut off and an appropriate plug fitted following the wiring instructions below.

The plug removed must be disposed of safely as insertion into a 13A socket is likely to cause an electrical hazard. For your own safety read the following instructions carefully before attempting to connect this unit to mains. The wires in this mains lead are coloured in accordance with the following code:

BLUE = NEUTRAL BROWN = LIVE

IMPORTANT

As the colours of the wire in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as following:-

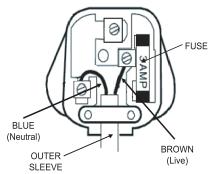

The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red. No connection is to be made to the earth terminal of the plug.

If a 13 Amps (BS 1363) plug is used, it must be fitted with a 3 Amp Fuse conforming to BS1362 and be ASTA approved. If in doubt consult a qualified electrician who will be pleased to do this for you.



PRODUCT GUARANTEE

This product is guaranteed against manufacturing defects for a period of



This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will either be replaced, refunded or repaired free of charge where possible during this period by the dealer from whom you purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in this manual.
- It must be used solely for domestic purpose.
- The guarantee will be rendered invalided if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- The manufacturer disclaims any liability for the incidental or consequential damages.
- The guarantee is in addition to, and does not diminish your statutory or legal rights.

Guarantor: Argos Limited 489-499 Avebury Boulevard, Mi Keynes, MK9 2NW. <u>Argos (N.I.) Ltd, Forestside Shopping Centre, Upper</u> <u>Galwally, Belfast, United Kingdom, BT8 6FX.</u> Argos Distributors (Ireland) Limited, Unit 7, Ashbourne Retail Park, Ballybin Road, Ashbourne, County Meath, Ireland

www.argos-support.co.uk