

Instruction manual

MP3 Player
MP40C 16GB



You'll soon be enjoying your new MP3 Player.

 
It all begins here, with your instructions. Don't worry, there's nothing too technical coming up. Just simple, step-by-step guidance to get you up and running quickly. Sound good? Then let's get started.

Help and Guidance

We're here to help you get the most from your MP3 Player. Should you require any guidance, a simple solution can often be found online at:

www.bush-support.com

If you still require further assistance, call one of our experts on **0345 600 3021**.

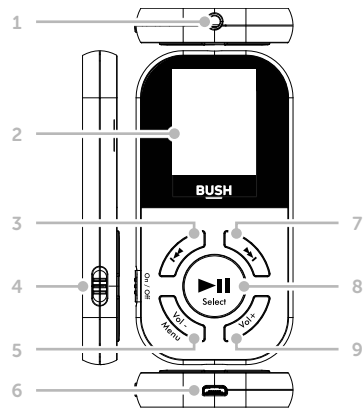

1. Optional wired earphone socket.
2. Colour display
3. Skip back
4. Power on/off slide switch
5. Menu/Volume -
6. Micro USB socket
7. Skip forward
8. Select/Play/Pause
9. Volume +

Charging the battery

Before you use your MP3 player and Bluetooth earphones for the first time, you will need to charge the integral rechargeable batteries. From a full charge you will be able to listen to your MP3 player continuously for approximately 8 hours.

1. Connect the Micro USB end of the charging cable to the USB socket on the bottom of your MP3 Player. Plug the standard end of the USB charging cable into a computer or other USB charging device.
2. The battery icon in the top left of the display will scroll whilst the battery is charging. The battery icon will stop scrolling when the battery is fully charged.
3. After charging your MP3 player, connect the Micro USB end of the charging cable into the USB socket on the side of the Bluetooth earphones, under the cover. A red LED will confirm that the earphones are charging. When the LED changes to blue, your earphones are fully charged.

1 ⚠ Safety information

Important - Please read these instructions fully before installing or operating

- Only use the USB cable supplied with the product.
- Avoid any serious impact to the product.
- **Do not** attempt to open the product. This product does not contain any user serviceable parts.
- **Do not** use this product with earphones in situations where hearing must not be impaired.
- **Do not** leave it in low temperatures as moisture can form inside the product, which may damage the circuit board. Keep it dry. Avoid exposure to precipitation, humidity and liquids which could all affect the product circuitry.
- **Do not** leave it in high temperatures as electronic devices and plastic parts may warp in heat. Keep it away from bright sunlight or heat sources, such as a radiator. No naked flame sources, such as lit candles should be placed on or near the product.

⚠ Warning

To avoid possible hearing damage, do not listen to this MP3 Player at high volume levels for long periods of time. Always keep the volume within reasonable limits.

2 Using your MP3 Player

Let's get started

Accessories

Included with your MP3 player

Bluetooth earphones

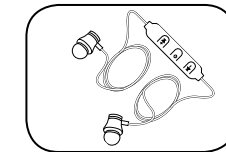 


Fig 1.

Spare ear tips

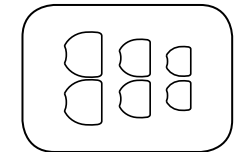 


Fig 2.

USB charging cable

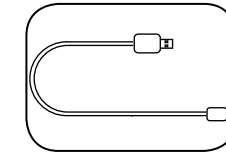 


Fig 3.

Note: It will take approximately 1 hour to fully charge your MP3 Player and Bluetooth earphones, before first use. When fully charged, unplug the Micro USB charging cable from the MP3 Player and Bluetooth earphones.

Add audio files to your MP3 player

Your MP3 Player is compatible with both MP3 and WMA 8+ audio files.

1. Connect the Micro USB end of the charging cable to the USB socket on the bottom of your MP3 Player. Plug the standard end of the USB charging cable into the computer where the audio files are stored.
2. The MP3 Player will appear as a USB drive named 'BUSH MP40C' on your computer and a window will open for you to drag and drop audio files to. If the MP3 Player drive window does not open, double click on the drive name 'BUSH MP40C' to open the window.
3. Open the folder on your computer where the audio files that you would like to transfer are stored, then simply drag and drop individual files or a folder of Audio files into the MUSIC folder in the MP3 drive window. The audio files will be transferred to your MP3 Player.

Delete files from your MP3 Player

1. Connect your MP3 Player to your computer and delete any unwanted Audio, Video or Image files using the Delete option within the MP3 Player drive window.

Turn the MP3 Player On/Off

After you have charged the integral battery and transferred some audio files to your Player, you turn it on by sliding the side switch to 'On'.

When you need to turn your Player off again, there are two options available:

1. Slide the side switch to 'Off'. This will turn off your MP3 Player completely. The next time you turn your Player on with the side switch it will go back to the main menu..
2. Alternatively, you can long press the central Play/Pause button to turn your Player Off and On again.

Note: Your MP3 Player has been designed to power off after approximately 5 minutes if no audio is detected. Long press the Play/Pause button to turn your product back on again.

Pair your Bluetooth Earphones

Before you use your Bluetooth earphones, you will need to 'Pair' them with your MP3 Player.

1. Turn your MP3 player on and using the **◀◀** or **▶▶** button scroll to Bluetooth and then press the Select/**▶▶** button.
2. Bluetooth Status is displayed. Press the Select/**▶▶** button, then use the **◀◀** button to highlight 'On'. Press the Select/**▶▶** button to confirm.
3. Use the **▶▶** button to highlight 'Device Search' and press the Select/**▶▶** button. Next press and hold the **⏻** button on the Bluetooth earphones until you hear 'Pairing' announced and the Blue and Red LEDs flash.
4. Your MP3 Player will find the Bluetooth earphones and display 'BT earphone'. Press the Select/**▶▶** button to confirm. 'Bluetooth Pairing' will be displayed. Press the Select/**▶▶** button again. 'Connected' will be announced via the Bluetooth earphones and 'BT earphone' will be displayed on your MP3 player. You will now be able to hear your MP3 audio via your Bluetooth earphones.
5. Short press the Menu/Vol- button until you exit back to the main menu display.

Controls

Select displayed option/Play/Pause

- ▶▶** Short press to select a displayed option
- ▶▶** Short press to play/pause.
- ▶▶** Long press to power off/on

Adjusting the volume

Vol+: Short press to increase the volume. Check the display which will display the volume level.

Vol-: Short press to decrease the volume. Check the display which will display the volume level.

Scroll displayed options/Skip Forward

- ▶▶** Short press to skip forward a track. Long press when music is playing to fast forward.

Scroll displayed options/Skip Backward

- ◀◀** Short press to skip back a track.

Menu options

Long press the Menu/Vol- button in each mode, e.g. when an audio track is playing or when viewing an image/video to list available options. Further options are also available if you long press the **◀◀** button, except in Camera mode. where a short press of the **◀◀** button switches between photo and video mode.

In each mode, use the **◀◀** or **▶▶** button to scroll up and down displayed options and press the Select/**▶▶** button to Select.

Short press the Menu/Vol - to exit from the further options and then back to the main menu display.

Note: When playing an audio track, you will need to long press the **◀◀** button, then short press the Menu/Vol - button until you exit back to the main menu display.

3 Other information

Helpful technical information

Technical specification

Micro USB input:	USB 2
Earphone socket:	3.5mm
ROM:	16GB NAND Flash
Lithium battery:	3.7V/300mAh
PC systems supported:	Window98/7/8/10/ME/2K/XP/ Vista/Linux 6.2/9/Mac OSX
Audio file formats:	MP3/WMA 8+
Image file formats:	JPG/JPEG/BMP/GIF
Video file format:	AVI
Bluetooth pairing name:	BT earphone



Declaration of Conformance

Hereby, Argos Ltd, declares that this MP3 Player is in compliance with the essential requirements and other provisions of the relevant European Directives. The complete declaration of conformity can be obtained by contacting <http://www.bush-support.com/>

4 Product support

Help is always at hand

Help and assistance

If you require any technical guidance or find that your MP3 Player is not operating as intended, a simple solution can often be found in the Troubleshooting section of these instructions or online at www.bush-support.com

If you still require further assistance, call one of our experts on

0345 600 3021*

Local call rates applies*

Lines open 8am-7pm Monday to Saturday and 10am-4pm Sunday.

*Calls to Bush enquiry lines may attract a charge and set up fee from residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see www.bt.com/pricing for details.

For Security and training purposes, telephone calls to and from customer service centres maybe recorded and monitored. Calls from Republic of Ireland will attract international call charges.

Disposal



- This product should not be treated as normal household waste and it should be recycled. Please take it to your local council or visit www.recycle-more.co.uk.
- Batteries contain substances that may be harmful to the environment and human health. Keep out of the reach of children and seek immediate medical help if swallowed.
- Batteries should not be disposed of in the normal household waste but taken to appropriate local recycling facilities, where and when these are available.
- Never throw batteries in a fire or attempt to open the outer casing.

BUSH

Call us now and register your 12 month guarantee

Thank you for choosing Bush. Your new product is guaranteed against faults and breakdowns for 12 months. Don't forget to register it with us today so we can provide you with our best possible after-sales service and useful updates.

www.bushregistration.co.uk

FREEPHONE*

0800 597 8548

Lines are open 8am - 8pm, 365 days a year.

*Calls may be recorded and monitored.

Your Bush Guarantee

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will be repaired free of charge (or if applicable the product will be replaced or the purchase price refunded) where possible during this period by the dealer from who your purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in the manual.

- It must be used solely for domestic purposes. The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- Bush disclaim any liability for loss or damage arising from the breakdown of the product.
- This guarantee is in addition to and does not diminish your statutory or legal rights.

Guarantor: Argos Limited - 489 - 499 Avebury Blvd. - Milton Keynes - MK9 2NW

Important Data Protection Information

To find out how we and Domestic & General Insurance Plc use your data please refer to the guarantee registration material or visit www.bushregistrations.co.uk