

MICROWAVE OVEN

morphyrichards®

Installation & User Instructions –
Please keep for future reference

EG820C2LP(F)-PM



www.morphyrichards.com

Contents

Safety information.....	3
Installation.....	7
Parts and assembly.....	8
Control panel.....	9
Setting the clock.....	10
Stop cooking / Cancel.....	10
Control panel lock.....	11
Kitchen Timer.....	11
Selecting microwave oven power.....	12
Express microwave mode	12
Microwave cooking.....	13
Defrosting.....	14
Grill cooking.....	15
Combination cooking	16
Multistage cooking.....	17
Memory cooking.....	18
Auto cook function.....	19
Cleaning your oven.....	23
Materials suitable for use in the oven.....	24
General microwave cooking advice.....	25
Troubleshooting.....	26
Technical Specification.....	27
Recycling electrical products.....	28
Plug rewiring.....	29
Guarantee.....	32

Safety information

Important – Please read these instructions fully before installation


- **WARNING:** It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover that gives protection against exposure to microwave energy. Servicing of this appliance must only be carried out by a qualified electrician.
- **WARNING:** If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person. Do not operate this appliance if damaged or modified in any way.
- Keep the appliance and its cord out of reach of children less than 8 years.
- When operating in combination or grill modes, the oven becomes extremely hot. Do not allow children to use the appliance without adult supervision
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are aged from 8 years and above and supervised.
- Switch off and unplug before cleaning or servicing the appliance.
- Keep microwave, cable and plug dry and away from areas where it is likely to get splashed. Never immerse in water. Never clean with a steam cleaner.
- Do not pull on the cable to disconnect from the mains supply.

- This oven must be positioned so that the plug is accessible and the plug socket is within easy reach of the power cord.
- Do not operate the microwave if damaged or after it malfunctions. In the event the supply cord is damaged, it must only be replaced by a qualified service engineer, with a suitably approved part.
- Do not place items with naked flames or containers with liquids on this appliance.
- The mains plug shall be connected into a mains socket outlet with a protective earth connection.
- All microwaves are tested and approved in accordance with current electromagnetic safety and compatibility regulations and standards. As a precautionary measure, pacemaker manufacturers recommend wearers to keep a minimum distance of 20-30 cm between an operating microwave oven and the pacemaker in order to avoid possible interference with the pacemaker. If you suspect there may be interference, turn the microwave off immediately and contact the manufacturer of the pacemaker.

WARNING!

- This appliance is not intended to be used in: staff kitchen areas in shops, offices and other working environments; farm houses; by clients in hotels, motels and other residential type environments; bed and breakfast type environments.
- This appliance must not be operated by a timer or a separate remote control system.
- Liquids and other foods must not be heated in sealed containers since they are liable to explode.
- Microwave heating of beverages can result in delayed eruptive boiling; therefore care must be taken when handling the container.
- If you are preparing food or liquid for a baby stir or shake the contents and check the temperature before consumption in order to avoid burns.

WARNING! (continued)


- Never cook or heat eggs in their shell or whole hard boiled eggs, as they may explode even after cooking in the microwave has been completed.
- **The oven should be cleaned regularly and any food deposits removed – see page 23 for details. Failure to maintain the oven and seals in a clean condition could lead to deterioration of the surface or seals, adversely affect the life of the oven and possibly result in a hazardous situation.**
- **Never operate the oven when empty and avoid leaving unattended during use.**
- **Do not cover and allow adequate ventilation – see page 7 for clearance required.**
-  **The surfaces of the oven and the containers inside will become hot during and immediately after use; wear oven gloves when handling.**
- Check regularly during cooking cycle especially when using plastic or paper containers to ensure food and containers do not ignite.
- If smoke is emitted, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
- Do not use oven on, near or under flammable or heat sensitive items.
- **Do not place foil wrapped food, metal containers or containers with metal parts or trim when using the microwave or combination oven.**
- Do not use with a cracked or missing turntable or without the turntable ring.
- The microwave oven is intended for heating food and beverages. Drying of clothing and heating of warming buttons, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.
- Always check for container and utensil suitability before using in the microwave oven - see page 24 for advice.
- The appliance must not be placed in a cabinet.

FOOD SAFETY


- Do not cook raw meat or raw shellfish in a microwave, due to the possibility for uneven heating.
- Do not use microwave for home canning or bottling. Improperly canned or bottled foods may spoil and be dangerous to eat.
- **Always check the temperature of food before serving.**
- Food cooking times will vary with microwave wattage (MAFF rating). When following recipes and on pack cooking instructions always check the MAFF rating / wattage of the appliance being used (marked on the front of the microwave) and follow the corresponding cooking advice.

Installation

- This microwave is designed to be free standing and is not intended to be used 'built in' or in a cabinet.
- Select a level surface away from televisions, cookers and other heat producing appliances.
- Ensure adequate ventilation and allow a clearance of
 - 20cm at each side of the oven
 - 30cm clearance above the oven
 - 10cm at the rear of the oven
 - The minimum installation height is 85cm
- Ensure that the cable is not close to any sharp or hot surfaces, or where it is likely to cause a trip hazard.

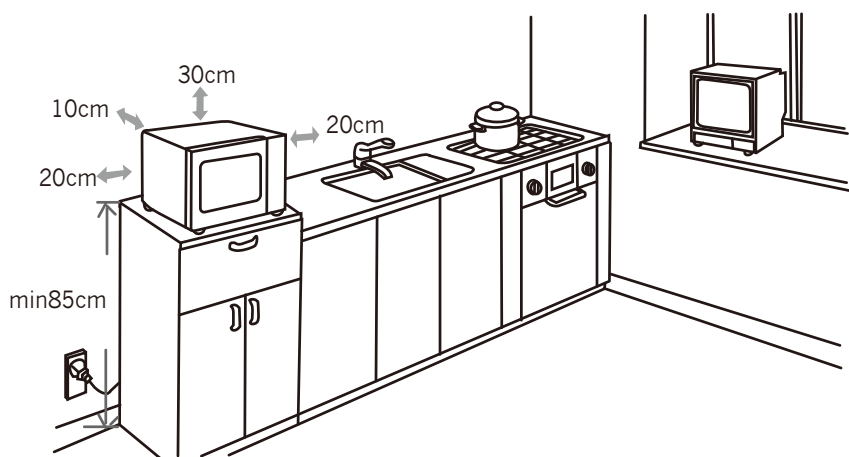


Parts and assembly

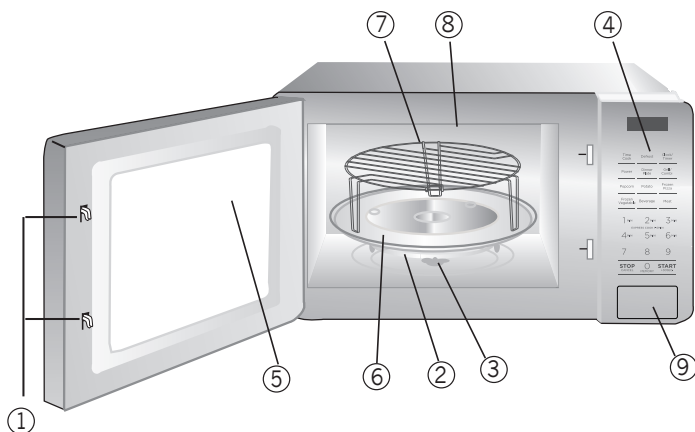

- | | |
|-------------------------|----------------------------|
| 1. Interlocking catches | 5. Door with viewing panel |
| 2. Turntable roller | 6. Glass turntable |
| 3. Turntable shaft | 7. Grill Rack |
| 4. Control panel | 8. Grill element |
| | 9. Door release button |

- Ensure all packaging materials, protective film and adhesive tape are removed and check the oven and door for any damage. **Do not remove the waveguide cover.**
- Assemble as shown above and ensure that the glass turntable is correctly positioned on the shaft and roller.
- When using the microwave do not fit the grill rack.
- When using the grill, place the grill rack onto the glass turntable.
- Always check for damage before using the grill rack. **It is not advised to use the rack when microwave or combination cooking.**
- The grill rack is not allowed to be used in combi cooking.

Control panel

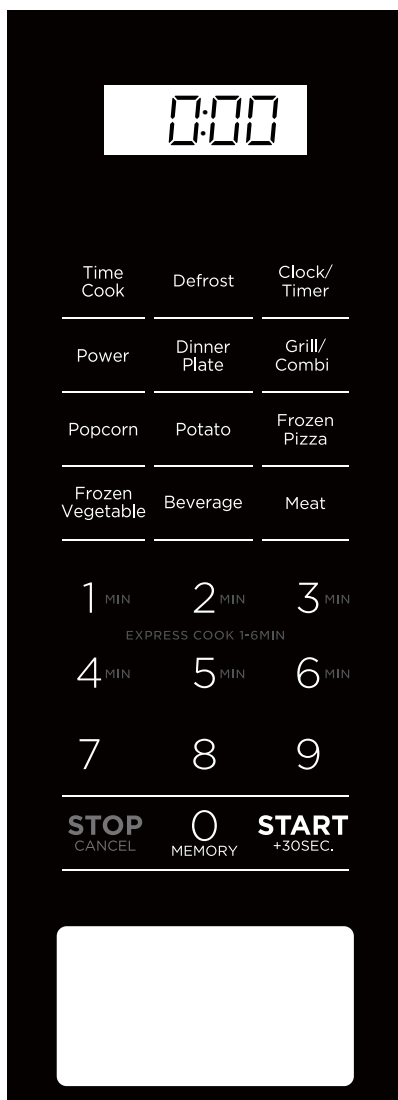

Setting the clock

1. Fully unwind the cable, plug in and switch on. The microwave will emit a single bleep and the display will show 0:00.
2. Press CLOCK/TIMER pad once, 00:00 will display.
3. Press the number pads to enter the correct time. For example, the time is 8:15 now, please press 0-8-1-5 in turn.
4. Press CLOCK/TIMER to save the setting.

Notes:

- It is a 24-hour clock.
- In the process of clock setting, if the STOP/CANCEL pad is pressed or if there is no operation within 1 minute, the oven will go back to the former setting automatically.
- If the oven is unplugged or turned off at the mains the clock setting will be lost.
- To check the time during oven operation, press the CLOCK/TIMER pad and the time will display briefly before returning to the countdown timer.

Stop cooking / Cancel

- The oven can be stopped at any time by pressing the STOP/CANCEL pad or by opening the door.
- If the oven door is OPEN, press the STOP/CANCEL pad ONCE to clear all settings.
- If the oven door is CLOSED, press the STOP/CANCEL pad TWICE to clear all settings.

Control panel lock

This function helps prevent accidental operation during cleaning or unsupervised operation of the oven by children.

- To activate the lock, press and hold the STOP/CANCEL pad (approx. 3 seconds), until the locked icon is displayed and a single long bleep is heard.
- To deactivate the lock, press and hold the STOP/CANCEL pad until a single long bleep is heard (approx. 3 seconds) and the locked symbol extinguishes.

Kitchen Timer

1. Press CLOCK/TIMER twice, the display will show 00:00.
2. Press the number pad and enter set time. For example, the set time is 8:30, please press 0,8,3,0 in turn. (note: the maximum time is 99 minutes and 99 seconds)
3. Press START/+30SEC to save.
4. The timer will now start to count down. When the set time has elapsed the oven will bleep five times.

Note:

- The kitchen timer is different from clock system, it is just a timer.
- During kitchen timer mode, no programs can be set.

Selecting microwave oven power

The default on the microwave oven is set to cook at full power unless otherwise changed. To select a lower power setting, press the POWER pad and enter desired power level before setting the cooking time. The power selected will be shown in the display.

Display	Power (%)	Display	Power (%)
PL10	100 (Full)	PL4	40
PL9	90	PL3	30
PL8	80	PL2	20
PL7	70	PL1	10
PL6	60	PL0	0
PL5	50		

Note: When PL0 is selected, the oven will be fan only operation. This may allow removing the odour of the oven.

Express microwave mode

This function allows the microwave to be set quickly at set increments.

1. Place the item to be cooked in a suitable **microwave safe** container. Open the door and position the container in the centre of the glass turntable. Securely close the microwave door.
2. Press the START/+30SEC pad to program to cook on full power for 30 seconds. Each successive press will increase the cooking time by 30 seconds.
3. Alternatively press the number pads 1 to 6 to cook on full power for 1 to 6 minutes respectively.
4. The microwave will automatically start a few seconds after the last pad press and the timer will start to count down.

Note: Cooking time can be extended during oven operation by pressing the START/+30SEC pad. Each successive press will increase the cooking time by 30 seconds.

Microwave cooking

1. Place the food to be cooked in a suitable **microwave safe** container and cover.
2. Press the door button to open the door, place the container in the centre of the glass turntable and securely close the oven door.
3. Press the POWER pad to select microwave function, the display will show PL10. If wanting to cook at less than full power, press the number pads (1 - 9) and the desired power level will be shown in the display. For example, press 5 for 50% of microwave power.
4. Press Time Cook once, 00:00 will be displayed and then use the numbers pad to enter the length of the cooking time (1 second to 99 minutes & 99 seconds). For example, press 7-1-5 in turn for cooking time of 7 minutes and 15 seconds.
5. Press the START/+30SEC pad to select.
6. The microwave will start to cook and the timer will start to count down.
7. Cooking can be interrupted to stir contents or check cooking progress by opening the door. Settings will be retained and cooking will restart when the door is closed and the START/+30SEC pad is pressed.
8. After the cooking time has finished, the display will show the clock, the microwave will turn off automatically and five bleeps will sound.
9. Allow food to stand for 30 seconds to one minute before stirring or serving.
10. The oven can be stopped at any time by pressing the STOP/CANCEL pad or by opening the door. Pressing the STOP/CANCEL pad once (with the door closed) will stop the cooking; pressing the pad twice will clear the settings.

Note:

- In the process of setting, if the STOP/CANCEL pad is pressed or if there is no operation within 1 minute, the oven will go back to the former setting automatically.
- During microwave cooking, the power level can be re-selected. When pressing the POWER pad, the current power level will be displayed for 3 seconds, now you can press number pads to change the power level.

The oven will work with this selected power level for the rest of the cooking time.

- Cooking time can be extended during microwaving cooking by pressing the START/+30SEC pad. Each successive press will increase the cooking time by 30 seconds.
- To check the current microwave power level during oven operation, press the POWER pad and the power level will display briefly before returning to the countdown timer.

Defrosting

1. Weight defrost

- 1.1 Weigh the item to be defrosted, place in a suitable **microwave safe** container and position in the centre of the glass turntable. Securely close the microwave door.
- 1.2 Press the DEFROST pad once and the display will show dEF1 and then use the number pads to enter the weight to be defrosted (100 - 2 000g).
- 1.3 Press the START/+30SEC pad, the defrost time will be calculated automatically, the microwave will start to defrost and the timer will count down.
- 1.4 After the defrost time has finished the display will show the clock, the microwave will turn off automatically and five beeps will sound.

2. Time defrost

- 2.1 Place the food to be defrosted in a suitable **microwave safe** container and position in the centre of the glass turntable. Securely close the microwave door.
- 2.2 Press the DEFROST pad twice and the display will show dEF2 and then use the number pads to enter the length of the defrosting time (1 second to 99 minutes & 99 seconds).
- 2.3 Press the START/+30SEC pad, the microwave will start to defrost and the timer will count down.
- 2.4 After the defrost time has finished the display will show the clock, the microwave will turn off automatically and five beeps will sound.

Note: Defrosting time can be extended during time defrosting by pressing the START/+30SEC pad. Each successive press will increase the cooking time by 30 seconds.

Grill cooking

1. Place the food to be cooked in a suitable **grill safe** container. Press the door button to open the door and place the container in the centre of the glass turntable or alternatively place the food directly on the grill rack with a **grill safe** collecting tray beneath.
2. Securely close the oven door.
3. Press the GRILL/COMBI pad once and the display will show G-1 and then use the number pad to enter the length of the cooking time (1 second to 99 minutes & 99 seconds). For example, press 1-5-3-0 in turn for cooking time of 15 minutes and 30 seconds.
4. Press the START/+30SEC pad to select.
5. The grill will start to cook and the timer will start to count down.
6. Grilling can be interrupted to turn the food over or to check on progress by opening the door. Close the door and press the START/+30SEC pad to resume grilling.
7. After the grilling time has finished, the display will show the clock, the grill will turn off automatically and five bleeps will sound.
8. The oven can be stopped at any time by pressing the STOP/CANCEL pad or by opening the door.

Notes:

- Cooking time can be extended during grill cooking by pressing the START/+30SEC pad. Each successive press will increase the cooking time by 30 seconds.
- The grilling temperature is preset and is approximately 110°C.

Combination cooking

This function combines both cooking methods and two-preset programmes are available and these are accessed by pressing the GRILL/COMBI pad repeatedly to scroll through the options available below.

- Combi. 1 (C-1) – 55% of cooking time is by microwave and 45% by grill
- Combi. 2 (C-2) – 36% of cooking time is by microwave and 64% by grill

1. Place the food to be cooked in a suitable **microwave and grill safe** container. Press the door button to open the door and place the container in the centre of the oven and securely close the oven door.
2. Press the GRILL/COMBI pad and select the cooking mode of choice (see above).
3. Press the number pads to enter the length of the cooking time (1 second to 99 minutes & 99 seconds). For example, press 2-0-4-5 in turn for cooking time of 20 minutes and 45 seconds.
4. Press the START/+30SEC pad to select.
5. The oven will start to cook and the timer will start to count down.
6. After the cooking time has finished, the display will show the clock, the oven will turn off automatically and five bleeps will sound.
7. Cooking can be interrupted to turn the food over or to check on progress by opening the door. Close the door and press the START/+30SEC pad to resume cooking.
8. The oven can be stopped at any time by pressing the STOP/CANCEL pad or by opening the door.

Notes:

- Cooking time can be extended during combination cooking by pressing the START/+30SEC pad. Each successive press will increase the cooking time by 30 seconds.
- To check the current combination mode during oven operation, press the GRILL/COMBI pad and the combi mode will display briefly before returning to the countdown timer.

Multistage cooking

The oven can be programmed to carry out up to two consecutive functions. For example, if you wish to first microwave at half power then cook by grill.

1. Place the food to be cooked in a suitable container for all the cooking methods to be used and position in the centre of the glass turntable. Securely close the microwave door.
2. Press the POWER pad to select microwave function and press 5 to select 50% of microwave power.
3. Press the TIME COOK pad and then use the number pads to enter the length of the microwaving time.
4. Press the GRILL/COMBI pad to select grill function and then use the number pads to enter the length of the grilling time.
5. Press the START/+30SEC pad to begin the sequence.
6. The display will show the cooking time remaining during each step and the oven will bleep one time and 5 times at the end of the 1st step and the 2nd step respectively.
7. Cooking can be interrupted to stir contents or check cooking progress and proceed as described in steps 8 -10 in the microwave cooking section (page13).

Note:

- Auto cook and quick start cannot be programmed into multistage cooking.

Memory cooking

This function allows three bespoke cooking programs to be stored into the memory of the microwave for use at future times.

To store a cooking program

1. To store a program into the first memory position, press the 0/MEMORY pad ONCE and '1' will be displayed.
2. Enter the desired cooking program in the usual way and press the START/+30SEC pad to store the program into the memory.
3. To store a program into the second memory position, press the 0/MEMORY pad TWICE and '2' will be displayed and repeat step 2 for the next cooking program.
4. To store a program into the third memory position, press the 0/MEMORY pad THREE TIMES and '3' will be displayed and repeat step 2 for the last cooking program.

To access a stored program

1. Press the 0/MEMORY pad once to access program 1, twice to access program 2 etc. The display will show the program selected.
2. Place the food to be cooked in a suitable container for the cooking program to be used, place into the oven and close the door.
3. Press the START/+30SEC pad to begin the program.
4. Cooking can be interrupted to stir contents or check cooking progress as usual.

Notes:

- If microwave is unplugged or power is lost, the program will be lost and need to be re-entered.
- One memory location can include a multistage program
- Auto cook and quick start cannot be pre-programmed.

Auto cook function

1. The oven has a pre-programmed cooking menu that can be used immediately from start up just by pressing the relevant pad.
2. After checking the cooking method used in the table following, place the food to be cooked in a suitable container and cover when necessary.
3. Open the door and place the container in the centre of the glass turntable and securely close the oven door.
4. Press the auto-cooking programme of choice (see table on next page) and press the pad repeatedly until the corresponding food weight / quantity is displayed and press the START/+30SEC pad.

For MEAT menu, three-preset programmes are available and these are accessed by pressing the MEAT pad repeatedly to scroll through the options available below.

Press	Function	Display
x 1	Chicken	CHIC
x 2	Beef	bEEF
x 3	Pork	P0

- Press the MEAT pad repeatedly to select the cooking mode of choice (see above) and then press the START/+30SEC pad to confirm.
 - Press the MEAT pad again to select the weight to be cooked and then press the START/+30SEC pad to confirm.
5. The oven will start to cook and the timer will start to count down from the preset time.
 6. Cooking can be interrupted to stir contents or check cooking progress by opening the door. Settings will be retained and cooking will restart when the door is closed and the START/+30SEC pad is pressed.
 7. After the cooking time has finished, five beeps will sound.
 8. Allow food to stand for 30 seconds to one minute before stirring or serving.

9. The oven can be stopped at any time by pressing the STOP/CANCEL pad or by opening the door. Pressing the STOP/CANCEL pad once (with the door closed) will stop the cooking, pressing the pad twice will clear the settings.

Notes:

- For MEAT (Chicken) menu, approximately three-fourths way through the auto cook program two bleeps will be heard, and food should be rearranged or turned over.
- For MEAT (Beef or Pork) menu, approximately two-third way through the auto cook program two bleeps will be heard, and food should be rearranged or turned over.

Food	Weight / quantity	Instructions
Potato	1 (230 g) 2 (460 g) 3 (690 g)	Cooks by microwave For best result, once the potatoes are cooked, wrap them in tin foil for at least 5 minutes to cook through. Larger or cold potatoes may need additional cooking.
Popcorn	50 g 100 g	Cooks by microwave To avoid damage to the microwave oven, do not use regular paper bags or glassware. Follow the manufacturer's instruction when using a microwave popcorn popper.
Frozen Pizza	100 g 200 g 400 g	Cooks by a combination of microwave and grill To warm chilled pizza.
Beverage	1 cup 2 cups 3 cups	Cooks by microwave Heating liquid from 5-10°C. Use wide neck cup / mug and do not cover.
Frozen vegetables	150 g 350 g 500 g	Cooks by microwave If boiling - cover vegetables with boiling water. If steaming - add 2 tablespoons of water per 100g of vegetables. Cover bowl with microwave safe cling film and pierce the cling film before cooking.
Dinner plate	250 g 350 g 500 g	Cooks by microwave Cover the plate with a microwavable plate cover with an integral air vent or with microwave safe cling film and pierce the cling film before reheating.

Meat - Chicken	400 g 600 g 800 g 1000 g 1200 g	Cooks by a combination of microwave and grill Turn chicken over three-fourths way through the cooking cycle. The cooking times are guidelines only – check that chicken is cooked through before consuming.
Meat - Beef	300 g 500 g 700 g 900 g 1100 g	Cooks by a combination of microwave and grill For even cooking, cut meat into small equally sized pieces and place onto a microwave and grill safe plate. Turn beef over two-third way through the cooking cycle. The cooking times are guidelines only – check that meat is cooked through before consuming.
Meat (Pork)	150 g 300 g 450 g 600 g 750 g	Cooks by a combination of microwave and grill For even cooking, cut meat into small equally sized pieces and place onto a microwave and grill safe plate. Turn pork over two-third way through the cooking cycle. The cooking times are guidelines only – check that meat is cooked through before consuming.

Cleaning your oven

Clean the oven and seals to remove food debris on a weekly basis and more often if required. Failure to maintain the oven and seals in a clean condition could lead to deterioration of the surface or seals, adversely affect the life of the oven and possibly result in a hazardous situation (possible release of microwave energy).

Clean the oven after each use, if food is cooked uncovered and especially if fatty foods are cooked and the grill function is used.

1. Switch off, unplug the oven and allow the oven to cool completely.
2. Wipe surfaces and seals with a soft damp cloth (not wet). Do not use abrasive cleaning products or metal scrapers to clean the glass door of the oven as this could damage the surface and cause breakage. Do not immerse in water. Do not use a steam cleaner.
3. The grill rack, glass turntable and turntable roller can be washed in hot water with a little washing up liquid. **NOT SUITABLE FOR DISHWASHERS.**
4. Always allow surfaces to fully dry before using the oven again.

Materials suitable for use in the oven

Material	Suitability for use in		
	Microwave	Grill	Combination
Glassware	Heat resistant only	Heat resistant only	Heat resistant only
Ceramic ware	Heat resistant only	Heat resistant only	Heat resistant only
Plastic containers Not melamine	Microwave safe only Avoid using with food with high fat or sugar contents	No	No
Plastic film	Microwave safe only	No	No
Kitchen paper	Only for reheating do not leave unattended	No	No
Metal tray or rack	No	Yes	No
Aluminium foil & foil containers	No	Yes	No
Browning dishes	Place upturned plate on the glass turntable (to prevent heat stress) before using	No	No

DO NOT use metallic containers for food and beverages, aluminium foil, or any other metal trimmed packaging when operating in microwave or combination modes. The metal rack is suitable for use in grill cooking.

General microwave cooking advice

- Food cooking times will vary with microwave wattage (MAFF rating). When following recipes and on pack cooking instructions always check the MAFF rating / wattage of the appliance being used (marked on the front of the microwave) and follow the corresponding cooking advice.
- Beverages can result in delayed eruptive boiling; therefore care must be taken when handling the container.
- Remove lids from containers before placing in the microwave, pierce plastic films and do not use vessels with sealed or restricted openings since they are liable to explode.
- **Pierce the skin or membranes of food (e.g. potatoes, apples, fish, chicken, eggs) in several places before cooking. Never cook or heat eggs in their shell or whole hard boiled eggs, as they may explode even after cooking has been completed.**
- Ensure food is similar size and density. Large dense items take longer to cook than small ones e.g. potatoes take longer to cook than peas.
- Food quantity will affect the cooking time, e.g. two potatoes take longer than one.
- The shape of food will affect the cooking time; place the thickest part of food on the outside of the plate.
- Leave food to stand for a short period after cooking or defrosting to allow the temperature to become uniform.

Troubleshooting

Observation	Potential cause / solution
Oven will not start	Plug not fully inserted into the mains socket or not switched on
	Door is open
	Incorrect operation
	Do you have a power cut?
Arcing or sparking	Unsuitable materials used when using microwave function.
	Oven is operated when empty
	Spilled food remains in oven cavity
Unevenly cooked food	Unsuitable materials used when using microwave.
	Food not fully defrosted before cooking
	Power setting for cooking time is incorrect
	Food was not turned or stirred during cooking
	Uneven sized food
Overcooked food	Power setting for cooking time is incorrect
	Cooking period set too long
Undercooked food	Food not fully defrosted before cooking
	Unsuitable materials used when using microwave
	Ventilation ports restricted
	Power setting for cooking time is incorrect
Incomplete defrosting	Unsuitable materials used when defrosting
	Defrost time too short
	Food was not turned or stirred during defrosting
	Uneven sized food
Noisy turntable	Food residue between turntable roller and base of cavity
	Glass turntable not correctly positioned on roller
Oven light does not illuminate	Bulb has burnt out
	Start button not been pressed

Technical specification

MORPHY RICHARDS 20 LITRES 800W MICROWAVE WITH GRILL		
Model		EG820C2LP(F)-PM
Rated Voltage & Frequency		230 – 240V AC 50Hz
Rated Power Input (Microwave)		1200-1270W
Rated Power Input (Grill)		950-1000W
Rated Microwave Output		750-800W
MAFF rating		D
Rated Microwave Frequency		2450MHz
Capacity	Overall	20 litre
	Usable	9 litre
Class rating		1 (earthed)
BS 1362 fuse		13A
Diameter of glass turntable		255mm
Product dimensions (external)		440 x 328 x 259 mm
Product weight (net)		11.5 kg approx.

This appliance complies with European regulation no. 1935/2004 of 27/10/2004 on food contact materials. The product is classified as a Group 2, Class B, ISM appliance.

Group 2 includes all ISM (Industrial, Scientific or Medical) appliances in which radio frequencies are generated intentionally and/or used in the form of electromagnetic radiation to treat materials, together with electroerosion equipment. Class B includes equipment for domestic use or on premises directly connected to low voltage electricity supply for supplying buildings for residential use.



Recycling electrical products

You should now recycle your waste electrical goods and in doing so help the environment.

This symbol means an electrical product should not be disposed of with normal household waste. Please ensure it is taken to a suitable facility for disposal when finished with.

Visit www.recycle-more.co.uk, click on “bank locator” and enter your postcode to find your nearest recycling site.



Plug rewiring advice

The wires in this mains lead are coloured in accordance with the following UK electrical code:

BLUE = NEUTRAL

BROWN = LIVE


GREEN + YELLOW = EARTH

Non-rewireable plug

This appliance may be fitted with a “non-rewireable” plug. If you need to change the fuse in a “non-rewireable” plug, the fuse cover must be refitted. If the fuse cover is lost or damaged, the appliance must not be used.

Rewireable plug

The colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in a rewireable plug. **Rewireable plugs should only be replaced by a suitably competent person. If in doubt, consult a qualified electrician.**

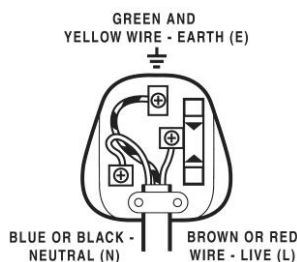

The BLUE wire must be connected to the terminal marked with the letter N

The BROWN wire must be connected to the terminal marked with the letter L

The GREEN & YELLOW wire must be connecting to the terminal marked with the letter E or the earth symbol

www.morphyrichards.com

Produced in China under licence for Morphy Richards.

Argos Limited, 489-499 Avebury Boulevard, Milton Keynes, MK9 2NW.
Argos (N.I.) Ltd, Forestside Shopping Centre, Upper Galwally, Belfast, United Kingdom, BT8 6FX.

Argos Distributors (Ireland) Limited, Unit 7, Ashbourne Retail Park, Ballybin Road, Ashbourne, County Meath, Ireland

If you require assistance, please call the Sainsbury's Argos helpline on 0345 604 0105

Your statutory rights are not affected.

Made in China. All brand names are registered trademarks of their respective owners.



PRODUCT GUARANTEE

This product is guaranteed against manufacturing defects for a period of



Year

This product is guaranteed for twelve months from the date of original purchase.

Any defect that arises due to faulty materials or workmanship will either be replaced, refunded or repaired free of charge where possible during this period by the dealer from whom you purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in this manual. A replacement copy of this instruction manual can be obtained from www.argos-support.co.uk
- It must be used solely for domestic purpose.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexperienced repair.
- Specifications are subject to change without notice.
- The manufacturer disclaims any liability for the incidental or consequential damages.
- The guarantee is in addition to, and does not diminish your statutory or legal rights.

Guarantor: Argos Ltd
489 - 499 Avebury Boulevard
Central Milton Keynes
MK9 2NW
www.argos-support.co.uk

PN:16170000A80841