

Instruction manual

MP3 Player
MP30



You'll soon be enjoying your new MP3 Player.

It all begins here, with your instructions. Don't worry, there's nothing too technical coming up. Just simple, step-by-step guidance to get you up and running quickly. Sound good? Then let's get started.

Help and Guidance

We're here to help you get the most from your MP3 Player. Should you require any guidance, a simple solution can often be found online at:

www.bush-support.com

If you still require further assistance, call one of our experts on **0345 600 3021**.

Charging the battery

Before you use your MP3 player for the first time, you will need to charge the integral rechargeable battery; you can do this whilst the player is turned off or on. From a full charge you will be able to listen to your MP3 player continuously for approximately 8 hours.

1. Connect the Micro USB end of the charging cable to the USB socket on the bottom of your MP3 Player. Plug the standard end of the USB charging cable into a computer or other USB charging device.
2. 'USB connected' will be displayed and the battery icon in the top right of the display will scroll whilst the battery is charging. The battery icon will stop scrolling when the battery is fully charged.

Note: It will take approximately 1 hour to fully charge your MP3 Player, before first use. When fully charged, unplug the Micro USB charging cable from the MP3 Player.

Add audio files to your MP3 player

Your MP3 Player is compatible with both MP3 and WMA 8+ audio files.

1 Safety information

Important - Please read these instructions fully before installing or operating

- Only use the USB cable supplied with the product.
- Avoid any serious impact to the product.
- **Do not** attempt to open the product. This product does not contain any user serviceable parts.
- **Do not** use this product with earphones in situations where hearing must not be impaired.
- **Do not** leave it in low temperatures as moisture can form inside the product, which may damage the circuit board. Keep it dry. Avoid exposure to precipitation, humidity and liquids which could all affect the product circuitry.
- **Do not** leave it in high temperatures as electronic devices and plastic parts may warp in heat. Keep it away from bright sunlight or heat sources, such as a radiator. No naked flame sources, such as lit candles should be placed on or near the product.

Warning

 
To avoid possible hearing damage, do not listen to this MP3 Player at high volume levels for long periods of time. Always keep the volume within reasonable limits.

2 Using your MP3 Player


Let's get started

Accessories

Included with your MP3 player

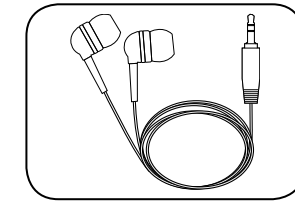


Earphones

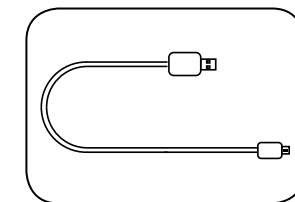 

USB charging cable

Fig 1.

 Fig 2.

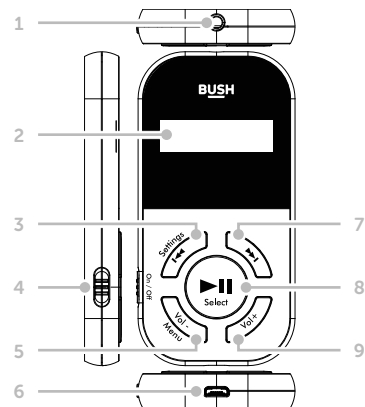

1. Earphone socket
2. Backlit dot matrix display
3. Settings/Skip back
4. Power on/off slide switch
5. Menu/Volume -
6. Micro USB socket
7. Skip forward
8. Select/Play/Pause
9. Volume +

1. Connect the Micro USB end of the charging cable to the USB socket on the bottom of your MP3 Player. Plug the standard end of the USB charging cable into the computer where the audio files are stored.
2. The MP3 Player will appear as a USB drive named 'BUSH MP30' on your computer and a window will open for you to drag and drop audio files to. If the MP3 Player drive window does not open, double click on the drive name 'BUSH MP30' to open the window.
3. Open the folder on your computer where the audio files that you would like to transfer are stored, then simply drag and drop individual files or a folder of Audio files into the MP3 drive window. The audio files will be transferred to your MP3 Player.

Delete files from your MP3 Player

1. Connect your MP3 Player to your computer and delete any unwanted audio files using the Delete option within the MP3 Player drive window.

Turn the MP3 Player On/Off

After you have charged the integral battery and transferred some audio files to your Player, you turn it on by sliding the side switch to 'On'.

When you need to turn your Player off again, there are two options available:

1. Slide the side switch to 'Off'. This will turn off your MP3 Player completely. The next time you turn your Player on with the side switch it will go back to the top of your Audio file list.
2. Alternatively, you can long press the central Play/Pause button to turn your Player Off and On again. The Player will remember your place within the Audio file list.

Note: Your MP3 Player has been designed to power off after approximately 5 minutes if no audio is detected. Long press the Play/Pause button to turn your product back on again.

Earphones

Connect the earphones supplied into 3.5mm socket on the top of your MP3 Player.

Controls

Play/Pause

- ▶|| Short press to play/pause.
- ▶|| Long press to power off/on

Adjusting the volume

Vol+: Short press to increase the volume. Check the display which will display the volume level.

Vol-: Short press to decrease the volume. Check the display which will display the volume level.

Skip Forward

▶▶ Short press to skip forward a track. Long press when music is playing to fast forward

Skip Backward

◀◀ Short press to skip back a track.

Menu options

Equalizer

When an audio track is playing, long press the Menu/Vol- button. Use the ◀◀ or ▶▶ button to display 'Equalizer' and press the Select/▶▶ button.

Use the ◀◀ or ▶▶ button to scroll through the Equalizer options available and press the Select/▶▶ button to Select.

Repeat

When an audio track is playing, long press the Menu/Vol- button. Use the ◀◀ or ▶▶ button to display 'Repeat' and press the Select/▶▶ button.

Use the ◀◀ or ▶▶ button to scroll through the Repeat options available and press the Select/▶▶ button to Select.

System settings

When an audio track is playing you can long press the Settings/◀◀ button to access the system settings and personalise your MP3 Player.

Long press the Settings/◀◀ button. Use the ◀◀ or ▶▶ buttons to scroll through the available options of Language/ Sleep timer/Contrast/Memory info. and Factory Reset. Short press the Select/▶▶ button to Select each option.

3 Other information

Helpful technical information

Technical specification

| | |
|-----------------------|---|
| Micro USB input: | USB 2 |
| Earphone socket: | 3.5mm |
| ROM: | 8GB NAND Flash |
| Lithium battery: | 3.7V/160mAh |
| PC systems supported: | Window98/7/8/10/ME/2K/XP/ Vista/Linux 6.2/9/Mac OSX |
| Audio file formats: | MP3/WMA 8+ |



Declaration of Conformance

Hereby, Argos Ltd, declares that this MP3 Player is in compliance with the essential requirements and other provisions of the relevant European Directives. The complete declaration of conformity can be obtained by contacting <http://www.bush-support.com/>

4 Product support

Help is always at hand

Troubleshooting

No sound:

- When listening to an Audio track, adjust the volume using the Vol+ button.
- Check that the earphones are connected and the plug has been pushed home into the earphone socket.
- The integral rechargeable battery may be exhausted. Please recharge the battery.

The function buttons do not respond:

- The integral rechargeable battery may be exhausted. Please recharge the battery.
- Turn the MP3 player off using the slide switch and then turn back on again.
- Try a Factory Reset.

Note: All of your settings will be deleted when you reset your MP3 Player.

8

9

10

11

Help and assistance

If you require any technical guidance or find that your MP3 Player is not operating as intended, a simple solution can often be found in the Troubleshooting section of these instructions or online at www.bush-support.com

If you still require further assistance, call one of our experts on

0345 600 3021*

Local call rates applies*

Lines open 8am-7pm Monday to Saturday and 10am-4pm Sunday.

*Calls to Bush enquiry lines may attract a charge and set up fee from residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see www.bt.com/pricing for details.

For Security and training purposes, telephone calls to and from customer service centres maybe recorded and monitored. Calls from Republic of Ireland will attract international call charges.

Disposal



- This product should not be treated as normal household waste and it should be recycled. Please take it to your local council or visit www.recycle-more.co.uk.
- Batteries contain substances that may be harmful to the environment and human health. Keep out of the reach of children and seek immediate medical help if swallowed.
- Batteries should not be disposed of in the normal household waste but taken to appropriate local recycling facilities, where and when these are available.
- Never throw batteries in a fire or attempt to open the outer casing.

BUSH

Call us now and register your 12 month guarantee

Thank you for choosing Bush. Your new product is guaranteed against faults and breakdowns for 12 months. Don't forget to register it with us today so we can provide you with our best possible after-sales service and useful updates.

www.bushregistration.co.uk

FREEPHONE*

0800 597 8548

Lines are open 8am - 8pm, 365 days a year.

*Calls may be recorded and monitored.

Your Bush Guarantee

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will be repaired free of charge (or if applicable the product will be replaced or the purchase price refunded) where possible during this period by the dealer from who your purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in the manual.

- It must be used solely for domestic purposes. The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- Bush disclaim any liability for loss or damage arising from the breakdown of the product.
- This guarantee is in addition to and does not diminish your statutory or legal rights.

Guarantor: Argos Limited - 489 - 499 Avebury Blvd. - Milton Keynes - MK9 2NW

Important Data Protection Information

To find out how we and Domestic & General Insurance Plc use your data please refer to the guarantee registration material or visit www.bushregistrations.co.uk

12

13

14

15