

Beldray^{est 1872}®

**Our smart,
versatile &
powerful
air circulator**



CLIMATE DOME

INSTRUCTION MANUAL

* This product is only suitable for well-insulated spaces or occasional use.



www.beldray.com

Please retain instructions for future reference.

WARNING - READ BEFORE USE

Do not leave the product unattended while in use.

This product can be used for no longer than 4 hours, after which time it must be switched off and allowed to cool fully before it is used again.

The product must be used on a stable, heat-resistant surface.

The product must be placed at least 1 metre away in every direction from walls, doors, furniture, curtains, or any other flammable materials.

Safety Instructions

When using electrical products, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the power supply before connecting the product.

Children younger than 3 years old should be kept away from the product unless continuously supervised.

Children aged from 3 years and less than 8 years should only switch on/off the product, provided that it has been placed or installed in its intended operating position and they have been given supervision or instruction concerning the use of the product in a safe way and understand the hazards involved.

Children aged from 3 years and less than 8 years should not plug in, regulate or clean the product or perform user maintenance.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should not carry out cleaning or user maintenance without supervision.

Children should be supervised to ensure that they do not play with the product.

This product is not a toy – children should be supervised to ensure they do not play with the product.

Normal voltage is still present in this product as long as the product is connect to the electrical source.

This product contains no user serviceable parts. If the power supply cord, plug or any part of the product is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the product and its power supply cord out of the reach of children.

Keep the product and its power supply cord away from heat or sharp edges that could cause damage.

Keep the power supply cord away from any parts of the product that may become hot during use.

Keep hands, fingers, hair and any loose clothing away from the rotating parts of the product.

Do not immerse the product in water or any other liquid.

Do not operate the product with wet hands.

Do not leave the product unattended whilst connected to the power supply or when in use.

Do not remove the product from the power supply by pulling the cord; switch it off and remove the plug by hand.

Do not use the product for anything other than its intended use.

Do not cover the product.

Do not use the product outdoors.

Do not move the product whilst it is in use.

Do not shake the product.

Do not put objects into any of the openings.

Do not clean the product with abrasive chemicals or materials such as scourers, as they may damage it.

Do not spray insecticide or chemical solvents on the product. Always unplug the product after use and before any cleaning or maintenance.

Always use the product on a flat, stable surface.

Use of an extension cord with the product is not recommended.

Do not use the product with a programmer, timer, separate remote-control system or any other device that will switch the product on automatically other than that supplied with the product, as there is a risk of fire if the heater is covered or positioned incorrectly.

This product is intended for domestic use only. It should not be used for commercial purposes.

This product should only be used the power supply unit provided.

Warning: If a strong odour is emitted from the product, turn the unit off and unplug it from the mains power supply.

Battery Safety

In the event of a battery or cell leaking, do not allow the liquid to come in contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.

Secondary cells and batteries need to be charged before use.

After extended periods of storage, it may be necessary to charge and discharge the cells or batteries several times to obtain maximum performance.

Do not dispose of batteries in a fire.

Do not dismantle, open or shred secondary cells or batteries.

Do not store above 60 °C.

Do not subject batteries to mechanical shock.

Do not dispose of exhausted batteries in household waste.

Once the batteries have been exhausted, dispose of the product at a local recycling station. Contact the local government offices for further details.

Remote control is fitted with a 3 V CR2025 non-rechargeable battery.

Thermal Cut-out Device

The Climate Dome is fitted with a thermal safety cut-out device, built in to prevent it from overheating. Should the Climate Dome start to overheat, the thermal safety cut-out system will automatically operate and the heat settings will switch off. If this happens:

STEP 1: Switch off the Climate Dome by pushing the power button.

STEP 2: Unplug the Climate Dome from the mains power supply and allow it to cool for approx. 15 minutes.

STEP 3: Clear any blockages present in the grills, being careful not to cause damage.

STEP 4: Plug in and switch on the Climate Dome at the mains power supply; the Climate Dome can now be used again. |

Caution: In order to avoid a hazard due to inadvertently tripping the thermal cut-out, the Climate Dome must not be supplied through an external switching device, such as a timer. Nor should it be connected to a circuit this is regularly switched on and off by the utility.

Care and Maintenance


STEP 1: Unplug the Climate Dome from the power supply before attempting any cleaning or user maintenance.

STEP 2: Wipe the Climate Dome with a soft, damp, lint-free cloth and allow to dry thoroughly.

Do not use flammable liquid, abrasive cleaning solvents, polishes or scouring pads to clean the Climate Dome, as this may cause damage.


Do not immerse the air circulator in water or any other liquid

Description of Parts

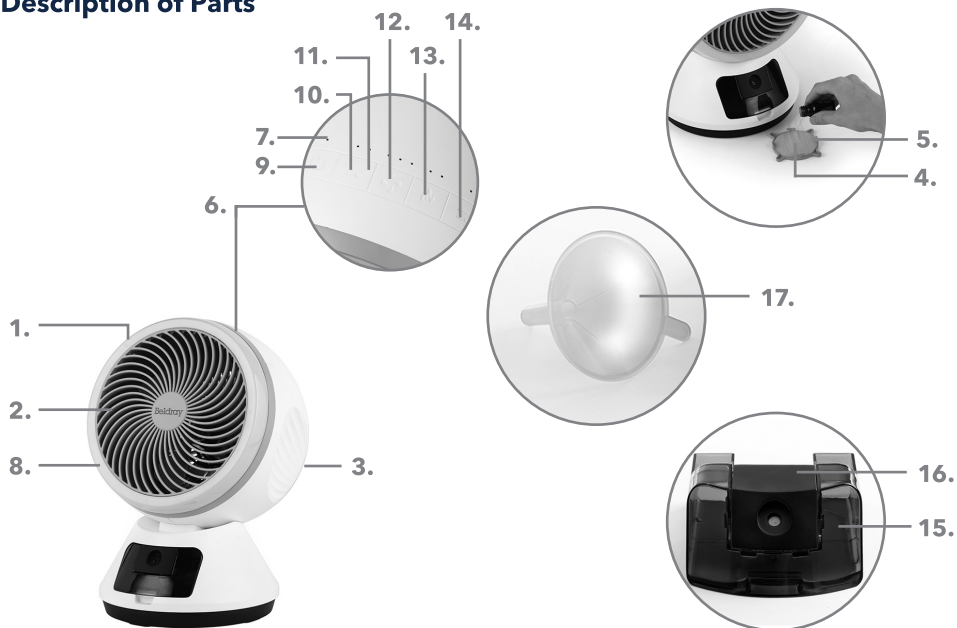

Remote Control

- 1. Power button (⏻)
- 2. Oscillation button (↔️)
- 3. Heating button (🔥)
- 4. Humidifier button (💧)
- 5. Cooling speed button (❄️)
- 6. Mood light button (💡)

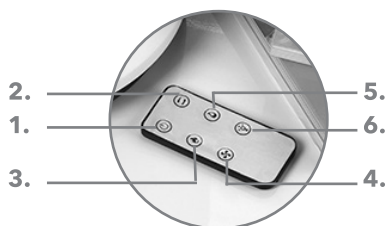

Before First Use

Position the Climate Dome on a flat, stable, heat-resistant surface in an open space. Make sure the Climate Dome is at least 1 metre away from furniture, curtains or any other flammable materials. Do not block the air intake on the back of the climate dome.

Note: When using the Climate Dome for the first time, a slight odour may be emitted. This is normal and will soon subside.

Allow for sufficient ventilation around the climate dome.

Do not force the head to move, as this will break the oscillation feature.

To carry the Climate Dome, turn it off and unplug it from the mains power supply. Carry the power cord in one hand and the Climate Dome main unit in the other, this will reduce the chance of tripping during transport.

Using the Climate Dome

STEP 1: Plug in and switch on the Climate Dome at the mains power supply. Press the power button to turn on the Climate Dome.

STEP 2: The desired cooling speed can be selected by pressing the cooling speed button on the Climate Dome main unit or remote control to cycle through the cooling speed settings. There are three cooling speed settings available (1-3). The intensity of the light ring and the cooling speed control panel indicator lights will indicate the selected cooling speed setting.

STEP 3: To change the colour of the LED light ring during use, press the mood light button on the remote control.

To turn off the LED light ring while using the cooling function, press and hold the cooling button on the Climate Dome main unit for approx. 3 seconds. To turn off the LED light ring while using the heating function, press and hold the heating button on the Climate Dome main unit for approx. 3 seconds.

STEP 4: To turn on the heat function, push the heating button on the Climate Dome main unit or remote control. Press once for heat setting '1' or twice for heat setting '2'. Heat setting '2' is the most powerful heat setting. The heating control panel indicator lights will indicate the selected heat setting. To deselect the heat function, push the heating button again until the heating control panel indicator lights are no longer illuminated.

STEP 5: To turn on the oscillation function, push the oscillation button on the Climate Dome main unit or remote control; the oscillation control panel indicator light will illuminate. The Climate Dome will slowly oscillate from left to right. To adjust the angle of the Climate Dome, gently tilt the Climate Dome main unit backwards or forwards until the desired angle is reached.

STEP 6: To use the aroma feature, remove the aroma box by twisting in an anticlockwise direction and detaching it from the Climate Dome main unit. The absorbent material is designed to soak up essential oils and slowly release the scent through normal use of the Climate Dome.

STEP 7: Turn off the Climate Dome by pressing the power button.

Using the Humidify Function

STEP 1: To fill the humidification tank with clean water, pull it out from the front of the Climate Dome main unit. Gently lift the humidification tank cap and fill the tank with water. Once full, replace the cap and slide the humidification tank back into place so that it is flush with the Climate Dome.

STEP 2: To turn on the humidify function, press the humidify button on the Climate Dome main unit or remote control; both humidify control panel indicator lights will illuminate. To turn the humidify function off, press the humidify button a second time; only the first humidify control panel indicator light will illuminate.

Note: The Climate Dome may continue to operate for up to 30 seconds after being switched off. This allows the fan blades time to cool the heating element after use.
The humidification tank must be filled prior to the humidification function being used to avoid damaging the Climate Dome.

Storage

Check that the Climate Dome is switched off and completely cool before storing in a cool, dry place.

Never wrap the cord tightly around the climate controller; wrap it loosely to avoid causing damage.

Troubleshooting

Problem	Possible Cause	Solution
The Climate Dome will not power on.	The Climate Dome is not connected to the power supply.	Connect the Climate Dome to the power source and switch on.
The air blowing from the Climate Dome is not strong enough.	The cooling speed is set too low.	Select a higher cooling speed setting by pressing the cooling speed button.

The Climate Dome is not cooling the air.	Ambient humidity is high.	The Climate Dome will not be able to cool due to the high humidity in the air.
--	---------------------------	--

Specifications

Product code: EH3387

Voltage: 220-240 V ~ 50 Hz

Output: 900/1800 W

Remote control requires 1 x CR2025 battery (not included)

Connection to the mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:


The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

Green/Yellow Earth (\perp)

FOR UK USE ONLY - Plug fitting details (where applicable).

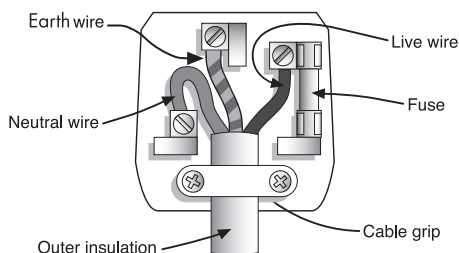

The wire coloured BLUE is the NEUTRAL and must be connected to the terminal marked N or coloured BLACK.

The wire coloured BROWN is the LIVE wire and must be connected to the terminal marked L or coloured RED.

The wire coloured GREEN/YELLOW must be connected to the terminal marked with the letter E or marked \perp .

On no account must either the BROWN or the BLUE wire be connected to the EARTH terminal (\perp).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

Non-rewireable mains plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - DISCONNECT IT FROM THE MAINS and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

**UP Global Sourcing UK Ltd.,
UK. Manchester OL9 0DD.
Germany. 51149 Köln.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department at **www.beldray.com**

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Beldray will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

The crossed out wheellie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.





*To be eligible for the extended guarantee,
go to <https://guarantee.upgs.com/beldray/> and
register your product within 30 days of purchase.

Find us on 

www.facebook.com/Beldray



Manufactured by:
UP Global Sourcing UK Ltd.,
UK. Manchester OL9 0DD.
Germany. 51149 Köln.

www.beldray.com

©Beldray Trademark. All rights reserved.

CD010921/MD000000/V1