

INSTRUCTION MANUAL

HITACHI
Inspire the Next

24" Colour TV 24HE2200U

9401174



DVBT2

SAORVIEW
APPROVED

HDMI
HIGH-DEFINITION MULTIMEDIA INTERFACE

HD
READY

FreeviewPlay

dts
TruSurround

Important - Please read these instructions fully before installing or operating and keep for future reference.

These instructions contain important information which will help you get the best from your television and ensure safe and correct installation and operation.

For any help concerning set up and use of your TV please call the Customer Helpline: 0345 604 0105

Lines open 8am-7pm Monday to Saturday and 10am - 4pm Sunday

QUICK GUIDE

IMPORTANT - If placing TV into cabinet or alcove, ensure there is at least a 100 mm (10 cm) gap to the sides, rear and top of the TV. This is to allow for adequate ventilation during operation. Please read the main Users Guide for more safety information before installation.

 
1

insert the batteries into your handset




2a

either connect the aerial straight to your TV...

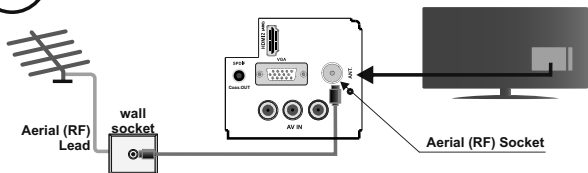

2b

 ...or connect the aerial through a VCR...

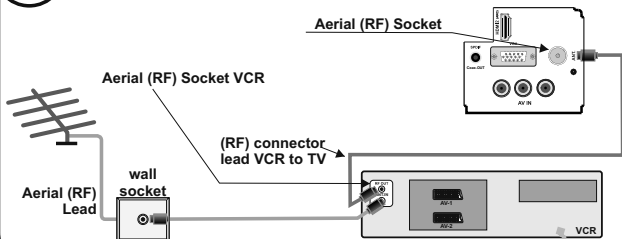

The leads can be purchased from your Hitachi dealer or any good High Street electrical retailer.

...or through a HDMI and YPbPr products (DVD-RW)



Your LCD Television is capable of displaying High Definition pictures from devices such as a High Definition Satellite Receiver or DVD Device. These devices must be connected via the HDMI socket or Component Socket.

 
...or through a VCR and satellite decoder.



For any help concerning set up and use of your TV please call the Customer Helpline: 0345 604 0105

3


connect the TV plug to the mains socket

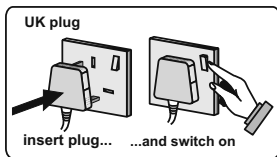

4

Press the **OPERATE/STANDBY** button on the remote control or press the middle of the control switch in, located on the left side of the TV. The TV will then switch on.

 Rear view

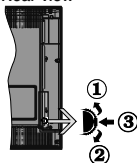

1. Up direction
2. Down direction
3. Programme/Volume/AV/Standby-on selection switch

NB: When the set is first switched on, the set will be in standby. Press the **Standby** button, **Programme + / -** button or a numeric button on the remote control.

When turned on for the first time, the language selection screen is displayed. Select the desired language and press **OK**.

On the next screen set your country preference. Then press **OK** to continue.

After the language selection, you will be asked whether you want to change accessibility settings. Highlight **Yes** and press **OK** to change.

Select **Home Mode** for home use. You can activate **Store Mode** option at this point if necessary, however, this option is only intended for store use.

Depending on the model of your TV and the country selection **Privacy Settings** menu may appear at this point. Using this menu you can set your privacy privileges. Highlight a feature and use Left and Right directional buttons to enable or disable. If the **Internet Connection** option is disabled **Network/Internet Settings** screen will be skipped and not displayed.

Highlight **Next** and press **OK** button on the remote control to continue and the **Network/Internet Settings** menu will be displayed.

Refer to **Connect your TV to the internet** section to configure a wired or a wireless connection. After the settings are completed highlight **Next** and press **OK** button to continue.

On the next screen you need to agree to the terms and conditions of Freeview Play to make use of the related services. Highlight **Yes** and press **OK** on the remote to confirm and proceed. Highlight **No** and press **OK** to proceed without confirmation.

On the next screen set your preferences as follows:

Scan Encrypted Channels On
Select favourite network type D.Aerial

D.Aerial ●
D.Cable ○
Analogue ○

When finished, highlight **Next** and press **OK** to start channel scan.

After the initial settings are completed TV will start to search for available broadcasts of the selected broadcast types.

While the search continues a message may appear, asking whether you want to sort channels according to the LCN(*). Select **Yes** and press **OK** to confirm.

(* LCN is the Logical Channel Number system that organizes available broadcasts in accordance with a recognizable channel number sequence (if available).

After the channel scan has been completed the **Choose Region** menu may appear. Select the appropriate settings for your location using the directional buttons then press **OK**.

After all the available stations are stored, **Channels** menu will be displayed. You can edit the channel list according to your preferences using the **Edit** tab options or press the **Menu** button to quit and watch TV.

Note: Do not turn off the TV while initializing first time installation. Note that, some options may not be available depending on the country selection.

important note

Once the TV has found all your local stations, they are then automatically assigned a programme number and name, if available from the broadcast.

 
Connectivity feature allows you to connect your TV to the home network wired or wirelessly. You can use this networking system to connect to internet or to access photo, video and audio files that are stored on a Media server connected to the network and play/display them on the TV.

Add your TV to your home network by connecting it to the modem/router via an LAN cable (not supplied) as illustrated.


To use your TV with your wireless network, you won't need any additional wireless adaptors as your TV supports internal Wi-Fi feature.

Press the **Menu** button to open the main TV menu. Select **Settings** by using the directional buttons and press **OK** to enter. Highlight **Network** and press **OK**. While **Network Type** is highlighted, press Left or Right buttons to select connection type. Wired connection will be established automatically. If wireless connection is selected, highlight Scan Wireless Networks option and press OK to start a search for available wireless networks. Available networks will be listed when finished. Select one and press the **OK** button to connect. If the wireless network is password protected you should enter the correct code to access the network.

Wireless Connection

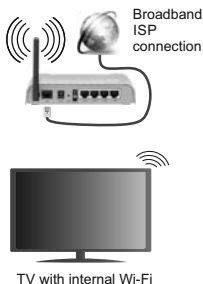

Wired Connection

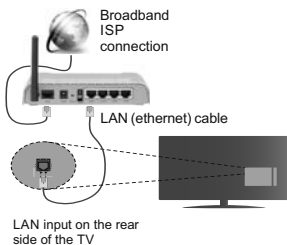 


Accessories Included

- Remote Control
- Batteries: 2 x AAA
- Quick Start Guide

Depends on model

- Side AV Connection Cable
- YPbPr Connection Cable
- WLAN USB Dongle and USB Extension Cable
- Wall Mount Kit

 Important safety precautions

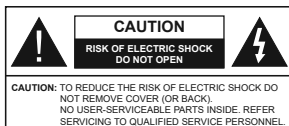

Don't operate your TV in extreme ambient conditions as this may cause damage to your TV.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock of persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Note: Follow the on screen instructions for operating the related features.

IMPORTANT - Please read these instructions fully before installing or operating

Preparation

Place the TV on a solid even surface. For ventilation, leave a free space of at least 10 cm all around the TV. To prevent any fault and unsafe situations, do not place any objects on top of the TV. Use this TV in moderate climates.

Operation temperature and operation humidity: 0°C up to 40° C, 85% rel. humidity max. (not blocking ventilation openings).

Intended Use

This TV is used to receive and display TV programmes. The different connection options make an additional expansion of the reception and display sources possible (various external devices). This TV is only suitable for dry interior use. This TV is intended solely for private domestic use and may not be used for industrial and commercial purposes. We exclude liability in principle, if the TV is not used as intended, or unauthorised modifications have been made. To operate your TV in extreme ambient conditions may cause damage to your TV.

This TV is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the TV by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the TV.

Children may not recognise dangers. The swallowing of batteries can be fatal. Keep batteries always out of reach of small children. If a battery is swallowed, seek immediate medical attention. Keep the packaging films out of reach of children, there is a risk of suffocation.

Use this TV at an altitude of less than 2000 metres above the sea level, in dry locations and in regions with moderate or tropical climates.

To avoid danger of suffocation, keep plastic bags out of the reach of the babies, children and domestic animals.

Carefully attach the stand to the TV. If the stand is provided with screws, tighten the screws firmly to prevent the TV from tilting. Do not over-tighten the screws and mount the stand rubbers properly.

SOME DO'S AND DON'TS ON THE SAFE USE OF TV

Please read the following recommended safety precautions carefully for your safety.

This TV has been designed and manufactured to meet international safety standards but, like any electrical equipment, care must be taken if you are to obtain the best results and safety is to be assured.

DO read the operating instructions before you attempt to use the TV.

DO ensure that all electrical connections (including the mains plug, extension leads and inter-connections between the pieces of TV) are properly made and in accordance with the manufacturer's instructions. Switch off and withdraw the mains plug before making or changing connections.

DO consult your dealer if you are ever in doubt about the installation, operation or safety of your TV.

DO be careful with glass panels or doors on TV.

DO route the power cord so that it is not likely to be walked on, crushed, chafed, or subjected to excessive wear and tear or heat.

DON'T remove any fixed cover as this may expose dangerous voltages.

DON'T obstruct the ventilation openings of the TV with items such as newspapers, tablecloths, curtains, etc. Overheating will cause damage and shorten the life of the TV.

DON'T allow electrical equipment to be exposed to dripping or splashing, or objects filled with liquids, such as vases, to be placed on the TV.

DON'T place hot objects or naked flame sources such as lighted candles or nightlights on, or close to TV. High temperatures can melt plastic and lead to fires.

DON'T use makeshift stands and NEVER fix legs with wood screws - to ensure complete safety always fit the manufacturer's approved stand or legs with the fixings provided according to the instructions.

DON'T listen to headphones at high volume, as such use can permanently damage your hearing.

DON'T leave TV switched on when it is unattended unless it is specifically stated that it is designed for unattended operation or has a standby mode. Switch off using the switch, on the TV and make sure that your family know how to do this. Special arrangements may need to be made for infirm or handicapped people.

DON'T continue to operate the TV if you are in any doubt about it working normally, or if it is damaged in any way - switch off, withdraw the mains plug and consult your dealer.

ABOVE ALL



NEVER let anyone especially children push anything into holes, slots or any other opening in the TV - this could result in a fatal electrical shock.



NEVER guess or take chances with electrical equipment of any kind.



It is better to be safe than sorry!

Power source

 
The TV should be operated only from a 220-240 V AC, 50 Hz outlet.



WARNING: Do not leave your TV in standby or operating mode when you leave your house.


 
Positioning the TV

- For ventilation, please leave a clear space of at least 10cm all around the TV.

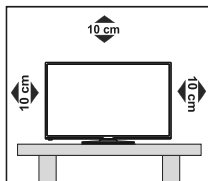

- Do not** block the ventilation openings.
- Do not** place the TV on sloping or unstable surfaces, the TV may tip over.
- To prevent damage to the TV, do not place any objects on top of the TV.

Power cord and plug

- Do not place the TV, a piece of furniture, etc. on the power cord (mains lead) or pinch the cord. Handle the power cord by the plug. Do not pull the plug by holding its neck, as this could result in damage to the plug. Do not unplug the TV by pulling from the power cord and never touch the power cord with wet hands as this could cause a short circuit or electric shock. Never make a knot in the cord or tie it with other cords. The power cords should be placed in such a way that they are not likely to be stepped on. A damaged power cord can cause fire or give you an electric shock. When it is damaged and needs to be replaced, it should be done by qualified personnel.
- This TV receiver is supplied with a moulded mains plug. The mains plug must not be cut off, as it may contain a special radio interference filter, the removal of which could lead to impaired performance. If you wish to extend the lead, obtain an appropriate safety approved extension lead or consult your dealer.
- Observe the manufacturers instructions when connecting extension leads to the TV. Check the fuse rating on the new plug; this should be fitted with a 5 Amp fuse which conforms to either ASTA or BSI (BS1362) approvals, these are easily identifiable by either the  or  symbols. If you are in any doubt about the installation of an extension lead, please consult a competent electrician.

Moisture and Water

- **Do not** use this TV in a humid or damp place (avoid bathrooms, the sink in the kitchen, and near the washing machine).
- **Do not** expose this TV to rain or water.
- **Do not** place objects filled with liquids, such as flower vases, on top of the TV. Avoid from dripping or splashing.
- If any solid object or liquid falls into the cabinet, unplug the TV and have it checked by qualified personnel before operating it any further.

Ventilation

- The slots and openings on the TV are intended for ventilation and to ensure reliable operation.
- To prevent overheating, these openings must not be blocked or covered in anyway.

Heat sources and Flames

- **Do not** expose the TV to direct sunlight or other heat sources.
- The TV should not be placed near to open flames and sources of intense heat such as an electric heater.
- Ensure that no open flame sources, such as lit candles, are placed on top of the TV.



Headphone Volume

- Excessive sound pressure from earphones and headphones can cause hearing loss, please take care.



Wall Mounting (optional)

- To prevent injury, this TV must be securely attached to the wall in accordance with the installation instructions (if the option is available).

LCD Screen

- Occasionally, a few non-active pixels may appear on the screen as a fixed blue, green or red point. Please note that this does not affect the performance of your TV.
- Take care not to scratch the screen with fingernails or other hard objects.

Cleaning

- Before cleaning, unplug the TV from the wall socket.
- **Do not** use liquid or aerosol cleaners. Only use a soft, dry cloth.

Batteries

- **⚠ WARNING:** Incorrect installation of batteries may cause battery leakage and corrosion, resulting in damage to the remote control.
- **Do not** mix old and new batteries, or batteries of different types.

- **Do not** dispose of batteries in a fire.



- **Do not** dispose of batteries with normal household waste, take to a local recycling centre.

- **⚠ CAUTION:** Insert the batteries / rechargeable batteries in the correct polarity. Don't try to recharge non rechargeable batteries and under no circumstances throw them into fire. Danger of explosion. Do not use unequal batteries (old and new, Alkaline and carbon, etc.) simultaneously. If you will not use the TV for a long time, remove the batteries and store the TV in a dry and dust free place. Improper use of batteries may cause an explosion or leakage. If the batteries have leaked, use gloves and clean the remote control thoroughly with a dry cloth! Batteries should not be exposed to heat, such as sunshine, fire or the like.

Replacement Parts

When replacement parts are required, make sure that the service technician has used replacement parts, which are specified by the manufacturer or have the same specifications as the original one. Unauthorised substitutions may result in fire, electrical shock or other hazards.

Taking out of service and storing

Unplug the TV from the mains and pack the TV in an appropriate cardboard box. Remove the batteries from the remote control and pack the remote control with the TV.



NOTE: The TV set should be stored in a dry and dust-free room.

Connection to a TV Distribution System from Tuner TV connected to the protective earthing of the building installation through the mains connection or through other apparatus with a connection to protective earthing-and to a TV distribution system using coaxial cable, may in some circumstances create a fire hazard.

Connection to a cable distribution system has therefore to be provided through a device providing electrical isolation below a certain frequency range (galvanic isolator, see BS EN IEC 60728-11).



CAUTION

Do not put your fingers in the middle between the TV and stand, especially when you carry the TV, as they may be injured.

WARNING

Do not ingest the battery, Chemical Burn Hazard

This TV or the accessories supplied with the TV may contain a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.

Keep new and used batteries away from children.

If the battery compartment does not close securely, stop using the product and keep it away from children.

If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

WARNING

A TV may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- ALWAYS use cabinets or stands or mounting methods recommended by the manufacturer of the TV.
- ALWAYS use furniture that can safely support the TV.
- ALWAYS ensure the TV is not overhanging the edge of the supporting furniture.
- ALWAYS educate children about the dangers of climbing on furniture to reach the TV or its controls.
- ALWAYS route cords and cables connected to your TV so they cannot be tripped over, pulled or grabbed.
- NEVER place a television set in an unstable location.
- NEVER place the TV on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the TV to a suitable support.
- NEVER place the TV on cloth or other materials that may be located between the TV and supporting furniture.
- NEVER place items that might tempt children to climb, such as toys and remote controls, on the top of the TV or furniture on which the TV is placed.
- The TV is only suitable for mounting at heights ≤ 2 m.

If the existing TV is going to be retained and relocated, the same considerations as above should be applied.

WALL MOUNTING WARNINGS

- Read the instructions before mounting your TV on the wall.
- The wall mount kit is optional. You can obtain from your local dealer, if not supplied with your TV.
- Do not install the TV on a ceiling or on an inclined wall.
- Use the specified wall mounting screws and other accessories.
- Tighten the wall mounting screws firmly to prevent the TV from fall. Do not over-tighten the screws.

WARNING

Apparatus connected to the protective earthing of the building installation through the MAINS connection or through other apparatus with a connection to protective earthing – and to a TV distribution system using coaxial cable, may in some circumstances create a fire hazard. Connection to a TV distribution system has therefore to be provided through a device providing electrical isolation below a certain frequency range (galvanic isolator)

Symbols in this Instruction Book

The following symbols are used in the Instruction Book as a marker for restrictions and precautions and safety instructions. Note such information for security reasons.

WARNING

If you do not pay attention to such a marked warning, it can cause serious injury or death. Note these warnings strictly, in order to ensure a safe operation.

CAUTION

Such a precaution is marked, you should take up or note, to avoid injury or property damage. Note these instructions strictly, in order to ensure a safe operation.

IMPORTANT

Warnings on the TV and restrictions are displayed like this. Read this information strictly in order to operate the system correctly and avoid damage.



NOTE

Information about the operation and additional explanations are marked like this. To be aware of such information is recommended to ensure that the functions can be used optimally.

Markings on the TV

The following symbols are used on the TV as a marker for restrictions and precautions and safety instructions. Each explanation shall be considered where the TV bears related marking only. Note such information for security reasons.



Class II Equipment: This TV is designed in such a way that it does not require a safety connection to electrical earth.



Hazardous Live Terminal: The marked terminal(s) is/are hazardous live under normal operating conditions.



Caution, See Operating Instructions: The marked area(s) contain(s) user replaceable coin or button cell batteries.



Class 1 Laser Product: This TV contains Class 1 laser source that is safe under reasonably foreseeable conditions of

operation.

The illustrations and the OSD in this operation manual are for explanation purposes and may vary slightly from the actual operations. TV design and specifications may be changed without notice.

Licence Notification

The terms HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.



Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.

YouTube and the YouTube logo are trademarks of Google Inc.

For DTS patents, see <http://patents.dts.com>. Manufactured under licence from DTS Licensing Limited. DTS, the Symbol, DTS and the Symbol together, DTS-HD, and the DTS-HD logo are registered trademarks or trademarks of DTS, Inc. in the United

States and/or other countries. © DTS, Inc. All Rights Reserved.



For DTS patents, see <http://patents.dts.com>. Manufactured under licence from DTS Licensing Limited. DTS, the Symbol, DTS and the Symbol together, Virtual:X, and the DTS Virtual:X logo are registered trademarks or trademarks of DTS, Inc. in the United States and/or other countries. © DTS, Inc. All Rights Reserved.



This product contains technology subject to certain intellectual property rights of Microsoft. Use or distribution of this technology outside of this product is prohibited without the appropriate licence(s) from Microsoft.

Content owners use Microsoft PlayReady™ content access technology to protect their intellectual property, including copyrighted content. This device uses PlayReady technology to access PlayReady-protected content and/or WMDRM-protected content. If the device fails to properly enforce restrictions on content usage, content owners may require Microsoft to revoke the device's ability to consume PlayReady-protected content. Revocation should not affect unprotected content or content protected by other content access technologies. Content owners may require you to upgrade PlayReady to access their content. If you decline an upgrade, you will not be able to access content that requires the upgrade.

The "CI Plus" Logo is a trademark of CI Plus LLP.

This product is protected by certain intellectual property rights of Microsoft Corporation. Use or distribution of such technology outside of this product is prohibited without a licence from Microsoft or an authorised Microsoft subsidiary.

Wireless LAN Transmitter Specifications

| Frequency Ranges | Max Output Power |
|---------------------------------|------------------|
| 2400 - 2483.5 MHz (CH1-CH13) | < 100 mW |
| 5150 - 5250 MHz (CH36 - CH48) | < 200 mW |
| 5250 - 5350 MHz (CH52 - CH64) | < 200 mW |
| 5470 - 5725 MHz (CH100 - CH140) | < 200 mW |

Country Restrictions

This device is intended for home and office use in all EU countries (and other countries following the relevant EU directive) without any limitation except for the countries mentioned below.

| Country | Restriction |
|--------------------|---|
| Bulgaria | General authorization required for outdoor use and public service |
| Italy | If used outside of own premises, general authorization is required |
| Greece | In-door use only for 5470 MHz to 5725 MHz band |
| Luxembourg | General authorization required for network and service supply(not for spectrum) |
| Norway | Radio transmission is prohibited for the geographical area within a radius of 20 km from the centre of Ny-Ålesund |
| Russian Federation | In-door use only |
| Israel | 5 GHz band only for 5180 MHz-5320 MHz range |

The requirements for any country may change at any time. It's recommended that user checks with local authorities for the current status of their national regulations for 5 GHz wireless LAN's.

E-Manual

You can find instructions for your TV's features in the E-Manual.

To access the E-Manual, enter **Settings** menu, select **Manuals** and press **OK**. For quick access press **Menu** button and then **Info** button.

By using the directional buttons select a desired category. Every category includes different topics. Select a topic and press **OK** to read instructions.

To close the E-Manual screen press the **Exit** or **Menu** button.

Note: Depending on model, your TV may not support this function. The contents of the E-Manual may vary according to the model.

Disposal Information

[European Union]

These symbols indicate that the electrical and electronic equipment and the battery with this symbol should not be disposed of as general household waste at its end-of-life. Instead, the products should be handed over to the applicable collection points for the recycling of electrical and electronic equipment as well as batteries for proper treatment, recovery and recycling in accordance with your national legislation and the Directive 2012/19/EU and 2013/56/EU.

By disposing of these products correctly, you will help to conserve natural resources and will help to prevent potential negative effects on the environment and human health which could otherwise be caused by inappropriate waste handling of these products.

For more information about collection points and recycling of these products, please contact your local municipal office, your household waste disposal service or the shop where you purchased the TV.

Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

[Business users]

If you wish to dispose of this TV, please contact your supplier and check the terms and conditions of the purchase contract.

[Other Countries outside the European Union]

These symbols are only valid in the European Union.

Contact your local authority to learn about disposal and recycling.

The TV and packaging should be taken to your local collection point for recycling.

Some collection points accept products free of charge.

Note: The sign Pb below the symbol for batteries indicates that this battery contains lead.




1. Products

2. Battery

Specifications

| | |
|--|---|
| TV Broadcasting | PAL BG/IDK SECAM BG/DK |
| Receiving Channels | VHF (BAND I/III) - UHF (BAND U) - HYPERBAND |
| Digital Reception | Fully integrated digital terrestrial-cable TV (DVB-T-C) (DVB-T2 compliant) |
| Number of Preset Channels | 1 000 |
| Channel Indicator | On Screen Display |
| RF Aerial Input | 75 Ohm (unbalanced) |
| Operating Voltage | 220-240V AC, 50Hz. |
| Audio | DTS Virtual:X DTS-HD |
| Audio Output Power (WRMS.) (10% THD) | 2 x 2.5 |
| Power Consumption (W) | 45 |
| Networked Standby (W) | < 2 |
| TV Dimensions DxLxH (with stand) (mm) | 135 x 553 x 365 |
| TV Dimensions DxLxH (without stand) (mm) | 41/63 x 553 x 334 |
| Display | 24" |
| Operation temperature and operation humidity | 0°C up to 40°C, 85% humidity max |

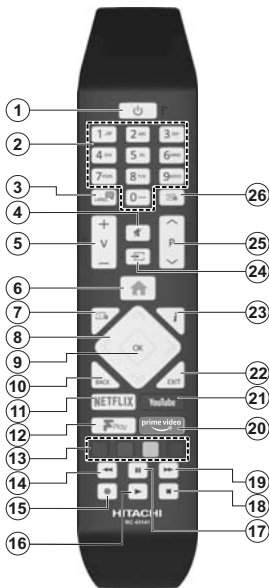 

- Standby:** Switches On / Off the TV
- Numeric buttons:** Switches the channel, enters a number or a letter in the text box on the screen.
- Language:** Displays and changes audio/subtitle language and turns subtitles on or off (digital TV, where available)
- Mute:** Completely turns off the volume of the TV
- Volume +/-**
- Menu:** Displays TV menu
- Guide:** Displays the electronic programme guide
- Directional buttons:** Helps navigate menus, content etc. and displays the subpages in TXT mode when pressed Right or Left
- OK:** Confirms user selections, holds the page (in TXT mode), views **Channels** menu (DTV mode)
- Back/Return:** Returns to previous screen, previous menu, opens index page (in TXT mode). Quickly cycles between previous and current channels or sources
- Netflix:** Launches the Netflix application
- Freeview Play:** Connects to the Freeview Play platform where you can access available catch-up TV services
- Coloured Buttons:** Follow the on-screen instructions for coloured button functions
- Rewind:** Moves frames backwards in media such as movies
- No function
- Play:** Starts to play selected media
- Pause:** Pauses the media being played
- Stop:** Stops the media being played
- Fast Forward:** Moves frames forward in media such as movies
- Prime Video:** Launches the Amazon Prime Video application
- YouTube:** Launches the YouTube application
- Exit:** Closes and exits from displayed menus or returns to previous screen
- Info:** Displays information about on-screen content, shows hidden information (reveal - in TXT mode)
- Source:** Shows available broadcast and content sources
- Programme +/-**
- Text:** Displays teletext (where available), press again to superimpose the teletext over a normal broadcast picture (mix), turns MHEG services on and off (where available)

Technical experts are available 7 days a week

- Simple help and advice on setting up your digital equipment (image).
- Guidance on connecting other devices to your television such as a DVD player, Sky, home cinema system or a games console.
- Order spare parts, including remote controls.
- Any other technical issues you may need assistance with.

Call us today: 0 345 604 0105

Local call rates applies*

Lines open 8am - 7pm Monday to Saturday and 10am - 4pm Sunday

*Calls to Argos enquiry lines may attract a charge and set up fee from residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see www.bt.com/pricing for details.

For Security and training purposes, telephone calls to and from customer service centres maybe recorded and monitored. Calls from Republic of Ireland will attract international call charges.

For online detailed guides and further assistance please use the link below
<https://www.argos-support.co.uk>



Product Guarantee

This product is guaranteed against manufacturing defects for a period of



Year

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will either be replaced, refunded or repaired free of charge where possible during this period by the dealer from whom you purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in this manual.
- It must be used solely for domestic purpose.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- The manufacturer disclaims any liability for the incidental or consequential damages.
- The guarantee is in addition to, and does not diminish your statutory or legal rights.
- In the event of a problem with the product within the guarantee period call the


Customer Helpline: 0345 604 0105

Guarantor: Argos Ltd
489 - 499 Avebury Boulevard
Central Milton Keynes
MK9 2NW

For online detailed guides and further assistance please use the link below
<https://www.argos-support.co.uk>

| Product fiche | | |
|--|-----------|-------|
| Commercial Brand: HITACHI | | |
| Product No. | 10130805 | |
| Model No. | 24HE2200U | |
| Energy efficiency class | A+ | |
| Visible screen size (diagonal, approx.) (inch/cm) | 24 inches | 60 cm |
| On mode average power consumption (Watt) | 19,0 | |
| Annual energy consumption (kWh/annum) | 27 | |
| Standby power consumption (Watt) | 0,50 | |
| Off mode power consumption (Watt) | N/A | |
| Display resolution (px) | 1366x768 | |

| VESA WALL MOUNT MEASUREMENTS | | |
|------------------------------|-----------|----|
| Hole Pattern Sizes (mm) | W | H |
| | 75 | 75 |
| Screw Sizes | | |
| Length (X) | min. (mm) | 5 |
| | max. (mm) | 8 |
| Thread (Y) | M4 | |

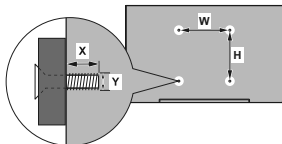 

Hereby, HITACHI Europe Ltd., declares that the radio equipment type TV is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: <https://estadoc.hitachi.eu/estadoc/index.htm>

Hitachi Europe Ltd. Whitebrook Park, Lower Cookham Road, Maidenhead, Berkshire. SL6 8YA. UK

HITACHI

Inspire the Next

Manufacturer & importer
Hitachi Europe Ltd.,
Whitebrook Park,
Lower Cookham Road,
Maidenhead,
Berkshire SL6 8YA
U.K.



50545296