

# BUSH

# BUSH

Instruction manual

7 Bottle Wine Cooler

BEWC7



Contact:

[www.bush-support.co.uk](http://www.bush-support.co.uk)

Helpline: 01759 487838

You'll soon be enjoying your new Wine Cooler

It all begins here, with your instructions. Don't worry, there's nothing too technical coming up. Just simple, step-by-step guidance to get you up and running quickly. Sound good? Then let's get started.

## Help and Guidance

We're here to help you get the most from your Wine Cooler. Should you require any guidance, a simple solution can often be found online at:

[www.bush-support.co.uk](http://www.bush-support.co.uk)

If you still require further assistance, call one of our experts on **01759 487838**.

ISSUE-206/03/2021

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions.

# BUSH

## Call us now and activate your 12 month guarantee

Thank you for choosing Bush. Your new product is guaranteed against faults and breakdowns for 12 months. Don't forget to register it with us today so we can provide you with our best possible after-sales service and useful updates.

[www.bushregistration.co.uk](http://www.bushregistration.co.uk)

FREEPHONE\*

**0800 597 8548**

Lines are open 8am - 8pm, 365 days a year. \*Calls may be recorded and monitored.

## Your Bush Guarantee

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will be repaired free of charge (or if applicable the product will be replaced or the purchase price refunded) where possible during this period by the dealer from who you purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in the manual.
- It must be used solely for domestic purposes. The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- Bush disclaim any liability for loss or damage arising from the breakdown of the product.
- This guarantee is in addition to and does not diminish your statutory or legal rights.

## Important Data Protection Information

To find out how we and Domestic & General Insurance PLC use your data, please refer to the guarantee registration material or visit [www.bushregistrations.co.uk](http://www.bushregistrations.co.uk)

Guarantor: Argos Limited - 489 - 499 Avebury Blvd. - Milton Keynes - MK9 2NW

ISSUE-206/03/2021

or online at [www.bush-support.co.uk](http://www.bush-support.co.uk) If you still require further assistance, call one of our experts on **01759 487838**.

## Product support

Help is always at hand

### Declaration of conformance to product standards

This appliance conforms to all relevant standards applicable to domestic appliances sold in the UK

### Disposal



The symbol on the product, or on the documents accompanying the product, the **crossed out wheellie bin** symbol, indicates that this appliance/fitting may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

Please according to local regulations regarding disposal of the appliance for its flammable refrigerant and blowing gas.

For more detailed information about treatment, recovery and recycling of this product, please contact your local authority, your household waste disposal service or the retailer where you purchased the product.

Old fridges and freezers contain isolation material and refrigerant with CFC. Therefore, take care not to harm the environment when you are discarding your old fridges.



ISSUE-206/03/2021

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions.

## Contents

### 1 Safety information

Safety information 5

### 2 Getting to know your Wine Cooler

Ready? Let's begin 10

Accessories 11

### 3 Installing your Wine Cooler

Installation requirements 13

Unpacking 13

### 4 Using your Wine Cooler

Arranging your Wine Cooler 17

### 5 Care and Maintenance

Cleaning 20

Maintenance actions

Technical specifications 21

### 6 Product support

Troubleshooting 24

Help and assistance 25

Declaration of conformance to product standards 26

Disposal 26

Guarantee 27

ISSUE-206/03/2021

or online at [www.bush-support.co.uk](http://www.bush-support.co.uk) If you still require further assistance, call one of our experts on **01759 487838**.

Icon	Type	Meaning
	WARNING	Serious injury or death risk
	RISK OF ELECTRIC SHOCK	Dangerous voltage risk
	FIRE	Warning; Risk of fire / flammable materials
	CAUTION	Injury or property damage risk
	IMPORTANT	Operating the system correctly

## Product support

Help is always at hand

### Help and assistance

If you require any technical guidance or find that your Wine Cooler is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions or online at [www.bush-support.co.uk](http://www.bush-support.co.uk)

If you still require further assistance, call one of our experts on **01759 487838\***. To help give us give you a fast and efficient service please have the following information ready:

Model Ref.

You can find these on the rating plate - a small information panel (usually a sticker or metal plate) on the rear of your appliance

Serial number

Date of purchase

This will be shown on your receipt

Local call rates applies\*

Lines open 8am-7pm Monday to Saturday and 10am-4pm Sunday.

\*Calls to BUSH enquiry lines may attract a charge and set up fee from residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see [www.bt.com/pricing](http://www.bt.com/pricing) for details.

For Security and training purposes, telephone calls to and from customer service centres maybe recorded and monitored. Calls from Republic of Ireland will attract international call charges.

ISSUE-206/03/2021

or online at [www.bush-support.co.uk](http://www.bush-support.co.uk) If you still require further assistance, call one of our experts on **01759 487838**.

## Product support

Help is always at hand

### Troubleshooting

**DO NOT ATTEMPT TO REPAIR THIS WINE COOLER YOURSELF. CALL BUSH PRODUCT SUPPORT ON 01759 487838**

PROBLEM	SOLUTION
THE DOORS DO NOT CLOSE PROPERLY	<ul style="list-style-type: none"><li>-Ensure there are no obstructions preventing door closure.</li><li>-Check the door compartments and shelves are correctly in place.</li><li>-Check the door seal is not warped or torn.</li><li>-Check the appliance is level.</li></ul>
UNUSUAL NOISES	<ul style="list-style-type: none"><li>-Check that the appliance is on a flat, level surface and is stable.</li><li>-Check the spacing's around the appliance and ensure it is not touching other items.</li><li>-Bubbling and gurgling sound: This noise is emitted as the coolant fluid flow through the pipes within the system. This is normal.</li><li>-Contraction and expansion of the inside walls may cause popping and cracking noises.</li></ul>
THE COOLER DOOR WILL NOT OPEN	<ul style="list-style-type: none"><li>-If the door has just been opened, leave it for a few minutes to allow the air pressure to equalise before trying again.</li></ul>
THE COMPRESSOR RUNS CONSTANTLY	<ul style="list-style-type: none"><li>-The temperature is set too cold: select a lower (warmer) setting.</li><li>-The door is open, or something is obstructing proper door closure.</li><li>-The room temperature is hotter than usual.</li></ul>
THE EXTERNAL FRIDGE SURFACE IS WARM	<ul style="list-style-type: none"><li>-The exterior walls can be warmer than room temperature. This is normal while the compressor works to transfer heat from inside the bottle cabinet.</li></ul>
SMELLS/ODOURS	<ul style="list-style-type: none"><li>-Check all the drinks that are in the cooler are in date and correctly packaged. Please remove anything that may be spoiled and repack if necessary.</li><li>-Check for spillages throughout the cooler. Spillages may cause odours if left unwashed. Wash accordingly to the manufacturers advise.</li></ul>

ISSUE-206/03/2021

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions.

## Safety information

# 1



## Safety information

**Important** - Please read these instructions fully before installing or operating

### General warnings

**WARNING:** Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.

**WARNING:** This appliance is intended to be used exclusively for the storage of wine. This shall not apply to refrigerating appliances that are not specifically designed for wine storage but may be used for this purpose, or to refrigerating appliances that have a wine storage compartment combined with any other compartment type.

**WARNING:** Do not damage the refrigerant circuit.

**WARNING:** To avoid a hazard due to instability of the appliance, it must be fixed in accordance with the instructions.

**WARNING:** If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

**WARNING:** This appliance is intended to be used in household and domestic applications only.

**WARNING:** This product is not suitable for food storage and must not be used to store food inside.

**WARNING:** Cord entanglement hazard. The cable of the appliance can give rise to risks of entanglement, strangulation or tripping if not correctly placed. You must make sure that the electric cable is positioned safely.

- This appliance contains the coolant Isobutane (R600a), a natural gas which is environmentally friendly. Although it is flammable, it does not damage the ozone layer and does not increase the greenhouse effect. The use of this coolant has, however, led to a slight increase in the noise level of the appliance. In addition to the noise of the compressor, you might be able to hear the coolant flowing around the system. This is unavoidable, but does not have any adverse effect on the performance of the appliance.

- Care must be taken during the transportation and installation of the appliance that no parts of the cooling system are damaged. Leaking coolant can damage the eyes.

- In the event of any damage:

- Avoid open flames and anything which creates a spark.
- Disconnect from the mains.
- Air the room in which the appliance is located for at least an hour.
- Contact the BUSH Service Department for advice.

ISSUE-206/03/2021

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions.



## Safety information

**Important** - Please read these instructions fully before installing or operating

- Whilst carrying and positioning the appliance care must be taken not to damage the cooler gas circuit at the rear of the appliance.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance. Do not use the appliance for industrial and commercial use, or any other purpose.
- The appliance is design for indoor use only and must be protected from rain, moisture and extreme temperature variations.
- This appliance is not intended for outdoor use.
- If the socket and refrigerator plug are not compatible please contact after sales service provider.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision. Children aged from 3 to 8 years are allowed to load and unload refrigerating appliances.
- Before connecting the appliance, make sure that the connection data on the data plate (voltage and frequency), matches the mains electricity supply. This data must correspond in order to avoid the risk of damage to the appliance. Consult a qualified electrician if in any doubt.
- Ensure the accessories are secured during transportation to prevent damage.
- Do not splash water on the appliance. It may cause electrical parts to fail and result in an electric shock.
- Do not sit, stand or place any other heavy objects on top of the appliance. This could result in injury or damage to the appliance.
- To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources (further detail on page 26 of this instruction manual).
- Young children should be supervised to ensure that they do not play with the appliance.
- In case there is a flammable gas leak, open the window for air circulation and disconnect from the mains. Do not turn the temperature knob. Otherwise, sparks may happen.
- The lamp must be replaced by the manufacturer, its service agent or similarly qualified persons.

ISSUE-206/03/2021

or online at [www.bush-support.co.uk](http://www.bush-support.co.uk) If you still require further assistance, call one of our experts on 01759 487838.



## Safety information

**Important** - Please read these instructions fully before installing or operating

### Before using your appliance

- Before switching on your appliance for the first time, ensure it is positioned in its desired final location and is in its upright position for at least 24 hours before plugging in and switching on the power, otherwise you may damage the compressor.
- You may experience an odour from the appliance when it is operated for the first time. This is normal and will fade when your appliance starts to cool.
- It is recommended that you remove all the internal and external packaging and clean the interior of the appliance prior to first use. We recommend you wipe all parts with warm water, then rise and dry. Place all parts back into the appliance after cleaning.
- Cleaning and user maintenance shall not be made by children without supervision.



- **Warning: Risk of fire / flammable materials.**
- When positioning the appliance, ensure the supply cord is not trapped or damaged.
- Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.
- To avoid contamination of drinks, pay attention to the following:
  - Opening the door for long periods of time can cause a significant increase in the temperature in the compartments of the appliance.
  - Only store wine in sealed containers.
  - Do not overload the cabinet.
  - Only open the door when necessary.
  - This is a self-defrosting appliance. The compressor will not run during the twenty minutes defrost cycle.
  - Do not pull the shelves beyond the anti-stop position when fully loaded.
  - This appliance is intended to be used exclusively for the storage of wine.
  - In the event of a power failure, leave the door closed as much as possible to maintain the internal working temperature. Should the power failure continue for a prolonged period, you should take steps to protect the contents of the wine cooler against a rise in temperature. The wine cooler will remember the selected temperature setting and revert to these setting once the power is restored.

ISSUE-206/03/2021

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions.

## Care and maintenance

Looking after your appliance

### Technical specification

Model	BEWC7
Fridge capacity	20L
Bottles capacity	7 bottles
Voltage and frequency	220-240V AC/50Hz
Protection class	I
Climate class	N
Energy consumption	0.398kWh/24h
Rated current	0.5A
Rated lamp power	1W
Refrigerant	R600a/10g
Energy rating	G
Size WxDxH (mm)	148x525x820

The model information can be retrieved using the QR-Code reported in the energy label. The label also includes the model identifier that can be used to consult the portal of the registry at <https://eprel.ec.europa.eu>

We apologise for any inconvenience caused by minor inconsistencies within these instructions that may occur due to product improvements and development. All images and drawings are for illustration purposes only.

The original spare parts for some specific components are available for a minimum of 7 or 10 years, based on the type of component, from the placing on the market of the last unit of the model.

In the case of malfunction, repair should only be performed by an authorised service company, otherwise the warranty will be void.

ISSUE-206/03/2021

or online at [www.bush-support.co.uk](http://www.bush-support.co.uk) If you still require further assistance, call one of our experts on **01759 487 838**.



## Care and maintenance

### Looking after your appliance

#### Cleaning your appliance

- Make sure you unplug the wine cooler before starting to clean it.
- Do not pour water directly over your appliance.
- You can wipe the inner and outer sides with a soft cloth.
- Remove parts individually and clean by hand with soapy water. Do not place in dishwashers.
- Never use flammable, explosive or corrosive material for cleaning your appliance
- Dust behind the cooler and on the ground shall be timely cleaned to improve the cooling effect and energy saving.
- The interior of the cooler should be cleaned regularly to avoid odor.
- Check the door gasket regularly to make sure there are no debris.
- Please turn off the power before cleaning, remove all shelves.
- Clean the door gasket with mild soap and water.
- Use a soft cloth or sponge to clean the inside of the cooler, with two tablespoons of baking soda and a quart of warm water. Then rinse with water and wipe clean, and open the door and dry it naturally before the power is turned on.
- Do not use soap, detergent, scrub powder, spray cleaner, etc., as these may cause odors in the interior of the cooler.
- Clean the bottle frame and shelves with a mild detergent and dry with a soft cloth.
- Wipe the outer surface of the cooler with a soft cloth dampened with soapy water, detergent, etc., and then wipe dry.
- Do not use hard brushes, steel wool, wire brushes, abrasives, or solvents like, alcohol or acetone, boiling water, acids or alkaline to clean this appliance, as it may damage or deform the surface or interior.
- Do not rinse with water so as not to affect the electrical insulation properties.

#### Light bulb replacement

The internal light is a LED type. To replace the lamp, please speak to after sales service provider.

#### Power Failure

If the power failure lasts for up to 24 hours, keep the door closed. This will allow the stored bottles to stay cold as long as possible. If it lasts longer than 24 hours, it is advised to empty the wine cooler compartment and temporarily store the bottles in a portable wine chiller.

#### Short vacation

There is no need to disconnect the appliance from the mains if you will be away for two to three weeks.

#### Long vacation

Remove all the wine if you are away for three weeks or more. Unplug the appliance and leave the doors open to provide air circulation to prevent odour and mould.

If the refrigerating appliance is left empty for long periods, switch off, defrost, clean, dry, and leave the door open to prevent mould developing within the appliance.

## Getting to know your Wine Cooler 2

## Getting to know your Wine Cooler

You'll be up and running in no time

### Ready? Let's begin...

Please read these instructions carefully. They contain important information which will help you get the best from your Undercounter Wine Cooler and ensure safe and correct installation and operation.

If you require any further assistance, our technical experts are happy to help. For full details, refer to the product support section at the end of these instructions.

# Care and maintenance 5

## Defrosting

 
The wine cooler is designed to defrost automatically every 4 hours. The defrost process will last for 20 minutes. During defrost, the compressor stops working and fan keeps on running for 20 minutes.

## Door alarm

The wine cooler is equipped with an alarm that will sound if the door is open for more than 60 seconds. Close the door or press any key once to switch off the alarm.

## Controls

It is recommended that you install appliance in a place where the ambient temperature is between 16°C - 32°C. If the ambient temperature is above or below recommended temperature, the performance of the unit may be affected. For example, placing your unit in extremely cold or hot conditions may cause interior temperatures to fluctuate. The operation temperature range may not be reached.

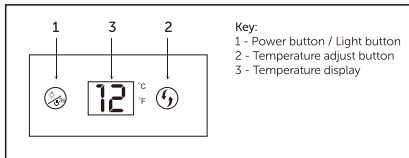

### To switch the power on/off

- Press and hold "1" button for 3 seconds to switch the wine cooler on.
- Press and hold "2" button for 3 seconds again to switch the wine cooler off.

### To change the temperature

- Continue to press the "3" button until the required temperature is shown on the display.
- The preset temperature is 12°C/54°F.
- To change the temperature display from Fahrenheit to Celsius, or Celsius to Fahrenheit, press "2" and "3" button at the same time for 1 second.
- The display shows the current internal temperature when the wine cooler is on.

### To use the internal light

- Press "1" button for 1 second to switch the light on or off.

### Optimal temperature selection

- Temperature suggest setting at 12°C.
- Summer, normal, winter temperature setting base on different wine best stored temperature.
- Whilst wine is best stored at temperatures between 13 and 15°C, your wine can also be stored at drinking temperature. As a guide for red wine this is between 15 and 17°C, and for white wine between 12 and 13°C.

### High and low temperature protection mode

High temperature protection: after the system starts up for 1 hour, start to detect the over temperature: if the temperature exceeds 26 °C for 20 minutes, the nixie tube will immediately display HH and beep for 20 minutes; at this time, the compressor will start for 5 minutes and stop for 10 minutes.

When the temperature is lower than 26 °C or the power is turned off, it can recover.

Low temperature protection: the system starts to detect after 1 hour of power on.

If the temperature of the cabinet is lower than - 15 °C and lasts for more than 20 minutes, the alarm will start.

The digital tube will flash ll and beep for 20 minutes, and the compressor will stop working.

When the temperature of the box is higher than 2 °C, the low temperature alarm will stop.

### Door

The door should be closed as soon as possible after use. The door is allowed to open at a maximum angle of 135.

ISSUE-206/03/2021

 
If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions.

## Getting to know your Wine Cooler

You'll be up and running in no time



1. Cabinet
2. Touch control panel
3. Integrated supports

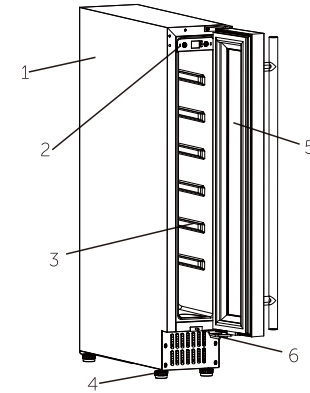


4. Levelling feet
5. Glass door
6. Lower door hinge

## Accessories included



 Handle x 1



Screws x 2



Spacers x 2

Full instructions on how to fix the handle can be found on Page 13 of this manual

The shelves should be kept in their current position

unless otherwise specified in this document.

ISSUE-206/03/2021

or online at [www.bush-support.co.uk](http://www.bush-support.co.uk) If you still require further assistance, call one of our experts on **01759 487838**.

# 3 Installing your Wine Cooler

## Using your Wine Cooler

### Getting the most from your appliance

#### Before use

##### Final checks before operating the appliance.

 
1. Make sure there is sufficient space for air circulation around the appliance. (Please see page 13 of Instruction Manual titled 'Installation requirements' for this information).
2. The feet have been adjusted for perfect leveling.
3. Clean the compartment per recommendation in section "Care and Maintenance".
4. Plug in the appliance and it will start operation to the default temperature setting.
5. The LED display may not show the selected temperature whilst the appliance first gets to the correct temperature. This is normal, and the display will be corrected automatically once the appliance has run for a few hours.
6. If the appliance is switched off, you should allow five minutes before switching it on again to prevent the risk of unnecessary damage to the compressor.

#### Please note :

The appliance will work continuously until it gets to correct temperature. Continuous noise from the compressor and refrigeration system is normal, this is not a defect.

#### Arranging wine in your wine cooler.



- Before putting the wine into the wine cooler, please be aware this appliance comes with 6 integrated supports/slots which allow you to place wine bottle directly in place.
- Adjust the temperature of the wine cooler to your desired temperature.
- Allow several hours for bottles to reach the desired temperature set.
- Fill the wine cooler with your choice of wine bottles. Place the wine bottles in the correct way and ensure they sit in the slot securely. (see diagram).



Please be aware that this wine cooler is designed to fit 0.75 litre Bordeaux style wine bottles (see bottle dimension). When using different size bottles in this wine cooler, may prevent the door from closing.

- Do not exceed the capacity that the appliance is able to handle. Follow below bottle loading diagram.
- Each slot allows for 1 bottle only.
- Bottom slot is slightly more narrow. We recommend the bottle is placed in reverse to the rest to ensure it fits correctly in the wine cooler. Please follow bottom loading diagram below.

  Bottle loading diagram

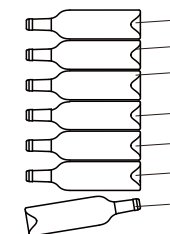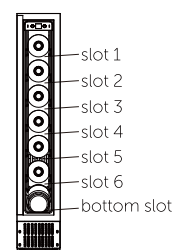

bottom slot bottle loading way

#### Caution:

Condensation may be found on the glass door during summer time or humid temperatures. This is normal. Wipe it with a damp cloth.

ISSUE-206/03/2021

or online at [www.bush-support.co.uk](http://www.bush-support.co.uk) If you still require further assistance, call one of our experts on 01759 487838.

# 4 Using your Wine Cooler

## Installing your Wine Cooler

Bringing it all together

### Installation requirements

Before starting to use your wine cooler, you should pay attention to the following points:

- Operating voltage for your wine cooler is 220-240V at 50Hz.
- We do not take the responsibility of the damages that occur due to ungrounded usage.
- Do not place your appliance in direct sunlight.
- Your appliance should be at least 50 cm away from stoves, Gas ovens and heaters, and should be at least 5 cm away from electrical ovens.
- Your wine cooler should never be used outdoors or left out in the rain.
- When your wine cooler is placed next to a deep freezer, there should be at least 2 cm between them to prevent humidity on the outer surface.
- Do not place anything on your wine cooler, and install your wine cooler in a suitable place so that there is at least 10mm clearance at the top.
- Before using your wine cooler, wipe all parts with warm water, and then rinse and dry. Place all parts back in the appliance after cleaning.
- This appliance should be placed against a wall with a free distance of at least 30mm.
- The installation of this appliance is best carried out by 2 people.
- Dispose of all packaging carefully and responsibly.
- The appliance is designed for indoor use only and must be protected from rain, moisture and extreme temperature variations.
- This appliance is designed for household use. Do not use the appliance for industrial and commercial use, or any other purpose.
- The appliance MUST be positioned on a firm level base.

### Installation of your appliance

 
The appliance is designed for built-in, recessed installation. The minimum space required is : 168mm W x 560mm D X 830mm H ( refer to right photo)

IMPORTANT: Failure to follow the instructions regarding installation and ventilation may void the warranty supplied with your appliance.

### Installing the stainless steel handle


To install the handle, follow the instructions below:

1. Peel back door seal along the right hand side of door. You will find a screw hole at the top and lower of the door where you have peeled the seal back. (please refer to the diagram)
2. Take out the screws and spacers from bag at back of cabinet. Place the spacers onto screws and then put the screws in the hole where the handle is to be installed. Please make sure the spacer is correctly in place before you put the screws in the hole.
3. Align the handle with screws, tighten the screws using a screw driver until the handle is both flush and secured tightly against the door side. (DO NOT over-tighten as this may cause damage to the door surface)
4. After handle fixed well, put the door seal back to the door to cover the hole.

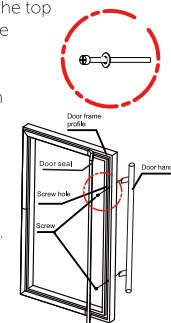

### Unpacking

 - Please make sure that when unpacking your appliance that it is carried out in a safe manner. Ensure the packaging is disposed off in accordance to local regulation.
- Do not allow children to play with the packaging material, e.g. plastic bags and wrappings. **Danger of suffocation.**

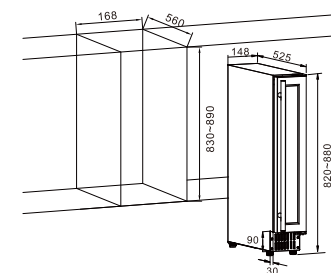


If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions.

## Levelling feet

 - The appliance must be installed level in order to work properly. If the unit is not level, the doors and magnetic seal alignments will not be covered properly.
- To level the unit, adjust one or both levelling feet at the base of the unit.


## Adjustable feet

This appliance comes with height adjustable feet which allows the appliance to be installed under bench and ensures the appliance is stable and level. Just screw the bottom feet anticlockwise to raise the height up to 880mm or clockwise to lower the height to 820mm. See below photos.

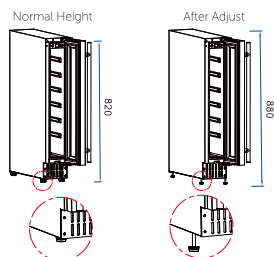


## Adjusting the plinth

 The pre-fitted plinth for this appliance comes with an adjustable lower section that is initially seated behind the upper section. It helps to hide the feet after it was being adjusted. The process for adjusting the plinth trim is simple and is achieved by following the image and steps below.

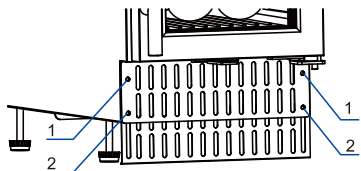

 1. Remove the screws (1) from both the top left and top right hand sides.
2. Loosen or remove the screws (2) from the bottom left and bottom right hand sides. Failure to sufficiently loosen the bottom screws may cause damage to the lower trim when adjusting it.
3. Carefully guide the lower trim down until the desired height is achieved.
4. Reinsert screw (1) and tighten. Then, tighten or reinsert screws (2).

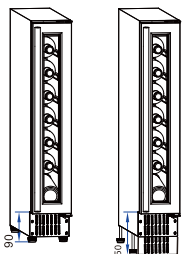

The plinth could be adjusted from 90mm to 150mm.

Each appliance has a climate class (shown on the rating plate) that indicates the operating temperature range of the appliance. The appliance may not work properly if it is left for a long period at a temperature outside the specified range: extended temperate: 'this refrigerating appliance is intended to be used at ambient temperatures ranging from 10 °C to 32 °C (from 50°F to 90°F)'; temperate: 'this refrigerating appliance is intended to be used at ambient temperatures ranging from 16 °C to 32 °C (from 61°F to 90°F)'; subtropical: 'this refrigerating appliance is intended to be used at ambient temperatures ranging from 16 °C to 38 °C (from 61°F to 100°F)'; tropical: 'this refrigerating appliance is intended to be used at ambient temperatures rang

ISSUE-206/03/2021

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions.

## Installing your Wine Cooler

### Bringing it all together

#### Electrical connection



Any electrical work that is required to install this appliance **MUST** be carried out by a qualified electrician.



**Warning: THIS APPLIANCE MUST BE EARTHED**

Before making any electrical connections, ensure that:

- Electrical safety is only guaranteed when the earth system of your house in accordance with the related local regulations.
- Do not bend, stretch or pull the supply cable to avoid electric shock.
- Ensure the power socket is suitable for the Maximum power of the machine (fuses in the power circuit must be 13 amp).
- The supply voltage should be the same as that indicated in the technical specifications and the appliance rating plate.
- The appliance should be earthed and in compliance with the applicable law.
- When installed, the power socket must be within easy reach.
- If the socket outlets in your home are not suitable for the plug supplied with this unit check with a qualified electrician for replacement.
- To avoid the risk of overloading your plug socket, the use of adapters, multiple connectors or extension cables are not recommended. The appliance must be connected to a 220-240 volt 50Hz AC supply by mean of a three pin socket, suitably earthed and protected by a 13 amp fuse. Should the fuse need to be replaced, a 13 amp fuse approved to BS1362/A must be used.
- The plug contains a removable fuse cover that must be refitted when the fuse is replaced. If the fuse cover is lost or damaged, the plug must not be used until a replacement cover has been fitted or the plug is replaced.
- A damaged plug should be cut off as close to the plug body as possible, the fuse should be removed and the plug disposed of safely.

•When positioning the appliance, ensure the supply cord is not trapped or damaged.

•Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.

#### Plug replacement (UK & Ireland only)

Should you need to replace the plug; the wires in the power cable are coloured in the following way:

Blue - Neutral 'N'

Brown - Live 'L'

 
Green & Yellow - Earth 'E'

The green & yellow wire must be connected to the terminal in the plug that is marked with the letter E or by the earth symbol.

The blue wire must be connected to the terminal that is marked with the letter N.

The brown wire must be connected to the terminal that is marked with the letter L.

If power supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similar qualified person in order to avoid a hazard.

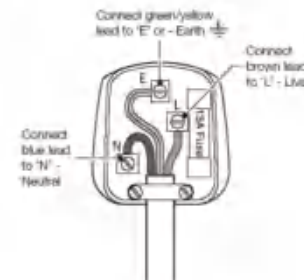

ISSUE-206/03/2021

or online at [www.bush-support.co.uk](http://www.bush-support.co.uk) If you still require further assistance, call one of our experts on 01759 487838.