

INSTRUCTION MANUAL

HITACHI
Inspire the Next

43" Colour TV 43HK6100U A

8526782



DVB-T2

SAORVIEW
APPROVED

HDMI
HIGH-DEFINITION MULTIMEDIA INTERFACE

4K
ULTRAH

FreeviewPlay

dts
TruSurround

Important - Please read these instructions fully before installing or operating and keep for future reference.

These instructions contain important information which will help you get the best from your television and ensure safe and correct installation and operation.

For any help concerning set up and use of your TV please call the Customer Helpline: 0345 604 0105

Lines open 8am-7pm Monday to Saturday and 10am - 4pm Sunday

 
QUICK GUIDE

IMPORTANT - If placing TV into cabinet or above, ensure there is at least a 100 mm (10 cm) gap to the sides, rear and top of the TV. This is to allow for adequate ventilation during operation. Please read the main Users Guide for more safety information before installation.


1 insert the batteries into your handset



2a either connect the aerial straight to your TV...

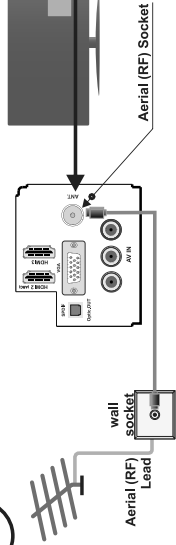

 2b ...or connect the aerial through a VCR...

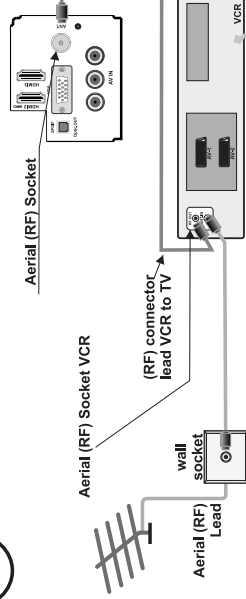


The leads can be purchased from your HiTech dealer or any good High Street electrical retailer.

English -1-

For any help concerning set up and use of your TV please call the Customer Helpline: 0345 604 0105

 2c ...or through a HDMI, YPbPr and Scart products (DVD-RW)

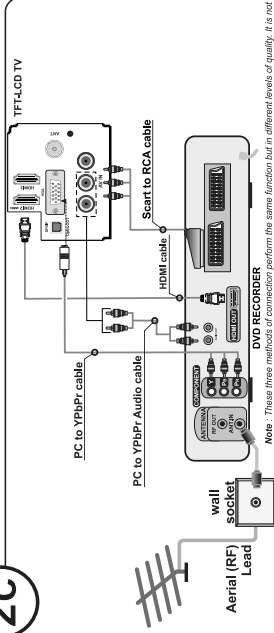


Note: These three methods of connection perform the same function but in different levels of quality. It is not necessary to connect by all three methods.

• High Definition

Your LCD Television is capable of displaying High Definition pictures from devices such as a High Definition Satellite Receiver or DVD Devices. These devices must be connected via the HDMI socket or Component Socket.

 
2d ...or through a VCR and satellite decoder.

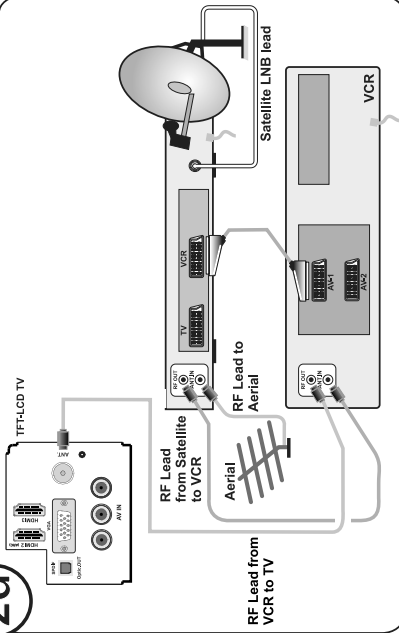


English -2-

For any help concerning set up and use of your TV please call the Customer Helpline: 0345 604 0105

 3 connect the TV plug to the mains socket

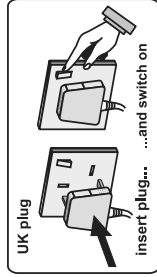

 4 Press the control button, the TV will turn on.



Your TV has a single control button. This button allows you to control the Standby-On / Source / Programme and Volume functions of the TV.

Note: The position of the control button may differ depending on the model.

Operating with the Control Button

Press the control button to display the function options menu.
Then press the button consecutively to move the focus to the desired option if needed.
Press and hold the button for about 2 seconds to activate the selected option. The icon colour of the option changes when activated.
Press the button once again to use the function or enter the sub menu.
To select another function option, you will need to deactivate the last activated option first. Press and hold the button to deactivate it. The icon colour of the option changes when deactivated.
To close the function options menu do not press the button for a period of about 5 seconds. The function options menu will disappear.

5 First Time Installation

When turned on for the first time, the language selection screen is displayed. Select the desired language and press **OK**.
On the next screen set your country preference. Then press **OK** to continue.
Select **Home Mode** for home use. You can activate **Store Mode** option at this point if necessary, however, this option is only intended for store use.

Depending on the model of your TV and the country selection **Privacy Settings** menu may appear at this point. Using this menu you can set your privacy privileges. Highlight a feature and use Left and Right directional buttons to enable or disable. If the **Internet Connection** option is disabled **Network/Internet Settings** screen will be skipped and not displayed.

Highlight **Next** and press **OK** button on the remote control to continue and the **Network/Internet Settings** menu will be displayed.

Refer to **Connect your TV to the Internet** section to configure a wired or a wireless connection. After the settings are completed highlight **Next** and press **OK** button to continue.

On the next screen you need to agree to the terms and conditions of Freeview Play to make use of the related services. Highlight **Yes** and press **OK** on the remote to confirm and proceed. Highlight **No** and press **OK** to proceed without confirmation.

On the next screen set your preferences as follows:

Scan Encrypted Channels On
Select favourite network type D.Aerial

- D.Aerial
- D.Cable
- Analogue

When finished, highlight **Next** and press **OK** to start channel scan.

After the initial settings are completed **TV** will start to search for available broadcasts of the selected broadcast types.

While the search continues a message may appear, asking whether you want to sort channels according to the LCN(*). Select **Yes** and press **OK** to confirm.

(* LCN is the Logical Channel Number system that organizes available broadcasts in accordance with a recognizable channel number sequence (if available).

After the channel scan has been completed the **Choose Region** menu may appear. Select the appropriate settings for your location using the directional buttons then press **OK**.

After all the available stations are stored, **Channels** menu will be displayed. You can edit the channel list according to your preferences using the **Edit** tab options or press the **Menu** button to quit and watch TV.

Note: Do not turn off the TV while initializing first time installation. Note that, some options may not be available depending on the country selection.

important note

Once the TV has found all your local stations, they are then automatically assigned a programme number and name, if available from the broadcast.

6 Connect your TV to the internet

 
Connectivity feature allows you to connect your TV to the home network wired or wirelessly. You can use this networking system to connect to internet or to access photo, video and audio files that are stored on a Media server connected to the network and play/display them on the TV.

Add your TV to your home network by connecting it to the modem/router via an LAN cable (not supplied) as illustrated.


To use your TV with your wireless network, you won't need any additional wireless LAN adaptors as your TV supports internal WLAN feature.

Press the **Menu** button to open the main **TV** menu. Select **Settings** by using the directional buttons and press **OK** to enter. Highlight **Network** and press **OK**. While **Network** type is highlighted, press **Left** or **Right** buttons to select connection type. Wired connection will be established automatically, if wireless connection is selected, highlight **Scan Wireless Networks** option and press **OK** to start a search for available wireless networks. Available networks will be listed when finished. Select one and press the **OK** button to connect. If the wireless network is password protected you should enter the correct code to access the network.

Wireless Connection

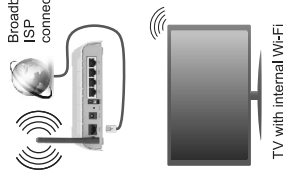

Wired Connection

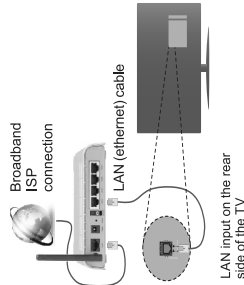 


Accessories included

- Remote Control
- Batteries: 2 x AAA
- Quick Start Guide

Depends on model

- Side AV/ Connection Cable
- YPbPr Connection Cable
- WLAN USB Dongle and USB Extension Cable
- Wall Mount Kit

 Important safety precautions

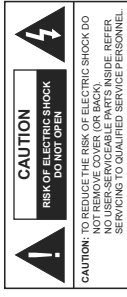

Don't operate your TV in extreme ambient conditions as this may cause damage to your TV.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure which may be sufficient to constitute a risk of electric shock of persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Note: Follow the on screen instructions for operating the related features.

IMPORTANT - Please read these instructions fully before installing or operating

Preparation

Place the device on a solid even surface. For ventilation, leave a free space of at least 10 cm all around the set. To prevent any fault and unsafe situations, do not place any objects on top of the set. Use this device in moderate climates.

Operation temperature and operation humidity: 0°C up to 40°C, 85% rel. humidity max. (not blocking ventilation openings).

Intended Use

This device is used to receive and display TV programmes. The different connection options make an additional expansion of the reception and display sources possible (various external devices). This device is only suitable for dry interior use. This appliance is intended solely for private domestic use and may not be used for industrial and commercial purposes. We exclude liability in principle, if the device is not used as intended, or if unauthorized modifications have been made. To operate your TV in extreme ambient conditions may cause the damage of the device.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

Children may not recognize dangers. The swallowing of batteries can be fatal. Keep batteries always out of reach of small children. If a battery is swallowed, seek immediate medical attention. Keep the packaging films out of reach of children, there is a risk of suffocation.

For optimal performance use this TV set at an altitude of less than 2000 meters above the sea level, in dry locations and in regions with moderate or tropical climates.

To avoid danger of suffocation, keep plastic bags out of the reach of the babies, children and domestic animals. Carefully attach the stand to the TV. If the stand is provided with screws, tighten the screws firmly to prevent the TV from falling. Do not over-tighten the screws and mount the stand rubbers properly.

Please read the following recommended safety precautions carefully for your safety.

SOME DO'S AND DON'TS ON THE SAFE USE OF EQUIPMENT

This equipment has been designed and manufactured to meet international safety standards but, like any electrical equipment, care must be taken if you are to obtain the best results and safety is to be assured.

DO read the operating instructions before you attempt to use the equipment.

DO ensure that all electrical connections (including the main plug, extension leads and interconnections between the equipment) are properly made, and in accordance with the manufacturer's instructions. Switch off and withdraw the mains plug before making or changing connections.

DO consult your dealer if you are ever in doubt about the installation, operation or safety of your equipment.

DO be careful with glass panels or doors on equipment.

DO route the mains lead so that it is not likely to be walked on, crushed, chafed, or subjected to excessive wear and tear or heat.

DON'T remove any fixed cover as this may expose dangerous voltages.

DON'T obstruct the ventilation openings of the equipment with items such as newspapers, tablecloths, curtains, etc. Overheating will cause damage and shorten the life of the equipment.

DON'T allow electrical equipment to be exposed to dripping or splashing, or objects filled with liquids, such as vases, to be placed around the equipment.

DON'T place hot objects or naked flame sources such as lit candles or nightlights on, or close to, equipment. High temperatures can melt plastic and lead to fires.

DON'T use makeshift stands and NEVER fix legs with wood screws - to ensure complete safety always fit the manufacturer's approved stand or legs with the fixings provided according to the instructions.

DON'T listen to headphones at high volume, as such use can permanently damage your hearing.

DON'T leave equipment switched on when it is unattended unless it is specifically stated that it is designed for unattended operation or has a stand-by mode. Switch off after the switch, on the equipment and make sure that your family know how to do this. Special arrangements may need to be made for infants or handicapped people.

DON'T continue to operate the equipment if you are in any doubt about it working normally, or if it is damaged in any way - switch off, withdraw the mains plug and consult your dealer.

ABOVE ALL

--- NEVER let anyone especially children push anything into holes, slots or any other opening

English

For any help concerning set up and use of your TV, please call the Customer Helpline: 0345 604 0105

about the installation of an extension lead, please consult a competent electrician.

Moisture and Water

Do not use this TV in a humid or damp place (avoid bathrooms or kitchens where condensation or moisture can damage the equipment and near the washing machine).

- Do not expose this TV to rain or water.
- Do not place objects filled with liquids, such as flower vases, directly above the TV. Avoid from dripping or splashing.
- If any solid object or liquid falls into the cabinet, unplug the TV and have it checked by qualified personnel before operating it any further.

Ventilation

- The slots and openings on the TV set are provided for ventilation and to ensure reliable operation.
- To prevent overheating, these openings must not be blocked or covered in any way.

Heat sources and Flames

- Do not expose the TV to direct sunlight or other heat sources.
- The TV should not be placed near to open flames and sources of intense heat such as an electric heater.

Ensure that no open flame sources, such as lit candles, are placed on top of the TV.

Headphone Volume

- Excessive sound pressure from ear-phones and headphones can cause hearing loss, please take care.

Wall Mounting (optional)

- To prevent injury, this TV must be securely attached to the wall in accordance with the installation instructions (if the option is available).

LCD Screen

- Occasionally, a few non-active pixels may appear on the screen as a fixed blue, green or red point. Please note that this does not affect the performance of your product.
- Take care not to scratch the screen with fingernails or other hard objects.

Cleaning

- Before cleaning, unplug the TV from the wall socket.
- Do not use liquid or aerosol cleaners. Only use a soft, dry cloth.

Batteries

WARNING: Incorrect installation of batteries may cause battery leakage and corrosion, resulting in damage to the remote control.

- Do not mix old and new batteries, or batteries of different types.

- Do not dispose of batteries in a fire.
- Do not dispose of batteries with normal household waste, take to a local recycling centre.

CAUTION: Insert the batteries / rechargeable batteries in the correct polarity. Don't try to recharge non-rechargeable batteries and under no circumstances throw them into fire, water or explosion. Do not use them simultaneously. If you will not use the device for a long time, remove the batteries and store the device in a dry and dust free place. Improper use of batteries may cause an explosion or leakage. If the batteries have leaked, use gloves and clean the appliance thoroughly with a dry cloth! Batteries should not be exposed to heat, such as sunshine, fire or the like.

Replacement Parts

When replacement parts are required, make sure that the service technician has used replacement parts, which are specified by the manufacturer or have the same specifications as the original one. Unauthorised substitutions may result in fire, electrical shock or other hazards.

Taking out of service and storing

Unplug the TV from the mains and pack the TV in an appropriate cardboard box. Remove the batteries from the remote control and pack the remote control with the TV set.

NOTE: The TV set should be stored in a dry and dust-free room.

Connection to a Television Distribution System (Cable TV etc.) from Tuner

Device connected to the protective earthing of the building installation through the mains connection or through other apparatus with a connection to protective earthing - and to a television distribution system using coaxial cable, may in some circumstances create a fire hazard.

Connection to a cable distribution system has therefore to be provided through a device providing electrical isolation below a certain frequency range (galvanic isolator, see EN 60728-11).

CAUTION

Do not put your fingers in the middle between the TV and stand, especially when you carry the TV, as they may be injured.

WARNING

Do not ingest the battery. Chemical Burn Hazard
This product or the accessories supplied with the product may contain a contribution cell battery. If the contribution cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.
Keep new and used batteries away from children.
If the battery compartment does not close securely, stop using the product and keep it away from children.

If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

WARNING

Television may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- ALWAYS use cabinets or stands or mounting methods recommended by the manufacturer of the television set.
- ALWAYS use furniture that can safely support the television set.
- ALWAYS ensure the television set is not overhanging the edge of the supporting furniture.
- ALWAYS educate children about the dangers of climbing on furniture to reach the television set or its controls.
- ALWAYS route cords and cables connected to your television so they cannot be tripped over, pulled or grabbed.
- NEVER place a television set in an unstable location.
- NEVER place the television set on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support.
- NEVER place the television set on cloth or other soft surfaces that may slip between the television set and supporting furniture.
- NEVER place items that might tempt children to climb, such as toys and remote controls, on top of the television or furniture on which the television is placed.

If the existing television set is going to be retained and relocated, the same considerations as above should be applied.

WALL MOUNTING WARNINGS

- Read the instructions before mounting your TV on the wall.
- The wall mounting kit is optional. You can obtain from your local dealer, if not supplied with your TV.
- Do not install the TV on a ceiling or on an inclined wall.
- Use the specified wall mounting screws and other accessories.
- Tighten the wall mounting screws firmly to prevent the TV from falling. Do not over-tighten the screws.

WARNING

Apparatus connected to the protective earthing of the building installation through the MAINS connection or through other apparatus with a connection to protective earthing – and to a television distribution system using coaxial cable, may in some circumstances create a fire hazard. Connection to a television distribution system has therefore to be provided through a device providing electrical isolation below a certain frequency range (galvanic isolator, see EN 60728-11)

Symbols in this Instruction Book

The following symbols are used in the Instruction Book as a marker for restrictions and precautions and safety instructions. Note such information for security reasons.

▲ WARNING

If you do not pay attention to such a marked warning, it can cause serious injury or death. Note these warnings strictly, in order to ensure a safe operation.

▲ CAUTION

Such a precaution is marked, you should take up or note, to avoid injury or property damage. Note these instructions strictly, in order to ensure a safe operation.

● IMPORTANT

Warnings on the appliance and restrictions are displayed like this. Read this information strictly in order to operate the system correctly and avoid damage.

NOTE

Information about the operation and additional explanations are marked like this. To be aware of such information is recommended to ensure that the functions can be used optimally.

Markings on the Product

The following symbols are used on the product as a marker for restrictions and precautions and safety instructions. Each explanation shall be considered where the product bears related marking. Note such information for security reasons.

Class II Equipment

designed in such a way that it does not require a safety connection to electrical earth.

Hazardous Live Terminal

The marked terminal(s) is/are hazardous live under normal operating conditions.

Caution, See Operating Instructions

The marked area(s) contain(s) user replaceable coin or button cell batteries.

Class 1 Laser Product

This product contains a Class 1 laser source that is safe under reasonably foreseeable conditions of operation.

License Notification

The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.

Disposal Information

This product is protected by certain intellectual property rights of Microsoft Corporation. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft or an authorized Microsoft subsidiary.

European Union

These symbols indicate that the electrical and electronic equipment and the battery with this symbol should not be disposed of as general household waste at its end-of-life. Instead, the products should be handed over to the applicable collection points for the recycling of electrical and electronic equipment as well as batteries for proper treatment, recovery and recycling in accordance with your legislation and the Directive 2012/19/EU and 2013/56/EU.

By disposing of these products correctly, you will help to conserve natural resources and will help to prevent potential negative effects on the environment and human health which could otherwise be caused by inappropriate waste handling of these products.

For more information about collection points and recycling of these products, please contact your local municipal office, your household waste disposal service or the shop where you purchased the product. Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

For DTS patents, see http://patents.dts.com. Manufactured under license from DTS Licensing Limited. DTS, DTS-HD, the Symbol, & DTS or DTS-HD and the Symbol together are registered trademarks of DTS, Inc. © DTS, Inc. All Rights Reserved.

This product contains technology subject to certain intellectual property rights of Microsoft. Use or distribution of this technology outside of this product is prohibited without the appropriate license(s) from Microsoft.

Content owners use Microsoft PlayReady™ content access technology to protect their intellectual property, including copyrighted content. This device uses PlayReady technology to access PlayReady-protected content and/or WDRM-protected content. If the device fails to properly enforce restrictions on content usage, content owners may require Microsoft to revoke the device's ability to consume PlayReady-protected content. Revocation should not affect unprotected content or content protected by other content access technologies. Content owners may require you to upgrade PlayReady to access their content. If you decline an upgrade, you will not be able to access content that requires the upgrade.

The "CI Plus" Logo is a trademark of CI Plus LLP.

This product is protected by certain intellectual property rights of Microsoft Corporation. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft or an authorized Microsoft subsidiary.

Disposal Information

These symbols indicate that the electrical and electronic equipment and the battery with this symbol should not be disposed of as general household waste at its end-of-life. Instead, the products should be handed over to the applicable collection points for the recycling of electrical and electronic equipment as well as batteries for proper treatment, recovery and recycling in accordance with your legislation and the Directive 2012/19/EU and 2013/56/EU.

By disposing of these products correctly, you will help to conserve natural resources and will help to prevent potential negative effects on the environment and human health which could otherwise be caused by inappropriate waste handling of these products.

For more information about collection points and recycling of these products, please contact your local municipal office, your household waste disposal service or the shop where you purchased the product. Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

For DTS patents, see http://patents.dts.com. Manufactured under license from DTS Licensing Limited. DTS, DTS-HD, the Symbol, & DTS or DTS-HD and the Symbol together are registered trademarks of DTS, Inc. © DTS, Inc. All Rights Reserved.

This product contains technology subject to certain intellectual property rights of Microsoft. Use or distribution of this technology outside of this product is prohibited without the appropriate license(s) from Microsoft.

Content owners use Microsoft PlayReady™ content access technology to protect their intellectual property, including copyrighted content. This device uses PlayReady technology to access PlayReady-protected content and/or WDRM-protected content. If the device fails to properly enforce restrictions on content usage, content owners may require Microsoft to revoke the device's ability to consume PlayReady-protected content. Revocation should not affect unprotected content or content protected by other content access technologies. Content owners may require you to upgrade PlayReady to access their content. If you decline an upgrade, you will not be able to access content that requires the upgrade.

The "CI Plus" Logo is a trademark of CI Plus LLP.

This product is protected by certain intellectual property rights of Microsoft Corporation. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft or an authorized Microsoft subsidiary.

Disposal Information

These symbols indicate that the electrical and electronic equipment and the battery with this symbol should not be disposed of as general household waste at its end-of-life. Instead, the products should be handed over to the applicable collection points for the recycling of electrical and electronic equipment as well as batteries for proper treatment, recovery and recycling in accordance with your legislation and the Directive 2012/19/EU and 2013/56/EU.

By disposing of these products correctly, you will help to conserve natural resources and will help to prevent potential negative effects on the environment and human health which could otherwise be caused by inappropriate waste handling of these products.

For more information about collection points and recycling of these products, please contact your local municipal office, your household waste disposal service or the shop where you purchased the product. Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

For DTS patents, see http://patents.dts.com. Manufactured under license from DTS Licensing Limited. DTS, DTS-HD, the Symbol, & DTS or DTS-HD and the Symbol together are registered trademarks of DTS, Inc. © DTS, Inc. All Rights Reserved.

This product contains technology subject to certain intellectual property rights of Microsoft. Use or distribution of this technology outside of this product is prohibited without the appropriate license(s) from Microsoft.

Content owners use Microsoft PlayReady™ content access technology to protect their intellectual property, including copyrighted content. This device uses PlayReady technology to access PlayReady-protected content and/or WDRM-protected content. If the device fails to properly enforce restrictions on content usage, content owners may require Microsoft to revoke the device's ability to consume PlayReady-protected content. Revocation should not affect unprotected content or content protected by other content access technologies. Content owners may require you to upgrade PlayReady to access their content. If you decline an upgrade, you will not be able to access content that requires the upgrade.

The "CI Plus" Logo is a trademark of CI Plus LLP.

This product is protected by certain intellectual property rights of Microsoft Corporation. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft or an authorized Microsoft subsidiary.

Disposal Information

These symbols indicate that the electrical and electronic equipment and the battery with this symbol should not be disposed of as general household waste at its end-of-life. Instead, the products should be handed over to the applicable collection points for the recycling of electrical and electronic equipment as well as batteries for proper treatment, recovery and recycling in accordance with your legislation and the Directive 2012/19/EU and 2013/56/EU.

Business users

If you wish to dispose of this product, please contact your supplier and check the terms and conditions of the purchase contract.

 
Other countries outside the European Union

These symbols are only valid in the European Union. Contact your local authority to learn about disposal and recycling.

The product and packaging should be taken to your local collection point for recycling.

Some collection points accept products free of charge.

Note: The sign Pb below the symbol for batteries indicates that this battery contains lead.



1. Products

2. Battery


Wireless LAN Transmitter Specifications		
Frequency Ranges	Max Output Power	
2400 - 2483.5 MHz (CH1-CH13)	< 100 mW	
5150 - 5250 MHz (CH36 - CH48)	< 200 mW	
5250 - 5350 MHz (CH52 - CH64)	< 200 mW	
5470 - 5725 MHz (CH100 - CH140)	< 200 mW	

Country Restrictions

This device is intended for home and office use in all EU countries (and other countries following the relevant EU directive) without any limitation except for the countries mentioned below.

Country	Restriction
Bulgaria	General authorization required for outdoor use and public service
Italy	If used outside of own premises, general authorization is required
Greece	Indoor use only for 5470 MHz to 5725 MHz band
Luxembourg	General authorization required for network and service supply (not for spectrum)
Norway	Radio transmission is prohibited for the geographical area within a radius of 20 km from the centre of Ny-Alesund
Russian Federation	Indoor use only
Israel	5 GHz band only for 5180 MHz-5320 MHz range

 Remote Control

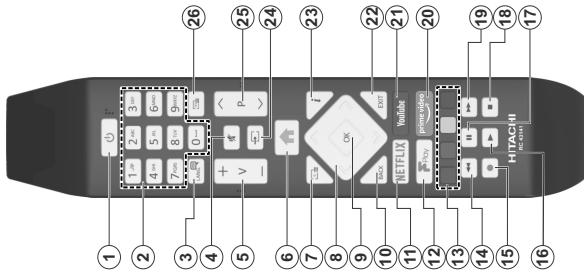

- Standby:** Switches On/Off the TV
- Numeric buttons:** Switches the channel, enters a number or a letter in the text box on the screen.
- Language:** Displays and changes audio/subtitle language and turns subtitles on or off (digital TV, where available)
- Mute:** Completely turns off the volume of the TV
- Volume +/-:**
- Menu:** Displays TV menu
- Guide:** Displays the electronic programme guide
- Directional buttons:** Helps navigate menus, content etc. and displays the subpages in TXT mode when pressed Right or Left
- OK:** Confirms user selections, holds the page (in TXT mode), views **Channels** menu (DTV mode)
- Back/Return:** Returns to previous screen, previous menu, opens index page (in TXT mode), Quickly cycles between previous and current channels or sources
- Netflix:** Launches the Netflix application
- Freeview Play:** Connects to the Freeview Play platform where you can access available catch-up TV services
- Coloured buttons:** Follow the on-screen instructions for coloured button functions
- Rewind:** Moves frames backwards in media such as movies
- No function**
- Play:** Starts to play selected media
- Pause:** Pauses the media being played
- Stop:** Stops the media being played
- Fast Forward:** Moves frames forward in media such as movies
- Prime Video:** Launches the Amazon Prime Video application
- YouTube:** Launches the YouTube application
- Exit:** Closes and exits from displayed menus or returns to previous screen
- Info:** Displays information about on-screen content, shows hidden information (reveal - in TXT mode)
- Source:** Shows available broadcast and content sources
- Programme +/-:**
- Text:** Displays teletext (where available), press again to superimpose the teletext over a normal broadcast picture (mix), turns MHEG services on and off (where available)

Technical experts are available 7 days a week

- Simple help and advice on setting up your digital equipment (image).
- Guidance on connecting other devices to your television such as a DVD player, Sky, home cinema system or a games console.
- Order spare parts, including remote controls.
- Any other technical issues you may need assistance with.

Call us today: 0 345 604 0105

Local call rates applies*

Lines open 8am - 7pm Monday to Saturday and 10am - 4pm Sunday

*Calls to Argos enquiry lines may attract a charge and set up fee from residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see www.bt.com/pricing for details.

For Security and training purposes, telephone calls to and from customer service centres may be recorded and monitored. Calls from Republic of Ireland will attract international call charges.

For online detailed guides and further assistance please use the link below
<https://www.argos-support.co.uk>



Product Guarantee

This product is guaranteed against manufacturing defects for a period of



 
This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will either be replaced, refunded or repaired free of charge where possible during this period by the dealer from whom you purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in this manual.
- It must be used solely for domestic purpose.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- The manufacturer disclaims any liability for the incidental or consequential damages.
- The guarantee is in addition to, and does not diminish your statutory or legal rights.
- In the event of a problem with the product with in the guarantee period call the **Customer Helpline: 0345 604 0105**

Guarantor: Argos Ltd
 489 - 499 Avenbury Boulevard
 Central Milton Keynes
 MK9 2NW

For online detailed guides and further assistance please use the link below
<https://www.argos-support.co.uk>

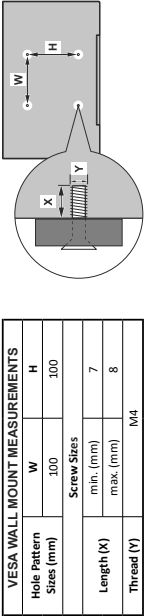

VESA WALL MOUNT MEASUREMENTS			
Hole Pattern Sizes (mm)	W		H
	100		100
Screw Sizes			
Length (X)	min. (mm)		7
	max. (mm)		8
Thread (Y)		M4	


Herbby, HITACHI Europe Ltd, declares that the radio equipment type TV is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: <https://es.tadoc.hitachi.eu/statdoc/index.htm>
Hitachi Europe Ltd, Whitebrook Park, Lower Cookham Road, Maidenhead, Berkshire, SL6 8YA, UK

Specification

TV Broadcasting	PAL BG/IDK SECAM BGDK
Receiving Channels	VHF (BAND I/III) - UHF (BAND U) - HYPERBAND
Digital Reception	Fully integrated digital terrestrial-cable TV (DVB-T-C) (DVB-T2 compliant)
Number of Preset Channels	1 000
Channel Indicator	On Screen Display
RF Aerial Input	75 Ohm (unbalanced)
Operating Voltage	220-240V AC, 50Hz.
Audio	DTS TruSurround DTS-HD
Audio Output Power (W RMS.) (10% THD)	2 x 10
Power Consumption (W)	120
Networked Standby Power Consumption (W)	< 2
TV Dimensions D x L x H (with stand) (mm)	208 x 973 x 610
TV Dimensions D x L x H (without stand) (mm)	5682 x 973 x 567
Display	43"
Operation temperature and operation humidity	0°C up to 40°C, 85% humidity max

Product Fiche	
Commercial Brand/HITACHI	
Product No.	10128569
Model No.	43HG6100U A
Energy efficiency class	
Visible screen size (diagonal approx.) (inch/cm)	43 inches 108 cm
On mode average power consumption (Watt)	54,0
Annual energy consumption (kWh/annum) (*)	78
Standby power consumption (Watt)	0,50
Off mode power consumption (Watt)	N/A
Display resolution (pe)	3840x2160

 Energy Label

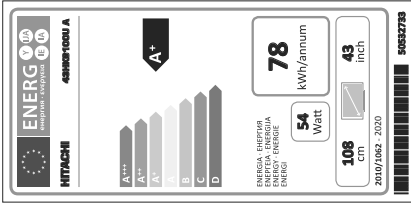

Standby Power Consumption (approx.)	0,5
Screen Resolution	3840 x 2160

HITACHI

Inspire the Next

Manufacturer & importer
Hitachi Europe Ltd.,
Whitebrook Park,
Lower Cookham Road,
Maidenhead,
Berkshire SL6 8YA
U.K.



50532734