

zinc

THREE WHEELED LIGHT UP SCOOTER - STROBE




WARRANTY


SO THAT YOUR WARRANTY IS
VALID PLEASE REGISTER AT
WWW.ZINCSPORTS.COM
WITHIN 30 DAYS OF
RECEIVING THE PRODUCT.

3+

HANDLEBAR STEM ASSEMBLY BY ADULT

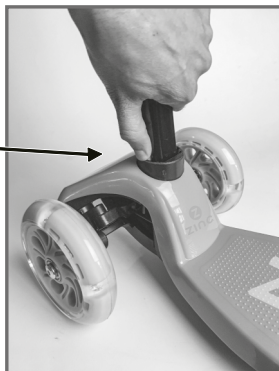

Press the red plastic
button for disassembly

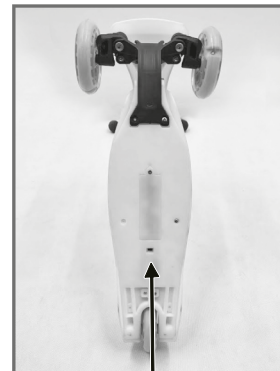

There is an on/off switch
underneath the scooter.
When switched on the deck
will light up.

TO USE

1. Grip the handlebars with your hands, place one foot on the deck and the other foot on the ground.
2. Pay attention to your surroundings and make sure that your riding area is clear.
3. Kick backwards with your foot beside the scooter to give you motion.
4. Repeat this kicking action in order to stay in motion.
5. To stop or slow down, place your kicking foot on the brake pedal above the rear wheel or put your kicking foot on the ground.
6. Do not over-steer as this could cause you to fall off the scooter.

BATTERY INSTALLATION

1. Use a screwdriver to loosen the screw and open the battery cover.
2. Insert 4 new AA/LR6 batteries with correct polarity (+ and -).
3. Replace the battery cover and tighten the screw to secure.

IMPORTANT SAFETY INFORMATION

1. The product is recommended for users of 3 years and up.
2. After checking that all parts are in good condition, remember to check that all the screws and wheels are tightly in place before using the scooter. (Hex keys are supplied to tighten these if necessary)
3. Remember to wear a helmet, knee pads, wrist pads, elbow pads, protective clothing and proper shoes.
4. The maximum weight that this product can hold is 50kg.
5. The scooter must only be used by one rider at a time.
6. Do not use this product for jumping, stunts or tricks. The scooter is not designed for such use.
7. This product is not a road vehicle and should be used for leisure purposes only.
8. Do not use this product at night, in poor weather (rain, snow or poor visibility) or around heavily populated areas (pavements, streets, muddy areas, rocky surfaces and slippery surfaces). We recommend that you use this product in a park or other open space.
9. Check the limitation of use according to the regulations of road safety. Stay away from roads and highways, cars and pedestrians and respect other pavement users.
10. The brake will get hot from continuous use. Do not touch after braking.
11. Do not take this scooter on the road or on public highways.

WARNING!

The scooter is not designed to be dropped when not in use. If the scooter is dropped after use, over a period of time you will damage the plastic handle grip, and the metal tubing. If you damage this part of the scooter, it is strongly advised that you replace the damaged parts as soon as possible to avoid any accident caused by making contact with these parts.

The scooter should not be used on any other surface other than on flat even ground. It is not designed for graveled roads, on grass surfaces or any other uneven surfaces as this could cause not only damage to scooter but also the rider.

Warning: Protective equipment should be worn. Not to be used in traffic. 50kg max. The scooter shall be used with caution, since it requires great skill, so as to avoid falls or collisions causing injury to the user and the third parties.

Adult supervision is recommended

CAUTION! PLEASE REGULARLY CHECK THAT ALL FIXINGS INCLUDING WHEELS ARE TIGHTENED DURING USE

- ! Never ride the scooter without tightening the scooter.
- Check all clamping devices for tightness and foot brake prior to riding.
- This product is not to be connected to more than the recommended number of batteries.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the toy before being charged.
- Different types of batteries or new and used batteries are not to be mixed.
- Batteries are to be inserted with the correct polarity (+ and -).
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.

MAINTENANCE

1. After use, please wipe the product with mild detergent.
2. Do not leave this product in high temperature, intense sunlight or dusty areas. Store in a dry place.
3. Please rotate the bearings and wheels to check if they are rolling smoothly.
4. Always make sure all screws and nuts are securely tightened before every use.
5. No modification other than to the manufacturer's instructions shall be made.
6. Self-locking nuts and other self-locking fixings can lose their effectiveness over time.

WARRANTY

ZINC SPORTS BATTERY OPERATED SCOOTER WARRANTY POLICY

Thank you for purchasing a Zinc Scooter and we hope that you enjoy using it. Please ensure that you read the following warranty.

In order for your warranty to be valid you must satisfy the following conditions:

- All products must be registered at www.zincsports.com within 30 days of receiving the product for the warranty to be valid.
- Proof of purchase is also required for your warranty to be valid.
- You must be the original purchaser who bought the product from an authorised dealer, your warranty cannot be transferred.
- You must report any defects to Zinc Sports within 30 days of discovery of said defect else the warranty will not be valid.

Failure to follow the conditions highlighted above means that your warranty will be void. We recommend that you save your original sales receipt.

The warranty lasts **1 year** from the date of purchase.

The warranty covers any manufacturing defects in materials or workmanship when used under normal use conditions and in compliance with the stipulations in the instruction manual and warranty guidelines.

The warranty does not cover wear, and tear or parts deemed to be wearing parts such as but not limited to bearings, brakes, wheels, grip tape or folding mechanisms. The warranty does not cover cosmetic parts, or parts deemed as cosmetic parts such as but not limited to paint, stickers and labels. The warranty does not cover loss of parts. Spare parts may be available for purchase from Zinc Sports if you are not covered by the warranty.

Under no circumstance will Zinc Sports be obliged to provide compensation for bodily injuries, death, property damages, losses, hindrance of profits, prevention of use or any other damage that will be caused directly or indirectly as a result of usage of this device. Zinc Sports advise that you contact your insurance company to determine whether coverage is provided for the use of this scooter, or to take out a new policy.

For the full warranty policy please visit our website at zincsports.com

Product code: **ZC07943 AQUA BLUE/ ZC07946 BLUSH PINK THREE WHEELED LIGHT UP STROBE SCOOTER**

CUSTOMER HELPLINE

Hy-Pro advise you to contact us directly and not to return this item to the place of purchase. Hy-Pro has taken great care to ensure this item has reached you in good condition, should you have a query please ring our helpline +44 (0)800 731 0006 where your call will be dealt with promptly. Alternatively, please contact us on email: customerservices@zinchq.com

- PLEASE RETAIN THIS PACKAGING FOR FUTURE REFERENCE
- COLOUR & CONTENTS MAY VARY FROM THOSE SHOWN ON PACKAGING

HY-PRO®
LUS 5BN, UK

Hy-Pro House, Centrus Park, Arenson Way,
Dunstable, Bedfordshire LU5 5BN. UK



www.hy-pro.co.uk www.zincsports.com

HY-PRO EUROPE, Cube Building
Monahan Road, Cork
T12H1XY, Republic of Ireland

Hy-Pro Asia
Room 1011, 10/F, Peninsula Centre,
67 Mody Road, Kowloon, Hong Kong

Need Help? Visit our website for replacement parts and product support WWW.ZINCSPORTS.COM
Contact us at customerservices@zinchq.com OR CALL OUR CUSTOMER SERVICE LINE ON +44(0) 800 731 0006