

INSTRUCTION MANUAL

HITACHI
Inspire the Next

58" Colour TV

58HK6200U

951/7453



DVBT2

SAORVIEW

HDMI
HIGH-DEFINITION MULTIMEDIA INTERFACE

4K
ULTRAHD

FreeviewPlay

dts
VIRTUAL

dts-HD

Important - Please read these instructions fully before installing or operating and keep for future reference.

These instructions contain important information which will help you get the best from your television and ensure safe and correct installation and operation.

For any help concerning set up and use of your TV please call the Customer Helpline: 0345 604 0105

Lines open 8am-7pm Monday to Saturday and 10am - 4pm Sunday

 
QUICK GUIDE

IMPORTANT - If placing TV into cabinet or alcove, ensure there is at least a 100 mm (10 cm) gap to the sides, rear and top of the TV. This is to allow for adequate ventilation during operation. Please read the main Users Guide for more safety information before installation.


1 Insert the batteries into your handset



2a either connect the aerial straight to your TV...

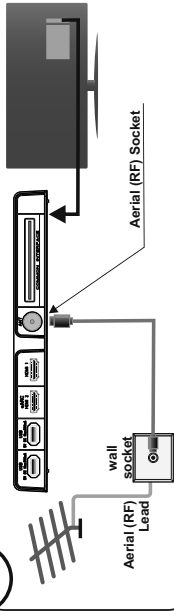

 2b ...or connect the aerial through a VCR...

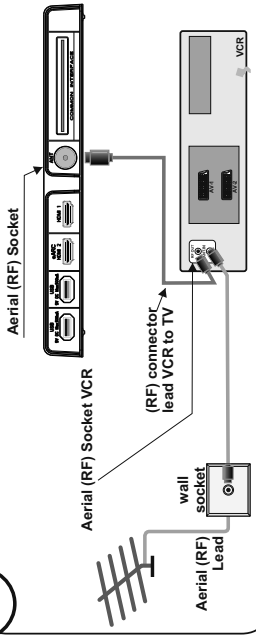


The leads can be purchased from your Hitachi dealer or any good High Street electrical retailer.

English - 41-

For any help concerning set up and use of your TV please call the Customer Helpline: 0345 604 0105

 
2c ...or through a HDMI product (DVD-RW)

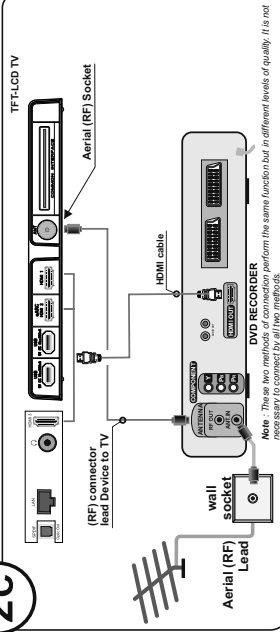

• High Definition

Your LCD Television is capable of displaying High Definition pictures from devices such as a High Definition Satellite Receiver or DVD Device. These devices must be connected via the HDMI socket.

 
2d ...or through a VCR and satellite decoder.

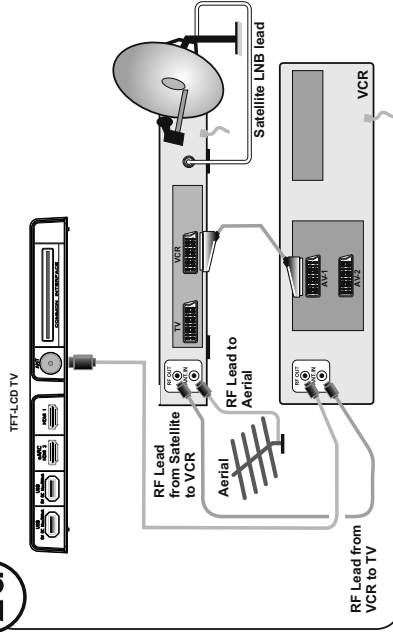


English - 42-

For any help concerning set up and use of your TV please call the Customer Helpline: 0345 604 0105

 3 connect the TV plug to the mains socket

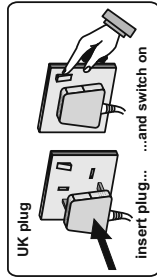

 4 Press the control button, the TV will turn on.



Your TV has a single control button. This button allows you to control the Standby-On / Source / Programme and Volume functions of the TV.

Note: The position of the control button may differ depending on the model.

Operating with the Control Button

Press the control button to display the function options menu.
Then press the button consecutively to move the focus to the desired option if needed.
Press and hold the button for about 2 seconds to activate the selected option. The icon colour of the option changes when activated.
Press the button once again to use the function or enter the sub menu.
To select another function option, you will need to deactivate the last activated option first. Press and hold the button to deactivate it. The icon colour of the option changes when deactivated.
To close the function options menu do not press the button for a period of about 5 seconds. The function options menu will disappear.

English -3-

For any help concerning set up and use of your TV please call the Customer Helpline: 0345 604 0105

5 First Time Installation

When turned on for the first time, the language selection screen is displayed. Select the desired language and press **OK**.
After the language selection, you will be asked whether you want to change accessibility settings. Highlight **Yes** and press **OK** to change.

On the next screen set your country preference. Then press **OK** to continue.
Select **Home Mode** for home use. You can activate **Store Mode** option at this point if necessary, however, this option is only intended for store use.

Depending on the model of your TV and the country selection **Privacy Settings** menu may appear at this point. Using this menu you can set your privacy privileges. Highlight a feature and use **Left** and **Right** directional buttons to enable or disable. If the **Internet Connection** option is disabled **Network/Internet Settings** screen will be skipped and not displayed.

Highlight **Next** and press **OK** button on the remote control to continue and the **Network/Internet Settings** menu will be displayed.

Refer to **Connect your TV to the internet** section to configure a wired or a wireless connection. After the settings are completed highlight **Next** and press **OK** button to continue.

On the next screen you need to agree to the terms and conditions of Freeview Play to make use of the related services. Highlight **Yes** and press **OK** on the remote to confirm and proceed. Highlight **No** and press **OK** to proceed without confirmation.

On the next screen set your preferences as follows:

Scan Encrypted Channels On

Select favourite network type D.Aerial

- D.Aerial
- D.Cable
- An analogue

When finished, highlight **Next** and press **OK** to start channel scan.
While the search continues a message may appear, asking whether you want to sort channels according to the LCN(*). Select **Yes** and press **OK** to confirm.

(* LCN is the Logical Channel Number system that organizes available broadcasts in accordance with a recognizable channel number sequence (if available).

After the channel scan has been completed the **Choose Region** menu may appear. Select the appropriate settings for your location using the directional buttons then press **OK**.

After all the available stations are stored, **Channels** menu will be displayed. You can edit the channel list according to your preferences using the **Edit** tab options or press the **Home** button to quit and watch TV.

Note: Do not turn off the TV while initialising first time installation. Note that, some options may not be available depending on the country selection.

Important note

Once the TV has found all your local stations, they are then automatically assigned a programme number and name, if available from the broadcast.

English -4-

For any help concerning set up and use of your TV please call the Customer Helpline: 0345 604 0105

6 Connect your TV to the internet

Connectivity feature allows you to connect your TV to the home network wired or wirelessly. You can use this networking system to connect to internet or to access photo, video and audio files that are stored on a Media server connected to the network and play/display them on the TV. Add your TV to your home network by connecting it to the modem/router via an LAN cable (not supplied) as illustrated.

To use your TV with your wireless network, you won't need any additional wireless adaptors as your TV supports internal Wi-Fi feature.

 
Press the **Home** button to open the main TV menu. Select **Settings** by using the directional buttons and press **OK** to enter. Highlight **Network** and press **OK**. While **Network** type is highlighted, press **Left** or **Right** buttons to select connection type. Wired connection will be established automatically, if wireless connection is selected, highlight **Scan Wireless Networks** option and press **OK** to start a search for available wireless networks. Available networks will be listed when finished. Select one and press the **OK** button to connect. If the wireless network is password protected you should enter the correct code to access the network. If your modem/router has WPS feature, you can directly connect to your wireless network without entering a password. To do this, highlight the **Press WPS on your wifi router** option and press **OK**. Go to your modem/router and press the WPS button on it to make the connection.

Wireless Connection



Broadband ISP connection

Wired Connection

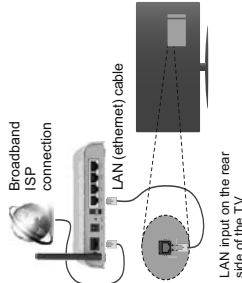

LAN input on the rear side of the TV

 
Accessories Included

- Remote Control
- Batteries: 2 x AAA
- Quick Start Guide

Depends on model

- Side AV Connection Cable
- YPbPr Connection Cable
- WLAN USB Dongle and USB Extension Cable
- Wall Mount Kit

Important safety precautions

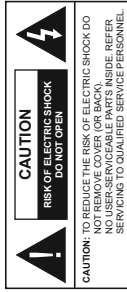

Don't operate your TV in extreme ambient conditions as this may cause damage to your TV.

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of unshielded "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock or electrical injury.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Never follow the on screen instructions for operating the related features.

IMPORTANT - Please read these instructions fully before installing or operating

Preparation

Place the TV on a solid even surface. For ventilation, leave a free space of at least 10 cm all around the TV. To prevent any fault and unsafe situations, do not place any objects on top of the TV. Use this TV in moderate climates.

Operation temperature and operation humidity: 0°C up to 40° C, 85% rel. humidity max. (not blocking ventilation openings).

Intended Use

This TV is used to receive and display TV programmes. The different connection options make an additional expansion of the reception and display sources possible (various external devices). This TV is only intended for private domestic use and may not be used solely for private domestic use and may not be used for industrial and commercial purposes. We exclude liability in principle, if the TV is not used as intended, or unauthorised modifications have been made. To operate your TV in extreme ambient conditions may cause damage to your TV.

This TV is not intended for use by persons (including children) without specific safety or technical knowledge or lack of knowledge and experience, unless they have been given supervision or instructions concerning use of the TV by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the TV.

Children may not recognise dangers. The swallowing of batteries can be fatal. Keep batteries always out of reach of small children. If a battery is swallowed, seek immediate medical attention. Keep the packaging films out of reach of children. There is a risk of suffocation.

Use this TV at an altitude of less than 5000 metres above the sea level, in dry locations and in regions with moderate or tropical climates.

To avoid danger of suffocation, keep plastic bags out of the reach of the babies, children and domestic animals. Carefully attach the stand to the TV. If the stand is provided with a lighter, the sockets must be tightly closed. The TV from Philips does not over-heat the screws and mount the stand rubbers properly.

SOME DO'S AND DON'TS ON THE SAFE USE OF TV
Please read the following recommended safety precautions carefully for your safety.

This TV has been designed and manufactured to meet international safety standards but, like any electrical equipment, care must be taken if you are to obtain the best results and safety is to be assured.

DO read the operating instructions before you attempt to use the TV.

 
Power source

The TV should be operated only from a 220-240 V AC, 50 Hz outlet.

WARNING: Do not leave your TV in standby or operating mode when you leave your house.

Positioning the TV

For ventilation, please leave a clear space of at least 10 cm all around the TV.

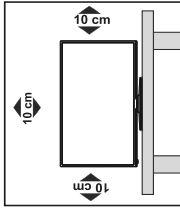

• Do not block the ventilation openings.
• Do not place the TV on sloping or unstable surfaces, the TV may tip over.

• To prevent damage to the TV, do not place any objects on top of the TV.

Power cord and plug

• Do not place the TV, a piece of furniture, etc. on the power cord (main lead) or pinch the cord. Handle the power cord by the plug. Do not pull the plug by holding its neck, as this could result in damage to the plug. Do not unplug the TV by pulling from the power cord and never touch the power cord with wet hands as this could cause a short circuit or electric shock. Never make a knot in the cord or tie it with other cords. The power cords should be placed in such a way that they are not likely to be stepped on. A damaged power cord can cause fire or give you an electric shock. When it is damaged and needs to be replaced, it should be done by a qualified personnel.

• This TV receiver is supplied with a moulded mains plug. The mains plug must not be cut off, as it may contain a special radio interference filter, the removal of which could lead to impaired performance. If you wish to extend the lead, obtain an appropriate safety approved extension lead or consult your dealer.
• Observe the manufacturers' instructions when connecting extension leads to the TV. Check the fuse rating on the new plug; this should be fitted with a 5 AMP fuse which conforms to either ASTA or BSI (BS1362) approvals, these are easily identifiable by either the  or  symbols. If you are in any doubt about the installation of an extension lead, please consult a competent electrician.

DO ensure that all electrical connections (including the main extension leads and interconnections between the TV and other appliances) are made in accordance with the manufacturer's instructions. Switch off and withdraw the mains plug before making or changing connections.

DO consult your dealer if you are ever in doubt about the installation, operation or safety of your TV.

DO be careful with glass panels or doors on TV.

DO route the power cord so that it is not likely to be walked on, crushed, chafed, or subjected to excessive wear and tear or heat.

DON'T remove any fixed cover as this may expose dangerous voltages.

DON'T obstruct the ventilation openings of the TV with items such as newspapers, tablecloths, curtains, etc. Overheating will cause damage and shorten the life of the TV.

DON'T allow electrical equipment to be exposed to dripping or splashing, or objects filled with liquids, such as vases, to be placed on the TV.

DON'T place hot objects or naked flame sources such as lit candles or nightlights on, or close to TV. High temperatures can melt plastic and lead to fires.

DON'T use makeshift stands and NEVER fix legs with wood screws - to ensure complete safety always fit the manufacturer's approved stand or legs with the fixings provided according to the instructions.

DON'T listen to headphones at high volume, as such use can permanently damage your hearing.

DON'T leave TV switched on when it is unintended unless it is specifically stated that it is designed for unattended operation. Do not leave the TV switched off using the switch on the TV, and make sure that your family know how to do this. Special arrangements may need to be made for infirm or handicapped people.

DON'T continue to operate the TV if you are in any doubt about it working normally, or if it is damaged in any way - switch off, withdraw the mains plug and consult your dealer.

ABOVE ALL

NEVER let anyone especially children push anything into holes, slots or any other opening in the TV - this could result in a fatal electrical shock.

NEVER guess or take chances with electrical equipment of any kind.

It is better to be safe than sorry!

Moisture and Water

• Do not use the TV in a humid or damp place (avoid bathrooms, the sink in the kitchen, and near the washing machine).

• Do not expose this TV to rain or water.

• Do not place objects filled with liquids, such as flower vases, on top of the TV. Avoid from dripping or splashing.

• If any solid object or liquid falls into the cabinet, unplug the TV and have it checked by qualified personnel before operating it any further.

Ventilation

• The slots and openings on the TV are intended for ventilation and to ensure reliable operation.

• To prevent overheating, these openings must not be blocked or covered in any way.

Heat sources and Flames

• Do not expose the TV to direct sunlight or other heat sources.

• The TV should not be placed near to open flames and sources of intense heat such as an electric heater.

• Ensure that no open flame sources, such as lit candles, are placed on top of the TV.

Headphone Volume

• Excessive sound pressure from earphones and headphones can cause hearing loss, please take care.

Wall Mounting (optional)

• To prevent injury, this TV must be securely attached to the wall in accordance with the installation instructions (if the option is available).

LCD screen

• Occasionally, a few non-active pixels may appear on the screen as a fixed blue, green or red point. Please note that this does not affect the performance of your TV.

• Take care not to scratch the screen with fingernails or other hard objects.

Cleaning

• Before cleaning, unplug the TV from the wall socket.
• Do not use liquid or aerosol cleaners. Only use a soft, dry cloth.

Batteries

• **WARNING:** Incorrect installation of batteries may cause battery leakage and corrosion, resulting in damage to the remote control.

• Do not mix old and new batteries, or batteries of different types.

• Do not dispose of batteries in a fire.
• Do not dispose of batteries with normal household waste, take to a local recycling centre.

CAUTION: Insert the batteries / rechargeable batteries in the correct polarity. Don't try to recharge non rechargeable batteries and under no circumstances throw them into fire. Danger of explosion. Do not use unequal batteries (old and new, Alkaline and carbon, etc.) simultaneously. If you will not use the TV for a long time, remove the batteries and store the TV in a dry and dust free place. Improper use of batteries may cause an explosion or leakage. If the batteries have leaked, use gloves and clean the remote control thoroughly with a dry cloth. Batteries should not be exposed to heat, such as sunshine, fire or the like.

Replacement Parts

When replacement parts are required, make sure that the service technician has used replacement parts, which are specified by the manufacturer or have the same specifications as the original one. Unauthorised substitutions may result in fire, electrical shock or other hazards.

Taking out of service and storing

Unplug the TV from the mains and pack the TV in an appropriate cardboard box. Remove the batteries from the remote control and pack the remote control with the TV.

NOTE: The TV set should be stored in a dry and dust-free room.

Connection to a TV Distribution System from Tuner
TV connected to the protective earthing of the building installation through the mains connection or through other apparatus with a connection to protective earthing-and to a TV distribution system using coaxial cable, may in some circumstances create a fire hazard.
Connection to a cable distribution system has therefore to be provided through a device providing electrical isolation below a certain frequency range (galvanic isolator, see BS EN IEC 60728-11).

CAUTION

Do not put your fingers in the middle between the TV and stand, especially when you carry the TV, as they may be injured.



For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS Licensing Limited, DTS, the Symbol, DTS and the Symbol together, VirtualX, and the DTS VirtualX logo are registered trademarks or trademarks of DTS, Inc. in the United States and/or other countries. © DTS, Inc. All Rights Reserved.



This product contains technology subject to certain intellectual property rights of Microsoft. Use or distribution of this technology outside of this product is prohibited without the appropriate license(s) from Microsoft.

Content owners use Microsoft PlayReady™ content access technology to protect their intellectual property, including copyrighted content. This device uses PlayReady technology to access PlayReady-protected content and/or WMDRM-protected content. If the device fails to properly enforce restrictions on content usage, content owners may require Microsoft to revoke the device's ability to consume PlayReady-protected content. Revocation should not affect unprotected content or content protected by other content access technologies. Content owners may require you to upgrade PlayReady to access their content. If you decline an upgrade, you will not be able to access content that requires the upgrade.

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Rovi Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Rovi Corporation. Reverse engineering and disassembly are prohibited.

The "Ci Plus" Logo is a trademark of Ci Plus LLP.

This product is protected by certain intellectual property rights of Microsoft Corporation. Use or distribution of this technology outside of this product is prohibited without the appropriate license(s) from Microsoft or an authorized Microsoft subsidiary.



NOTE

Information about the operation and additional explanations are marked like this. To be aware of such information is recommended to ensure that the functions can be used optimally.

Markings on the TV

The following symbols are used on the TV as a marker for restrictions and precautions and safety instructions. Each explanation shall be considered where the TV bears related marking only. Note such information for security reasons.



Class 1 Equipment: This TV is designed in such a way that it does not require a safety connection to electrical earth.



Hazardous Live Terminal: The marked terminal(s) is/are hazardous live under normal operating conditions.



Caution, See Operating Instructions: The marked area(s) contain(s) user replaceable coin or button cell batteries.



Class 1 Laser Product: This TV contains Class 1 laser source that is safe under reasonably foreseeable conditions of operation.

The illustrations and the OSD in this operation manual are for explanation purposes and may vary slightly from the actual operations. TV design and specifications may be changed without notice.

License Notification

The terms HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.



Manufactured under license from Dolby Laboratories, Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.

YouTube and the YouTube logo are trademarks of Google Inc.

For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS Licensing Limited, DTS, the Symbol, DTS and the Symbol together, DTS-HD, and the DTS-HD logo are registered trademarks or trademarks of DTS, Inc. in the United

WALL MOUNTING WARNINGS

- Read the instructions before mounting your TV on the wall.
- The wall mount kit is optional. You can obtain from your local dealer, if not supplied with your TV.
- Do not install the TV on a ceiling or on an inclined wall.
- Use the specified wall mounting screws and other accessories.
- Tighten the wall mounting screws firmly to prevent the TV from falling. Do not over-tighten the screws.

WARNING

Apparatus connected to the protective earthing of the building or through other apparatus with a connection to protective earthing – and to a TV distribution system using coaxial cable, may in some circumstances create a fire hazard. Connection to a TV distribution system has therefore to be provided through a device providing electrical isolation below a certain frequency range (galvanic isolator).

Symbols in this instruction Book

The following symbols are used in the Instruction Book as a marker for restrictions and precautions and safety instructions. Note such information for security reasons.



WARNING
If you do not pay attention to such a marked warning, it can cause serious injury or death. Note these warnings strictly, in order to ensure a safe operation.



CAUTION
Such a precaution item is marked, you should take up or note, to avoid injury or property damage. Note these instructions strictly, in order to ensure a safe operation.



IMPORTANT
Warnings on the TV and restrictions are displayed like this. Read this information strictly in order to operate the system correctly and avoid damage.

WARNING

Do not ingest the battery. Chemical Burn Hazard
This TV or the accessories supplied with the TV may contain a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children.

WARNING

A TV may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- ALWAYS use cabinets or stands or mounting methods recommended by the manufacturer of the TV.
- ALWAYS use furniture that can safely support the TV.
- ALWAYS ensure the TV is not overhanging the edge of the supporting furniture.
- ALWAYS educate children about the dangers of climbing on furniture to reach the TV or its controls.
- ALWAYS route cords and cables connected to your TV so they cannot be tripped over, pulled or grabbed.
- NEVER place a television set in an unstable location.
- NEVER place the TV on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the TV to a suitable support.
- NEVER place the TV on cloth or other materials that may be located between the TV and supporting furniture.
- NEVER place items that might tempt children to climb, such as toys and remote controls, on the top of the TV or furniture on which the TV is placed.
- The TV is only suitable for mounting at heights 52 cm.

If the existing TV is going to be retained, and relocated, the same considerations as above should be applied.

Wireless LAN Transmitter Specifications

Frequency Ranges	Max Output Power
2400 - 2483.5 MHz (CH1 - CH13)	< 100 mW
5150 - 5250 MHz (CH36 - CH48)	< 200 mW
5250 - 5350 MHz (CH52 - CH64)	< 200 mW
5470 - 5725 MHz (CH100 - CH140)	< 200 mW

Country Restrictions

This device is intended for home and office use in all EU countries (and other countries following the relevant EU directive) without any limitation except for the countries mentioned below.

Country	Restriction
Bulgaria	General authorisation required for outdoor use and public service
Italy	If used outside of own premises, general authorisation is required
Greece	In-door use only for 5470 MHz to 5725 MHz band
Luxembourg	General authorisation required for network and service supply(not for spectrum)
Norway	Radio transmission is prohibited for the distances of 20 km from the centre of Ny-Ålesund
Russian Federation	In-door use only
Israel	5 GHz band only for 5180 MHz-5320 MHz range

The requirements for any country may change at any time. It's recommended that user checks with local authorities for the current status of their national regulations for 5 GHz wireless LANs.

E-Manual

You can find instructions for your TV's features in the E-Manual.

To access the E-Manual, enter **Settings** menu, select **Manuals** and press **OK**. For quick access press **Menu** button and then **Info** button.

By using the directional buttons select a desired category. Every category includes different topics. Select a topic and press **OK** to read instructions. To close the E-Manual screen press the **Exit** or **Menu** button.

Note: Depending on model, your TV may not support this function. The contents of the E-Manual may vary according to the model.

Disposal Information

[European Union]

These symbols indicate that the electrical and electronic equipment and the battery with this symbol should not be disposed of as general household waste at its end-of-life. Instead, the products should be handed over to the applicable collection points for the recycling of electrical and electronic equipment as well as batteries for proper treatment, recovery and recycling in accordance with your national legislation and the Directive 2012/19/EU and 2013/56/EU.

By disposing of these products correctly, you will help to conserve natural resources and will help to prevent potential negative effects on the environment and human health which could otherwise be caused by inappropriate waste handling of these products.

For more information about collection points and recycling of these products, please contact your local authorities. Your household waste disposal service or the shop where you purchased the TV. Penalties may be applicable for incorrect disposal of this waste. In accordance with national legislation.

[Business users]

If you wish to dispose of this TV, please contact your supplier and check the terms and conditions of the purchase contract.

[Other Countries outside the European Union]

These symbols are only valid in the European Union. Contact your local authority to learn about disposal and recycling.

 
The TV and packaging should be taken to your local collection point for recycling.

Some collection points accept products free of charge. **Note:** The sign Pb below the symbol for batteries indicates that this battery contains lead.



1. Products
2. Battery

Remote Control

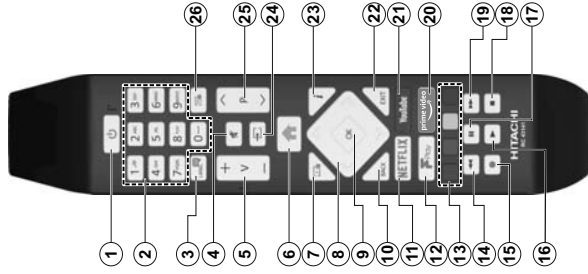

- 1. Standby:** Switches On / Off the TV
- 2. Numeric Buttons:** Switches the channel, enters a number or a letter in the text box on the screen.
- 3. Language:** Displays and changes audio/subtitle language and turns subtitles on or off (digital TV, where available)
- 4. Mute:** Completely turns off the volume of the TV
- 5. Volume +/-:** Home: Displays TV menu
- 6. Guide:** Displays the electronic programme guide
- 7. Directional buttons:** Helps navigate menus, content etc. and displays the subpages in TXT mode when pressed Right or Left
- 8. OK:** Confirms user selections, holds the page (in TXT mode)
- 9. Back/Return:** Returns to previous screen, previous menu, opens index page (in TXT mode). Quickly cycles between previous and current channels or sources
- 10. Netflix:** Launches the Netflix application
- 11. Freeview Play:** Connects to the Freeview Play platform where you can access available catch-up TV services
- 12. Coloured Buttons:** Follow the on-screen instructions for coloured button functions
- 13. Rewind:** Moves frames backwards in media such as movies
- 14. Record:** Records programmes
- 15. Play:** Starts to play selected media
- 16. Pause:** Pauses the media being played, starts timeshift recording
- 17. Stop:** Stops the media being played
- 18. Fast Forward:** Moves frames forward in media such as movies
- 19. Prime Video:** Launches the Amazon Prime Video application
- 20. YouTube:** Launches the YouTube application
- 21. Exit:** Closes and exits from displayed menus or returns to previous screen
- 22. Info:** Displays information about on-screen content, shows hidden information (reveal - in TXT mode)
- 23. Source:** Shows available broadcast and content sources
- 24. Programme +/-:** Text: Displays teletext (where available), press again to superimpose the teletext over a normal broadcast picture (mix), turns MHEG services on and off (where available)

Technical experts are available 7 days a week

- Simple help and advice on setting up your digital equipment (image).
- Guidance on connecting other devices to your television such as a DVD player, Sky, home cinema system or a games console.
- Order spare parts, including remote controls.
- Any other technical issues you may need assistance with.

Call us today: 0 345 604 0105

Local call rates applies*

Lines open 8am - 7pm Monday to Saturday and 10am - 4pm Sunday

*Calls to Argos enquiry lines may attract a charge and set up fee from residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see www.bt.com/pricing for details.

For Security and training purposes, telephone calls to and from customer service centres may be recorded and monitored. Calls from Republic of Ireland will attract international call charges.

For online detailed guides and further assistance please use the link below
<https://www.argos-support.co.uk>



Product Guarantee

This product is guaranteed against manufacturing defects for a period of



This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will either be replaced, refunded or repaired free of charge where possible during this period by the dealer from whom you purchased the unit.


The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in this manual.
- It must be used solely for domestic purpose.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- The manufacturer disclaims any liability for the incidental or consequential damages.
- The guarantee is in addition to, and does not diminish your statutory or legal rights.
- In the event of a problem with the product with in the guarantee period call the **Customer Helpline: 0345 604 0105**

Guarantor: Argos Ltd
 489 - 499 Avenbury Boulevard
 Central Milton Keynes
 MK9 2NW

For online detailed guides and further assistance please use the link below
<https://www.argos-support.co.uk>

VESA WALL MOUNT MEASUREMENTS			
Hole Pattern Sizes (mm)	W	H	
	200	200	
Screw Sizes			
Length (X)	min. (mm)		10
	max. (mm)		13
Thread (Y)	M6		

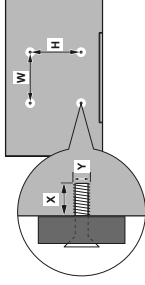 

Hereby, HITACHI Europe Ltd, declares that the radio equipment type TV is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: <https://esetadoc.hitachi.eu/esetadoc/index.htm>
Hitachi Europe Ltd, Sefton Park, Belis Hill, Stoke Poges, Buckinghamshire SL2 4HD

Specifications

TV Broadcasting	PAL B/G/IK SECAM G/OK
Receiving Channels	VHF (BAND III) - UHF (BAND U) - HYPERBAND
Digital Reception	Fully integrated digital terrestrial-cable TV (DVB-T-C) (DVB-T2 compliant)
Number of Preset Channels	1000
Channel Indicator	On Screen Display
RF Aerial Input	75 Ohm (unbalanced)
Operating Voltage	220-240V AC, 50Hz
Audio	DTS VirtualX DTS-HD
Audio Output Power (WRMS.) (10% THD)	2 x 10
Power Consumption (W)	150
Networked Standby (W)	< 2
TV Dimensions DxLxH (with stand) (mm)	240 x 1305 x 795
TV Dimensions DxLxH (without stand) (mm)	53/62 x 1305 x 760
Display	58"
Operation temperature and operation humidity	0°C up to 40°C, 85% humidity max

HITACHI

Inspire the Next

Manufacturer & importer
Hitachi Europe Ltd.,
Sefton Park, Bells Hill,
Stoke Poges,
Buckinghamshire SL2 4HD

www.hitachidigitalmedia.com

