 


American Charcoal BBQ XXL

Assembly Instructions - Please keep for future reference

954/4031

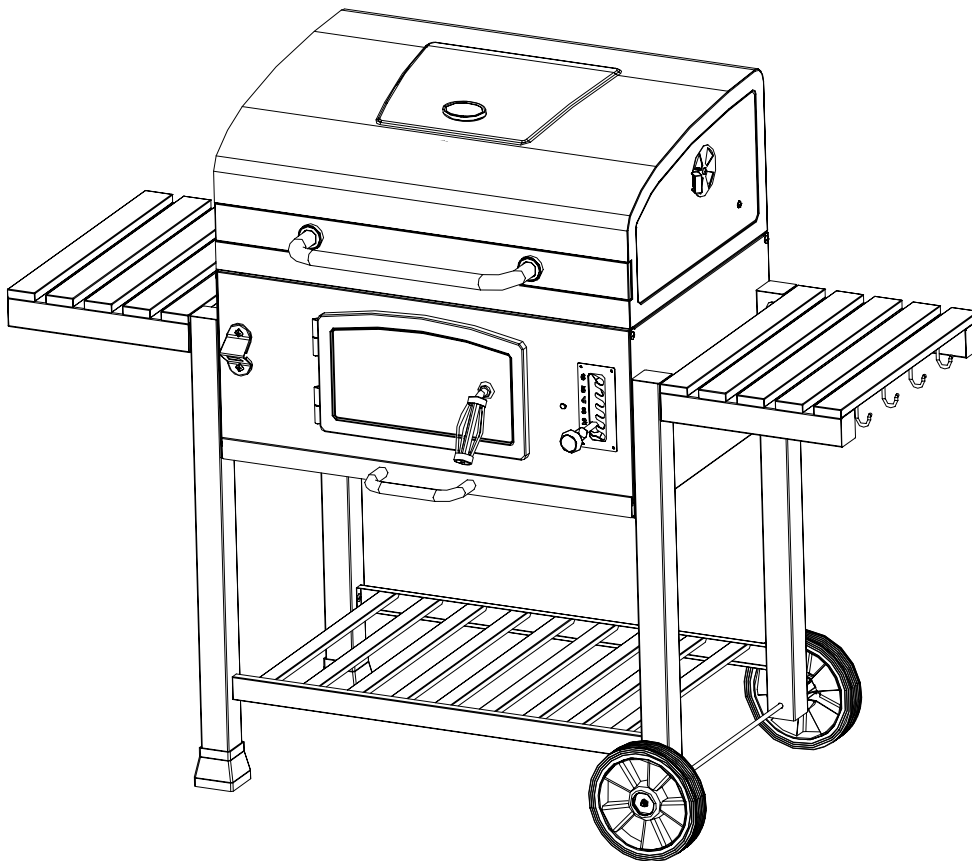

Dimensions

Width - 103cm

Depth - 68cm

Height - 114cm

Important - Please read this instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 03456 400800**.
Please visit the website www.argos.co.uk for more information.

Produced in China. Sainsbury's Supermarkets Ltd. 33 Holborn, London EC1N 2HT. Sainsbury's (NI) Ltd, Forestside Shopping Centre, Upper Galwally, Belfast, United Kingdom, BT8 6FX. Argos Limited, 489-499 Avebury Boulevard, Milton Keynes MK9 2NW. Argos (N.I.) Ltd, Forestside Shopping Centre, Upper Galwally, Belfast, United Kingdom, BT8 6FX. Argos Distributors (Ireland) Limited, Unit 7, Ashbourne Retail Park, Ballybin Road, Ashbourne, County Meath, Ireland

Safety and Care Advice

Important - Please read this instructions fully before starting assembly

Warning: Whilst every effort has been made in the manufacture of your BBQ to remove any sharp edges, care should be taken in handling to avoid any accidental injury.

- Assembly time: approx. 60 mins.
- Make sure the assembly instructions have been followed correctly.
- Set the Charcoal BBQ in a suitable position, on a level surface away from areas likely to catch fire. The base of the Charcoal BBQ will get hot so ensure it stands on a suitable surface.
- Always stand your Charcoal BBQ outdoors and on level ground away from trees and wooden fencing. Ensure there is a least 1 metre clearance around all sides of the Charcoal BBQ. Keep away from fences, over hanging branches and other combustible materials.
- Use Charcoal and a suitable lighting method.
- Do not cook before the fuel has a coating of ash.
- "WARNING! This barbecue will become very hot , do not move it during operation."
- "Do not use indoors."
- "WARNING! Do not use spirit or petrol for lighting or relighting! Use only firelighters complying to EN1860-3!"
- "WARNING! Keep children and pets away."

Method 1. Charcoal & Lighting Fluid/ Gel

- Set up your Charcoal BBQ in a safe place. Place enough charcoal in the charcoal grate to a depth of 3 - 5cm.
- Taking care not to spill any liquid/ gel onto your hands or clothes. Apply carefully the lighting fluid/ gel over the charcoal.
- If using lighting fluid, wait for 30 seconds to allow the liquid to soak into the charcoal.
- Do not light the charcoal if you have spilt fluid or gel onto your clothes. Light the charcoal using a long taper or safety lighter. The charcoal will then burn for a period with flames.
- When the flames die down, check the charcoal is beginning to glow red. If your coals are going out, you should open all the vents and allow to cool down before trying to apply more liquid.

CAUTION: Apply carefully lighting fluid/ gel in small amounts. Over application can be dangerous.

- Do NOT squirt liquid onto burning charcoal.
- After lighting, the fire should be ready for cooking in 30-40 minutes, or when even grey ash is visible by day, or an even red glow is visible by night.

Method 2. Lighting Blocks

- Place three or four Lighting Blocks in the centre of the Charcoal grate and light with a match.
- Place pieces of charcoal around each burning block. Add more charcoal as required, in a pyramid formation.
- When burning is established, spread the fuel out evenly. After lighting, the fire should be ready, or when even grey ash is visible by day, or an even red glow is visible by night.
- Make sure that the cooking grill is fully located into the grill supports so that the cross bar supports lock behind the retaining edges.
- When the charcoal is alight, the smoke and flames have died down and the charcoal has an even layer of grey ash, rake the charcoal into a level layer in the hearth.
- Small quantities of charcoal may be added on top of the charcoal layer prior to cooking to extend cooking time.
- To help prevent food sticking, apply a tin coating of cooking oil on the grill prior to cooking.
- To adjust the airflow using the air vent we recommend to use of a heat resistant glove.
- ALWAYS WEAR OVEN GLOVES WHEN HANDLING THE CHARCOAL BBQ.

Safety and Care Advice

- Recommend using Maximum 1.5kg of charcoal briquettes on the charcoal grate. Excess charcoal will make the BBQ too hot for cooking. The max loading weight of the side shelf is 4kg.
- Ensure the barbecue has cooled down completely before removing the charcoal ash.

Care and Maintenance

- To make it easier to clean your Charcoal BBQ after use, line the firebowl with aluminium cooking foil, shiny side up. Remember to leave ventilation holes clear by piercing the foil where necessary. This process will lengthen the life of your Charcoal BBQ.
- Charcoal is available in lump wood from (large irregular pieces) and as briquettes (uniformly sized pieces). Please use the charcoal complying to EN1860-2.
- It is not advisable to completely fill the firebowl as the BBQ may become far too hot to cook successfully. As a guide ,a 3kg bag of charcoal briquettes should last for at least 2 full BBQ fires.
- If the fires flares up due to dripping fat then douse the flames lightly with a fine water spray.
- When you have finished using the Charcoal BBQ, never pour cold water directly on the coals to extinguish them as this may damage your Charcoal BBQ. Use old cinder, sand or a fine water spray.
- Empty the bottom bowl of ashes when they are completely cold.
- To clean your Charcoal BBQ, soak the cooking grill and tools in hot soapy water as soon as possible after use. Dry thoroughly and store in a dry place. Do not leave your Charcoal BBQ outside unprotected.

Food Safety

 
- Thoroughly defrost frozen meat and poultry in the refrigerator before cooking. Keep raw meat and poultry separate from cooked food.
- Ensure that the grill is thoroughly cleaned before cooking and lighting the barbecue.
- Always wash hands after handling raw meat and poultry before handling any ready to eat food.
- Wipe and disinfect surfaces that have been in contact with raw meat and poultry.
- When barbecuing meat and poultry, make sure the barbecue is really hot. Place the larger, thicker portions furthest away from the most intense heat to ensure thorough cooking without burning and turn regularly.
- Use separate utensils for handling raw meat or poultry and cooked food on the barbecue, or wash them thoroughly between use.
- To check whether meat, particularly poultry, is cooked, pierce the flesh with a skewer or fork: the juices should run clear. Ensure the product is piping hot throughout.

Attention! This BBQ will become very hot do not move it during operation. Do NOT use indoors.

“Warning! Keep children and pets away!”

“Caution! Do not use spirit or petrol for lighting or re-lighting! Use only firelighters complying to EN 1860-3”

Carbon Monoxide Hazard

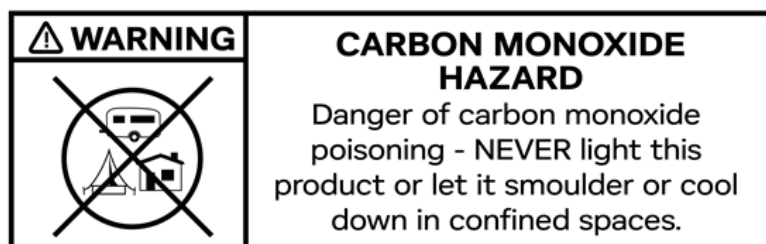


"Do not use the barbecue in a confined and/or habitable space e.g. houses, tent, caravans, motor homes, boats. Danger of carbon monoxide poisoning fatality."




Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

Components - Parts

 
Please check you have all the panels listed below

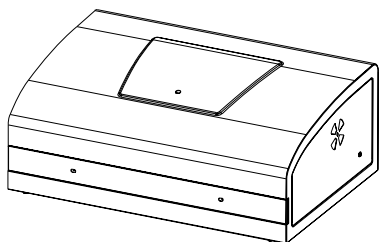


1 Lid x 1

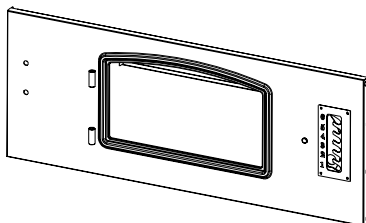 


2 Firebox front panel x 1

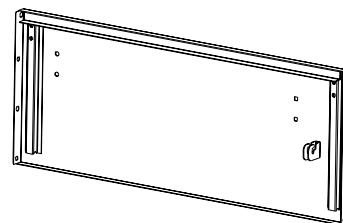 


3 Firebox back panel x 1

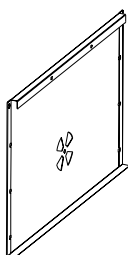 


4 Firebox side panel x 2

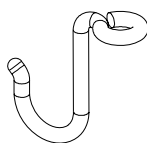 


5 Hook x 8

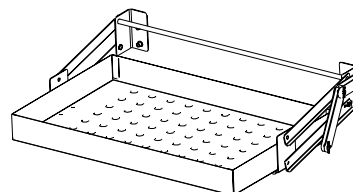 


6 Charcoal tray x 1

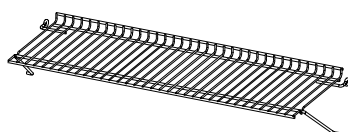 


7 Warming rack x 1

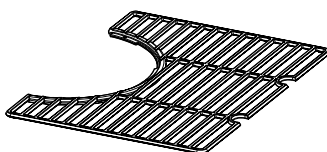 


8 Cast iron cooking grill x 2

 


9 Cast iron cooking grill x 2

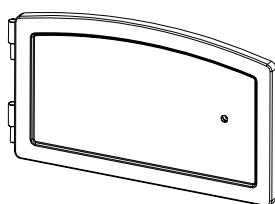 


10 Firebox front door x 1

 


11 Crank handle x 1

 


12 Crank lock x 1

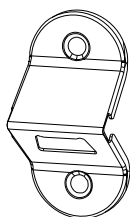 

13 Bottle opener x 1

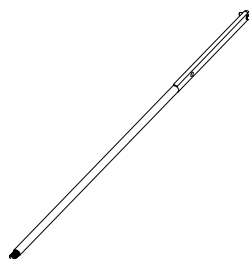 

14 Lift stick x 1

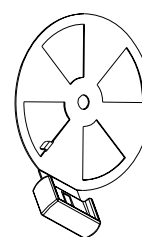 


15 Air vent x 4




Components - Parts

 
Please check you have all the panels listed below




16 Lid handle x 1

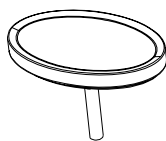 


17 Temperature gauge x 1

 


18 Lower hinge x 2

 

19 Upper hinge x 2

 


20 Ash pan X 1

 


21 Charcoal tray handle x 1



 22 Left Front leg x 1




23 Left rear leg x 1

 


24 Right front leg x 1



 
25 Right rear leg x 1

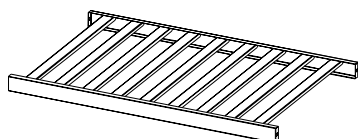


26 Bottom shelf x 1

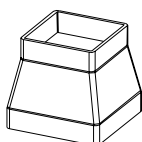 


27 Leg cap x 2

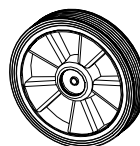 


28 Wheel x 2

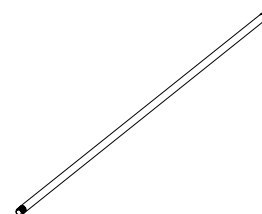 

29 Axle x 1

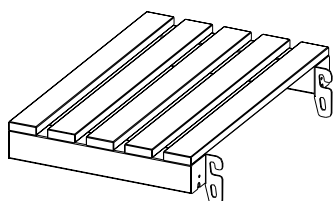 

30 Side table x 2

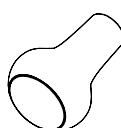 

31 Charcoal tray lift handle X 1



 
 

 
 

 
 
 


32 Crank handle washer X 1


Components - Fittings

Please check you have all the panels listed below

Note: The quantities below are the correct amount to complete the assembly.

A  35mm Bolt x 8	B  30mm Bolt x 4	C  M6 Shoulder bolt x 8
D  15mm Bolt x 42	E  Washer x 2	F  Lid pin x 2
G  Hinge pin x 1	H  R pin x 3	I  Axle sleeve x 2
J  M8 Nut x 2	K  M6 Nut x 5	

 
Tool required (Do not provided in this product)



Philips screwdriver



 Small hammer




Wrench



Ruler/ tape measure

 Ruler - Use this ruler to help correctly identify the screws




Assembly Instructions

Step 1

Fix the firebowl front panel **2** and firebowl back panel **3** with firebowl side panel **4** using 15mm bolts **D**.

 
Align the holes and fix the bolts tightly by the screwdriver.

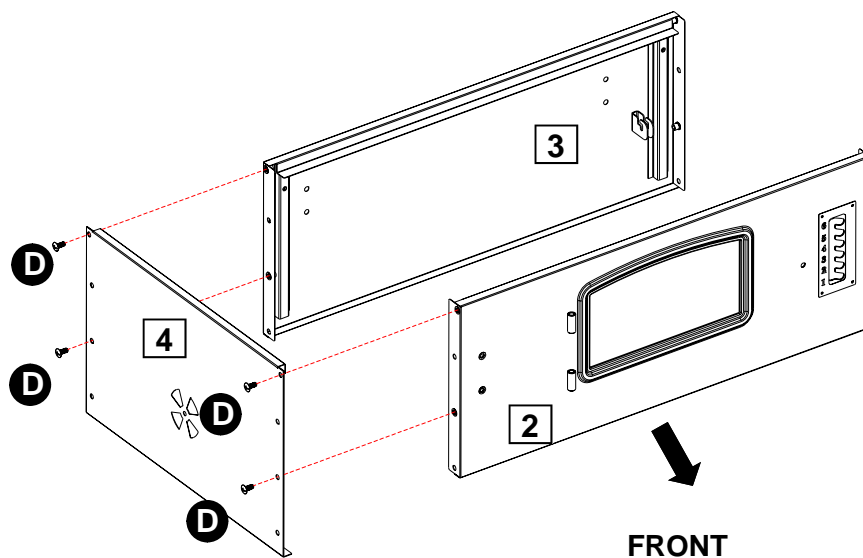

Step 2

Fix the firebowl front panel **2** and firebowl back panel **3** with the firebowl side panel **4** using 15mm bolts **D**.

 
Align the holes and fix the bolts tightly by the screwdriver.

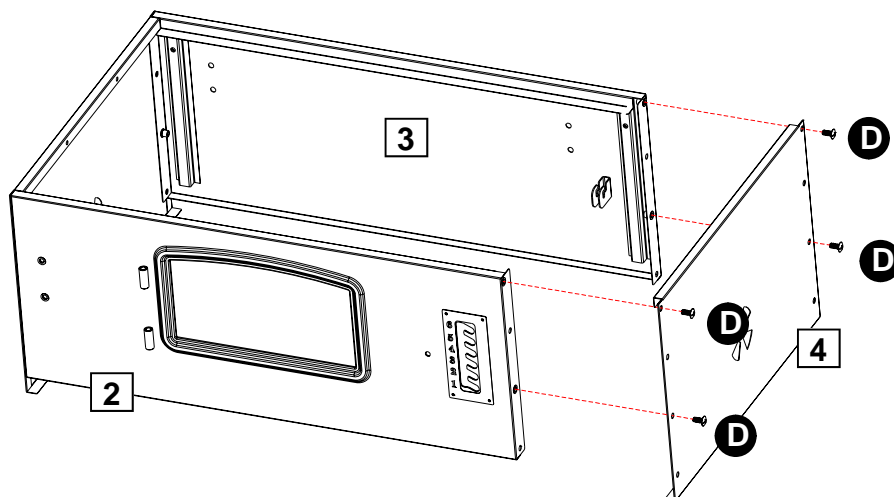

Assembly Instructions


Step 3

 Fix the left front leg **22** , left rear leg **23** , right front leg **24** and right rear leg **25** on the friebowl using 15mm bolts **D** .

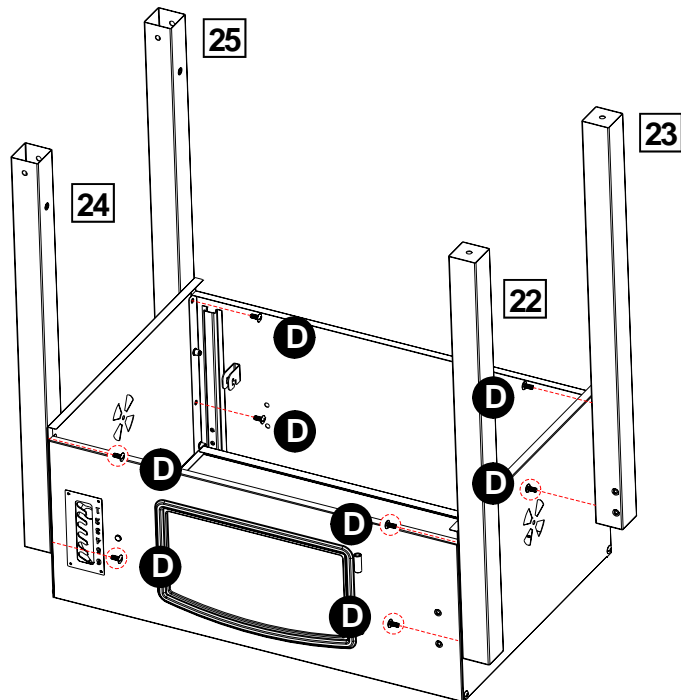

Step 4

 
Fix the bottom shelf **26** on the left front leg **22** , left rear leg **23** , right front leg **24** and right rear leg **25** using 15mm bolts **D** .

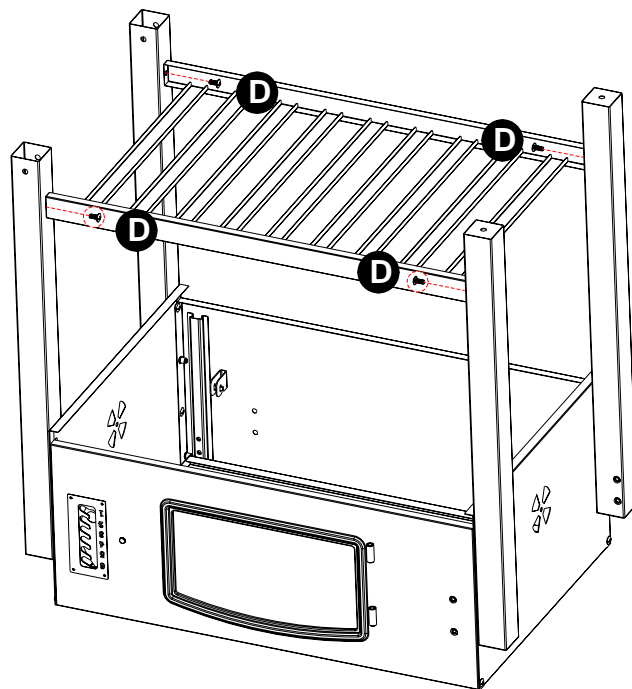

Assembly Instructions

Step 5

 Fix the left front leg **22** and left rear leg **23** with leg caps **27** using 15mm bolts **D**.

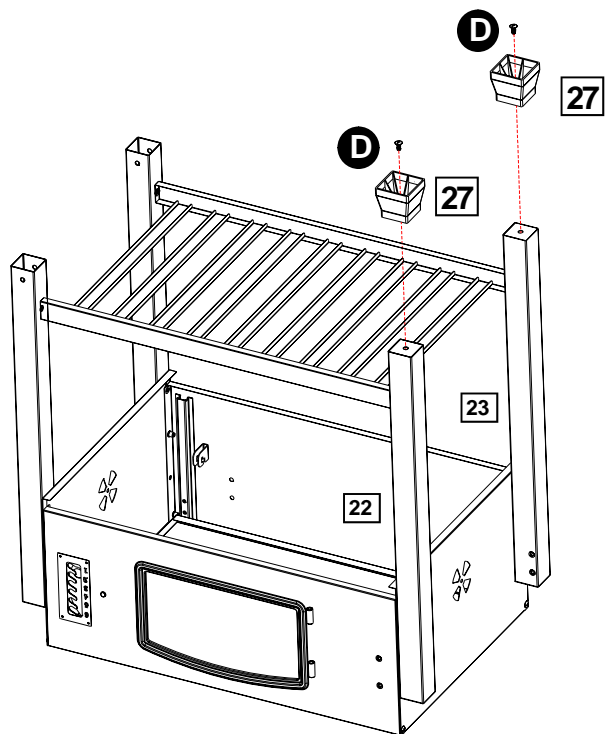


Step 6

Insert the axle **29** to the right front leg **24** and right rear leg **25**.

Then apply the axle sleeve **I**, washers **E** and the wheels **28** to the axle end.

Fix the axle by the M8 nuts **J**.

 
Fix the M8 nuts **J** by the wrench (not included in this product).

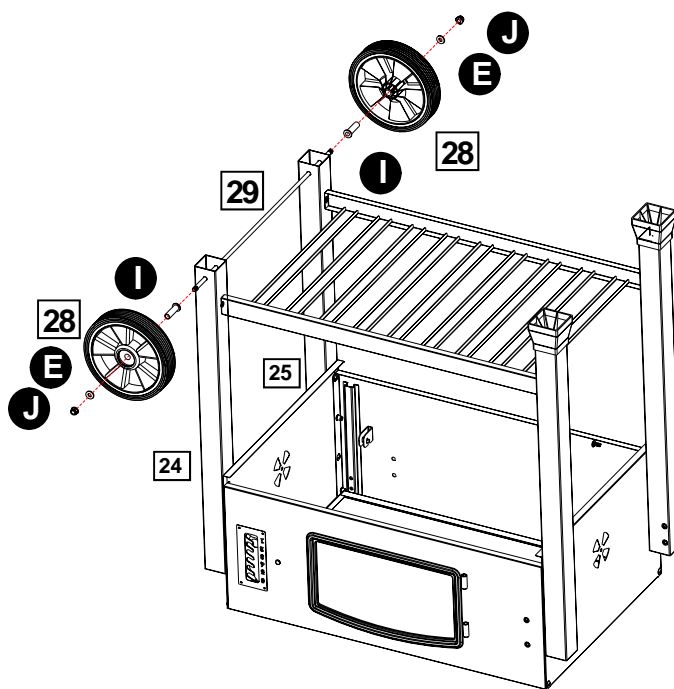

Assembly Instructions


Step 7

 Fix the air vents **15** on the firebowl side panel **4** using 15mm bolts **D** and M6 nuts **K**.

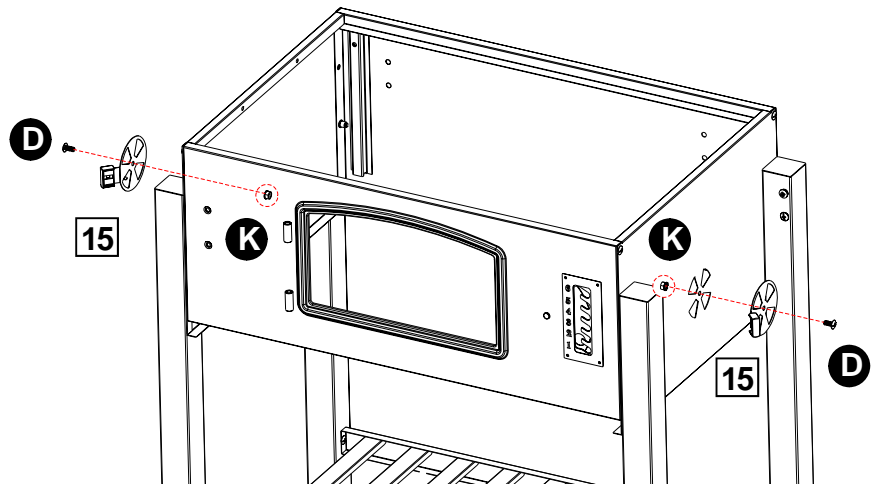

Step 8

 Fix the charcoal tray **6** and firebowl back panel **3** using 15mm bolt **D**.

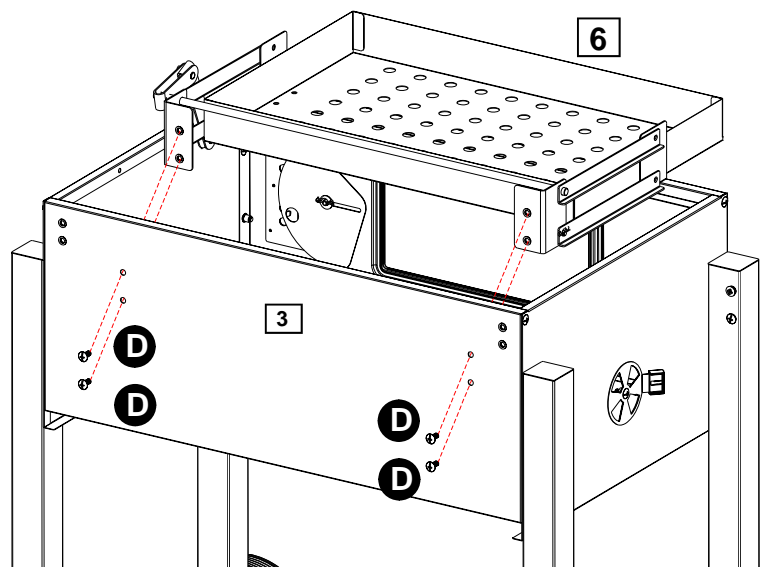

Assembly Instructions

 
Step 9

A: Put lift stick **14** pass through the hole inside of the firebowl front panel **2** ,

B: Fix the lift stick **14** and lift handle **31** ,

C: Fix the lift stick **14** using hinge pin **G** and R pin **H** .


D: Align the hole in the end of the Lift stick with the holes in the "U" shaped.

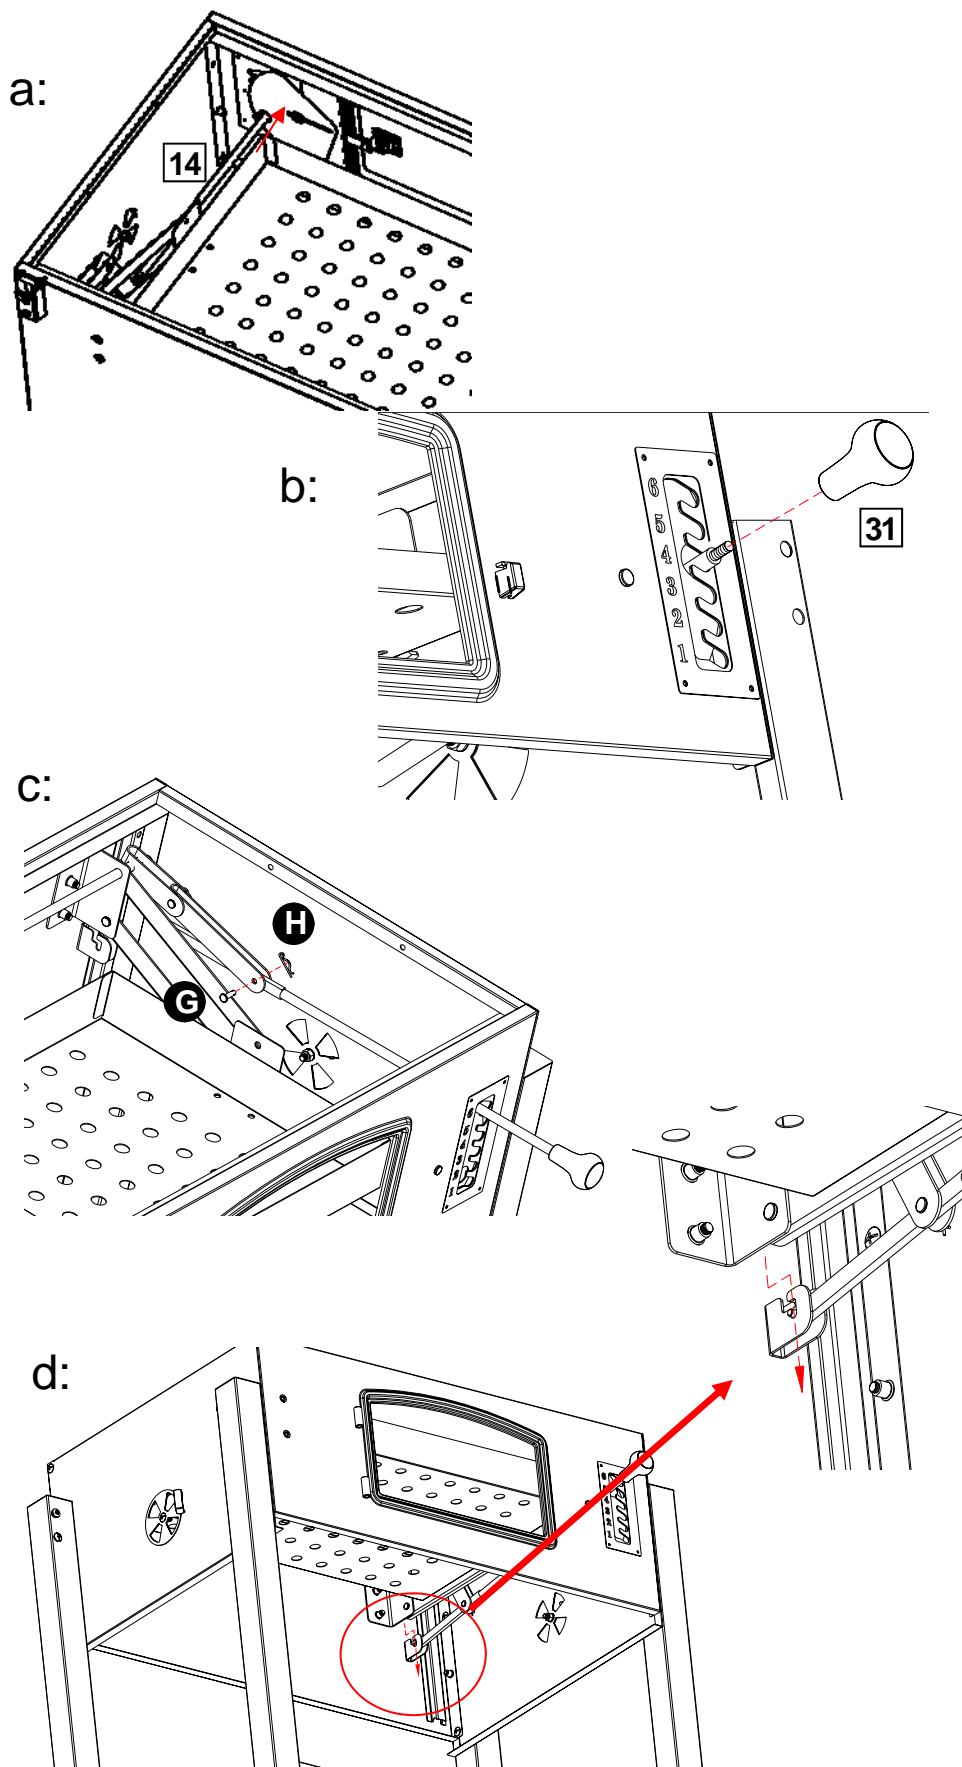

Assembly Instructions


Step 10

 Fix the bottle opener **13** on the firebowl front panel **2** using 15mm bolts **A**.

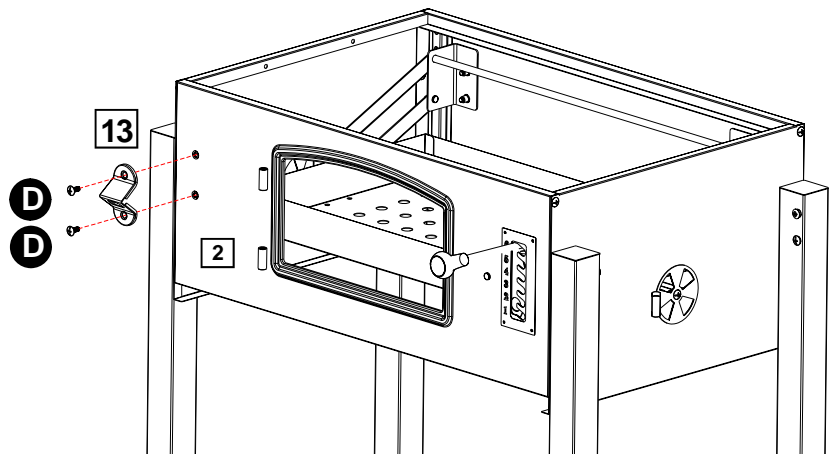

Step 11

 
Fix the lower hinges **18** with the firebowl back panel **3** using 35mm bolts **A**.

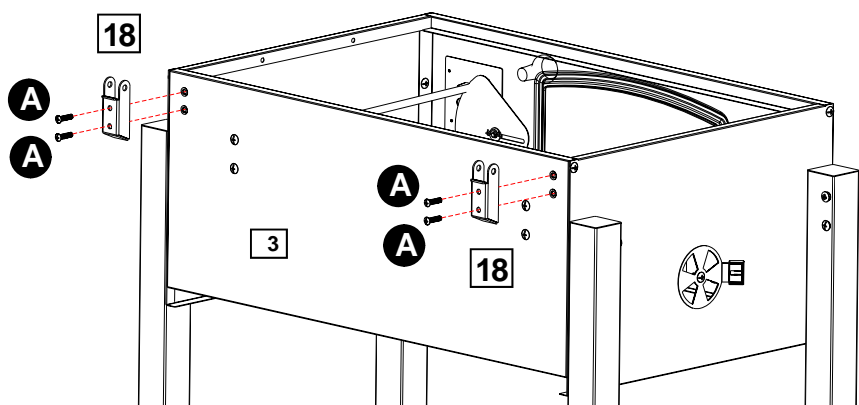

Assembly Instructions


Step 12

 Fix the crank lock **12**,
crank handle washer **32**
and crank handle **11** using
M6 nut **K**.

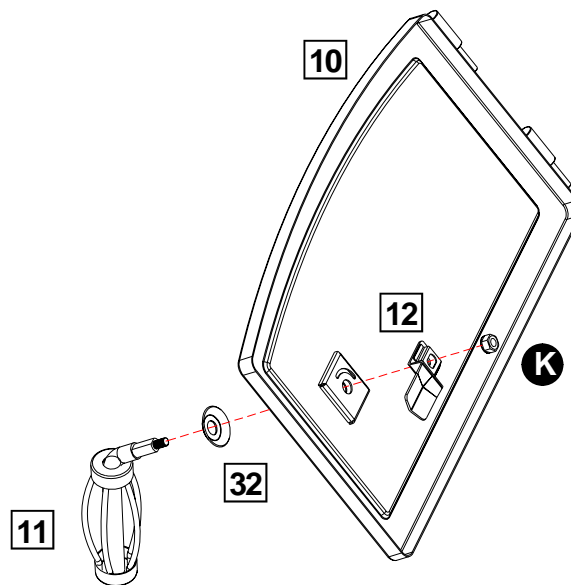

Step 13

 Fix the firebowl front door **10**
on the firebowl front panel **2**.

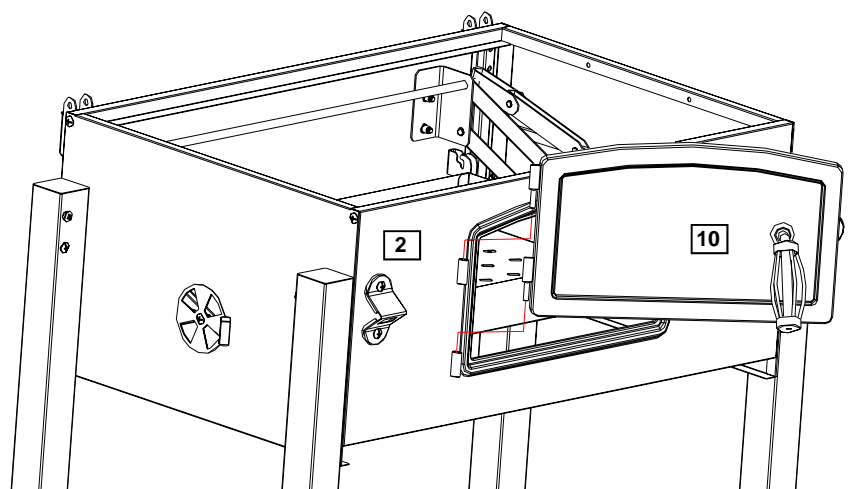


Assembly Instructions

Step 14


Fix the ash pan handle **21** on the ash pan **20** using 15mm bolts **D**.

 Put the ash pan **20** under the firebowl.

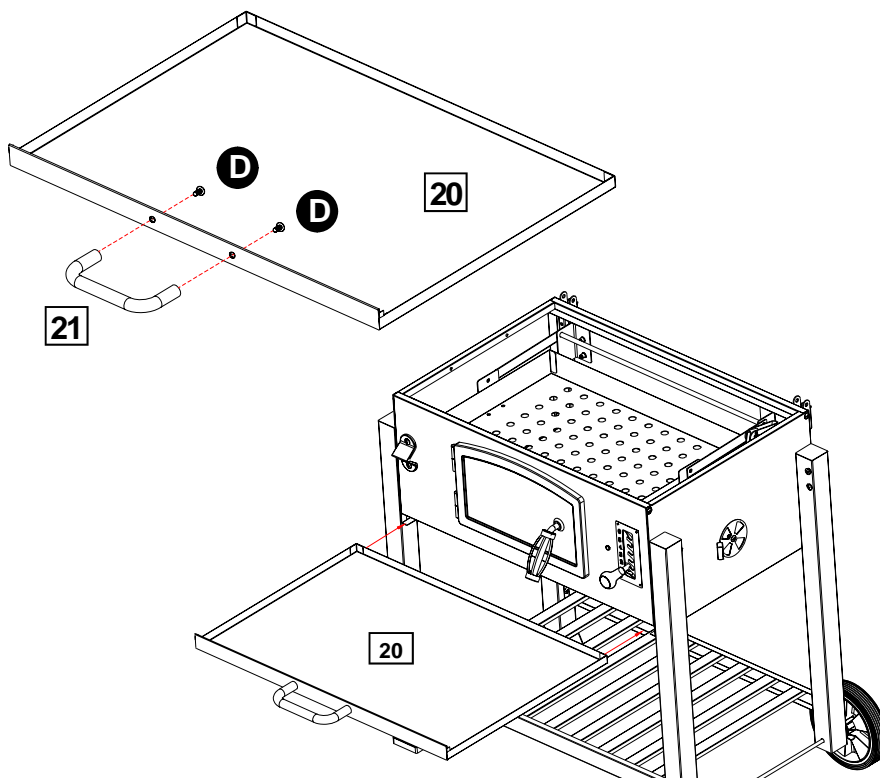

Step 15

 
Fix the hooks **5** on the side table **30** using 15mm bolts **D**.

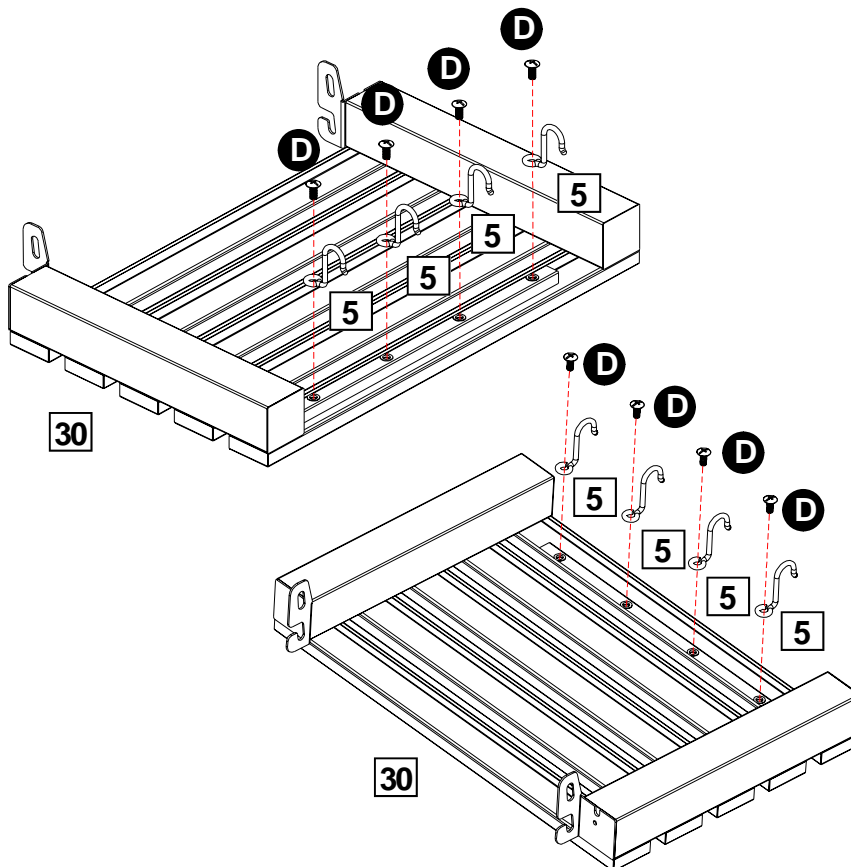


Assembly Instructions

Step 16

 Fix the side table **30** on the right front leg **24** and right rear leg **25** using 15mm shoulder bolts **C**.

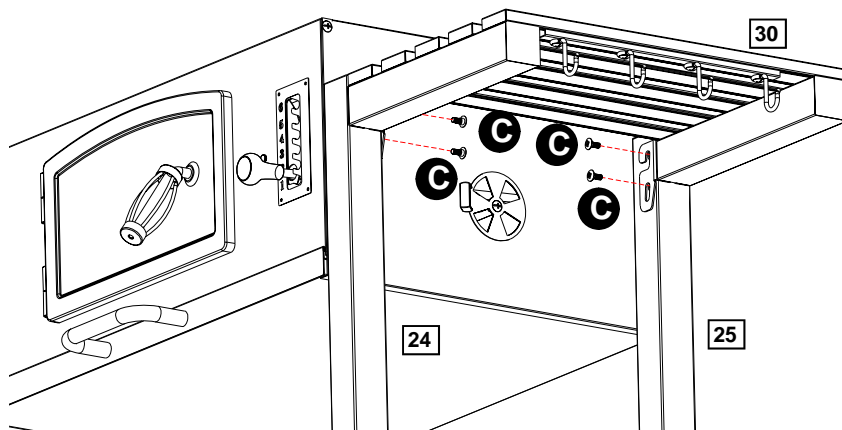


 Fix the side table **30** on the left front leg **22** and right rear leg **23** using 15mm shoulder bolts **C**.

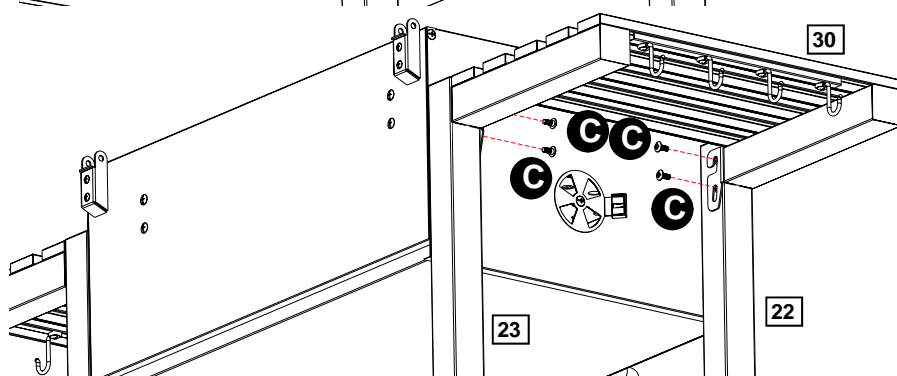

Step 17

 
Fix the temperature gauge **17** on the lid **1**.

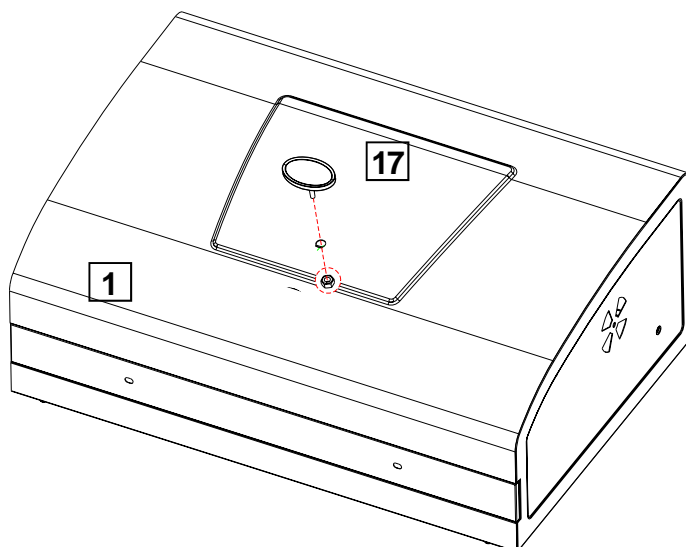

Assembly Instructions


Step 18

 Fix the handle **16** on the lid **1** using 30mm bolts **B**.

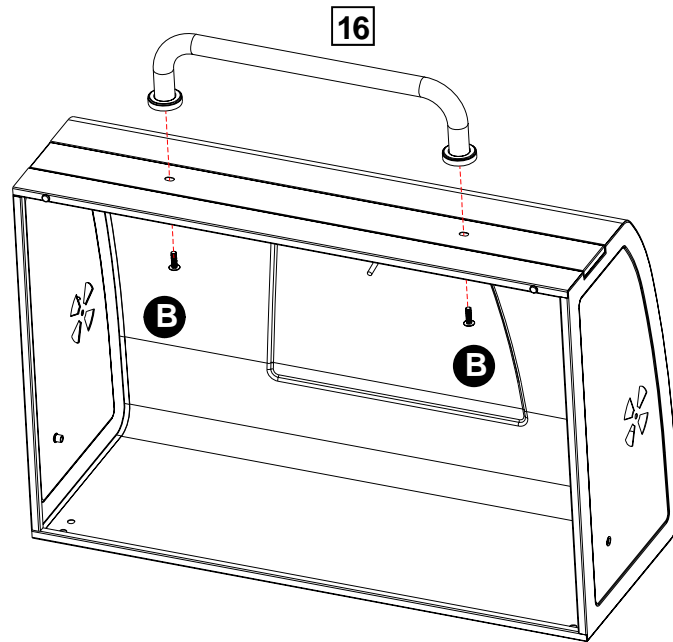

Step 19

 
Fix the air vents **15** on the lid **1** using 15mm bolts **D** and M6 nuts **K**.

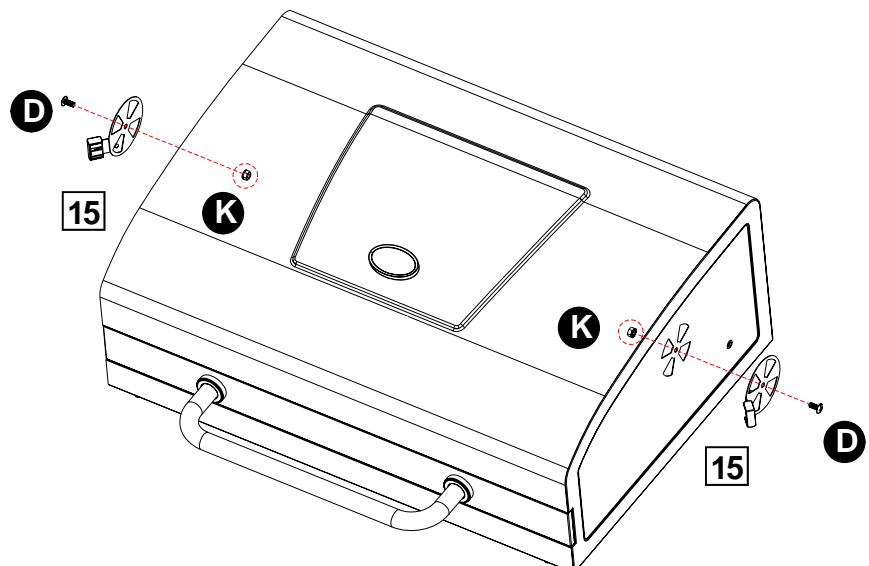

Assembly Instructions


Step 20

 Fix the upper hinges **19** on the lid **1** using 35mm bolts **A**.

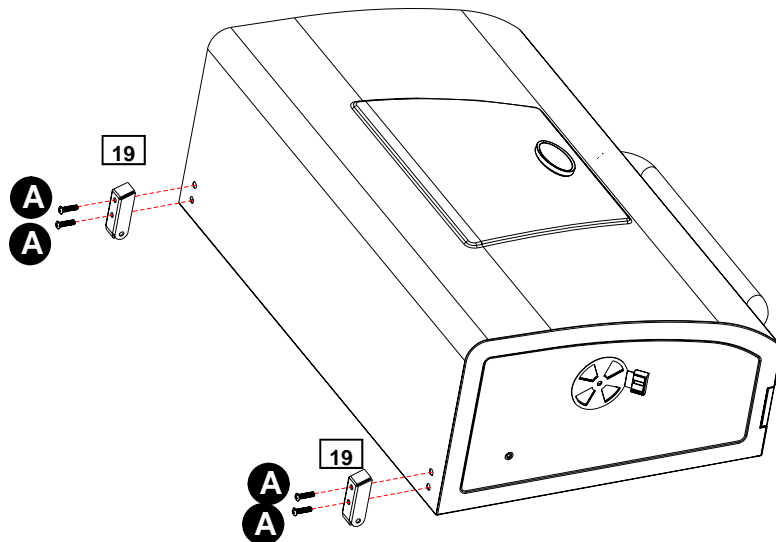

Step 21

 
Fix the upper hinges **19** and the lower hinges **18** using lid pins **F** and R pins **H**.

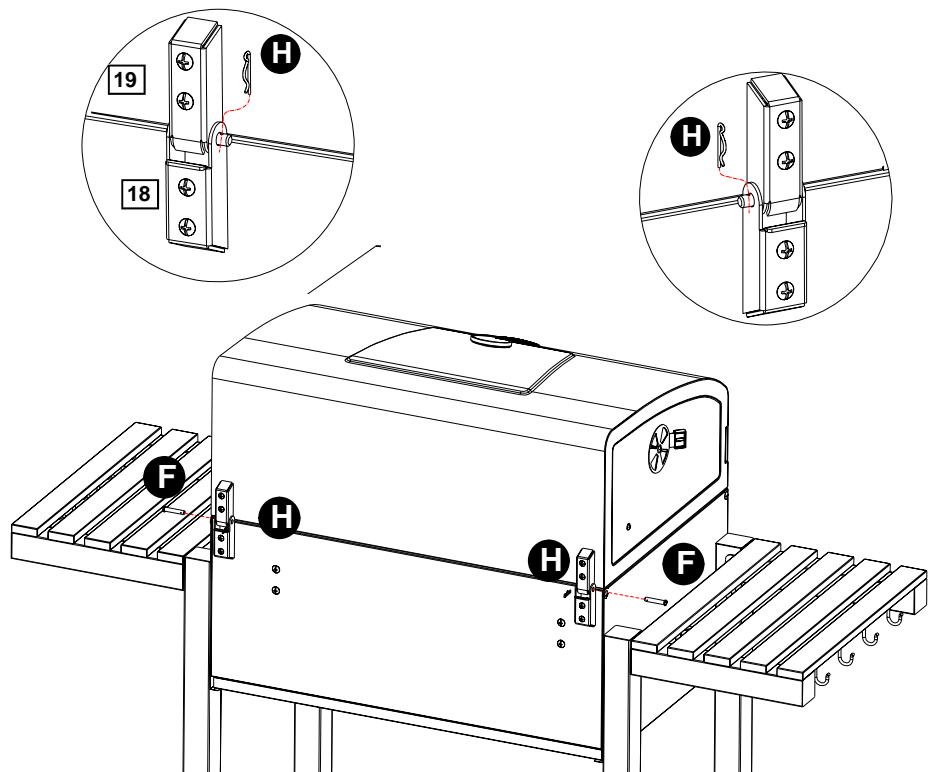

Assembly Instructions


Step 22

 Fix the warming rack **7** on the lid **1** using 30mm bolts **B**.

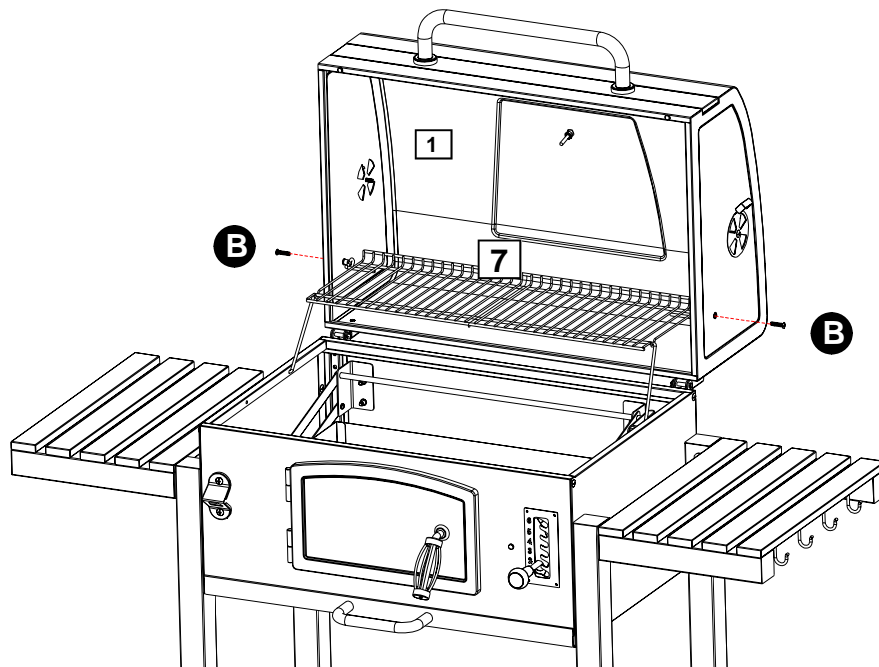

Step 23

 
Place the cast iron cooking grills **8** and **9** on the firebowl.

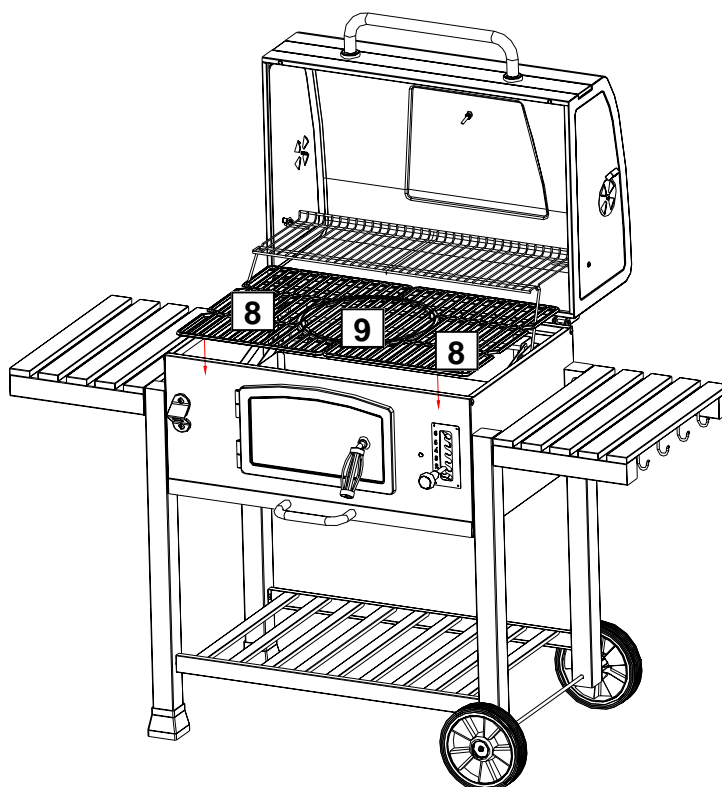

Assembly Instructions

Step 24

 Assembly is complete.

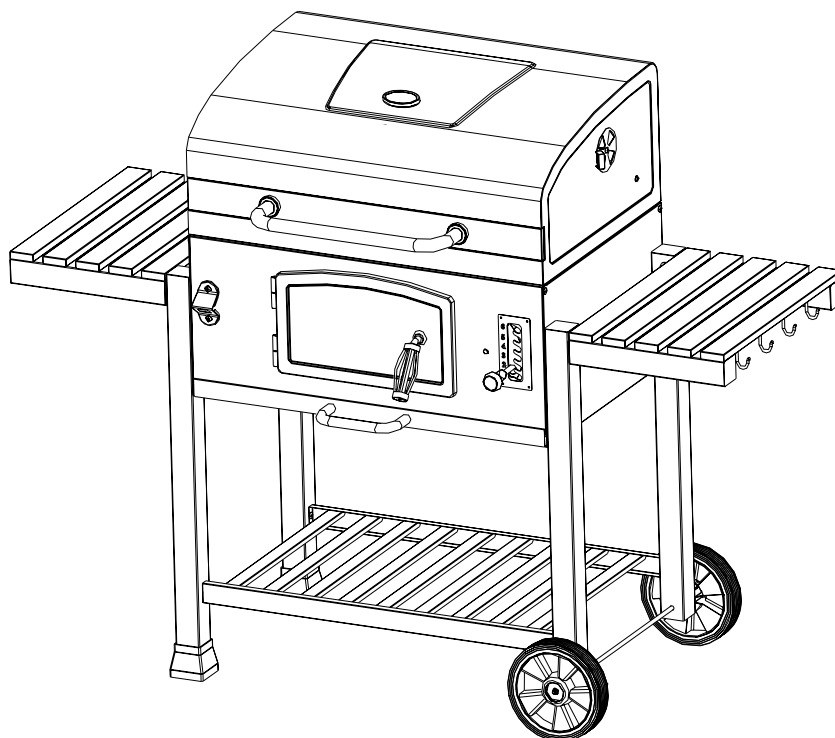

If you need help or have damaged or missing parts, call the **Customer Helpline: 03456 400800.**

Produced in China. Sainsbury's Supermarkets Ltd. 33 Holborn, London EC1N 2HT. Sainsbury's (NI) Ltd, Forestside Shopping Centre, Upper Galwally, Belfast, United Kingdom, BT8 6FX. Argos Limited, 489-499 Avebury Boulevard, Milton Keynes MK9 2NW. Argos (N.I.) Ltd, Forestside Shopping Centre, Upper Galwally, Belfast, United Kingdom, BT8 6FX. Argos Distributors (Ireland) Limited, Unit 7, Ashbourne Retail Park, Ballybin Road, Ashbourne, County Meath, Ireland