
 
Jakob TV Ottoman Double Bed

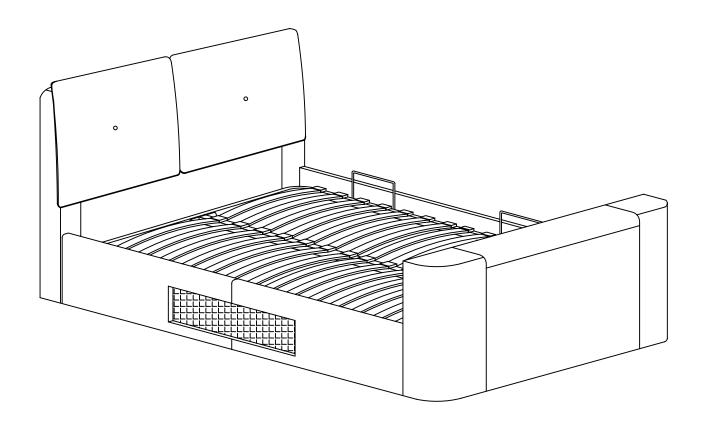

Spare Parts

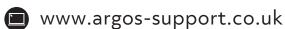

■ Help@ClickSpares.co.uk

0370 112 1928

Customer Support

0345 640 2020



Safety and Care Advice

Product Details

Jakob TV Ottoman Double Bed 811/2811

IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- This product has been constructed to be used in the domestic environment only and not for commercial purposes.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.



• We do not recommend the use of power drill/drivers for inserting screws

as this could damage the unit. Only use hand screwdrivers.

- Parts of the assembly will be easier with 2 people.
- Dispose of all packaging carefully and responsibly.

Care and maintenance

- Only clean using a damp cloth and mild detergent. Do not use abrasive cleaners.
- Use a dry cloth to clean the product, furniture polish is not recommended.
- From time to time check that there are no loose screws, nuts or bolts. If there are please re-tighten.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.


Additional Guidance

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts.
- Regularly check and ensure that all bolts and fittings are tightend properly.
- Maximum user weight 110kg
- This product is compliant EN60355-1&EN1725

Sainsbury's Argos is a trading name of both: Argos Limited, Registered office: 489-499 Avebury Boulevard, Milton Keynes, United Kingdom, MK9 2NW, registered number: 01081551 (England and Wales); and Sainsbury's Supermarkets Limited, Registered office: 33 Holborn, London, EC1N 2HT, registered number: 03261722 (England and Wales). Both companies are subsidiaries of J Sainsbury's plc.


Important Ottoman Safety Warnings

- Caution. This bed uses a pressurised mechanism.
- Use caution when operating Always use two hands at arm's length, and only where illustrated on the product.
- You must ensure the mattress is on the bed frame before lifting the mechanism
 Failure to do so may result in injury.
- Please ensure Children and Pets are kept away from the bed when operating the bed mechanism.
- If removing the mattress, make sure that the frame is secured as it could flip open.
- Only use the storage compartment when the frame is fully raised in the 'up' position.
- No children or animals are left unattended when the frame is in the 'up' position
- Do not remain on the bed whilst the lifting mechanism is in use.
- Beware of Entrapment Keep both hands clear of mechanism when operating the mechanism.
- When lifting the bed remove all bedding Except the fitted sheet.

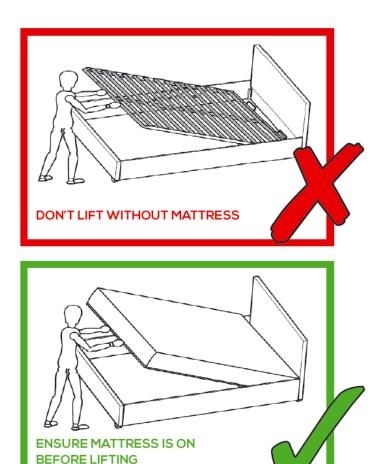


Fittings (Shown to scale)

Bag 1

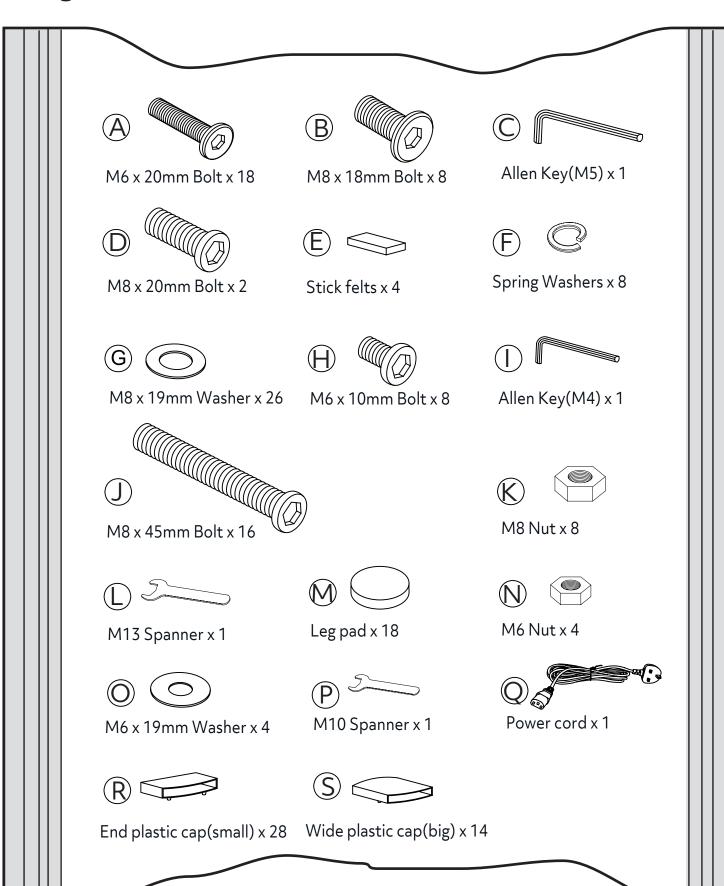


Fittings (Shown to scale)


Bag 2

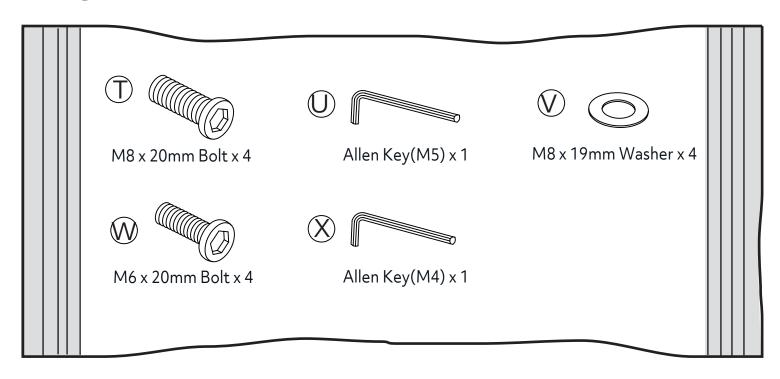

Tools required

 


Phillips screwdriver (small & medium)

 



Ruler/tape measure

Panels

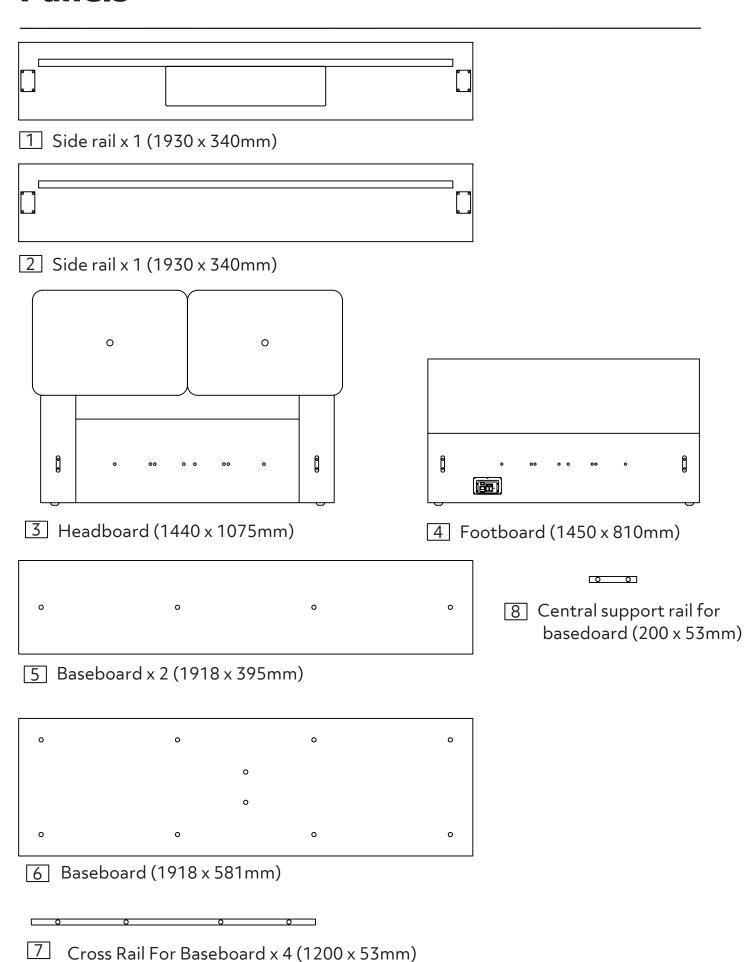


Panels

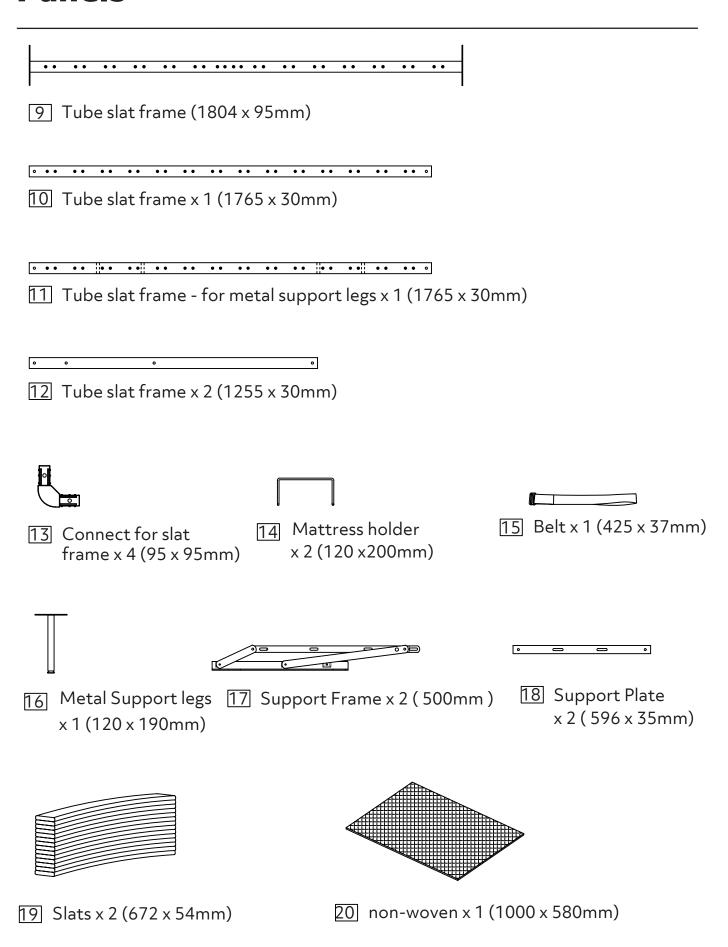


 






 


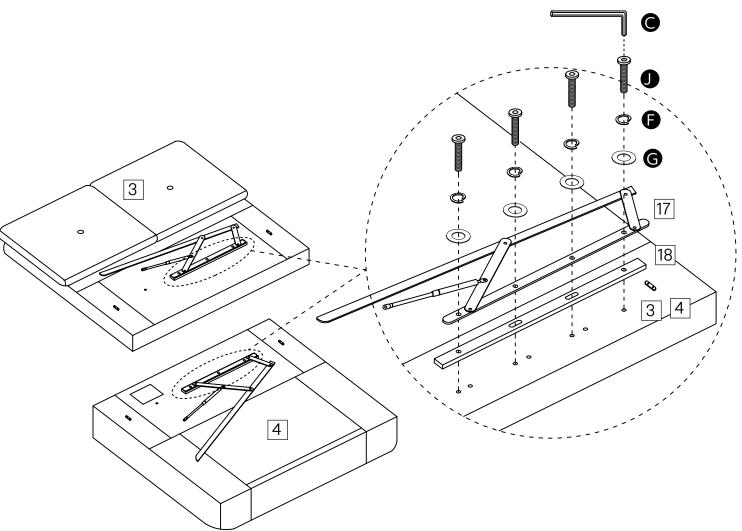


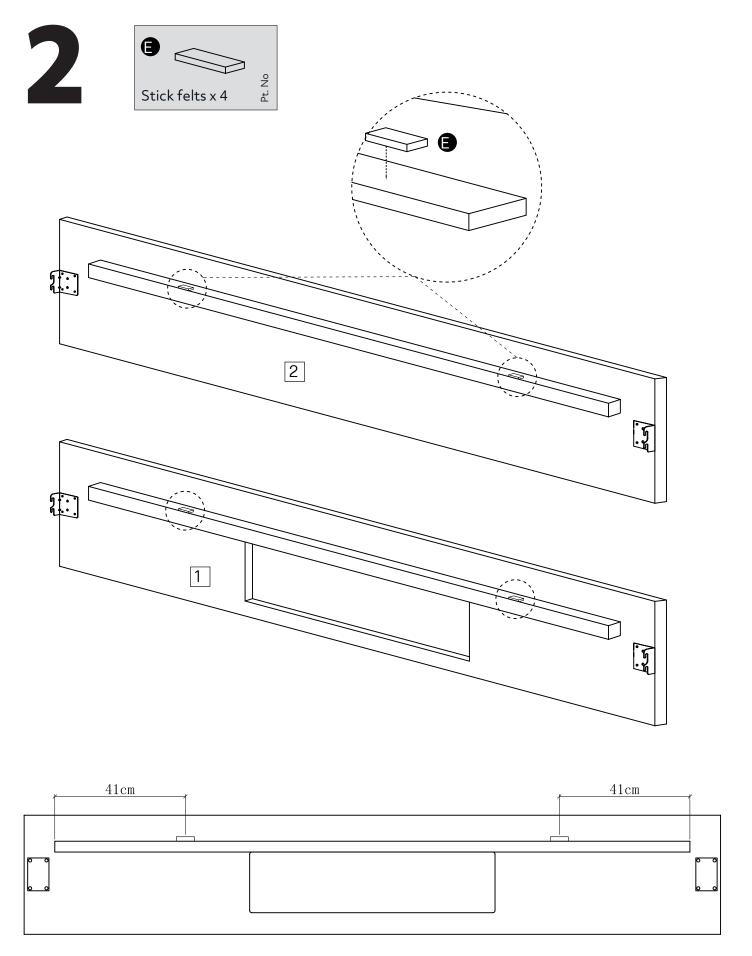


   
Please stick felt pads on the cleat of side rails as above photo.





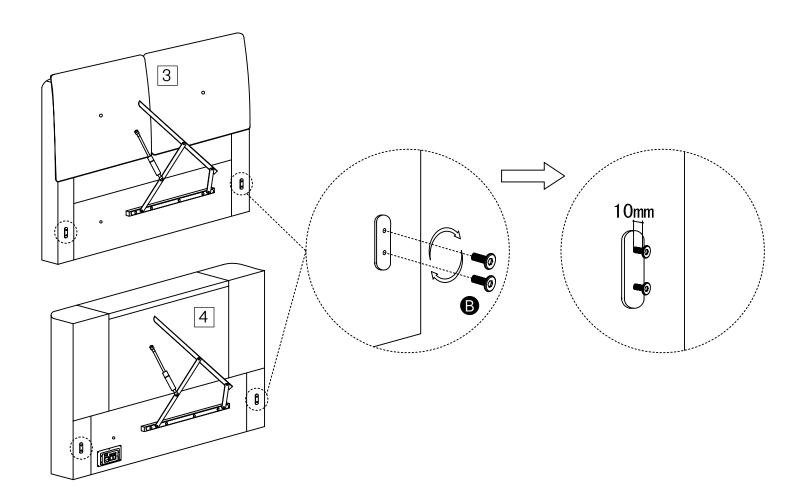 













Attach TV

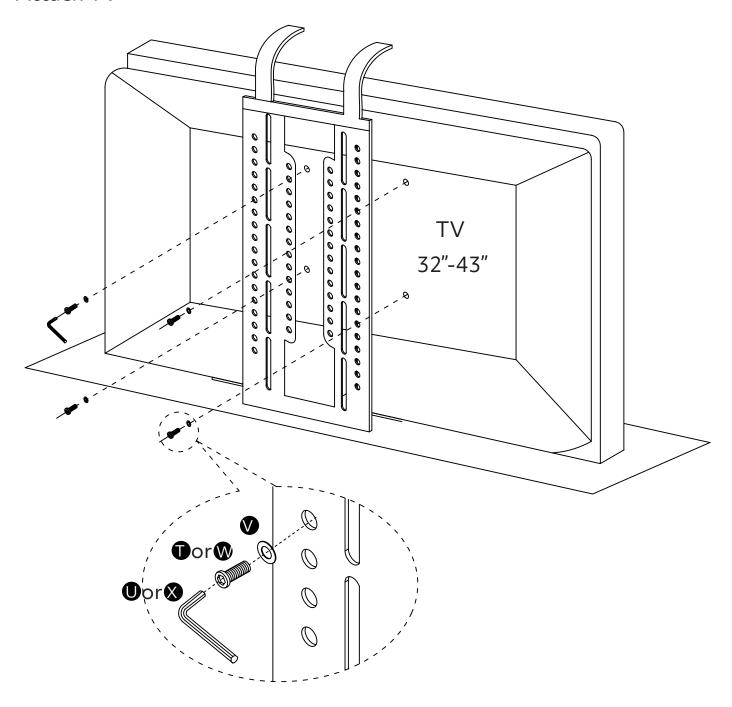


IMPORTANT INFORMATION How to pair the remote control with the TV control unit.


- Insert wall outlet power cord into the footboard control panel and plug into wall socket DO NOT TURN ON THE POWER AT THIS STAGE.
- Insert battery into the remote control.
- Turn the mains power on (ensuring you have the remote to hand).
- Once power is applied a red LED will illuminate on the footboard control panel. The red LED will only illuminate for approximately 5 seconds (steady, then blinking).
- Whilst the LED is illuminated press and hold any button on the remote for 5 seconds in order to pair with footboard control panel. *IMPORTANT* you can only attempt pairing whilst the red LED on the footboard control panel is illuminated.
- Once paired try the arrow keys on the remote to confirm pairing is successful.


NOTE – Should pairing be unsuccessful turn the mains power off, wait a minimum of 2 minutes then attempt pairing again ensuring the red LED is illuminated.

Next page for shown:


Tighten the back of the TV cable as follows

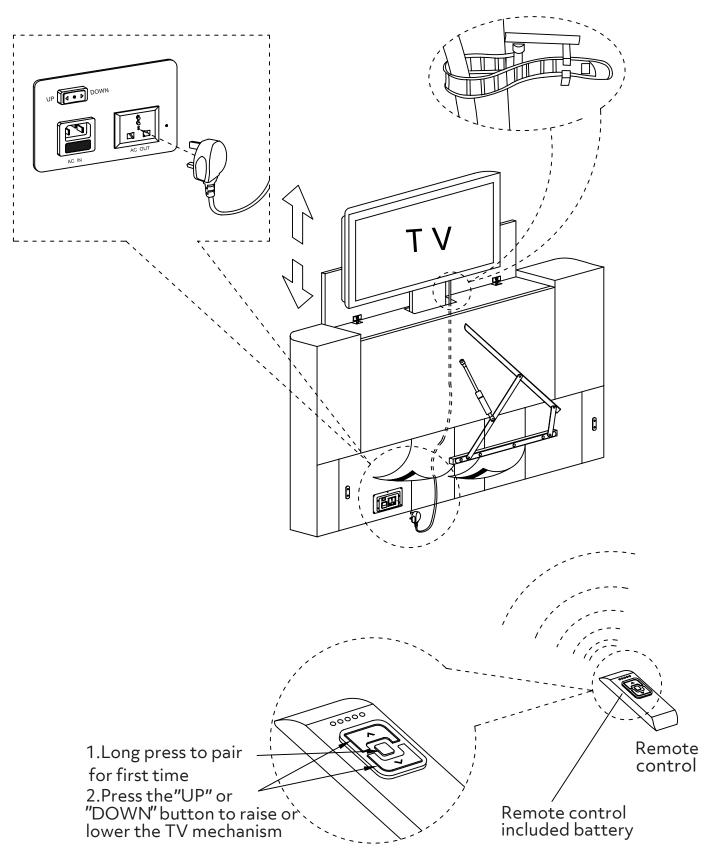

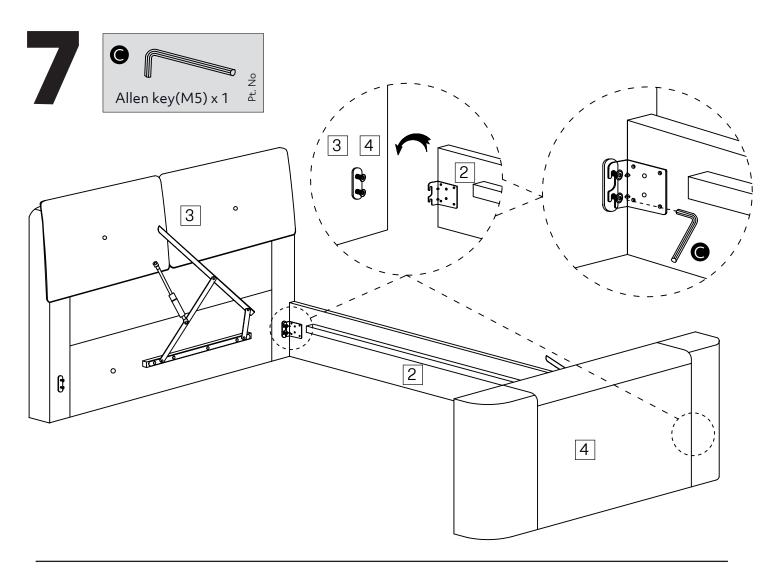


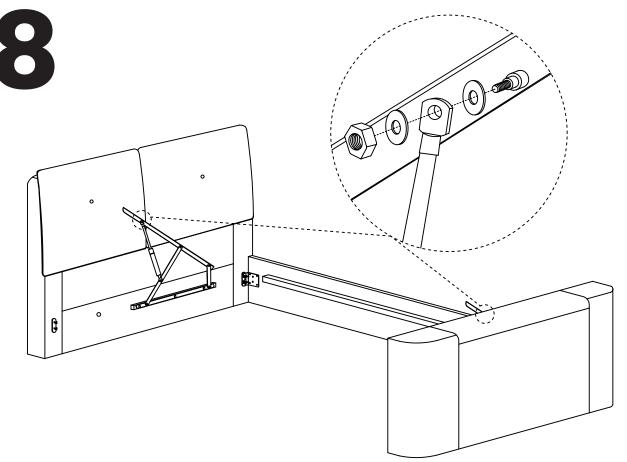




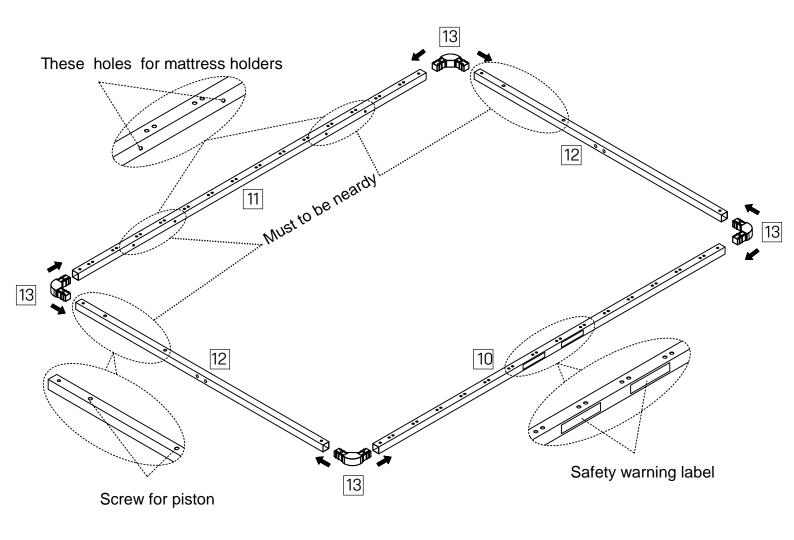

  Put the rail with the safety warning label on this side, keep away from the screw for piston.

 


 







 







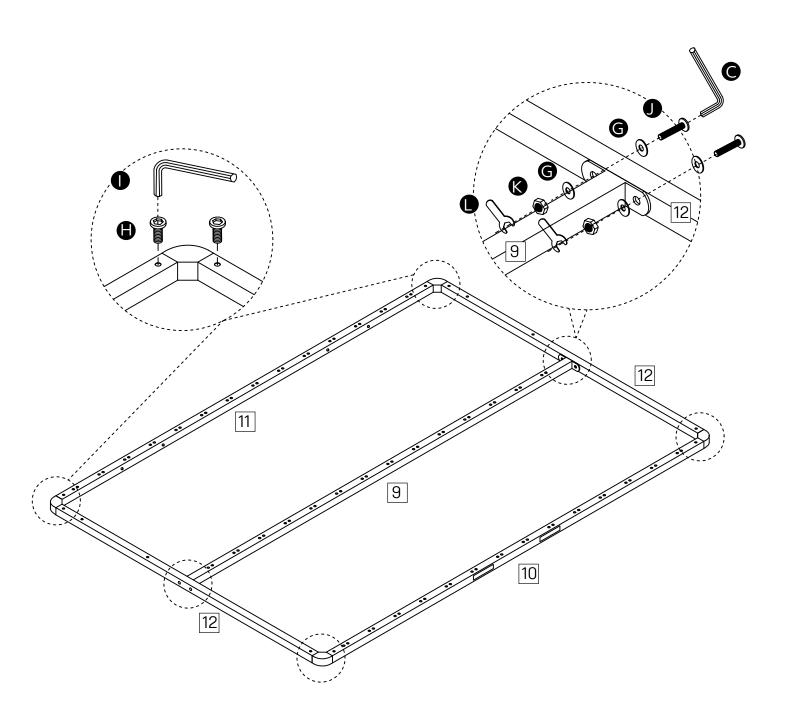






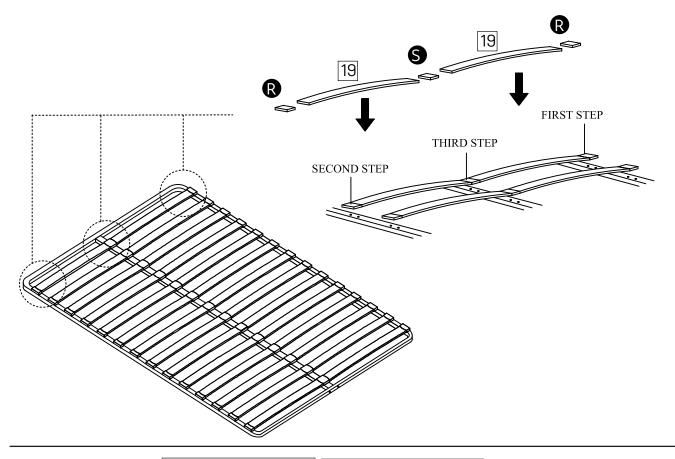



 





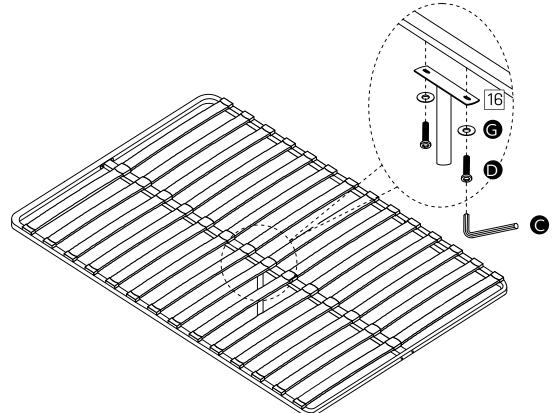 








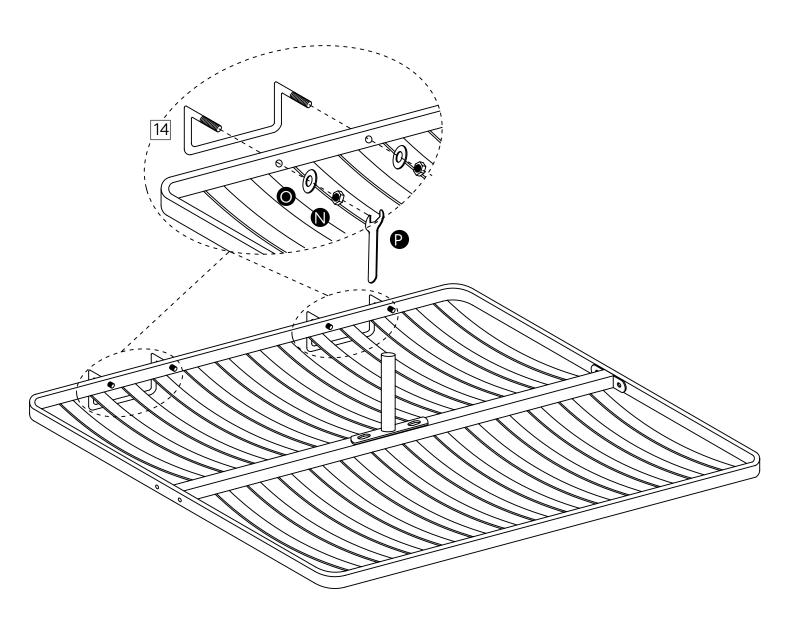 





 







 


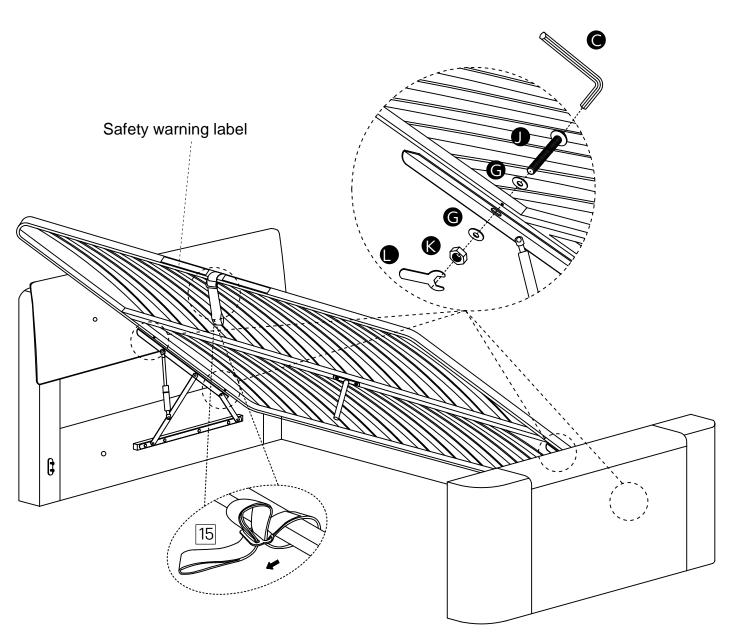







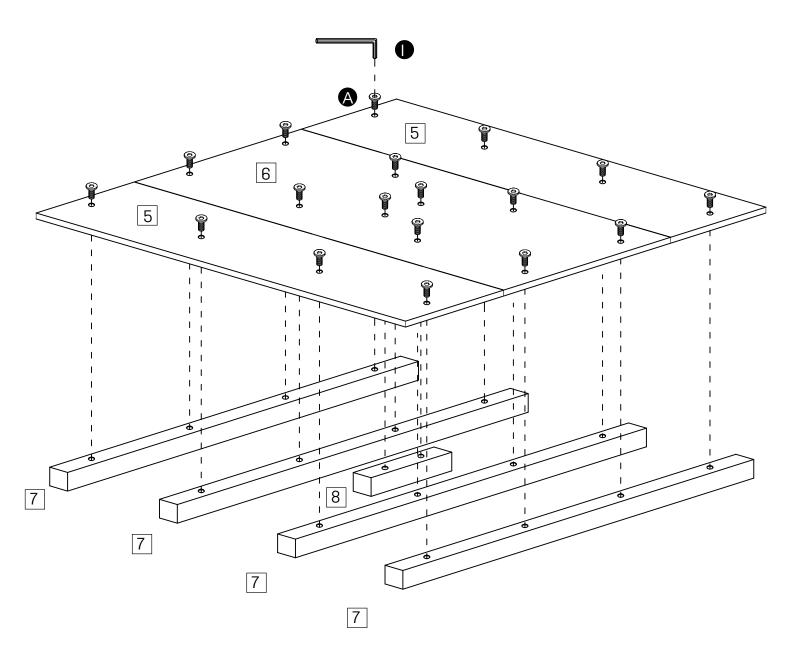





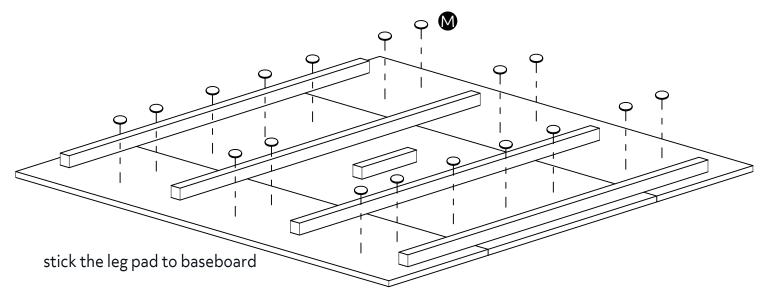


distance as shown below:

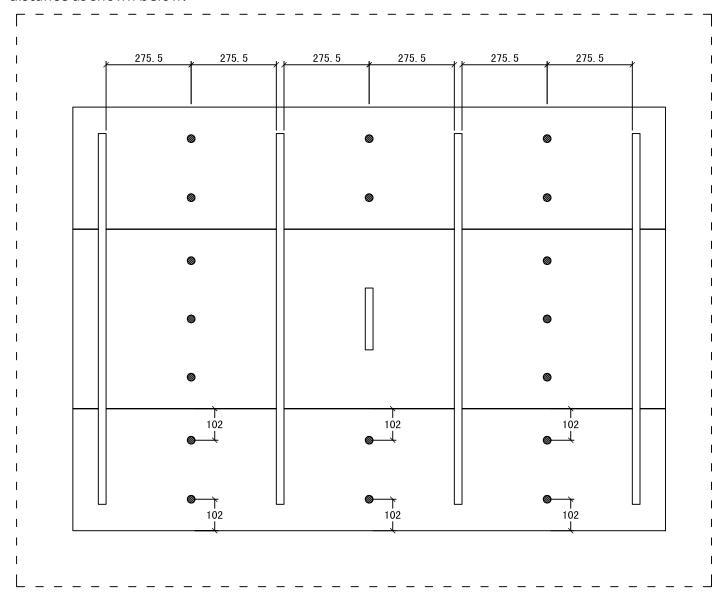


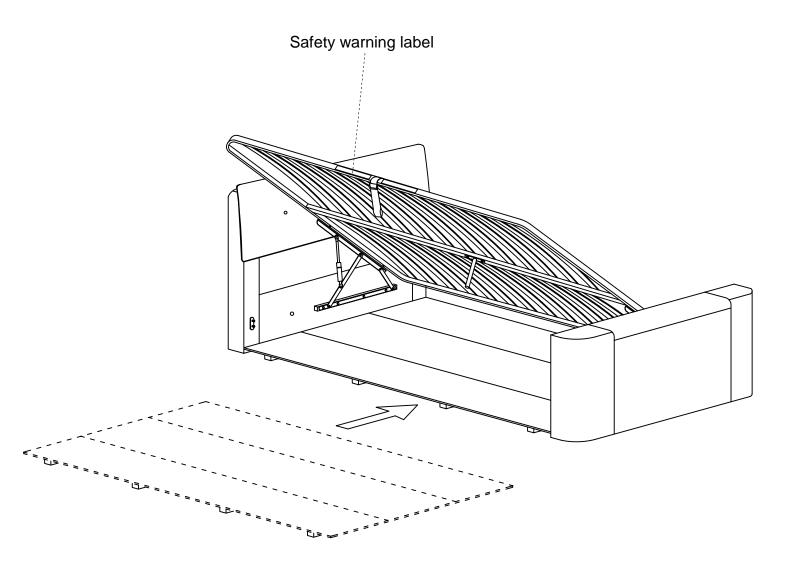

 


Important - Please keep the mains power off at this time.

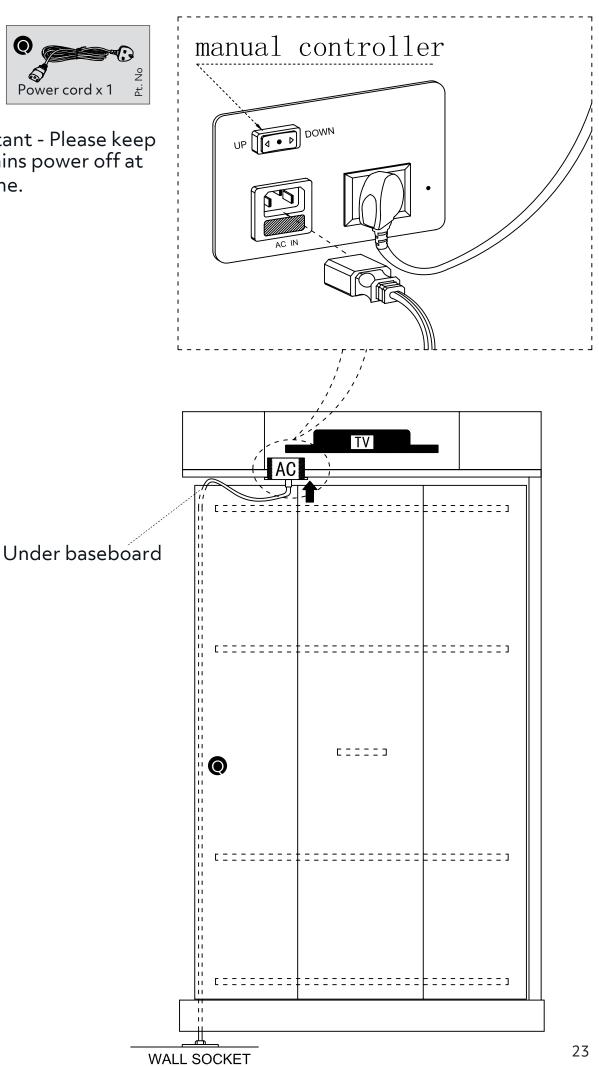

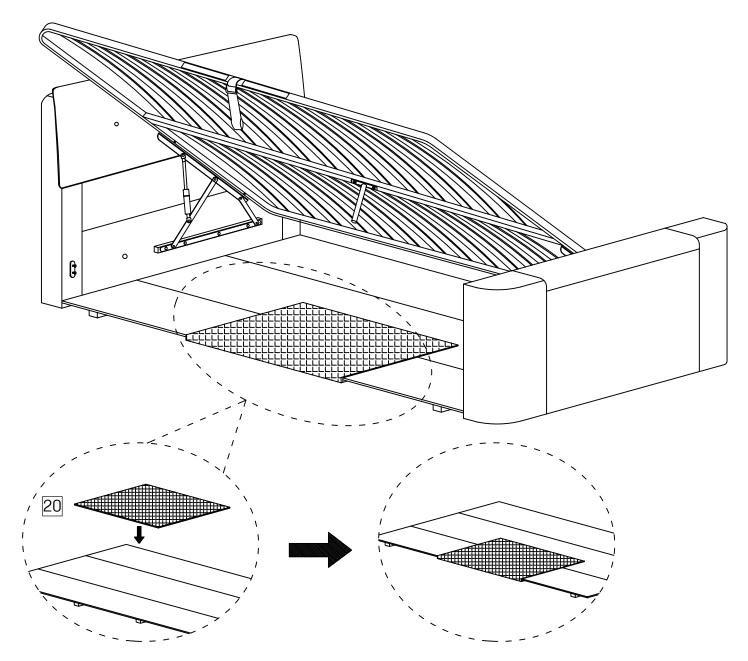

Put non-woven here if needed

Allen key(M5) x 1 di

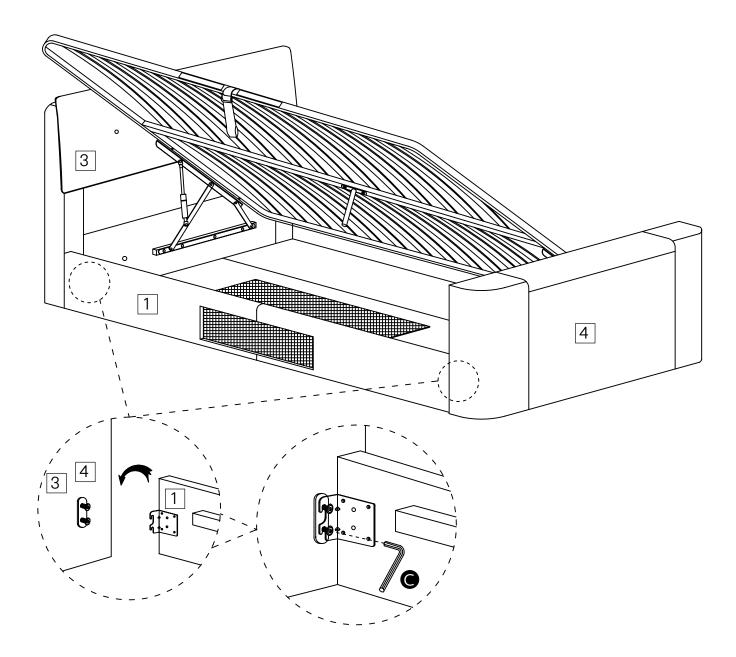

TV BED SAFETY INFORMATION

GENERAL INFORMATION



It is very important not to place any vessel containing liquids (drinks, vase of flowers etc.) on the top of the TV footboard which may accidentally spill and cause damage to your Bed, the TV or the TV lifting equipment. If this happens, please call customer services - see Frontpage.

Do not expose the bed to an undue level of heat - keep away from radiators.

Never allow anyone to sit on the foot end of the bed. Keep children well away from moving parts.

To keep bed clean, we recommend that it be wiped over with a slightly dampened cloth or if fabric use a light vacuum cleaner: always disconnect power before cleaning.

Supplied with the TV lifting mechanism is a remote control that uses a 23A 12V battery - there are no batteries in the rest of the equipment. There are strict controls for disposal of batteries - your local council can advise on how to safely dispose of them. Never burn batteries on an open fire as they could explode.

It is essential that the Mains Power Lead (K) is connected to an earthed socket be it wall socket or extension lead - otherwise there is risk of damage or even electric shock.

Never touch moving parts or any part of the equipment - if something needs to be checked, disconnect the power first. Do not insert anything into the footboard as this could seriously damage the TV, TV Mounting Column or other equipment and could, if done carelessly, cause serious damage or injury.

The socket providing the power must be accessible at all times in case you need to switch off the power quickly. Power outlets, extension leads or adaptors must not be overloaded beyond their limit - this can result in fire or electric shock. Leads supplied with this bed, or other approved mains powered extension leads, used to power the equipment, must not be placed where they can be walked on - this is dangerous and could lead to accidents. During an electrical or lightning storm disconnect the power completely as a precaution.

Always unplug the power when going on holiday or when the bed is not used for an extended period. If you have young children in the home always disconnect the power at the wall socket for extra safety. If the equipment doesn't operate normally, or if there is an unusual noise, disconnect power and call Customer Services, see Frontpage. The mains lead supplied with the bed has a 3 prong 13 amp UK plug. For safety, the

IMPORTANT: Care should be taken when connecting electrical items. If you are in any doubt over the connections please consult an approved electrician. If you have a problem, please ring Customer Services for advice - see Frontpage.

TROUBLE SHOOTING

power supply must be earthed.

If your equipment does not operate please check all the power connections, to the wall and to the socket in the footboard. Make sure your TV is switched on. (Note: TV will only work when it is the up position).

If the TV Lift does not operate, try each switch in turn.

If the television or TV Lift still fails to operate there may be a problem that can be checked by our technicians. Call the Customer Services number for help and information - see Frontpage.

IMPORTANT: Care should be taken when connecting electrical items. If in any doubt please consult an approved electrician to advise you on the electrical supply & to achieve safe connections to the equipment of the bed.