



Customer Service Manual

Refrigerator

ME55161B

ME55161S

ME55161W



Customer service manual

BUSH ME55161B/S/W Fridge Freezer

Contents

Precautions	Page 2
Tools for Disassembly and Reassembly	Page 6
Replacement of Door Hinge	Page 7
Replacement of Door Gasket	Page 10
Replaced of Door Handle	Page 11
Replacement of Internal Accessories	Page 12
Additional Support	Page 14

Precautions:

Always follow safety advice.

Always switch off and unplug the appliance before attempting to remove any part.

Always wear appropriate protective equipment when carrying out any work.

Always use the correct tools for carrying out any work.

Some repairs may not be suitable for unqualified users to carry out. If in doubt seek the advice of a profession repairer.

Precautions	Applicable models	EN
	General	

Symbol	Meaning
 WARNING	Indicates possibility of death or serious injury of a repair technician and a person nearby through the misconducted work, or of a user by a defect of the product after the work performed by the technician.
 CAUTION	Indicates possibility of injury or physical damages* of a repair technician and a person nearby through the misconducted work, or of a user by a defect of the product after the work performed by the technician.

* Means secondary damages of property, furniture, domestic animal and pet.

Symbol	Meaning
 ELECTRIC SHOCK	Indicates a caution (including a warning). Specific instruction is followed by a graphic or characters in or near. Symbol left warns an electric shock.
 DO NOT DISASSEMBLE	Indicates prohibition (act must not be conducted). Specific instruction is followed by a graphic or characters in or near. DO NOT Symbol left warns not to disassemble.
 UNPLUG	Indicates forcing (act must be conducted). Specific instruction is followed by a graphic or characters in or near. Symbol left warns to unplug the power cord.

Symbol	Meaning
 OUT OF CHILD	Advise the customer to keep children out of the workplace. Children may be injured with a tool or a disassembled part.
 UNPLUG POWER	Unplug power cord for the work such as disassembling which is not necessary to power on. Do not hold the plug by a wet hand. Failing to unplug may cause an electric shock.
 USE REPAIR PARTS	Use the specified repair parts when repairing the product. Otherwise, a malfunction or a defect may occur. Also, a short circuit, ignition or other danger to the customer may occur.

Precautions	Applicable models	EN
	General	

WARNING		
 CHECK INSULATION RESISTANCE	After repair, measure insulation resistance between the charging part (power cord plug) and the non-charging metallic part (ground) with an insulation resistance meter (500V). The resistance shall be 10M or more. Failing to check the insulation resistance may cause a short circuit, electric shock or other diseases to the customer.	
 DO NOT MODIFY	Do not modify the product. An electric shock or ignition may occur.	
 DO NOT MODIFY	Only a repair technician can disassemble and repair. An electric shock, ignition or malfunction may cause injury.	
 USE EXCLUSIVE SOCKET	Use an exclusive 230VAC/13A socket for the appliance. Otherwise, an electric shock or ignition may cause. Sharing the same socket with other instrument causes heating of a branch socket and result in a fire.	
 CONNECT GROUNDING WIRE	Connect the grounding wire. Failing to do so may cause an electric shock when a short circuit occurs. Consult an electric workshop or a sales shop.	
 DO NOT USE WET PLACE	Do not install in a bathroom or a place exposed to wind or rain. An electric shock or a short circuit may cause a fire.	
 DO NOT SPLASH WATER	Do not pour or immerse electrical parts into water or liquid solution. An electric shock or ignition may occur.	
 REMOVE DUST	Wipe off dust adhered to the plug of power cord. Dust may cause a fire.	
 AVOID INFLAMMABLE	Do not put inflammable into the appliance.	

Precautions	Applicable models	EN
	General	

WARNING	
 MECHANICAL INJURY	• Protective gloves and shoes are required during disassembling and assembling. • If levering or cutting operations are required, no part of the human body should be in the tool's range of motion. • In order to prevent accidental injury, two technicians are recommended during door disassembly and assembly. If working alone, tape the door shut prior to removing hinges to prevent the door from falling. • After disassembling, heavy COMPONENTS (such as doors) should be placed properly to prevent injuries due to falling parts.

Tools for Disassembly and Reassembly	Applicable models	EN
	General	



TOOLS



8mm Inner Hexagon Spanner



6x300 Slotted Screw Driver




6x300 Cross-head Screw driver

Replacement of Door Hinge	Applicable models	EN
	General	

Step 1 Prize up the top hinge cover Step 2 Unscrew 3 bolts	 
Step 3 Remove the fridge door hinge	
Step 4 Remove the fridge door	 

Replacement of Door Hinge	Applicable models	EN
	General	

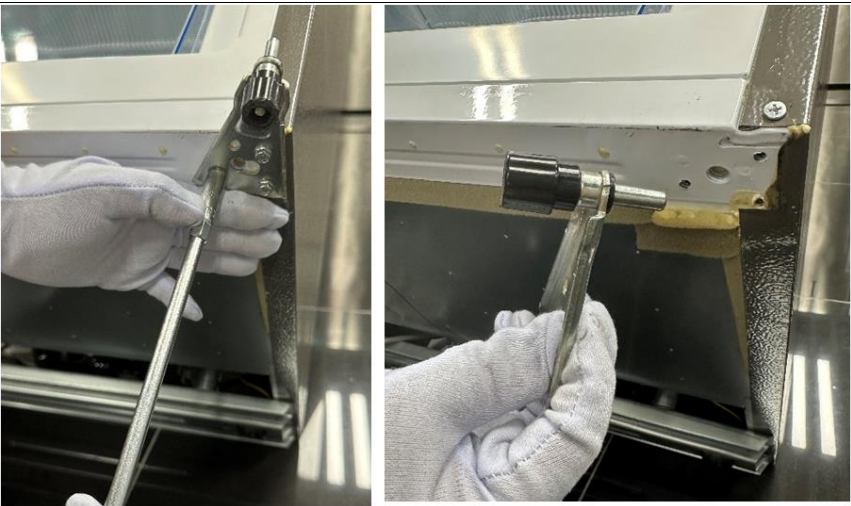Step 5 Remove the freezer door hinge	
Step 6 Remove the Freezer door	
Step 6 Remove the bottom door hinge	

Note: Reverse previous steps to install a new hinge. However, please pay attention to the tips below.

Replacement of Door Hinge	Applicable models	EN
	General	

Tip 1

Make sure gasket is Properly attached



Tip 2


Make sure the door is parallel to the cabinet.



Replacement of Door Gasket	Applicable models	EN
	General	


Step 1

Pull gasket out from corner.

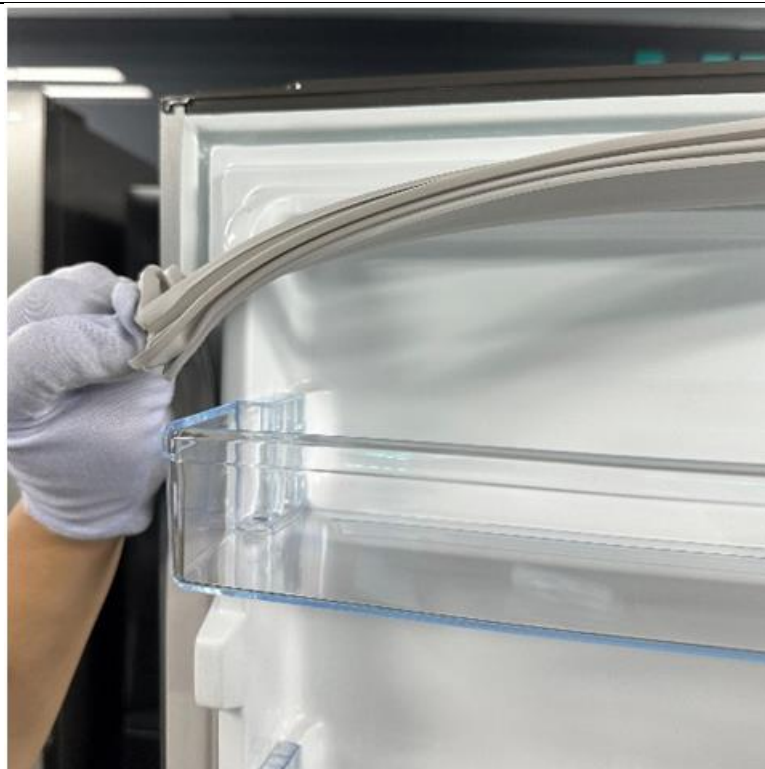

Step 2

Install a new gasket, starting from the corner. Make sure base of gasket is pressed into trough completely.

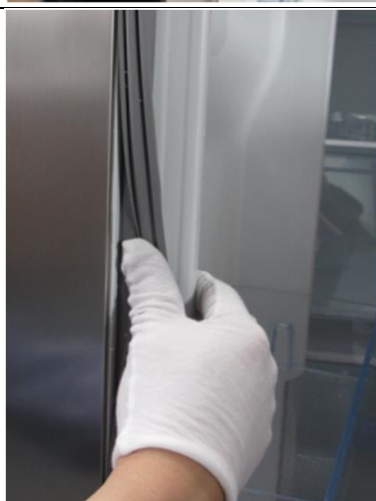

Step 3

Make sure gasket is properly aligned with edges of trough.

Close the door, make sure gasket is well Attached.



Replacement of Door Handle	Applicable models	EN
	General	

NOT APPLICABLE

Replacement of Internal Accessories

Applicable models

General

EN


Step 1

Remove shelves and replace with a new one.



Step 2

Remove drawer and replace with a new one.

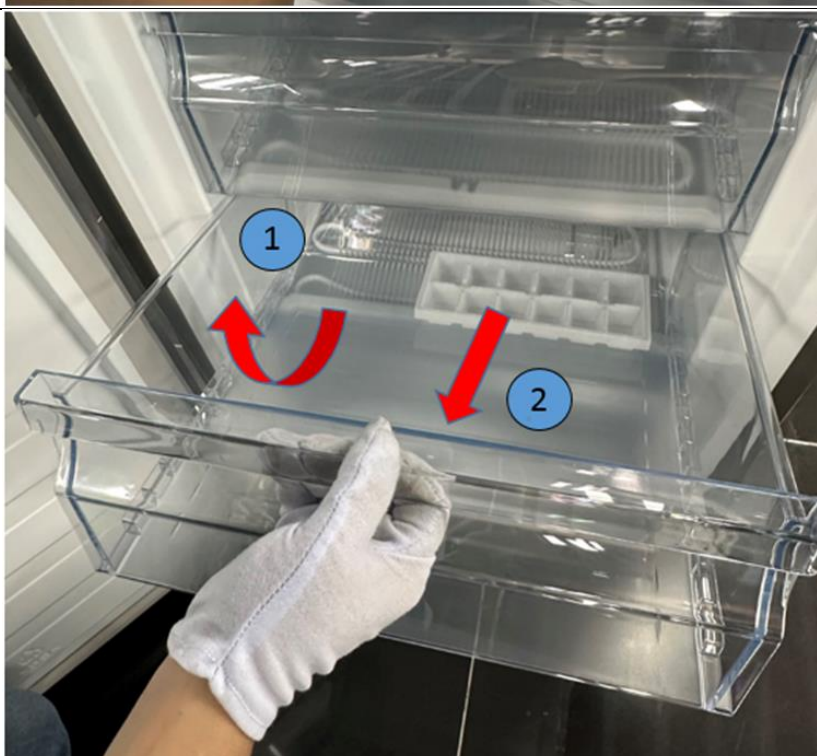

Replacement of Internal Accessories

Applicable models

General

EN

Step 3

Repeatedly alternate pushing left and right ends of the balconies, and then replace with a new one.



ADDITIONAL SUPPORT	Applicable models	EN
	General	

The following parts are available for the customer to undertake repairs at their own risk. Please carefully follow the guidance given in this manual including all safety measures.

- Door
- Door hinge and seals
- Other seals
- Door locking assembly
- Plastic peripherals such as detergent dispensers

Parts can be obtained by calling the support service listed in this section. All repairs in this manual can be achieved using commonly available tools.

If you are in any doubt of your ability to carry out a repair, please use a professional service, also available through the support service.

Damage sustained to the appliance or future faults arising from poorly carried out repairs will not be covered under warranty.

ADDITIONAL SUPPORT	Applicable models	EN
	General	

Help and assistance

If you require any technical guidance or find that your washing machine is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions or online at **www.bush-support.com**

If you still require further assistance, call one of our experts on **0345 257 7271***. To help give us give you a fast and efficient service please have the following information ready:

Model Ref.		You can find these on the rating plate - a small information panel (usually a sticker or metal plate) on the rear of your appliance
Serial number		
Date of purchase		This will be shown on your receipt

Local call rates applies*

Lines open 8am-7pm Monday to Saturday and 10am-4pm Sunday.

*Calls to Bush enquiry lines may attract a charge and set up fee from residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see www.bt.com/pricing for details.

For Security and training purposes, telephone calls to and from customer service centres maybe recorded and monitored. Calls from Republic of Ireland will attract international call charges.

Notes on disposal :



The symbol on the product or its packaging indicates that this product may not be treated as household waste. Instead it should be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling this product, please contact your local council office, your household waste disposal service or the shop where the product was purchased.