DOOR GASKET

B<u>US</u>H



GENERAL METHOD TO REPLACE GASKET



Step 1 Pull gasket out from the corner.



Step 2

Install a new gasket, starting from the corner.



Step 3

Make sure base of gasket is pressed into trough completely.



Step 4

Make sure gasket is properly aligned with edges of trough.




Step 5

After closing the door, make sure gasket is well attached to door.

Note

HINGE IS DAMAGED

RELIABILITY / HINGE IS DAMAGED

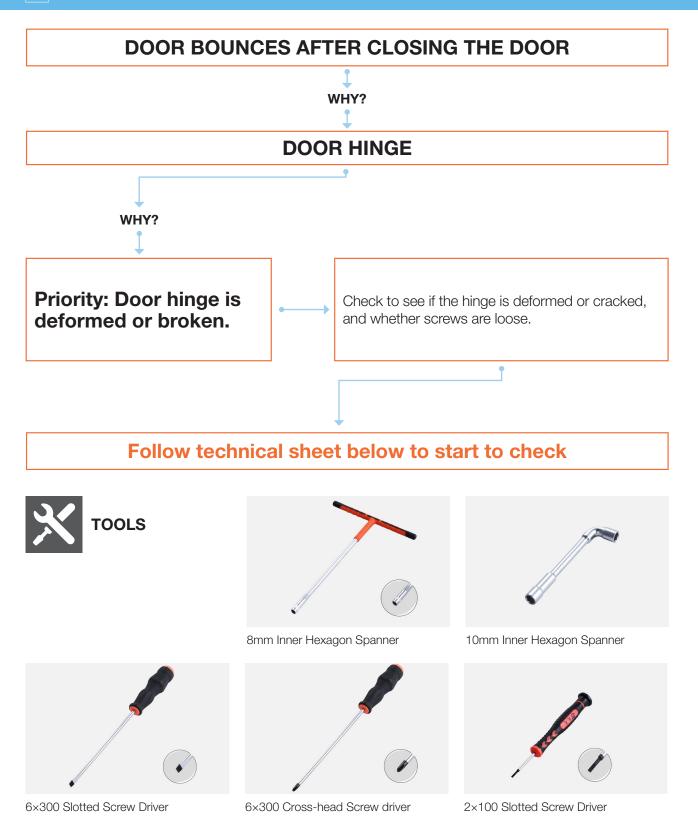

BUSH





Step 1

Check to see if hinge and sleeve for hinge pin are damaged or not.





CHECK TO SEE IF THE HINGE OR SLEEVE FOR HINGE PIN IS DAMAGED OR NOT.

If hinge is damaged, follow procedures below to disassemble door. If sleeve for hinge pin on door is damaged,

Please follow steps below to replace door.

BUSH



GENERAL DISASSEMBLY PROCEDURES FOR DOOR.



Step 1

Prize up screw cover (ifany).

Step 2 Unscrew.

Step 3

Push the top cover (if any) forward.







Step 4 Take away the top cover(ifany).

B<u>US</u>H




Step 5

Unscrew 3 bolts and remove door hinge.



Step 6 Remove the door.



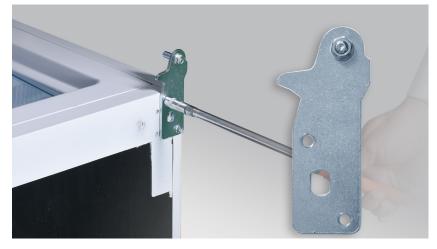

Step 7

Lay down the cabinet and unscrew the adjustable foot.

Step 8

Unscrew 2 bolts and remove bottom hinge.



REVERSE PROCEDURE 1 TO REINSTALL HINGES AND DOORS, HOWEVER, PLEASE PAY ATTENTION TO POINTS BELOW.

Tip 1

Don't forget to add washer onto hinge pin (if there is one).

Tip 2

When installing door onto hinge, please check the alignment between door-stopper and hinge.







Tip 3

Make sure gasket is properly attached.



BUSH

Tip 4

Make sure the door is parallel to the cabinet.

9.4 APPEARANCE FAULTS: INTERNAL ACCESSORIES ARE DAMAGED


APPEARANCE / INTERNAL ACCESSORIES ARE DAMAGED

BUSH





Step 1 Remove shelves.

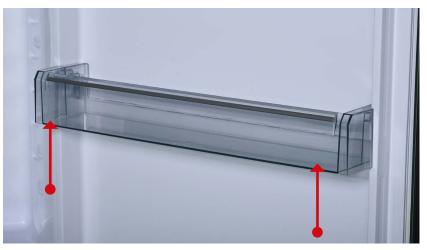

-
Repeatedly alternate
pushing left and
right ends to remove
balconies.

Step 2

Note		