 


# REPLACING THE GASKET

 APPEARANCE / **GASKET**

**BUSH**



## GENERAL METHODS FOR DISASSEMBLY AND INSTALLATION OF GASKET.

### Step 1

Pull gasket out from 4 corners.

*Important tips for installing gasket.*



### Step 2

Start from corner.



### Step 3

Make sure gasket foot is pressed into gasket seat completely.

Make sure gasket is well-aligned with gasket seat.



After closing door, make sure gasket is well-attached to door.



This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There is no handwriting or other markings on the paper.

# EXTERNAL HANDLE

 APPEARANCE / **DAMAGED EXTERNAL HANDLE**

**BUSH**



## TOOLS



6x300 Cross-head Screw driver



2x100 Slotted Screw Driver



## GENERAL PROCESS

### Step 1

Prize up the front cover (if any) of external handle.



### Step 2

Remove the front cover.



### Step 3

Unscrew the handle and remove.



## Reverse previous steps to install a new handle.

### Note

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

# REPLACING THE DOOR

 APPEARANCE / **DOOR IS DAMAGED**

**BUSH**



## TOOLS



6x300 Slotted Screw Driver



6x300 Cross-head Screw driver



8mm Inner Hexagon Spanner



### Step 1

Prize up the top side of lower hinge cover.



### Step 2

Remove the hinge cover.



**Step 3**

Prize up the upper hinge cover with a screwdriver.

**Step 4**

Unscrew upper hinge part.

**Step 5**

Replace the door.

Reverse above procedures to install hinges and doors, however, please pay attention to points below:

**Step 1**

Make sure gasket is properly attached.

**Step 2**

Make sure the door is parallel to the cabinet.

# REPLACING THE HINGES



RELIABILITY / HINGE IS DAMAGED

**BUSH**



## TOOLS



6x300 Slotted Screw Driver



6x300 Cross-head Screw driver



8mm Inner Hexagon Spanner

**Step 1**

Prize up the top side of lower hinge cover.

**Step 2**

Remove the hinge cover.

**Step 3**

Prize up the upper hinge cover with a screwdriver.

**Step 4**

Unscrew upper hinge part.

**Step 5**

Unscrew lower hinge part.

**Step 6**

Replace with the new hinge.





Reverse above procedures to install hinges and doors, however, please pay attention to points below:

### Step 1

Make sure gasket is properly attached.



### Step 2

Make sure gasket is properly attached.



**AFTER REWORK, PLEASE CHECK DOOR AGAIN.**

If there are no problems,  
**WELL DONE,  
REWORK WAS SUCCESSFUL.**



If there is a problem, please  
go back to check if you have  
made any mistakes.



This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There is no text or other markings on the paper.

# BASKETS



## APPEARANCE / INTERNAL ACCESSORIES ARE DAMAGED

**BUSH**

**Baskets are damaged. The solution is to replace them.**



**Step 1** Remove and replace basket directly.

Note

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins or other markings on the paper.