BUSH

Customer

Service Manual

Dishwasher

BFSLSAE9W BFSLSAEB9B





Customer service manual

BUSH BFSLSAE Series Dishwasher

Contents

1	Precautions	Page 2
2	Top Plate	Page 4
3	Plastic Kick Plate	Page 5
4	Internal Feeding Tubes and Spray Arms	Page 6
5	Components inside the tub	Page 7
6	Draining Hose	Page 8
7	Baskets	Page 9
8	Water Inlet valve	Page 10
9	Sump Group, Floater, Water Softener, Parasite Filet	Page 11
10	Hose, Door, Dispenser, Air Break	Page 15
11	Additional Support	Page 20

Precautions:


Always follow safety advice.

Always switch off and unplug the appliance before attempting to remove any part.

Always wear appropriate protective equipment when carrying out any work.

Always use the correct tools for carrying out any work.

Some repairs may not be suitable for unqualified users to carry out. If in doubt seek the advice of a profession repairer.

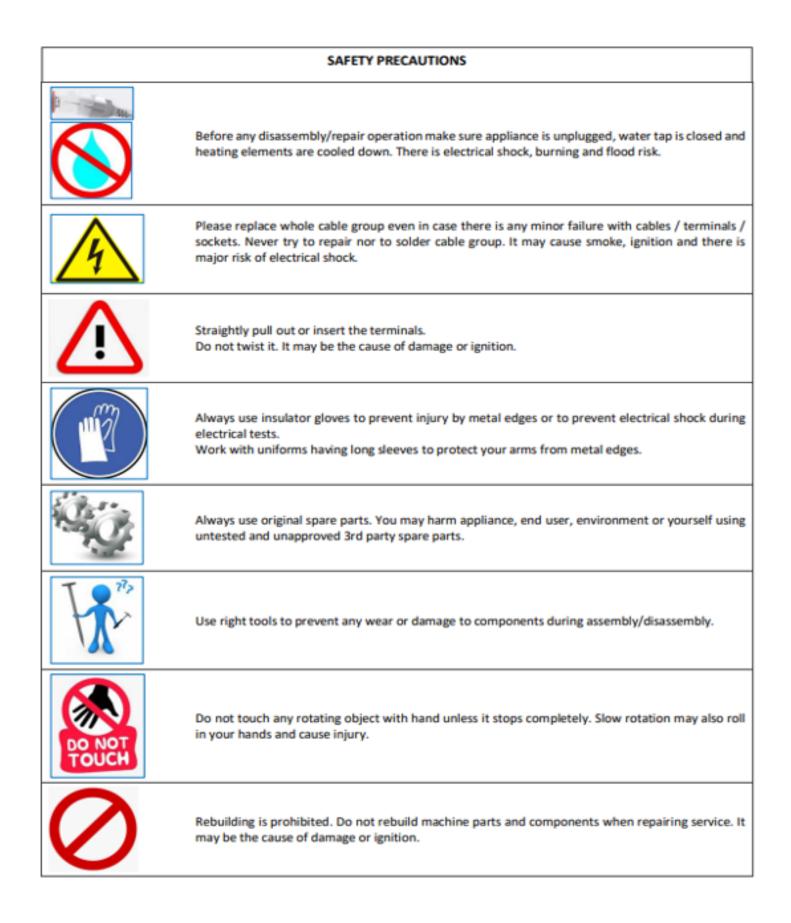



REPLACEMENT PROCEDURE		Applicable models	
Part name Plastic Kick Plate		General	EN
	ews fixing plastic kick plate		
1			
2. Remive the plas	tic kuck plate as it is shown in the picture		

REPLACEMENT PROCEDURE		Applicable models	
Part name	Internal Feeding Tubes and Spray Arms	d General	EN
1. Unscrew the feed	l chanel tabs with the help of a scredriver		
	nually narrow the feed channel replacement	and insert it into the tabs	
•		5. To remove the lower spray arm, gen	tly puul it up


REPLACEMENT PR	ROCEDURE	Applicable models	
Part name	Components inside the tub: course, micro and metal filters	General	EN
 Open the door. Remove lower basket To remove microfilter group ro and pull them up as it is shown it 	tate them in the direction of counter clockwi n the picture	se	
4 To remove mictofilter goup (c	ourse filter and micro filter) pull them as itis	shown in teh nicture	
		1	
5.To remove the metal filter pu	ll it up as it shown in the picture		

REPLACEMENT PROCEDURE Part name Draining Hose		ACEMENT PROCEDURE Applicable models	
		General	EN
 Remove the hose of the contract o	er that fixes draining hose to th	ne sump	

REPLACEMENT PROCEDURE	Applicable models	
Part name Baskets	General EN	
Lower Basket	Upper Basket	
 Open machine's door Pull the basket to yourself 	 Open upper basket rail lock front Pull the basket to yourself and remove it 	

		Applicable models	
REPLACEMENT PROCEDURE		Gonoral	
Part name	Water Inlet valve	General	

Water Inlet valve

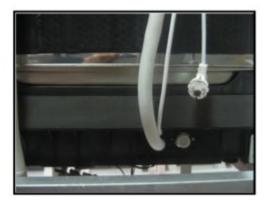

a) Remove lower cover.




b) Remove the wire that is connected to the water inlet valve.

c) Remove the clamp that connects water inlet valve and air-break as it is shown in the picture

To remove water inlet valve pull it back as it is shown in the direction of picture then release water inlet valve from the pins that is <u>connecte</u> to and rotate it in the direction of counterclockwise.



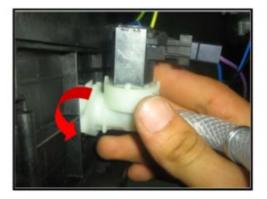

REPLACEMENT PROCEDURE		Applicable models	EN
Part name Sump Group		General	

1)Remove 2 screws on top

2) Remove the drain pump



sump screws

drain pump

3) Remove the drain hose



drain hose

4) Remove the blue hose from the water softener to the pool group



blue hose

REPLACEMENT PROCEDURE			Applicable models	EN
Part name	Floater		General	
		a) Remove lo	wer cover.	
		b) Remove tw shown in the p	vo screws that fix floater as it is picture.	



c) Remove the two floater hoses.d) Remove the wire that is connected to the floater.

Applicable models **REPLACEMENT PROCEDURE** EN General Part name Water Softener Water softener a) To remove salt cup cover, rotate it in the direction of counterclockwise b) To remove salt cup nut, rotate it in the direction of counterclockwise. c) Remove left side panel. d) Derach the connections which are between water softener and air-break. e) Remove lower cover. f) Remove the hose that is between sump and salt camp.

REPLACEMENT PROCED		EPLACEMENT PROCEDURE Applicable models		EN
Part name	Parasite Fil	ter	— General	EIN
<section-header></section-header>		 a) Remove lower cover. b) Remove one screw fix c) Remove wires. d) Push parasite filter and 		

REPLACEMEN	NT PROCEDURE	Applicable models	EN
Part name	Hose connection plastic	– General	
Hose connect	ion plastic a) Remove left side	panel.	
		ewdriver remove hose e from the basement as it	
and the second sec	c) Push the hose com	ection plastic.	

REPLACEMENT PROCEDURE Applicable models		EN
ir - break	General	
b) O c) Ro	pen machine's door Itate counterclockwise air-break nut and	
	a) Re b) O c) Ro remo	ir - break General Image: Second state of the state



REPLACEMENT PROCEDURE		Applicable models	EN
		General	
Part name	Door Inside	General	
	•	•	

Door Inside

- a) Remove side panels.
- b) Remove Hinge Spring.



c) Pull the door inside up as It is shown in the picture.

Door spring

d) Remove two screws that fix hinge movement sheet iron to the door inside.



KNOB REMOVAL INSTRUCTIONS



1)Remove control panel,

2)Remove the pcb box,

3)Remove the plastic tabs around the knob by flexing them.

REPLACEMENT PROCEDURE Applicable models EN Part name Dispeser Removal General EN DISPENSER REMOVAL INSTRUCTIONS 1)Remove front panel 4)Then the dispenser will drop in Connect the dispenser cable harness Object colspan="2">Connect the dispenser cable harness Connect the dispenser cable harness

Dispenser cables

dispenser is free

3) Remove the metal tabs on the top, bottom and sides to disengage the dispenser.



metal tabs on the top

pressing to the dispenser down

82

5)To assemble, tighten the metal tabs with a pliers

6)

After applying silicone oil or liquid soap to dispenser, press down and engage dispenser.



REPLACEMENT PROCEDURE		Applicable models	
		General	EN
Part name	Door Lock		
DOOR LOCK REMO	OVAL INSTRUCTIONS		
	1)Remove control panel screws		
2)Disconnect cabl	e connections with door lock		
3)Remove two do	or lock screws		



	Applicable models	
ADDITIONAL SUPPORT	General	EN

The following parts are available for the customer to undertake repairs at their own risk. Please carefully follow the guidance given in this manual including all safety measures.

- Door Hinge & Seals
- Other Seals
- Spray Arms
- Drain Filters
- Interior Racks
- Plastic Peripherals such as Baskets & Lids

Parts can be obtained by calling the support service listed in this section. All repairs in this manual can be achieved using commonly available tools.

If you are in any doubt of your ability to carry out a repair, please use a professional repairer, also available through the support service.

Damage sustained to the appliance or future faults arising from poorly carried out repairs <u>will not be</u> <u>covered under warranty</u>.

Help and assistance

If you require any technical guidance or find that your dishwasher is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions or online at

www.bush-support.com

If you still require further assistance, call one of our experts on **0345 257 7271***. To help us give you a fast and efficient service please have the following information ready.

Model Ref.	You can find these on the rating plate - a small	
Serial number	information panel (usually a sticker or metal plate) on the rear of your appliance	
Date of purchase	This will be shown on your receipt	

Local call rates apply*

Lines open 8am-7pm Monday to Saturday an 10am-4pm Sunday.

*Calls to Bush enquiry lines may attract a charge and set up fee residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see www.bt.com/pricing for details

For security and training purposes, telephone calls to and from customer service centres maybe recorded and monitored. Calls from Republic of Ireland will attract international call charges

Notes on disposal :



The symbol on the product or its packaging indicates that this product may not be treated as household waste. Instead it should be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling this product, please contact your local council office, your household waste disposal service or the shop where the product was purchased.