

# **BUSH**

## **Customer Service Manual**

**Built Under Larder**

**BEUCL6082**



# Customer service manual

## Built Under Larder

## Contents

1	Precautions	Page 2
2	Door	Page 4
3	Thermostat Setting	Page 6
4	Replacement Lamp	Page 7
5	Replacement Door Switch	Page 8
6	Additional Support	Page 9

### **Precautions:**

Always follow safety advice.

Always switch off and unplug the appliance before attempting to remove any part.

Always wear appropriate protective equipment when carrying out any work.

Always use the correct tools for carrying out any work.

Some repairs may not be suitable for unqualified users to carry out. If in doubt seek the advice of a profession repairer.



Read all instructions before repairing the product.

Before any disassembly make sure appliance is unplugged.

There is electrical shock risk.

Use rated control equipment.

DO NOT attempt a product repair if you have any doubts as to your ability to complete the repair in a safe and satisfactory manner.

Make sure to check out Model name, Rated voltage, Rated current, Operation Temp, etc.

When you replace the parts, please use authentic parts to replace defective parts.

Before starting the dismantling, wear protective equipment.

Do not use multiple receptacles or extension cord.

Do not plug in damaged, torn or old plugs.

Do not allow children to play with the appliance or let them hang off the door.

Do not plug-in or out the plug from the receptacle with wet hands to prevent electrocution.

Do not place glass bottles or beverage cans in the freezer department. Bottles or cans may explode.

When taking ice made in the freezer department, do not touch it, ice may cause ice burns and/or cuts.

Do not cover the body or top of fridge with lace. This affects the performance of your fridge.


Fix the accessories in the fridge during transportation to prevent damage to accessories.

Leave to stand for at least before switching on to allow compressor oil to settle if transported horizontally.






Do not damage the refrigerant circuit.

Care must be taken while cleaning/carrying the appliance not to touch the bottom of the condenser metal wires at the back of the appliance, as this could cause injury to fingers and hands.


REPLACEMENT PROCEDURE		Applicable models	EN
		General	
Part name	Door		

A- Changing The Door Swing Direction to Right Hand	
1- Unscrew the two screws fixing the top hinges (Fig-1) and bottom hinges. (Fig-2) Remove the doors. (Fig-1)	
	
Figure 1	Figure 2
2. Remove the top hinge screw caps (big) on the left side (Fig-3) and insert them to the right side. (Fig-4)	
	
Figure 3	Figure 4
3. Remove the bottom hinge screw caps (big) on the left side and insert them to the right side. (Fig-5)	
	
Figure 5	Figure 6
5. Assemble the top hinge to the bottom of the door (Fig-7) and assemble the door and then assemble the bottom hinge to the top of the door. (Fig-8)	
	
Figure 7	Figure 8

REPLACEMENT PROCEDURE		Applicable models	EN
		General	
Part name	Door		

B- Changing The Freezer Door Swing Direction	
1- Unscrew the screw fixing the freezer door hinge (Fig-1) and remove the freezer door (Fig-2)	
	
Figure 1	Figure 2
2- Unscrew the screw fixing the freezer door holder and remove it. (Fig-3)	
3- Screw the freezer door holder to the right side. (Fig-4)	
	
Figure 3	Figure 4
4- Assemble the freezer door and fix the freezer door hinge by tightening the screw. (Fig-5)	
	
Figure 5	

REPLACEMENT PROCEDURE		Applicable models	EN
		General	
Part name	Thermostat Setting		

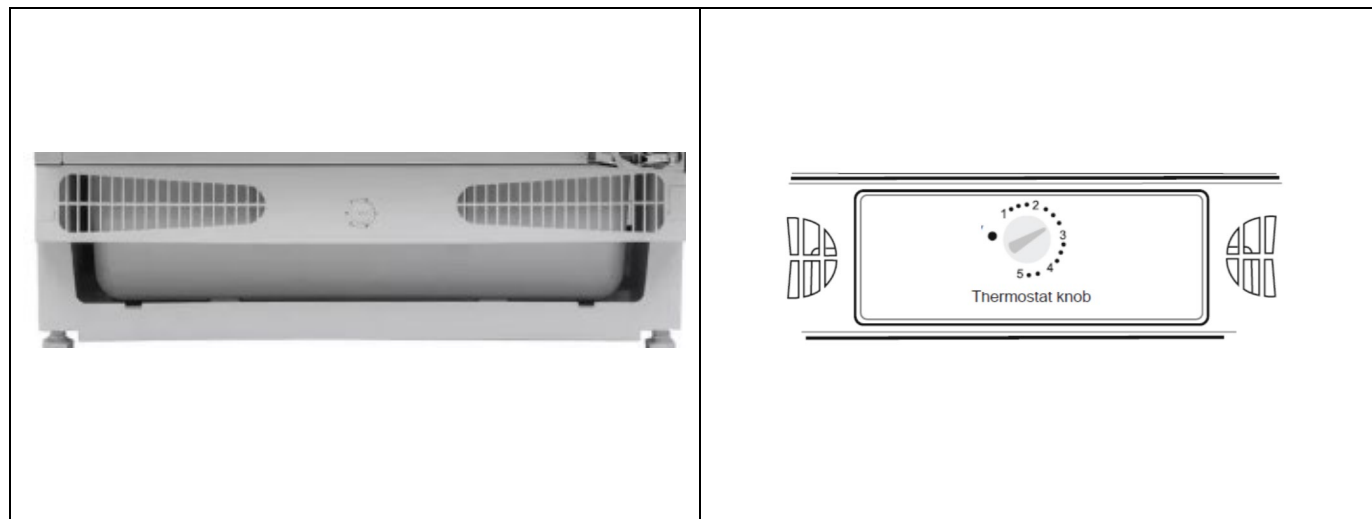




The thermostat automatically regulates the inside temperature of the refrigerator. By rotating the knob from position 1 to 5, colder temperatures can be obtained.

**Important note:** Do not try to rotate knob beyond position 1. It will stop your appliance from working.




- For short-term storage of food in the fridge, you can set the knob between minimum and medium positions (1-3).
- For long-term storage of food in the fridge, you can set knob to the medium position (3-4)
- Note that: the ambient temperature, temperature of freshly stored food and how often the door is opened, affects the temperature in the fridge. If required, change the temperature setting.
- When you first switch on the appliance, you should ideally try to run it without any food in for 24 hours and not open the door. If you need to use it straight away, try not to put a large quantity of food inside.
- If the unit is switched off or unplugged, you must allow at least 5 minutes before restarting in order not to damage the compressor.
- The larders (coolers) do not have a freezer compartment but can cool up to 4 - 6 °C.

REPLACEMENT PROCEDURE		Applicable models	EN
		General	
Part name	Replacement Lamp		

Unscrew the screws which are fixing the lamp cover and change lamp.

		
---	---	---

REPLACEMENT PROCEDURE		Applicable models	EN
		General	
Part name	Replacement the Door Switch		

Stick a tape to protect the body plastic. Flex it with the help of a tool like a slotted screwdriver	Also flex the top-side of the switch and then displace by pulling.
	
Put the switch connector cable in the housing. First place the top-side of the switch and then push the bottom side.	
	
After the switch is placed, complete the assembly by pushing.	
	



<b>ADDITIONAL SUPPORT</b>	<b>Applicable models</b>	<b>EN</b>
	<b>General</b>	

The following parts are available for the customer to undertake repairs at their own risk.  
Please carefully follow the guidance given in this manual including all safety measures.

- Door Handles
- Door Hinges
- Trays
- Baskets
- Door Gaskets

Parts can be obtained by calling the support service listed in this section.  
All repairs in this manual can be achieved using commonly available tools.

If you are in any doubt of your ability to carry out a repair, please use a professional repairer, also available through the support service.

Damage sustained to the appliance or future faults arising from poorly carried out repairs will not be covered under warranty.

## Help and assistance

If you require any technical guidance or find that your larder is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions or online at [www.bush-support.com](http://www.bush-support.com)

If you still require further assistance, call one of our experts on **0345 257 7271\***. To help us give you a fast and efficient service please have the following information ready.

Model Ref.

Serial number

Date of purchase

You can find these on the rating plate - a small information panel (usually a sticker or metal plate) on the rear of your appliance

This will be shown on your receipt

Local call rates apply\*

Lines open 8am-7pm Monday to Saturday an 10am-4pm Sunday.

\*Calls to Bush enquiry lines may attract a charge and set up fee residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see [www.bt.com/pricing](http://www.bt.com/pricing) for details

For security and training purposes, telephone calls to and from customer service centres maybe recorded and monitored. Calls from Republic of Ireland will attract international call charges

### Notes on disposal :



The symbol on the product or its packaging indicates that this product may not be treated as household waste. Instead it should be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling this product, please contact your local council office, your household waste disposal service or the shop where the product was purchased.