

BUSH

Customer Service Manual

**Integrated Under Counter
Fridge**

BEUCFR6082



Customer service manual

Under Counter Fridge

Contents

1	Precautions	Page 2
2	Door	Page 4
3	Thermostat Setting	Page 6
4	Replacement Lamp	Page 7
5	Replacement Door Switch	Page 8
6	Additional Support	Page 9

Precautions:

Always follow safety advice.

Always switch off and unplug the appliance before attempting to remove any part.

Always wear appropriate protective equipment when carrying out any work.

Always use the correct tools for carrying out any work.

Some repairs may not be suitable for unqualified users to carry out. If in doubt seek the advice of a profession repairer.

SAFETY PRECAUTIONS



Read all instructions before repairing the product.

Before any disassembly make sure appliance is unplugged.

There is electrical shock risk.

Use rated control equipment.

DO NOT attempt a product repair if you have any doubts as to your ability to complete the repair in a safe and satisfactory manner.

Make sure to check out Model name, Rated voltage, Rated current, Operation Temp, etc.

When you replace the parts, please use authentic parts to replace defective parts.

Before starting the dismantling, wear protective equipment.

Do not use multiple receptacles or extension cord.

Do not plug in damaged, torn or old plugs.

Do not allow children to play with the appliance or let them hang off the door.

Do not plug-in or out the plug from the receptacle with wet hands to prevent electrocution.

Do not place glass bottles or beverage cans in the freezer department. Bottles or cans may explode.

When taking ice made in the freezer department, do not touch it, ice may cause ice burns and/or cuts.





Do not cover the body or top of fridge with lace. This affects the performance of your fridge.

Fix the accessories in the fridge during transportation to prevent damage to accessories.






Leave to stand for at least before switching on to allow compressor oil to settle if transported horizontally.

Do not damage the refrigerant circuit.


Care must be taken while cleaning/carrying the appliance not to touch the bottom of the condenser metal wires at the back of the appliance, as this could cause injury to fingers and hands.

REPLACEMENT PROCEDURE		Applicable models	EN
		General	
Part name	Door		
A- Changing the Door Swing Direction to Right Hand			
1- Unscrew the two screws fixing the top hinges (Fig-1) and bottom hinges. (Fig-2) Remove the doors. (Fig-1)			
			
Figure 1		Figure 2	
2. Remove the top hinge screw caps (big) on the left side (Fig-3) and insert them to the right side. (Fig-4)			
			
Figure 3		Figure 4	
3. Remove the bottom hinge screw caps (big) on the left side and insert them to the right side. (Fig-5)		4. Unscrew the two screws fixing the top hinge and bottom hinges. Remove the hinges. (Fig-6)	
			
Figure 5		Figure 6	
5. Assemble the top hinge to the bottom of the door (Fig-7) and assemble the door and then assemble the bottom hinge to the top of the door. (Fig-8)			
			
Figure 7		Figure 8	

REPLACEMENT PROCEDURE		Applicable models	EN
		General	
Part name	Door		

B- Changing the Freezer Door Swing Direction	
1- Unscrew the screw fixing the freezer door hinge (Fig-1) and remove the freezer door (Fig-2)	
	
Figure 1	Figure 2
2- Unscrew the screw fixing the freezer door holder and remove it. (Fig-3)	3- Screw the freezer door holder to the right side. (Fig-4)
	
Figure 3	Figure 4
4- Assemble the freezer door and fix the freezer door hinge by tightening the screw. (Fig-5)	
	
Figure 5	

REPLACEMENT PROCEDURE		Applicable models	EN
		General	
Part name	Thermostat Setting		

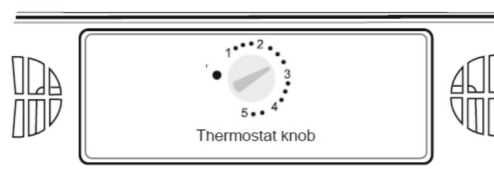

The thermostat automatically regulates the temperature inside the cooler and freezer compartments. Refrigerator temperatures can be obtained by rotating the knob to higher numbers; 1 to 3, 1 to 5 or SF

Thermostat settings:

1 – 2 : For short-term storage of food

3 – 4 : For long-term storage of food


5 : Maximum cooling position. The appliance will work longer. If required, change the temperature setting.

If device has SF position:

- Turn the knob to SF to freeze fresh food quickly. In this position, the freezer compartment will operate at lower temperatures. After your food freezes, turn the thermostat knob to its normal use position. If you do not change the SF position, your appliance work will automatically return to its last used thermostat position according to the time indicated in the note. Return the thermostat switch to the SF position and return it to normal use according to the time indicated in the note. If the thermostat switch is in the SF position when your appliance is first started, your appliance work will automatically return to the operation in the thermostat-3 position according to the time indicated in the note.




Super freezing:

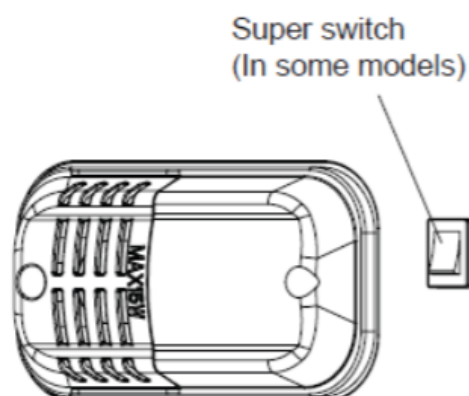This switch shall be used as superfreeze switch. For maximum freezing capacity, please turn on this switch before 24 hours placing fresh food. After placing fresh food in the freezer, 24 hours ON position is generally sufficient. In order to save energy, please turn off this switch after 24 hours from placing fresh food.






REPLACEMENT PROCEDURE		Applicable models	EN
		General	
Part name	Replacement Lamp		

Unscrew the screws which are fixing the lamp cover and change lamp.

		
---	---	---

REPLACEMENT PROCEDURE		Applicable models	EN
		General	
Part name	Replacement the Door Switch		

Stick a tape to protect the body plastic. Flex it with the help of a tool like a slotted screwdriver	Also flex the top-side of the switch and then displace by pulling.
	
Put the switch connector cable in the housing. First place the top-side of the switch and then push the bottom side.	
	
After the switch is placed, complete the assembly by pushing.	
	

ADDITIONAL SUPPORT	Applicable models	EN
	General	

The following parts are available for the customer to undertake repairs at their own risk.
Please carefully follow the guidance given in this manual including all safety measures.

- Door Handles
- Door Hinges
- Trays
- Baskets
- Door Gaskets

Parts can be obtained by calling the support service listed in this section.
All repairs in this manual can be achieved using commonly available tools.

If you are in any doubt of your ability to carry out a repair, please use a professional repairer, also available through the support service.

Damage sustained to the appliance or future faults arising from poorly carried out repairs will not be covered under warranty.

Help and assistance

If you require any technical guidance or find that your fridge is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions or online at

www.bush-support.com

If you still require further assistance, call one of our experts on **0345 257 7271***. To help us give you a fast and efficient service please have the following information ready.

Model Ref.

You can find these on the rating plate - a small information panel (usually a sticker or metal plate) on the rear of your appliance

Serial number

Date of purchase

This will be shown on your receipt

Local call rates apply*

Lines open 8am-7pm Monday to Saturday and 10am-4pm Sunday.

*Calls to Bush enquiry lines may attract a charge and set up fee residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see www.bt.com/pricing for details

For security and training purposes, telephone calls to and from customer service centres may be recorded and monitored. Calls from Republic of Ireland will attract international call charges

Notes on disposal :



The symbol on the product or its packaging indicates that this product may not be treated as household waste. Instead it should be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling this product, please contact your local council office, your household waste disposal service or the shop where the product was purchased.