

Customer Service Manual

Washing Machine

WMSAB714EW WMSAB814EB /EW WMSAB914EB /EW WMSAB1014EB /EW



Customer service manual

BUSH WMSAB Series Washing Machine 7,8,9,10,14Kg

Contents

1	Precautions	Page 2
2	Tub Bellow Seal	Page 4
3	Detergent Drawer	Page 11
4	Door, Hinge, Handle	Page 12
5	Door Lock	Page 14
6	Pump	Page 16
7	Heater	Page 22
8	Additional Support	Page 28

Precautions:

Always follow safety advice.

Always switch off and unplug the appliance before attempting to remove any part.

Always wear appropriate protective equipment when carrying out any work.

Always use the correct tools for carrying out any work.

Some repairs may not be suitable for unqualified users to carry out. If in doubt seek the advice of a profession repairer.4

SAFETY PRECAUTIONS



Before any disassembly/repair operation make sure appliance is unplugged, water tap is closed and heating elements are cooled down. There is electrical shock, burning and flood risk.



Please replace whole cable group even in case there is any minor failure with cables / terminals / sockets. Never try to repair nor to solder cable group. It may cause smoke, ignition and there is major risk of electrical shock.



Straightly pull out or insert the terminals.

Do not twist it. It may be the cause of damage or ignition.



Always use insulator gloves to prevent injury by metal edges or to prevent electrical shock during electrical tests.

Work with uniforms having long sleeves to protect your arms from metal edges.



Always use original spare parts. You may harm appliance, end user, environment or yourself using untested and unapproved 3rd party spare parts.



Use right tools to prevent any wear or damage to components during assembly/disassembly.



Do not touch any rotating object with hand unless it stops completely. Slow rotation may also roll in your hands and cause injury.



Rebuilding is prohibited. Do not rebuild machine parts and components when repairing service. It may be the cause of damage or ignition.

REPLACEMENT PROCEDURE Part name Tub Bellow Seal Applicable models General

1. Necessary Tools



- A. Pliers
- B. Flat head thin screwdriver
- C. Cordless screwdriver or classic screwdriver with torx bits (T20)

2. Disconnection



2.1. Remove the plug



2.2. Turn off the tap and disconnect the hose from the valve

Applicable models

General

EN

Part name

Tub Bellow Seal



2.3. Turn off the tap and disconnect the hose from the valve

3. Disassembly Instructions



 Turn off the tap and disconnect the hose from the valve



3.2. Push the top-plate back and pull it up.



 While pressing siphon cover keep pulling drawer to remove it.



3.4 Remove the screw which fixes the control panel to the front panel.

Applicable models

Part name Tub Bellow Seal

General

EN



3.5 Remove two screws fixing control panel.



3.6 Remove the screw on support bracket and two screws fixing front panel to body



3.7 Remove the screw fixing twinjet elbow.



3.8 Remove the screws fixing the door lock.



3.9 Remove the screw and plastic part located under the pump cover



3.10 Remove the screw fixing the front panel at the bottom.



3.11 Remove the wire by using small screwdriver and push the seal to the inside

Applicable models

General

EN

Part name

Tub Bellow Seal



3.12 Pull up and remove the front panel.

3.13 Remove twinjet hoses from tub bellow seal pulling them up.



3.14 Remove the tub gasket clip by using small screwdriver.



3.15 Hold the gasket bellows and the gasket body pull out in and out at the same time.

4. Assembly Instructions





4.1. Guides must be matched

4.2. Fit the tub bellow seal to the front tub


Applicable models

General

EN

Part name


Tub Bellow Seal

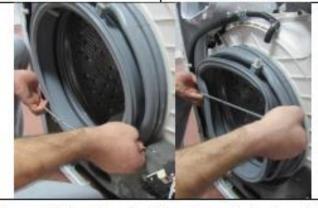



4.3. Pull the tub gasket clip to the up by hand and fit it


Assemble the twinjet nozes and tighten the 4.4. clips

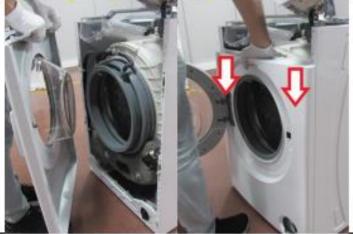



4.5. Put the front panel to the cabinet and push down to set it

4.6. Tighten the door lock screw

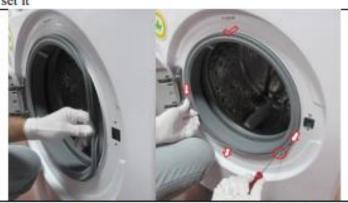



Pull the tub bellow seal to the outside and assemble the wire by using small screwdriver

4.8. Tighten the screw fixing the front panel at the bottom

Applicable models

General

EN

Part name

Tub Bellow Seal



4.9. Fit the screw and plastic part located under the pump cover



4.10. Assemble the twinjet elbow to the front panel



 Tighten the screw on support bracket and two screws fixing front panel to body



4.12. Tighten two screws fixing control panel.




 Tighten the screw which fixes the control panel to the front panel.



4.14. While pressing siphon cover keep pushing drawer to fit



4.15. Fit the upper tray according to movement above

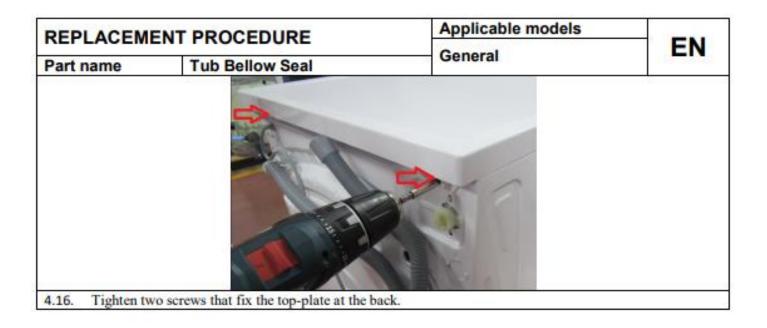


Applicable models REPLACEMENT PROCEDURE General

Detergent Drawer

EN


1. Disassembly Instructions

Part name

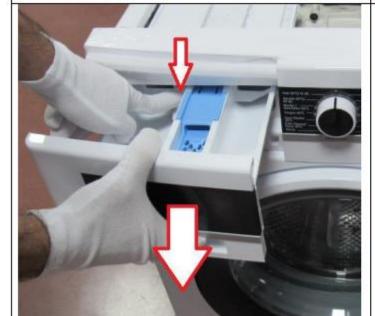


1.1. While pressing siphon cover keep pulling drawer to remove it

2. Assembly Instructions

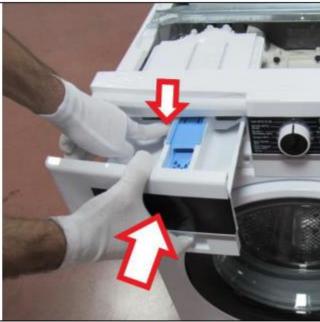

2.1. While pressing siphon cover keep pushing drawer to fit

		Applicable models	
REPLACEMENT PROCEDURE		General	EN
Part name	Door, Hinge, Handle		

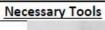



- A) Plier
- B) Flat head thin screwdriver
- C) Cordless screwdriver or classic screwdriver with torx head (T25)

1. Disconnection



Remove the plug

REPLACEMENT PROCEDURE		Applicable models	
		General	EN
Part name	Door, Hinge, Handle	No constitution of the second	

1. Remove two screws that fix the door (using the T25)	0
	725
2. Pull the door up	3. Remove screws that fix the door group.
Remove the outer plastic frame from the door assembly. This would enable access to fixings underneath	5. Remove the door from the frame
6. Remove six screws that fix the door hinge	7. Remove the door handle

Applicable models

General

Part name

Door Lock

EN

1. Necessary Tools



- A) Flat head thin screwdriver
- B) Torx T20
- C) Cordless screwdriver or classic screwdriver to use torx head (T20)

Disconnection



Remove the plug

Disassembly Instructions



3.1. Remove the screws fixing the door lock.



3.2. Remove the wire by using small screwdriver

Applicable models

General

EN

Part name

Door Lock



3.3. Remove the right side of the tub bellows seal and reach to door lock

4. Assembly Instructions



Unplug the connector and remove the door lock.
 Connect the new door lock to connector



4.2.While supporting the door lock by hand, tighten the screws fixing the door lock.



4.3. Fix the tub bellow seal and fix the wire by using the small screwdriver

REPLACEMENT PROCEDURE Applicable models

Part name Pump General

EN

Necessary Tools



- A) Plier
- B) Flat head thin screwdriver
- C) Cordless screwdriver or classic screwdriver with torx head (T20)

1. Disconnection



1.1. Remove the plug



 Turn off the tap and disconnect the hose from the valve



1.3. Disconnect the drain hose

2) Disassembly Instructions



Remove two screws that fix the top-plate at the back.



2.2. Push the top-plate back and pull it up.

General

Applicable models


EN

Part name


Pump



While pressing siphon cover keep pulling drawer to remove it.

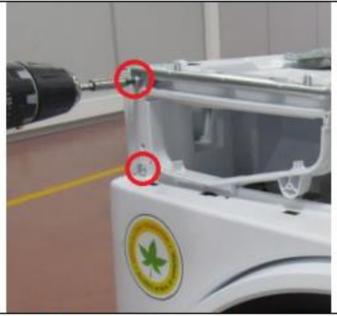

 Remove the screw on support bracket and two screws fixing front panel to body

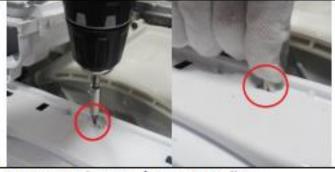

2.5. Remove the screw fixing twinjet elbow.




2.6. Remove the screws fixing the door lock.



2.7. Remove the screw and plastic part located under the pump cover

REPLACEMENT PROCEDURE Part name Pump Applicable models General EN

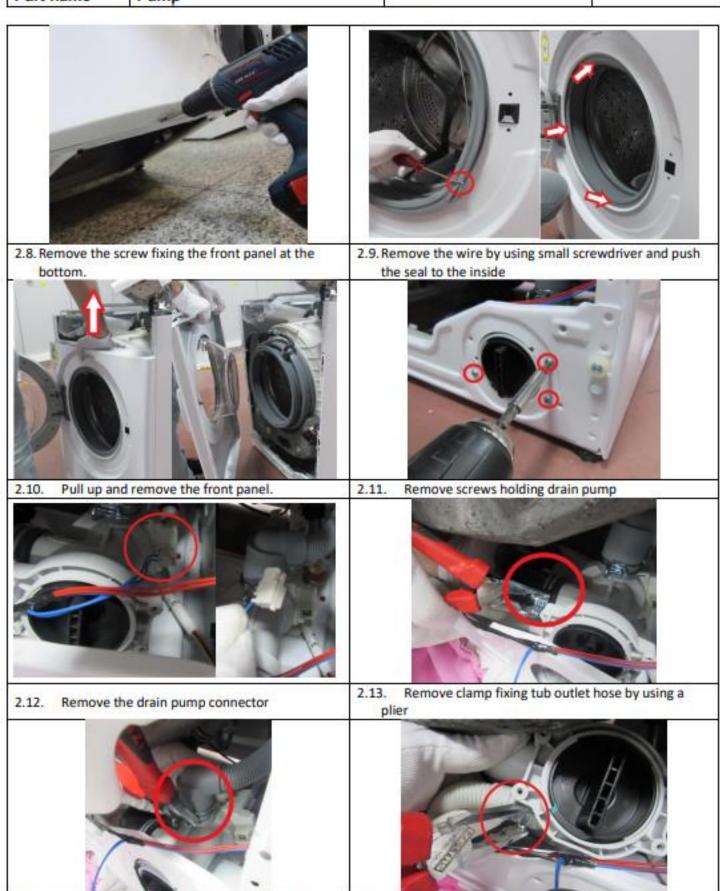

2.15.

Remove clamp holding twinjet hose by using a

Remove clamp holding drain hose by using a

2.14.

plier.

REPLACEMENT PROCEDURE Part name Pump Applicable models General



2.16. Remove the drain pump and change with the new one


3. Assembly Instructions




3.1. Connect the twinjet hose by using a plier to fix the clamp



3.2. Connect the drain hose by using a plier to fix the clamp

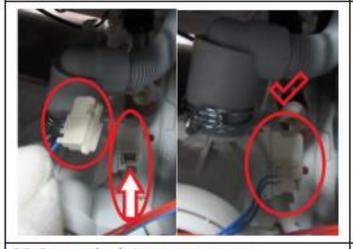

3.3. Connect the drain pump connector

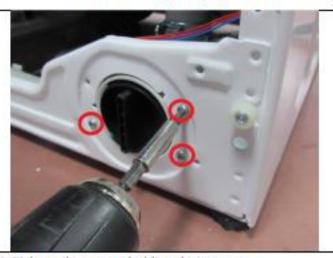

3.4. Tighten the screws holding drain pump



3.5. Pull the tub bellow seal to the outside and assemble the wire by using small screwdriver



3.6. Tighten the screw fixing the front panel at the bottom

Applicable models General

EN

Part name

Pump



3.7. Tighten the screw and plastic part located under the pump cover





3.8. Assemble the twinjet elbow to the front panel

 Tighten the screw on support bracket and two screws fixing front panel to body





3.10. Tighten two screws fixing control panel.

3.11. Tighten the screw which fixes the control panel to the front panel.




3.12. While pressing siphon cover keep pushing drawer to fit it



3.13. Fit the upper tray according to movement above

REPLACEMENT PROCEDURE		Applicable models	
		Conoral	EN
Part name	Pump	General	

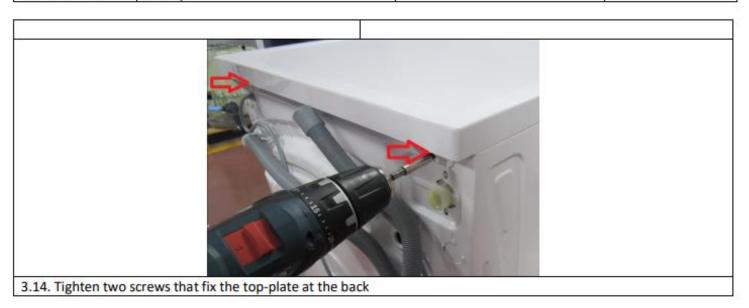

Applicable models REPLACEMENT PROCEDURE **EN** General Part name **HEATER**

HEATER REPAIR INSTRUCTION

1. Disconnection





Remove the plug





Turn off the tap and disconnect the hose from the valve



Disconnect the drain hose

2. Necessary Tools



- B. Flat head screwdriver C. Ratchet Wrench with M8 head


3. Disassembly Instructions



Remove two screws that fix the top-plate at the back.



Push the top-plate back and pull it up.

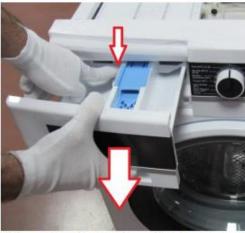

While pressing siphon cover keep pulling drawer to remove



Remove the screw which fixes the control panel to the front panel.



Remove two screws fixing control panel.




Remove the screw on support bracket and two screws fixing front panel to body



Remove the screw fixing twinjet elbow.



Remove the screws fixing the door lock.

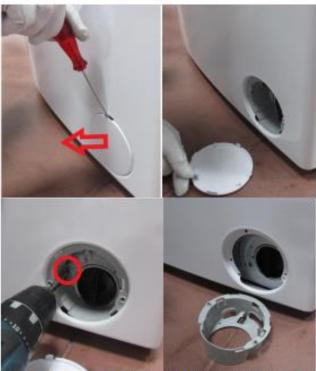

Remove the screw and plastic part located under the pump cover



Remove the screw fixing the front panel at the bottom.



Remove the wire by using small screwdriver and push the seal to the inside




Pull up and remove the front panel.



Remove the heater sockets





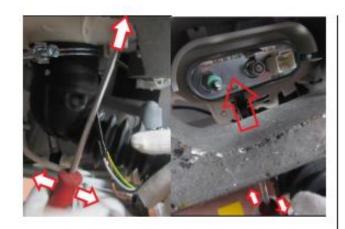
















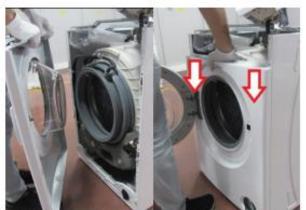

Put the front panel to the cabinet and push down to set it



Tighten the door lock screw



Pull the tub bellow seal to the outside and assemble the wire by using small screwdriver



Tighten the screw fixing the front panel at the bottom



Tighten the screw and plastic part located under the pump cover



Assemble the twinjet elbow to the front panel




Tighten the screw on support bracket and two screws fixing front panel to body



Tighten two screws fixing control panel.



Tighten the screw which fixes the control panel to the front panel.

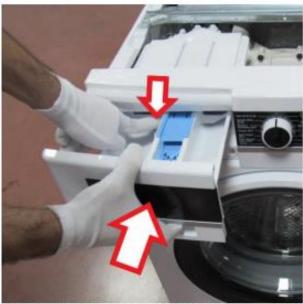

While pressing siphon cover keep pushing drawer to fit it



Fit the upper tray according to movement above



Tighten two screws that fix the top-plate at the back.

	Applicable models	
ADDITIONAL SUPPORT	General	EN

The following parts are available for the customer to undertake repairs at their own risk. Please carefully follow the guidance given in this manual including all safety measures.

- Door
- Door hinge and seals
- Other seals
- Door locking assembly
- Plastic peripherals such as detergent dispensers

Parts can be obtained by calling the support service listed in this section. All repairs in this manual can be achieved using commonly available tools.

If you are in any doubt of your ability to carry out a repair, please use a professional repairer, also available through the support service.

Damage sustained to the appliance or future faults arising from poorly carried out repairs <u>will not be covered under</u> <u>warranty</u>.

Help and assistance If you require any technical guidance or find that your washing machine is not operating as intended, a simple solution can often be found in the Troubleshooting section of these instructions or online at www.bush-support.com If you still require further assistance, call one of our experts on 0345 257 7271*. To help give us give you a fast and efficient service please have the following information ready: You can find these on Model Ref. the rating plate - a small information panel (usually a sticker or metal plate) on Serial number the rear of your appliance This will be shown on Date of purchase your receipt Local call rates applies* Lines open 8am-7pm Monday to Saturday and 10am-4pm Sunday. *Calls to Bush enquiry lines may attract a charge and set up fee from residential lines depending on your call plan/tariff. Mobile and other

providers costs may vary, see www.bt.com/pricing for details.

Notes on disposal:



The symbol on the product or its packaging indicates that this product may not be treated as household waste. Instead it should be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling this product, please contact your local council office, your household waste disposal service or the shop where the product was purchased.