

Beldray

Est. 1872

Nobody Does It Better

Air Cooler, Humidifier and Purifier

Instruction Manual



THE **SCIENCE**
BEHIND COOL

Please read all instructions carefully and retain for future reference.

Getting Started

Remove the appliance from the box.

Remove any packaging from the product.

Place the packaging inside the box and either store or dispose of safely.

In the Box

Air cooler

2 freezer packs

Remote control

Instruction manual

Features

3in1 function: air cooler, purifier and humidifier

Purifies air by removing unpleasant odour.

Large cooling capacity

Timer function

Carry handle for easy manoeuvre

5 litre tank capacity

360° wheels

Remote control

3 speed settings

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed. Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children younger than 3 years old should be kept away from the appliance unless continuously supervised.

Children from age 3 and less than 8 years should only switch the appliance on/off, if it has been placed or installed in its intended normal operating position, if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children from age 3 and less than 8 years must not plug in, regulate and clean the appliance or perform user maintenance.

Particular attention should be given where children and vulnerable people are present.

This appliance contains no user serviceable parts. Attempts to repair may place the user at risk of harm.

If the supply cord or plug is broken, do not use the appliance and ensure that a qualified electrician fixes it.

Never put the power cord near to or in contact with the hot parts of the appliance.

Keep the supply cord away from heat or sharp edges that could cause damage.

Keep the supply cord out of reach of children.

This appliance should not be operated by means of an external timer or separate remote control system.

Do not immerse the appliance or plug in water or any other liquid.

Do not touch the appliance during use, as it will get very hot and could cause injury.

Do not use the appliance after a malfunction or if it has been dropped or damaged.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not leave the appliance unattended whilst it is in use.

Do not attempt to move the appliance during use.

Do not use the appliance for anything other than its intended use.

Do not use the appliance outdoors.

Do not clean the appliance with abrasive chemicals or materials such as scourers as they may damage the appliance and impair future function.

Do not shake the appliance.

Do not spray insecticide or chemical solvents on the appliance.

Do not use accessories that are not recommended or supplied by the manufacturer.

Do not lift the appliance by the front panel.

Always unplug the appliance after use and before any cleaning or maintenance.

Always use the appliance on a stable, heat-resistant surface.

Ensure that the appliance has cooled fully after use, before cleaning or storing away.

Empty the water tank and unplug from the mains power supply before storing the appliance.

Avoid water running into the appliance.

Use of an extension cord with the appliance is not recommended.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

Warning: If a bad odour is emitted from the appliance, turn the unit off and unplug from the mains power supply.

To disconnect the appliance from the mains power supply, pull directly on the plug; do not pull on the power cord.

Caution: Never run the appliance with an empty water tank.

Description of Parts





Instructions for Use

Before using the Air Cooler

Ensure that the air cooler is unplugged from the mains power supply and turned off.

At the back of the air cooler is a tray that should be removed and filled with water. To replace the water tank simply push it back into position.

Before using the air cooler or filling the water tank with water, ensure that the water stopper is plugged into the bottom of the water tank.

The water tank has a capacity of 5 litres, this must always have water in it no lower than the minimum and no more than the maximum level; you can check the water level through the transparent window at the front of the air cooler. Fully push the water tank into position to have total visibility of the water level.

Use the freezer packs supplied to achieve quicker, additional cooling by adding them to the water tank.

Using the Air Cooler

Turn the air cooler on by pressing the ON button on the control panel.

Warning: Never run the air cooler with an empty water tank.



Water tank at the back of the unit



Water tank level indicator



Water stopper

For Cooling

Ensure that the air cooler is unplugged from the mains power supply and turned off.

Open the water tank at the back of the unit by gently pulling it out.

Add clean water into the water tank and push the tray back into position.

Regularly check the water level through the transparent window at the front of the air cooler.

The water level should be no higher than the MAX. level and never lower than the MIN. level.

Plug the air cooler into the mains power supply.

Press the  button on the control panel to turn the air cooler ON.

Press the Speed button on the control panel to select the fan speed as follows:

HI: Fast

MI: Medium

LO: Slow

For extra cooling, place the freezer packs (supplied) into the designated areas within the water tank.

Air Flow

Plug the air cooler into the mains power supply.

Press the  button on the control panel to turn the air cooler ON.

Press the WIND button on the control panel and the airflow will automatically oscillate from left to right.


Press the Speed button on the control panel to select the fan speed as follows:

HI: Fast

MI: Medium

LO: Slow

To regulate the airflow up or down, manually adjust the two levers on the front at the right side of the panel.

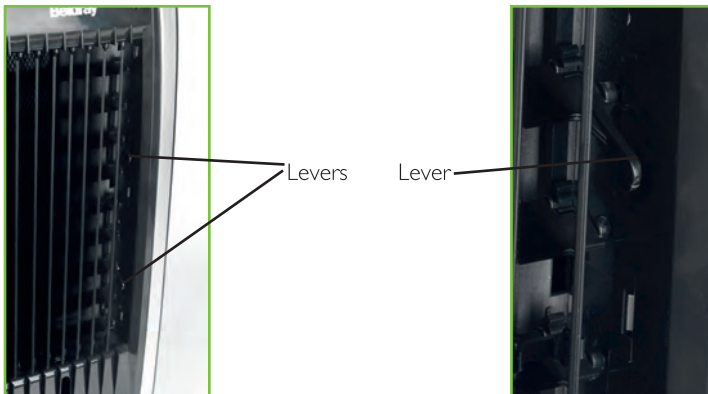

Timer

There are four timer choices selected with the TIMER Button, each corresponding with an indicator light:

0.5H: half an hour

1H: one hour

2H: two hours

4H: four hours

Press the TIMER button to select any of the above settings.

The unit will automatically switch off when selected time is up.

If the TIMER button is not used, the unit will remain on until it is manually switched off.

By using a combination of the four indicator lights, you can set the timer on for up to 7½ hours by continuously pressing the TIMER button until all four lights turn on.

Mode

Press the MODE button to select NORMAL, NATURAL or SLEEP MODE.

Selecting NORMAL will allow you to control the speed as desired, using the SPEED button.

Selecting NATURAL will automatically set the speed to LO and this cannot be changed unless the MODE is changed.

Selecting SLEEP will automatically set the speed to HI and again, this cannot be changed unless the MODE is changed.

Remote Control

Battery Installation

Slide the battery compartment on the remote control down to open and install 2 × AAA batteries (not included), observing their polarity. Replace the cover by sliding it up on to the battery compartment.

Note: The polarity of the batteries must be in accordance with that indicated in the remote control panel. Do not mix new and used batteries.

Using the Remote Control

Point the remote control in the direction of the air cooler, keeping within a close distance.

WIND Button: pressing this button will change the direction of the air from side to side.

TIMER Button: each press of the TIMER button will increase the operation time by ½ hour, up to a total of 7½ hours with the LED's indicating the selected setting. When the set time has been reached; the appliance will automatically switch off.

SPEED Button: using this button will cycle the air cooler through the three different speed settings – HI, MI, LO. Each LED will indicate the setting.

MODE Button: this button will cycle between the NORMAL, NATURAL or SLEEP MODE as described in the 'Mode' section.

COOL Button: press this button to select the air cooler's cooling operation.

POWER Button: use this button to switch the appliance ON/OFF.

Note: If the remote control is not going to be used for long periods time, please remove the batteries to avoid leakage.

Battery Safety

Ensure that the battery compartment is secure.

Only use the batteries recommended.

Batteries are to be inserted with the correct polarity and should not be exposed to excessive heat sources such as fire and direct sunlight.

Remove any batteries from the appliance when it is not being used for a long period of time, to avoid leakage.

Exhausted batteries should be removed from the appliance to avoid leakage.

Replace a full set of batteries at any one time.

Supervise children with batteries at all times.

Do not mix alkaline, standard (carbon zinc) and rechargeable batteries (nickel hydride).

Do not mix old and new batteries.

Non-rechargeable batteries should not be recharged.

Rechargeable batteries must be removed from the remote control before being charged.

Rechargeable batteries should only be recharged under adult supervision.

The supply terminals are not to be short-circuited.

Only batteries of the same or equivalent type as those recommended should be used with this remote control

Do not dispose of batteries in a fire.

Do not dispose of batteries in your household waste.

To dispose of the batteries, take them to your local recycling station. Contact your local government offices for details.

This product requires 2 x AAA batteries (not included).

Cleaning and Maintenance

Always unplug the air cooler from the mains power supply before attempting any cleaning or maintenance.

The filter supplied is already assembled and should be cleaned regularly to keep it dust free.

To open the filter cover, pull the two clips on the reverse of the unit, at the top of the frame and slide the cover upwards.

Remove the filter from its frame and tap gently to remove any dust.

Place the clean filter back into the frame and then carefully reattach the filter frame by sliding it down, until it locks into position.

Use a soft, dry cloth to wipe clean the air cooler.

Never immerse the air cooler in water or any other liquid.

Do not use harsh or abrasive cleaning detergents or scourers.



Clips on the filter frame



Slide the cover upwards and remove the filter

Specification

Input: 220-240V~50Hz

Output: 70W

Connection to the mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

FOR UK USE ONLY - Plug fitting details
(where applicable).

The wire coloured BLUE is the NEUTRAL and must be connected to the terminal marked N or coloured BLACK.

The wire coloured BROWN is the LIVE wire and must be connected to the terminal marked L or coloured RED.

On no account must either the BROWN or the BLUE wire be connected to the EARTH terminal (\perp).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.


If in doubt consult a qualified electrician who will be pleased to do this for you.

Non-rewireable mains plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - DISCONNECT IT FROM THE MAINS and then cut it off the mains lead and immediately dispose of it safely. Never attempt to re-use the plug or insert it into a socket outlet as there is a danger of an electric shock.

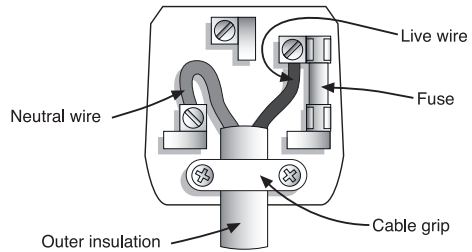

UP Global Sourcing

Manchester, OL9 0DD.

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: +44 (0)333 577 9820*

*Telephone lines are open Monday – Friday, 9am – 5pm (Closed Bank Holidays)

Email: customersupport@beldray.co.uk

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

This product is guaranteed for a period of 1 year from the date of purchase against mechanical and electrical defects.

This guarantee is only valid if the appliance is used solely for domestic purposes in accordance with the instructions and provided that it is not connected to an unsuitable electricity supply or dismantled or interfered with in any way or damaged through misuse. Under this guarantee we undertake to repair or replace free of charge any parts found to be defective. Reasonable proof of purchase must be provided.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

In line with our policy of continuous development we reserve the right to change this product, packaging and documentation specification without notice.

Consumables are not guaranteed i.e. plug and fuse.

The crossed out wheelee bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



