

ERROR WARNING CODES

ERROR CODE	PROBLEM	SOLUTION
E0	Battery low voltage alarm	Check battery voltage or charge the scooter.
E1	Battery high voltage alarm	Check battery voltage or stop using.
E2	Controller failure	Check and replace the controller.
E3	MOS failure	Stop using the scooter for 15 minutes and restart or replace the controller.
E4	Communication failure	Check whether the displayer or controller cable is in good connection.
E5	Motor hall failure	Check whether the motor hall terminal is connected well or the motor hall is broken.
E6	Accelerator failure	Check the throttle or wiring.
E7	Brake failure	Check the brake shifter or wiring.
E8	Overcurrent protection	Stop using the scooter for 5 minutes and restart.
E9	Blocking failure	Turn off the scooter and re-start.
E10	Communication failure (Controller and battery)	Please check the cable (between controller and battery) is in good connection

If you have any problems, contact Customer Services on +44 (0) 800 731 0006 or email customerservices@zinchq.com