

**SEIKO**

**SEIKO**

**Oxford  
CROSSWORD  
SOLVER**

**ER3700 OPERATION MANUAL**

ALWAYS press the "RESET" button on the front of the unit after battery replacement or if the unit fails to operate properly.

UKE1H67AA

**SII** ● Seiko Instruments Inc.

Thank you for purchasing the ER3700.  
Please read this operation manual carefully before using the product.

The ultimate electronic crossword solver, including a unique and powerful knowledge search facility - plus other useful features and 10 great word games.

The Oxford Crossword Dictionary Second Edition © Oxford University Press 1998, 2001 with additional material © Oxford University Press 2007.  
The Little Oxford Thesaurus Third Edition © Oxford University Press 2006.

**SEIKO** is a registered trademark of Seiko Holdings Corporation.

SII is a registered trademark of Seiko Instruments Inc.

© 2008 Seiko Instruments Inc.



#### EC DECLARATION OF CONFORMITY

This is to certify that this equipment fully conforms to the protection requirements of the following EC Council Directives on the approximation of the laws of the member states relating to:-

<u>Directives</u>	<u>Title</u>
89/336/EEC	Electromagnetic Compatibility
<u>Applicable Standards</u>	
EN55022: 1998	Electromagnetic Compatibility - Emissions (Radiated)
EN55024: 1998	Electromagnetic Compatibility - Immunity (Radiated Susceptibility, ESD)

**SEIKO UK Limited** SC House, Vanwall Road, Maidenhead, Berks. SL6 4UW U.K.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



Note: this device should be disposed of through your local electronic product recycling system  
- do not throw away in your domestic rubbish.

## CONTENTS

Functions and Features .....	2	Word Maker .....	52
The Keys and their Functions ....	8	Word Viewer .....	54
Preparation for using the Unit ..	10	Games .....	56
1. Installing Batteries .....	10	Hangman .....	58
Resetting: .....	11	User Hangman .....	61
Changing Batteries: .....	12	Jumble .....	63
2. Contrast Adjustment .....	13	User Jumble .....	65
3. Demo Function .....	14	Beat the Clock .....	67
Spellchecker .....	16	Memory .....	69
Thesaurus .....	22	Synonyms .....	71
Smart Jump .....	27	Crossword Quiz .....	73
Solvers .....	28	Tops and Tails .....	75
Crossword Solver .....	29	Word Challenge .....	77
Anagram Solver .....	32	Calculator .....	80
Abbreviation Solver .....	34	Converters .....	82
Abbreviation Finder .....	36	SET Mode .....	88
Knowledge Viewer .....	38	Help function .....	93
Knowledge Finder .....	42	FAQ's .....	94
Phrase Finder .....	48	Proper Use / Specifications .....	98
Letter Changer .....	50	ONE YEAR LIMITED WARRANTY .....	99

# Functions and Features

---

## 1 Solvers

### Crossword Solver

This product contains over 250,000 words from The Oxford Crossword Dictionary Second Edition to help you solve hard to finish crosswords and other word games. Simply fill in the letters you know and put “?” , “\*” or “#” for the ones you don’t to complete those hard-to-finish puzzles.

### Anagram Solver

The unit contains over 250,000 words from The Oxford Crossword Dictionary Second Edition.  
Simply type a word or a jumble of letters and the solver will build a list of as many anagram words as possible.

### Abbreviation Dictionary

You can decode over 10,000 common abbreviations from The Oxford Crossword Dictionary Second Edition.  
Simply type an abbreviation and the solver will display as many meanings as possible.

### Knowledge Solver

The Knowledge Solver contains 13 categories with 256 encyclopedic lists from The Oxford Crossword Dictionary Second Edition.  
You can view the knowledge database by scrolling through the categories and lists, or you can search the knowledge database using keywords and wildcards.

## Phrase Solver

The unit will help you to find phrases containing your keywords from the extensive 250,000 entries from The Oxford Crossword Dictionary Second Edition. Simply type a word and the solver will build a list of as many phrases as possible.

## Letter Changer

This solver will allow you to view possible alternative words, by changing one letter at a time. Simply type a word and the solver will build a list of as many words as possible by changing one letter at a time from your entry word.

## Word Maker

The unit contains over 250,000 words from The Oxford Crossword Dictionary Second Edition. Simply type a list of letters and the solver will build a list of possible words.

## 2 Thesaurus -- Finding Synonyms

You can find synonyms for the word you enter. When the word you enter has more than one meaning, the unit will group the synonyms according to part of speech and meaning. The unit can provide over 2.5 million synonym links including alternative and opposite words. Thesaurus entry words, their synonyms, and how the synonyms are grouped, all come from The Little Oxford Thesaurus.

## 3 Games

10 great vocabulary-building word games to challenge your command of the English language.

Hangman, User Hangman, Jumble, User Jumble, Beat the Clock, Memory, Synonyms, Crossword Quiz, Tops and Tails, Word Challenge.

User skill levels: Beginner, Intermediate, Advanced

#### **4 Spellchecker**

Instant phonetic spelling correction for over 250,000 words ensures you will always have the answer at your fingertips.

You can search a word with wildcards ( “?” , “\*” or “#” ) if you are uncertain of the spelling.

#### **5 Calculator**

A full function calculator with memory and % is included.  
12 digits, 1 Memory.

#### **6 Converters**

The conversion function enables you to convert foreign currencies and metric/imperial units of length, area, volume, weight, capacity, power and temperature.

You can also convert foreign clothing sizes of shirts, shoes, hats etc. for men, women and children.

#### **7 Setting function**

You can customize the following operating conditions:

Demo Message, LCD Contrast, Games Level, Game Scores, Variant Spelling.

#### **8 DEMO Function**

A demonstration display explains the contents of the unit.

 
The demonstration message starts automatically after you press the ON key.

#### **9 HELP Function**

An explanation of how to operate the various functions is simply explained on the screen at each operational stage in each mode.

Press the help key at any point to display a context sensitive help message.

# The Keys and their Functions

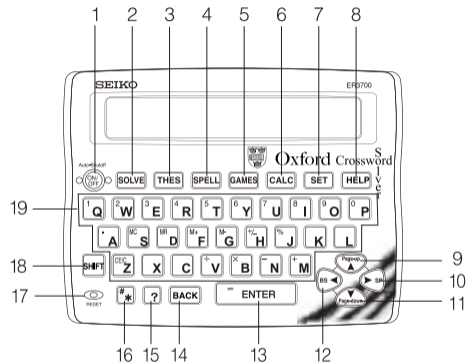

- The unit will automatically **TURN OFF** when not used for approximately 3 minutes.


- 1 Turns the power ON and OFF.
- 2 Selects Solver mode.
- 3 Selects Thesaurus mode.
- 4 Selects Spellchecker mode.
- 5 Selects Game mode.
- 6 Selects Calculator mode, Currency, Metric/Imperial and Clothing Size Converters.
- 7 Activates Setting function.
- 8 Activates Help function.
- 9 For scrolling back through the lists in memory. / For selecting the menu in the Converter mode.
- 10 Enters a single blank space when pressed once. / For shifting the display to the right.
- 11 For scrolling down through the lists in memory. / For selecting the menu in the Converter mode.
- 12 For deleting the last input character. / For shifting the display to the left.
- 13 Executes the functions.
- 14 For deleting the last input character. / Returns to the previous screen.
- 15 Substitutes for a single letter when you are uncertain of a spelling.
- 16 Used instead of one or more letters if you don't know how to spell a word.
- 17 RESET button.
- 18 Shift Key.
- 19 Letter, numeral and symbol input keys.

# Preparation for using the Unit
 
## 1. Installing Batteries

The unit is powered by two (2) “AAA” size batteries. Before using the unit, please install the batteries as follows.

1. Turn the unit over.
2. Remove the screw and the battery cover.
3. Insert two (2) new “AAA” batteries according to the polarity (+,-) mark inside the battery compartment.
4. Replace the battery cover and the screw.
5. Press the “RESET” button on the front of the unit. ( See page 11. )  
The contrast adjustment display will appear. ( See page 13. )

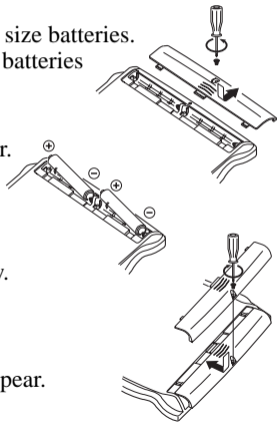

## ● Resetting:

If the unit does not operate properly after the battery has been replaced, or if at any time the unit fails to operate properly, gently press the “RESET” button on the front of the unit.





## ● Changing Batteries:

The batteries need to be changed as soon as the display becomes dim. Press the "RESET" button on the front of the unit after battery replacement. ( See page 11. )

- \* Make sure that the power is switched off before replacing the batteries.
- \* Do not use a previously used battery together with a new battery.





### CAUTION

- The batteries may pose a choking hazard to small children.
- Keep the batteries and product away from small children.
- Do not expose the batteries to open flame or intense heat.
- \* Never use batteries other than those specified.
- \* Rechargeable batteries MUST NOT be used.
- \* Remove the batteries from the unit if you do not intend to use it for a long duration.

## 2. Contrast Adjustment

1. After resetting, the contrast adjustment display will appear.







2. You can use either   or   to adjust the contrast of the display Level 1 to Level 11. (Initial setting = 6)



- 3 Press  to finish.

The display will enter the Spellchecker mode.

- \* If you want to adjust the contrast of the display again, press  . Select "LCD Contrast" by using  or  and then press  . ( See page 89. )

### 3. Demo Function

When you turn on the power, a demonstration display will begin to explain the contents of the unit.







- \* **You can stop the demonstration by pressing any of the keys.**

The unit will show the initial display of the mode used before the power was last turned off.

 


:

### ● To disable the demo function

- 1 Press **SET** .  
Press  or  to select “*Demo Message*”.
- 2 Press **ENTER** .
- 3 Select “*Disable Demo*” by using   or   .
- \* If you want to see the demonstration display again, select “*Enable Demo*”.
- 4 Press **ENTER** to finish.

( See page 88. )

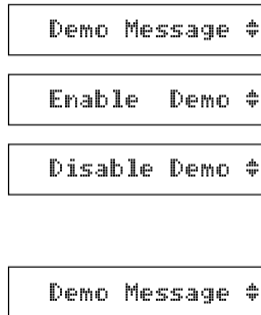

# Spellchecker

## ● If the spelling of a word you enter is correct:

1 Press **[SPELL]** .

```
Spellchecker
```

2 Type a word to be checked.

*Example: psychology*

```
psychology_
```

3 Press **[ENTER]** .

After the display “*Correctly Spelt*”, the entered word will be displayed in boldface.

```
Checking... [ ]
```

```
Correctly Spelt
```

```
psychology [ ]
```

4 Phonetically similar words may also be displayed by pressing **[Page-down]** or **[Page-up]** .

```
↓ [Page-down] [Page-up] ↑  
psychologies [ ]
```

\* To clear the display and spell check another word, simply enter your new word.

## ● Entering and Correcting Letters

\* Up to 25 letters can be entered.

\* Use **[Space]** to enter a space.


\* Corrections can be made by using **[BS]** or **[BACK]** .

\* The entire display can be cleared by pressing **[SPELL]** .

## ● If the spelling of a word you enter is incorrect :

- 1 Type a word to be checked.





*Example: sycology*

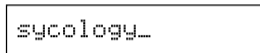

- 2 Press **ENTER**.

When the spelling of a word entered is incorrect, a list of correctly spelled words that are phonetically similar to the entered spelling is prepared.

After the display “*Correction List*”, the first proposed word will be displayed.

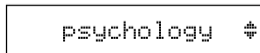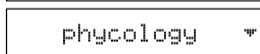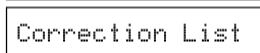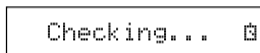

- 3 Press **Page-Down** to see other proposed words.

## ● Using the Wildcard function

When entering the letters, you can enter “?” , “\*” or “#” in place of any letters you aren’t sure of.

Use **?** to enter “?”.

This is used in place of a single letter.

Use **#\*** to enter “\* ”.

This is used in place of one or more letters (including spaces or symbols).

Use **SHIFT** and then **#\*** to enter “#”.

This is used in place of one or more letters (without spaces or symbols).

1 Enter letters.

*Example: p?r?e?t\_*


2 Press **[ENTER]**.

After showing the length of the word(s), the first corresponding word(s) will be displayed.


Press **[SP]** to shift the display to the right. Press **[BS]** to return the display to the left.

3 You may continue to scroll through the corresponding word list by using **[Page-down]** and **[Page-up]**.


p?r?e?t\_

Searching... 

Length: 7

per cent 



percept 

\* The unit will show the word(s) in order of length.

\* The maximum length of a word is 16 letters.

\* You may scroll through the corresponding word list in length order by using **[SHIFT]** and then **[Page-down]** and **[Page-up]**.

\* To clear the display and spell check another word, simply enter your new word.

\* If the corresponding word list has a large number of words, the unit will check the word list again. In this case you can not return to the first corresponding word.

# Thesaurus

You can investigate the synonyms (and antonyms) for a word you enter.

When a word you enter has more than one meaning, the unit will group the synonyms according to part of speech and meaning.

1 Press **THES** .

Thesaurus

2 Enter letters.

*Example: rate*

rate\_

3 Press **ENTER** .


The entered word will be displayed as a headword in boldface.

**rate** ⌄

\* You may scroll through the headword list by using   .


4 Press  or **ENTER** .


First group of synonyms will be displayed.

5 Press  or **ENTER** to see the meaning of the group and synonyms.


Press  to return.

\* The synonyms in each set that are closest in meaning to the entry word are given first, usually starting with a 'core synonym' in SMALL CAPITALS.

\* Press **SHIFT** and then  to see the last word.

Press **SHIFT** and then  to return to the first screen.

rate noun: 1/3 ⌄

↓   ↑

ex: a fixed rat<sub>h</sub>


⋮

PERCENTAGE ⌄

↓   ↑

ratio ⌄

⋮




- 6 If there are two or more groups of synonyms, press  to see each successive group.

 
Press  to return.

The thesaurus also includes synonym groups for some phrases - these are listed after the groups for the main parts of speech.

*Example: at any rate*

Note: For longer phrases, you may need to scroll down to see all the sense numbers.


- \* To scroll alphabetically up or down through the headword list, press  and then  or .

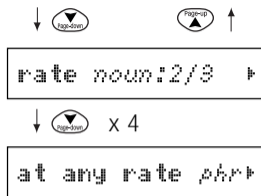

## ● Words not in headword

If the entered word is not contained in the headword of the thesaurus but contained in the synonym or antonym data, the unit will find and display the group(s) of the synonyms or antonyms.

 *Example: workaday*

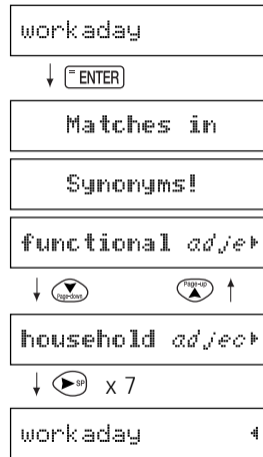


## ● Words not in memory

If you press **ENTER** when a word you have entered is not contained in the unit's list of entries, or if the word you entered is misspelled, the unit will find and display a word which is spelled most closely to your entered word.

This happens even if the found word has no linguistic relationship to your entered word.

 *Example: prated*

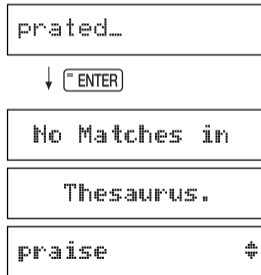

## Smart Jump

The unit provides an easy way to transfer words between functions.

- 1 Select a function.

*Example: Spellchecker*

Spellchecker

- 2 Enter a word.

*Example: useful*

useful\_

- 3 Press **SHIFT** .

useful

- 4 Select another function.

*Example: Thesaurus*

↓ **THES**

Thesaurus

The word is input automatically into the new function.

- \* Words generated by the unit can also be copied in this way, not just user entered words.





useful



# Solvers

 
The unit provides several solvers that can help you to solve your word games.

## ● Selecting the solver

- 1 Press **SOLVE** .  
The unit returns to the last solver used each time you select the solver mode.
- 2 Select the solver you wish to use by pressing   or   .

The solvers are displayed in the following order.

*Crossword, Anagram, Abbreviations, Abbrev. Finder, Knowledge View, Knowledge Find, Phrase Finder, Letter Changer, Word Maker, Word Viewer*

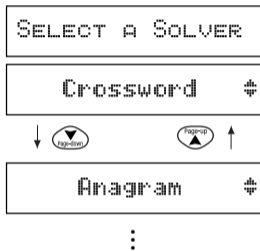

- \* By pressing the first letter of a solver, you can jump directly to the desired solver. Further solvers starting with the same letter can be displayed by pressing the same letter again.

## ■ Crossword Solver


Look for the right word by entering letters you know along with “?”, “\*” or “#” for any letters you don’t know.

Use **[?]** to enter “?”.  
This is used in place of a single letter.

Use **[#\*]** to enter “\* ”.  
This is used in place of one or more letters (including spaces or symbols).

Use **[SHIFT]** and then **[#\*]** to enter “# ”.  
This is used in place of one or more letters (without spaces or symbols).

1 Select “Crossword” and then press .

Crossword 

2 Enter letters.


*Example: t#g?t*

ENTER LETTERS.


t#g?t\_



3 Press .

After showing the length of the word(s), the first corresponding word(s) will be displayed.




Searching... 

Length: 12

thunderlight 

4 You may continue to scroll through the corresponding word list by using  and .


   
Length: 10  
thereright 

- \* The unit will show the word(s) in length order.
- \* The maximum length a the word is 16 letters.
- \* You may scroll through the corresponding word list in length order by using  and then  and .
- \* If the corresponding word list has a large number of words, the unit will check the word list again. In this case you can not return to the first corresponding word.
- \* If the letters entered do not have any corresponding words, the message “No words found.” will be displayed.

## ■ Anagram Solver


Look for the right word using the same letters as the word you have entered.

- 1 Select “Anagram” and then press .

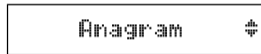

```
Anagram →
```

- 2 Enter letters.  
*Example: rail*

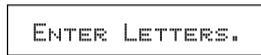


```
ENTER LETTERS.
```




```
rail_
```

- 3 Press .

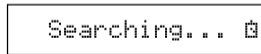

After the display “Searching ...”, the first corresponding word will be displayed.

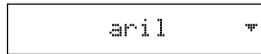


```
Searching... █
```



```
aril →
```

- 4 You may continue to scroll through the corresponding word list by using  .

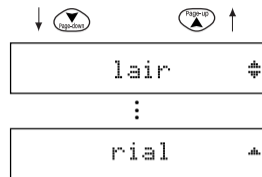


```
↓ Page-down Page-up ↑  
lair →  
:  
rial →
```

- \* To clear the display and solve a new anagram, simply enter your new word.
- \* If the word or letters entered do not have any anagrams, the message “No anagrams found.” will be displayed.

## ■ Abbreviation Solver


The Abbreviation solver allows you to search the abbreviation dictionary to “decode” over 10,000 common abbreviations.

- 1 Select “*Abbreviation*” and then press .

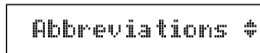

Abbreviations ↕

- 2 Type an abbreviation.  
*Example: esf*

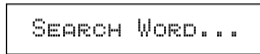


SEARCH WORD...




esf\_

- 3 Press .


If the abbreviation is contained in the dictionary, it will be displayed with the explanation.

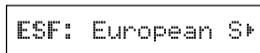



ESF: European S▶

 
- 4 Press  to see the rest of the explanation.

Press  to return.

- \* If there is more than one solution, you will be able to scroll the list using .


- 5 You may scroll through the abbreviation list by using  .

- \* If entered letters are not contained in the abbreviation dictionary, the unit will find and display the abbreviation which most closely matches your entered letters.

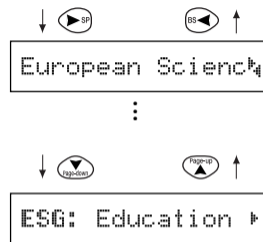

## ■ Abbreviation Finder

The unit will find the abbreviations whose explanations contain the word(s) you enter.

- 1 Select “*Abbrev. Finder*” and then press .


Abbrev. Finder


SEARCH WORD...

- 2 Type word(s).


*Example: trade union*

trade union\_


- \* You can enter up to seven words.
- \* If you enter more than one word, put a space between words by using .

- 3 Press .

If the corresponding abbreviation is contained in the dictionary, it will be displayed with the explanation.

- 4 Press  to see the rest of the explanation.

Press  to return.

- 5 If there are two or more corresponding abbreviations, press .

- \* If the letters entered do not have any corresponding abbreviation(s), the message “*No matches found.*” will be displayed.

COHSE: Confederat

↓   ↑

Confederation of

⋮

↓   ↑

ETUC: European

## ■ Knowledge Viewer

This Solver enables you to view the thematic lists in the general-knowledge section in a similar manner to scrolling through the lists in a book. These lists have been compiled by Oxford University Press to help provide answers to crossword clues and other quiz questions.

- 1 Select “*Knowledge View*” and then press **ENTER**.

The unit returns to the last category used each time you select the Knowledge Viewer mode.

- 2 Select the category you wish to find by pressing **Page-down** **Page-up**.



The categories are displayed in the following order.

*LITERATURE / SPORT AND GAMES / FOOD AND DRINK / MISCELLANEOUS / NAMES / HISTORY, POLITICS, AND WAR / RELIGION AND MYTHOLOGY / GEOGRAPHY AND TRANSPORT / SCIENCE AND TECHNOLOGY / MEDICINE / ANIMALS / PLANTS / ART, MUSIC, AND ENTERTAINMENT*

 
- 3 Press **ENTER**.  
The unit shows sub categories.  
Press **BACK** to return.



- 4 Select the sub category by pressing **Page-down** **Page-up** and then press **ENTER**.  
The first entry will be displayed.

\* If the unit shows the lower sub category, repeat step 4.

- 5 You may scroll through the list by using   .



⋮

halfback

half-time

## First Character Search

By pressing the first letter of an entry in the list, you can jump directly to the desired entry.


Further entries starting with the same letter can be displayed by pressing the same letter again.

*Example: h*


- \* You can also use this search procedure when viewing category or sub category lists.

- 6 To check the category of an entry in the list, press  .

SPORT AND GAMES

Pressing  a second time will display the sub category.

SPORTING TERMS

Pressing  a third time will return to the original entry.

half-time

- \* Data in the Knowledge Viewer is displayed in the same order as the printed version of the Oxford Crossword Dictionary.
- \* Any notes relevant to a particular list, may be found at the end of the sub category.  
E.g. \* Indicates joint region (in the case of “Rulers of England”).
- \* In the context of The Bible, OT stands for Old Testament and NT stands for New Testament.

## ■ Knowledge Finder

This Solver is a powerful tool to enable you to perform searches across all the thematic lists in the general-knowledge section. It's a bit like using a search engine on the Internet. You can use wildcard characters (? , \* or #) and keywords from your clue to help you find answers by searching across all the lists at the same time.

These lists have been compiled by Oxford University Press to help provide answers to crossword clues and other quiz questions.

- 1 Select “*Knowledge Find*” and then press .

Knowledge Find

- 2 Type in your key words.

They can be a word, a category or even a related word or date etc.  
(Rather like searching the internet)

SEARCH WORD...

E.g. art and dutch :

This means that the result should be related to art and Dutch.

art dutch\_

- \* You can add one target word with wildcard letters (? , \* or #), if you know some letters of the target word.

art dutch g????\_

In this example, the target word is “Gogh”. In case you know that the target word is four letters and it starts “g”. It will be “g????”.

- \* If you don't have any hint for the word (any length and letters), you can omit this word and you can search by scrolling all data that has words related to your key words.
- \* Up to two (\*) or (#) can be entered and any number of (?), but you can only have one target word containing wildcards.
- \* You need to enter at least one key word.
- \* You can enter key words in any order.



- 3 Press **ENTER**.  
Results that meet the conditions will be displayed.

```
Searching...
Van Gogh, Vince
```

- 4 You can check the category of the answer by pressing **ENTER** which displays the main category.

```
ART, MUSIC, AND
```

Pressing **ENTER** a second time will display the sub category.

```
PEOPLE IN THE A
```

Pressing **ENTER** a third time will return to the original entry.

```
Van Gogh, Vince
```

- \* You can enter numbers by pressing **SHIFT** followed by a number key. Press **SHIFT** again to enter letters.

E.g. **SHIFT** + **1Q** **7U** **6Y** **9O** =1769

This can be very useful for finding entries related to people.  
[e.g. Duke of Wellington (1769-1852)]

- \* The entered word is spellchecked first against the thematic data. If the entered word was spelled incorrectly, it will be ignored from the input automatically.

In this example “zzz” and “xxx” are ignored from input and the correct answer is displayed.

```
zzz harry xxx_
```

If the entered word is not in the thematic data, the message “No matches found” is displayed and it goes back to the input display.

```
Harry S. Truman
```

- \* This solver searches only the Thematic data and does not search words from the Crossword list.


Here are some further examples of how you can use the Knowledge Finder:


(Entry)	(Result)
fish s????	A list of fish with 5 letter words in their names starting with "s"
harry webb	Finds: Sir Cliff Richard
jet engine	Finds: Sir Frank Whittle, inventor
phobia spiders a*	arachnophobia

NOTE -

Because you can search across all categories at the same time, you may get results from different categories in the same list. E.g.-

fish ?????? = 1) Piscis (CONSTELLATIONS)  
2) Salmon (FISH)

\* If you enter a complicated key word it may take a long time to check the word list. In this case you can stop the search by pressing  .

This is intended to give you all of the possible solutions which match your criteria, because you may not always know from your clue, exactly which of the 256 categories you should be looking under. If you want to check the category of a result, press  as described above.

Please take a little time to learn how to use this solver, as it has been designed to provide you with lots of different ways to search Oxford's wealth of general knowledge information.

## ■ Phrase Finder

Look for the phrases using the word(s) you have entered.

- 1 Select “*Phrase Finder*” and then press .

Phrase Finder ↕

- 2 Type a word.

*Example: well and*

SEARCH WORD...

- \* If you enter more than one word, put a space between the words.

well and\_

- 3 Press .

After showing the length of the word, the first phrase that includes the entered word(s) will be displayed.

Searching... ▢

alive and well ▾

- 4 To display further matching phrases, press  .

↓   ↑  
well and truly ↕  
⋮

- \* To clear the display and search for a new phrase, simply enter your new word(s).
- \* The entered word is spellchecked first against the crossword list.

## ■ Letter Changer

The Letter Changer generates a list of words, which are different by changing only one letter at a time.

- 1 Select “*Letter Changer*” and then press `[ENTER]`.

```
Letter Changer#
```

- 2 Type a word.

*Example: apple*

```
SEARCH WORD...
```

```
apple_
```

- 3 Press `[ENTER]`.

The first word with one letter changed will be displayed.

```
Searching... █
```

```
ample ▾
```

- 4 To display the next word with one letter changed, press `[Page-down]` `[Page-up]`.

```
↓ Page-down Page-up ↑  
apply ▾  
⋮
```

- \* To clear the display and start again, simply enter your new word.
- \* If no corresponding words can be made, the message “*No words found.*” will be displayed.

## Word Maker

Look for anagrams using some or all of the letters entered.  
You can enter actual words or jumbled letters.

- 1 Select “*Word Maker*” and then press **ENTER**.

Word Maker

- 2 Enter letters and then press **ENTER**.

ENTER LETTERS.

*Example: ertt*

ertt\_

- 3 You can reserve letter(s) which must be included in the word.

*Example: er*

RESERVE LETTERS.

If you do not reserve letters, simply press **ENTER**.

er\_

- 4 Press **ENTER**.

After the display “*Searching ...*”, the first corresponding word will be displayed.

tret

- 5 You may continue to scroll through the corresponding word list by using



ret

⋮

- \* To clear the display and start again, simply enter your new letters.
- \* If the letters entered do not have any corresponding word(s), the message “*No words found.*” will be displayed.

## ■ Word Viewer

Search for word within the unit's data.

- 1 Select “*Word Viewer*” and then press  .


- 2 Enter letters.

*Example: moon*

- 3 Press  .


After the display “*Searching ...*”, the first corresponding word will be displayed.




Word Viewer 

 
ENTER LETTERS.

MOON\_

Searching... 

moon 

- 4 You may continue to scroll through the corresponding word list by using

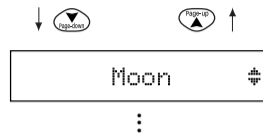

- \* To clear the display and start again, simply enter your new letters.





# Games

There are 10 great word games that will help you to improve your spelling and vocabulary.

## ● Selecting the game

1 Press **GAMES** .

The unit returns to the last game used each time you select the game mode.

2 Select the game you wish to play by pressing   or   .



The games are displayed in the following order.

*Hangman, User Hangman, Jumble, User Jumble, Beat the Clock, Memory, Synonyms, Crossword Quiz, Tops and Tails, Word Challenge*

- \* By pressing the first letter of a game, you can jump directly to the desired game. Further games starting with the same letter can be displayed by pressing the same letter again.

(NOTE)

- \* The Game Levels can be changed from the SET menu. (See page 90.)

## ■ Hangman

This is a game in which you have to find a mystery word whose spelling is unknown to you with a limited number of allowed tries.

- 1 Select “*Hangman*” and then press .

The number of letters in the mystery word is indicated by question marks.

The number of times you can try is shown at the right of “/”.

- 2 When you enter one of the letters used in the mystery word, the question mark will be replaced by the letter.

*Example: Enter “e”.*

Hangman	⚡
---------	---

??????	0/10
--------	------

?????e	1/10
--------	------

- \* In some cases, the same letter is used two or more times in the same word:

When you enter the letter, all the corresponding question marks will be replaced by the letter simultaneously.

*Example: Enter “t”.*

- \* The number of tries you are allowed will decrease progressively every time you enter an incorrect letter.

- 3 If all the letters in the word are displayed before you have used up all the tries, a congratulatory message will be displayed and counted in the “*Won*” column.

The answer will then be displayed.

??tt?e	2/9
--------	-----

b?ttle	4/8
--------	-----

↓

CONGRATULATIONS!
------------------

Won:1	Lost:0
-------	--------

bottle
--------



\* One letter will be displayed in turn as a “Tip” every time you press `[?]` .

\* All the letters will be displayed if you press `[ENTER]` .

\* If you fail to find the word before you have used up all the tries you are allowed, or if you press `[ENTER]` half way through a game, “*Sorry, you lost.*” will be displayed and counted in the “*Lost*” column.

The answer will then be displayed.

\* Press any alphabet key or `[ENTER]` to display the next question.

```
Sorry, you lost.
Won:0      Lost:1
The answer was
bottle
???????   0/10
```

## ■ User Hangman

This is a Hangman Game for 2 players using words that you can select.

1 Select “*User Hangman*” and then press `[ENTER]` .

2 Select the player by pressing `[←]` `[→]` and `[ENTER]` .

3 Enter a word. You can use up to 11 letters.

*Example: pretty*

```
User Hangman ⚡
Player: 1 <> 2
P1: Game Word?
pretty_
```

4 Press .

Answer Player 2

5 An opponent has to guess the mystery word.

?????? 0/10

\* The ensuing procedure is the same as that used in the Hangman Game.

**\*\*\* Tip for Parents \*\*\***

This game is a fun way for you to help your children to learn new words from a list or as part of their homework. Select a suitable level, secretly enter your chosen word and then work with them to spell the mystery word correctly.

## ■ Jumble

Using letters displayed at random, you attempt to find a specified number of words.

1 Select “*Jumble*” and then press .

Jumble ↕

The selected letters and the number of answers will be displayed at the right of “/”.

tcsoa 0/4

*Example: tcsoa*

\* To shuffle the letters, press .

coast\_



2 Enter the word using all the selected letters and then press .

EXCELLENT!

If your answer is correct, the selected letters will be displayed again.



Enter the next word and press .

tcsoa 1/4

- \* The entered answers can be seen again by using  or .
- \* Press **BACK** to return to the question screen.
- \* If your answer is incorrect, the message “*Please try again.*” will appear and the selected letters will be displayed again.

**3** If you enter all the answers, a congratulatory message will be displayed and counted in the “*Won*” column.


BRAVO!
Won: 1 Lost: 0



- \* To give up entering letters, press **ENTER**. The answer will be displayed with a cross.
- \* The answers can be seen by using  or . Correct words will be displayed with a tick. Missed words will be displayed with a cross.
- \* Press any alphabet key or **ENTER** to display the next question.



## ■ User Jumble

This is a Jumble game using words that you can select.

**1** Select “*User Jumble*” and then press **ENTER**.

User Jumble 
---

**2** Select the player by pressing   and **ENTER**.

Player:   2
---

**3** Enter a word. You can use up to 11 letters.

 
P1: Game Word?
----------------

stoh_
-------

*Example: stoh*

4 Press **ENTER** .

The selected word and the number of other words will be displayed.



5 An opponent has to enter a try.

\* The ensuing procedure is the same as that used in the Jumble Game.

**\*\*\* Tip for Parents \*\*\***

This game is a fun way for you to help your children to learn new words. Simply enter your chosen word and then work with them to find the anagrams correctly.

## ■ Beat the Clock

This is a game in which you have to find a mystery word with a limited number of tries, in a limited time.

 
 
1 Select "*Beat the Clock*" and then press **ENTER** .

The number of letters in the mystery word is indicated by question marks.

The number of times you can try is indicated by the small number.

2 If you press any of the alphabet keys, the number shown at the right of "/" will begin to count down.

3 Complete the spelling of the mystery word before the time runs out.



- \* When you enter one of the letters used in the mystery word, the question mark will be replaced by the letter and the number shown at the left of “/” will be increased.
- \* All the letters will be displayed if you press .
- \* If the complete spelling of the mystery word is entered within the allocated time, a congratulatory message will be displayed and counted in the “*Won*” column.
- \* If you fail to find the word before you have used up all your tries, or if you press  half way through a game, “*Sorry, you lost.*” will be displayed and counted in the “*Lost*” column. Then the answer will be displayed.
- \* Press any alphabet key or  to display the next question.

## ■ Memory

Correctly enter the spelling of a word which is momentarily displayed.

- 1 Select “*Memory*” and then press

.

The word will be displayed for about one second.

*Example: taking*

- 2 Enter the spelling of the word which has just disappeared from the screen.

Memory ↕

taking

Enter a Guess

taking\_

3 Press **ENTER** .

If your answer is correct, a congratulatory message will be displayed and counted in the “*Won*” column.

```
EXCELLENT!  
Won:1      Lost:0
```

\* To give up entering letters, press **ENTER** .

\* If your answer is incorrect, or if you press **ENTER** , “*Sorry, you lost.*” will be displayed and counted in the “*Lost*” column.

\* Press any alphabet key or **ENTER** to display the next question.

## ■ Synonyms

Guess the main synonym word based on the displayed thesaurus headword.

1 Select “*Synonyms*” and then press **ENTER** .

The thesaurus headword will be displayed.

*Example: animated*

\* Press **SP** or **page-down** to see the rest of the screen.

2 Enter a synonym.

```
Synonyms  ⚡
```

```
Find the
```

```
:
```

```
animated adj/ect*
```


```
lively_
```


3 Press  .

If your answer is correct, a congratulatory message will be displayed and counted in the “*Won*” column.

Then the answer will be displayed.

EXCELLENT!	
Won:1	Lost:0
lively	


\* To give up entering letters, press  .

\* If your answer is incorrect, or if you press  , “*Sorry, you lost.*” will be displayed and counted in the “*Lost*” column.

\* Press any alphabet key or  to display the next question.

## ■ Crossword Quiz

Enter letters in place of the question marks.

1 Select “*Crossword Quiz*” and then press  .

The question will be displayed.

*Example: out??t*

Crossword Quiz*
-----------------

out??t
--------

2 Enter a letter for the first question mark.


*Example: p*

outp?t
--------

3 Enter a letter for the next question mark.

*Example: u*



output
--------

\* The entered letter can be cleared by pressing  .

4 Press **ENTER** .

If your answer is correct, a congratulatory message will be displayed and counted in the “*Won*” column.

```
CONGRATULATIONS!  
Won:1      Lost:0
```

- \* One letter will be displayed in turn as a “Tip” every time you press **?** .
- \* To give up entering letters, press **ENTER** .
- \* If your answer is incorrect, or if you press **ENTER** , “*Sorry, you lost.*” will be displayed and counted in the “*Lost*” column.
- \* Then the first correct solution will be displayed, you can check any alternative solutions by pressing  or  .
- \* Press any alphabet key or **ENTER** to display the next question.

## ■ Tops and Tails

Enter a word that has the specified first and last letters.

1 Select “*Tops and Tails*” and then press **ENTER** .

The first and last letter of a word will be displayed.

*Example: Start:T End:R*

2 Enter a word.

*Example: tear\_*

```
Tops and Tails*
```

```
Min length:4
```

```
Start:T End:R
```

```
tear_
```



3 Press .

If your answer is correct, a congratulatory message will be displayed and counted in the “*Won*” column.

CONGRATULATIONS!	
Won: 1	Lost: 0

\* To give up entering letters, press .

\* If your answer is incorrect, or if you press , “*One Answer . . .*” appears, then a correct solution and your current score will appear on the screen.

\* Press any alphabet key or  to display the next question.

## Word Challenge

Use some or all of the letters displayed to make new words.

1 Select “*Word Challenge*” and then press .

The selected letters and the number of answers will be displayed.

\* To shuffle the letters, press .

2 Enter a word using over 3 of the displayed letter.

Make sure your word always includes the capitalised letter.

*Example: unit*

Word Challenge
Build 15 words
aeeiNsstu
unit_

3 Press .

If your answer is correct, you can enter the next word.

CORRECT!

Build 14 words



aeeiNsstu

\* You can use  or  to redisplay correct words already accepted.

\* If your answer is incorrect, the message “*Please try again.*” will appear and the selected letters will be displayed again.

\* To give up entering letters, press .

\* If your answer is incorrect, or if you press , “*Sorry, you lost.*” will be displayed and counted in the “*Lost*” column.

\* Then the first correct solution will be displayed, you can check any alternative solutions by pressing  or .

\* Press any alphabet key or  to display the next question.

MEMO

# Calculator

---

## ● Keys and their Functions

1. **CALC** Selects Calculator and Unit Converters.
2. **CE/C Z** Clears last entry with one press, clears all with two presses.
3. 1 ~ 0 Number input keys.
4. +, -, x, ÷ Mathematical function keys.
5. MC Clears memory.
6. MR Recalls number from memory.
7. M+ Enters number into memory.
8. M- Subtracts number from memory.
9. +/- Changes sign of number.
10. % Percentage key.

\* The number stored in the memory is held when the calculation is changed, the mode is switched or the power is turned off.

## ● Correcting and Clearing Entries

If you enter an incorrect number, press **CE/C Z** to clear the entire displayed number, then re-enter the correct number.

If you press an incorrect mathematical function key, simply press the correct function key afterwards.

If “ E ” appears in display:

- The answer to a calculation is more than 12 digits.
  - The memory is full.
  - 0 has been used as a divisor.
- Press **CE/C Z** to remove the “ E ” and continue.

# Converters

## ● Entering or Changing a Conversion Rate

- 1 Press **CALC** .  
Enter the new rate.  
*Example: 1.8*
- 2 Press **Page-down** or **Page-up** to select “Money”.
- 3 Press **ENTER** .
- 4 Press **Page-down** or **Page-up** to select “Set Rate”.
- 5 Press **ENTER** .  
*Example: £1=\$1.8*

1.8
PICK CONVERTER
Money ⇅
MONEY CONVERTER
Set Rate
Exchange Rate
£1: 1.8

## ● Currency Conversion







*Example: 540 US Dollar to £ ( £1=\$1.8 )*

- 1 Press **CALC** .  
Enter the amount you wish to convert.  
*Example: 540*
- 2 Press **Page-down** or **Page-up** to select “Money”.
- 3 Press **ENTER** .
- 4 Press **Page-down** or **Page-up** to select “Other > £”.
- 5 Press **ENTER** .  
*Example: £300*

540.
PICK CONVERTER
Money ⇅
MONEY CONVERTER
Other > £ ⇅
£ 300.


## ● Metric / Imperial Conversion

*Example: Kilometres to Miles*


- 1 Press **CALC** .  
Enter the number you wish to convert.  
*Example: 5*
- 2 Press  or  to select “Metric”.
- 3 Press **= ENTER** .
- 4 Press  or  to select “Length”.
- 5 Press **= ENTER** .
- 6 Press  or  to select “Kilometre”.

5.


PICK CONVERTER

Metric 

UNIT CONVERTER

Length 

STARTING UNITS


Kilometre 

- 7 Press **= ENTER** .

- 8 Press  or  to select “Mile”.

- 9 Press **= ENTER** .  
(5 Kilometres = 3.10685596119 miles.)

DESIRED UNITS

Mile 

3.10685596119mi.

## Metric Conversion Categories

Temperature: °C, °F

**Length:** Centimetre, Inch, Feet, Yard, Metre, Kilometre, Mile

**Area:** Centimetre<sup>2</sup>, Inch<sup>2</sup>, Feet<sup>2</sup>, Yard<sup>2</sup>, Metre<sup>2</sup>, Acre, Kilometre<sup>2</sup>, Mile<sup>2</sup>

**Volume:** Centimetre<sup>3</sup>, Inch<sup>3</sup>, Feet<sup>3</sup>, Yard<sup>3</sup>, Metre<sup>3</sup>







**Weight:** Gram, Ounce, Pound, Kilogram

**Capacity:** Millilitre, Ounce(AM), Ounce(BR), Litre, Quart(AM), Quart(BR), Gallon(AM), Gallon(BR)

**Power:** Kilowatt, Horsepower

## ● Clothing Size Chart


You can easily check foreign clothing sizes: shirts, shoes, hats etc. for men, women and children.

- 1 Press **CALC** .
- 2 Press  or  to select “Clothing Sizes”.
- 3 Press **ENTER** .
- 4 Press  or  to select “Women Sizes”.
- 5 Press **ENTER** .
- 6 Press  or  to select “Dresses”.

0.
Clothing Sizes↕
CLOTHING SIZES
Women Sizes ↕
WOMEN SIZES
Dresses ↕

- 7 Press **ENTER** .

BRIT.	AMER.	EU
30	8	36 ↕
32	10	38 ↕
⋮		



- 8 Press  to see more sizes.

## Categories of the Clothing Size Chart





- Men:** Suits, Trousers, Overcoats, Pullovers, Socks, Shoes, Shirts, Hats
- Women:** Blouses, Pullovers, Dresses, Coats, Suits, Skirts, Trousers, Shoes, Stockings
- Children:** Dresses, Coats, Suits, Skirts, Trousers - Girls and Boys  
Shoes - Girls and Boys, Other Items - Girls and Boys

 
# SET Mode

You can customize the operating conditions.





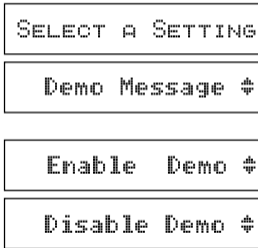

Press **[SET]** and then press  or  to select an item when you want to change the default settings.


## ● Changing the DEMO mode

 - 1 Press **[SET]** .  
Press  or  to select “*Demo Message*”.
- 2 Press **[ENTER]** .  
Press  or  to select “*Enable Demo*” or “*Disable Demo*”.
- 3 Press **[ENTER]** to set it. (See page 14.)





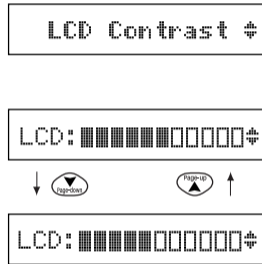

## ● Setting the LCD Contrast


- 1 Press **[SET]** .  
Press  or  to select “*LCD Contrast*”.
- 2 Press **[ENTER]** .  
Press   or   to adjust the contrast of the LCD display.
- 3 Press **[ENTER]** to set it. (See page 13.)




## ● Setting the Game Level

The unit provides three skill levels (beginner, intermediate and advanced). The level can be changed as required.

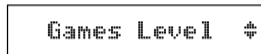

- 1 Press **SET** .  
Press  or  to select “*Games Level*”.
- 2 Press **ENTER** .  
Press  or  to select one of the levels.
- 3 Press **ENTER** to set it.

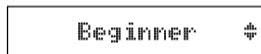


Games Level ↗



Beginner ↗



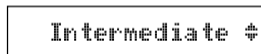

↓        ↑




Intermediate ↗


## ● Game Scores

The unit can display the game scores.


- 1 Press **SET** .  
Press  or  to select “*Games Scores*”.
- 2 Press **ENTER** .  
Press  or  to select one of the games.
- 3 Press **ENTER** to select a game.  
The total number of times the selected game has been played is displayed.  
Next, the current score is displayed.
- 4 Then “*Clear Score Y/N ?*” displayed.  
By pressing **Y** , the current Score and total number will be cleared.  
Pressing **N** will retain the current score.

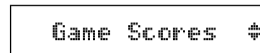


Game Scores ↗

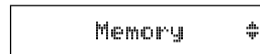


Memory ↗

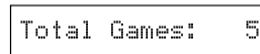

Total Games: 5

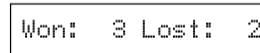

Won: 3 Lost: 2

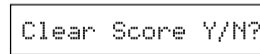

Clear Score Y/N?



## ● Variant Spelling



You can check the variant spelling words when using the spellchecker mode.

1 Press **SET** .



Press  or  to select “Variant Spelling”.

```
Variant Spelling
```

2 Press **ENTER** .

Press  or  to select “Exclude” or “Include”.

```
Exclude  ⚡
```

```
Include  ⚡
```

3 Press **ENTER** to set it.

## Help function

An explanation of how to operate the various functions is simply explained on the screen at each operational stage in each mode.

*Example:*

1 Press **SPELL** .

```
Spellchecker
```

2 Press **HELP** .

```
To spellcheck
```

The help explanation is displayed automatically.

```
a word, type it
```

```
:
```

\* You can return to the previous screen by pressing any of the keys.

## FAQ's

---

Q. Most display problems or malfunctions.

A. Press the RESET button. (Use a paperclip, not a pen tip as this may be too wide to operate the button properly)

Q. Display too light/dark.

A. Adjust contrast/replace batteries.

Q. Same letter keeps appearing on screen.

A. Check if the button has become jammed under the case.

Q. Can I use rechargeable batteries?

A. The unit has been designed only to work with normal non-rechargeable batteries.

Rechargeable batteries have a lower voltage than normal non-rechargeable batteries so the unit may not function correctly if rechargeable batteries are used.

Q. Problems after changing the batteries.

A. Always press the reset button after changing the batteries.

Customer Services Telephone No. 01628-770988

MEMO

MEMO

## Proper Use

To ensure a long and useful life from this precision electronic instrument, do not expose the unit to extreme heat or cold, water or other liquids including spray cleaners or extreme pressure (such as carrying in a back pocket). Doing any or all of these things may render the unit inoperable and invalidate the warranty.

## Specifications

Display:	16 characters x 1 line
Temperature range:	0° C to +40° C (32°F to 104° F)
Batteries:	AAA x 2 pcs.
Battery life:	approx. 2000 hours (continuous use)
Automatic power off:	approx. 3 minutes
Size:	134 (W) x 100 (H) x 30 (D) mm
Weight: approx.	143g (including batteries)

\* Specifications may change without notice due to our policy of continual product improvement. / The life of the batteries will vary depending on how the unit is used.

## ONE YEAR LIMITED WARRANTY

1. This product is warranted to be free from defects in material or workmanship for one year from date of purchase.
2. Repair (or at our option, replacement) will be made on any unit which proves to be defective during this period. Carefully pack the unit along with proof of purchase and a completed copy of the Warranty Record you will find in this manual. Postage, insurance and shipping costs incurred in returning the product for warranty service are your responsibility.
3. This warranty does not extend to units which have been subjected to misuse, abuse, neglect, accidents or to units that have been used in violation of the operation instructions. If in our judgement, the unit shows evidence of having been altered, modified or serviced without our authorisation, it will be ineligible for service under this warranty.
4. In Europe, this warranty does not affect your statutory rights.
5. **Battery replacement and broken Liquid Crystal Displays are not covered under this warranty.**

Seiko Instruments Inc. shall not be liable for any direct, consequential or incidental damages arising out of use of this product. Seiko Instruments Inc. shall not be responsible for damages to this unit as a result of a natural or unnatural disaster, except to the extent prohibited by applicable law. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited in duration to the duration of the warranty.

**WARRANTY RECORD****ER3700**

Warranty Period : One year from the date of purchase

Purchase Date :

Customer Name:

Address:

Phone No. :

Retailer Name:

Address :

**SEIKO UK Limited**SC House, Vanwall Road,  
Maidenhead, Berkshire SL6 4UW U.K.**Seiko Instruments Inc.**Data Service System Division  
8, Nakase 1-chome, Mihama-ku  
Chiba-shi, Chiba 261-8507, Japan