
Emmett - Extending Dining Table

Assembly Instructions - Please keep for future reference

149/2765

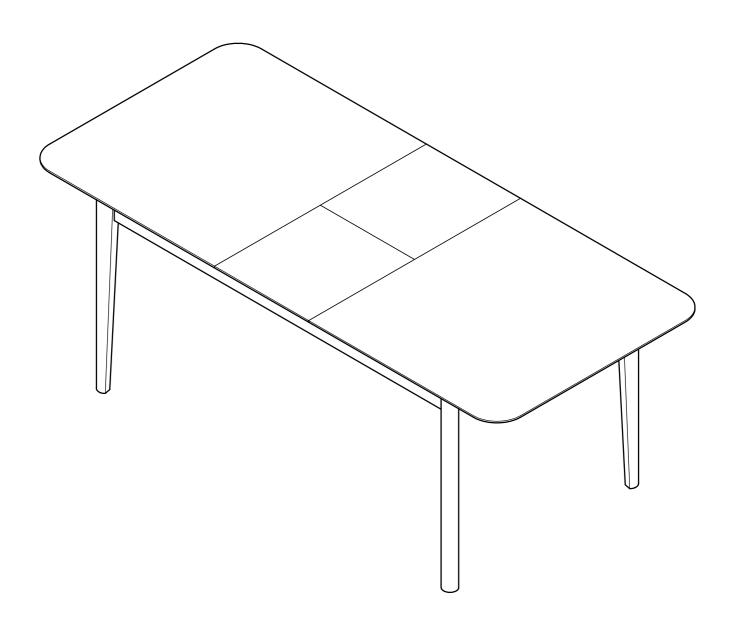

Dimensions

Width - 200cm

Depth - 90cm

Height - 75cm

Important - Please read these instructions fully before starting assembly.

If you need help or have damaged or missing parts, call the Customer Helpline: 08456 400800

IW-17-7521-010-0 Issue 1 - 04/06/12



Safety and Care Advice

Important - Please read these instructions fully before starting assembly.

- Check you have all the components and tools listed on page 2.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft flat / firm surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



 We do not recommend the use of power drill/ drivers for inserting screws,


as this could damage the unit. Only use hand screwdrivers.

• Dispose of all packaging carefully and responsibly .

Care and maintenance

- Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.


Please check you have all the panels listed below

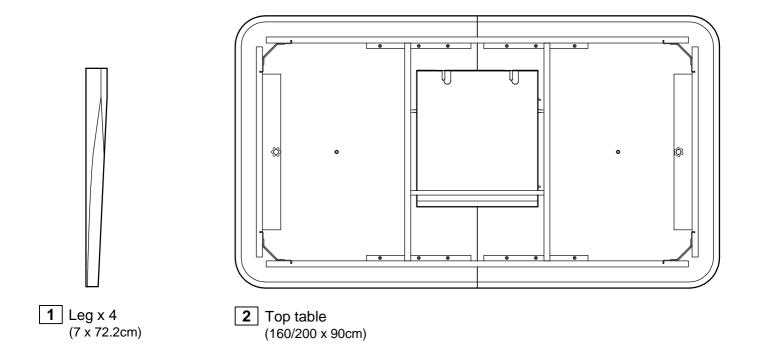


Components - Fittings

Please check you have all the fittings listed below

 Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

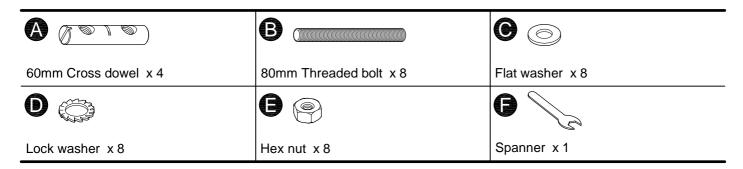



Step 1


Fitting dowels

a: Insert cross dowel for into the hole on top of each leg 1.

Note: Ensure the horizontal marking on each cross dowel is facing out as shown.

b: Insert threaded bolt **B** into the hole on each leg **1**.


Tighten threaded bolt **B** into the hole of cross dowel **A** that are already concealed in each leg **1** as shown.

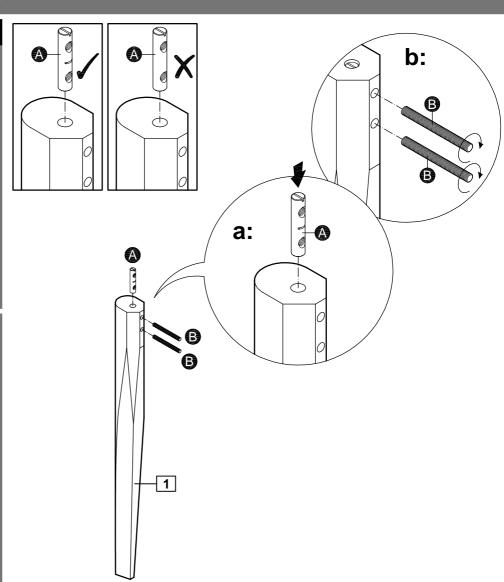

Step 2

Attaching legs

a: Lay table top 2 on a flat, stable, clean and soft surface.

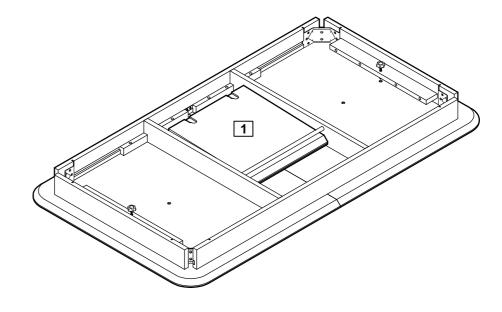

Step 2 - continued

b: Attach leg 1 onto table top 2 by inserting bolts B into the pre-drilled holes of metal corner bracket as shown.


b: Insert flat washer **(C)**, lock washer **(D)** and hex nut **(E)** onto the two threaded bolts **(B)** on leg **(1)** and in order as shown.


○ followed by **○**. **○** followed by **○**.

Tighten top hex nut then tighten bottom hex nut using spanner as shown.

Note: Do not over tighten.

Repeat Step **b** and **c** with the remaining 3 legs.

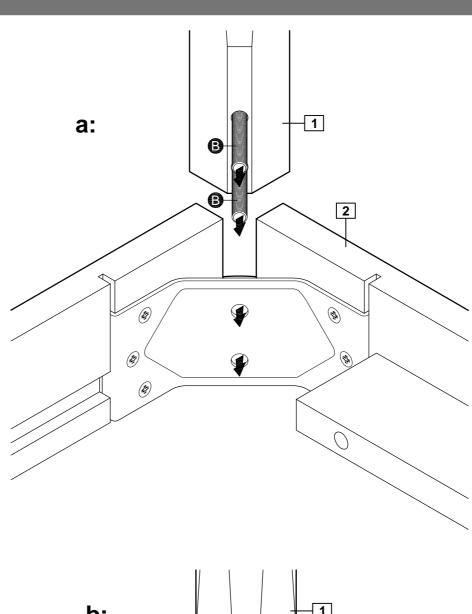

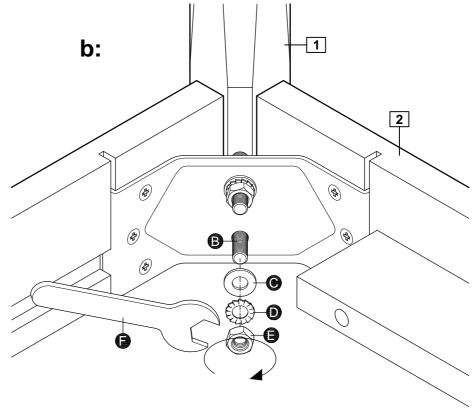

Step 3

Stand the table upright

Turn thumbscrews clockwise to lock table top in place.

With help, carefully stand dining table upright.



Important:

LOCK table top before righting the table.



Warning:

The dining table is heavy.
Lift with care.

Step 4

Extending table

a: Locate thumbscrews under table ends and turn counterclockwise until clear of locking holes on underside of table top.


Pull table top apart as shown, until butterfly leaf is clearly visible underneath.



Important:

UNLOCK table top before extending the table.

Pull top piece of butterfly leaf up and lay flat as shown.

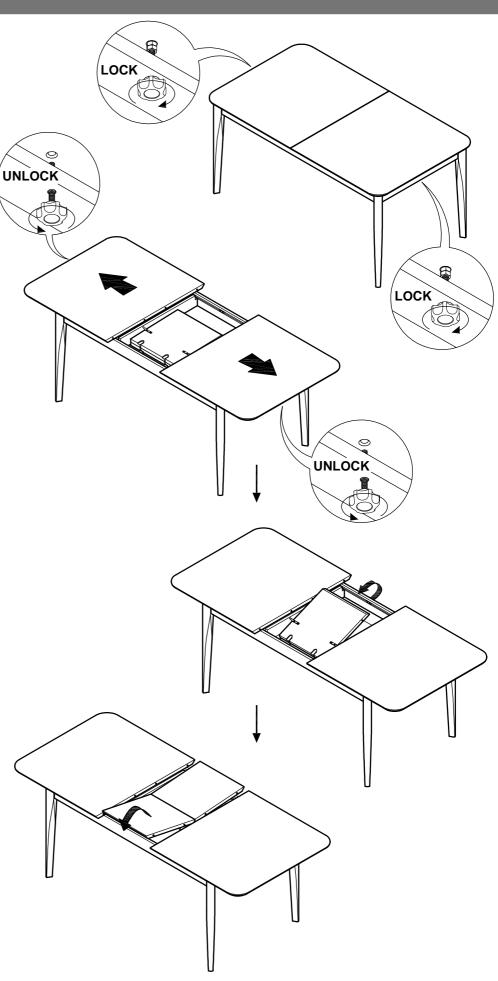


Step 4 - continued


b: Push ends of table inwards until no gap is visible.

Note: Make sure dowels line up with holes on mating panel to avoid damage.

C: Turn thumbscrews clockwise to lock table top in place.

Note: To close table, reverse the procedure.

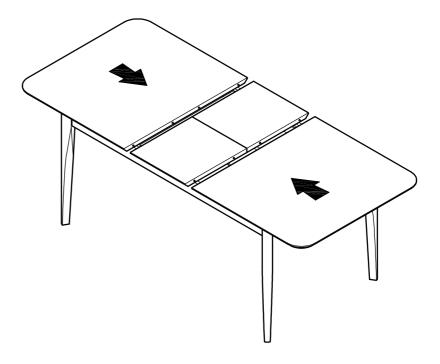

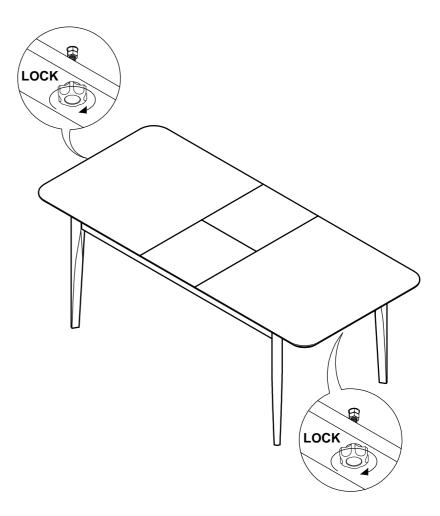


If you need help or have damaged or missing parts, call the customer Helpline: 08456 400800

Emmett - Pair of Upholstered Chairs

Assembly Instructions - Please keep for future reference

149/2772 149/2789

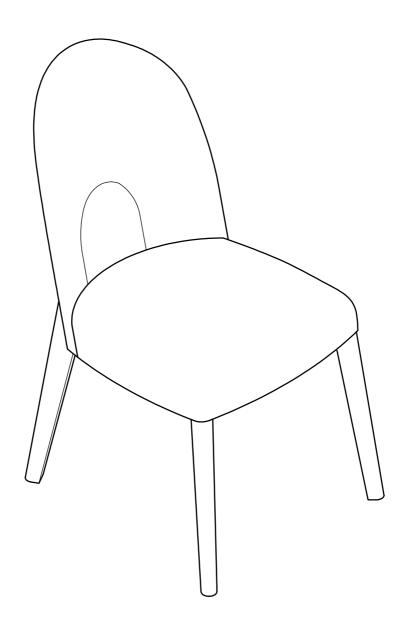

Dimensions

Width - 48cm

Depth - 62cm

Height - 87.3cm

Important - Please read these instructions fully before starting assembly.

If you need help or have damaged or missing parts, call the Customer Helpline: 08456 400800

IW-17-7521-112/ 132-0 Issue 1 - 29/06/12



Safety and Care Advice

Important - Please read these instructions fully before starting assembly.

- Check you have all the components and tools listed on page 2.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft flat / firm surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



 We do not recommend the use of power drill/ drivers for inserting screws,

as this could damage the unit. Only use hand screwdrivers.


• Dispose of all packaging carefully and responsibly .

 
Care and maintenance

- Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

Please check you have all the panels listed below

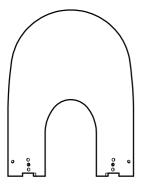







1 Back rest x 2 (44.2 x 55.5cm)

3 Left back leg x 2 (5.1 x 44.4cm)

 Right back leg x 2 (5.1 x 44.4cm)

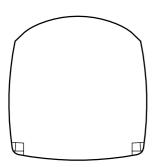





5 Left front leg x 2 (4.1 x 44.4cm)




6 Right front leg x 2 (4.1 x 44.4cm)



Components - Fittings

Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

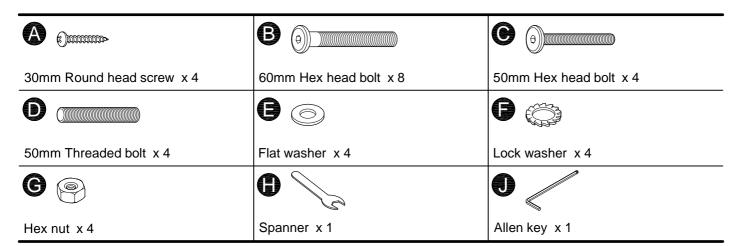

Tool required



 Phillips screwdriver (medium & large)



Step 1

Attaching back legs and back rest

Fix back legs 3 and 4 to back rest 1 using 2 screws A as shown.

Use a screwdriver to turn fitting A clockwise to fix.

Step 2

Attaching seat pad


a: Lift under cloth up and lay back as shown.

b: Insert lock washer **f** and flat washer **f** onto each bolt **f** as shown.

Insert bolts B with lock washers and flat washers through the pre-drilled holes of seat pad 2 and back rest 1 into back legs 3 and 4.

Tighten bolts **B** into the fittings inside back legs **3** and **4**.

Use allen key to turn fitting B clockwise to fix.

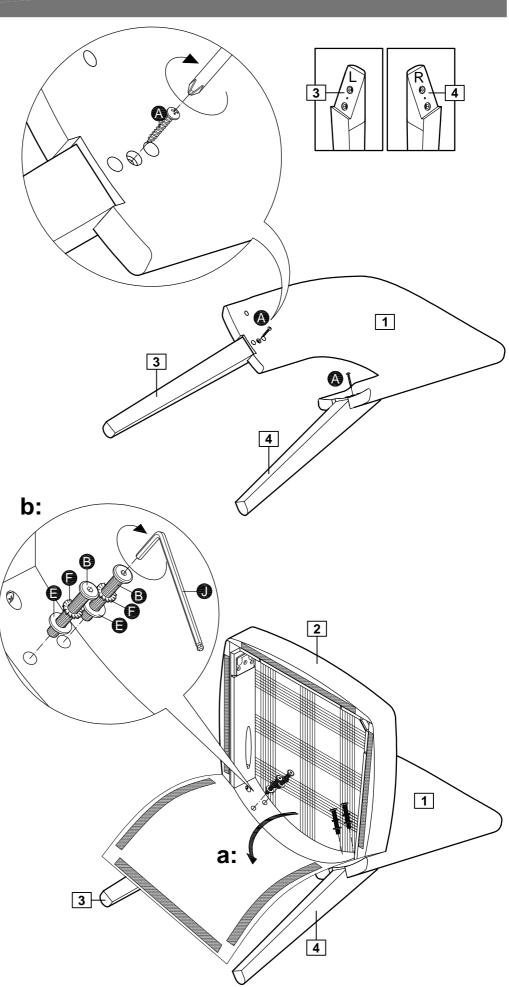

Step 2 - continued

C: Fix back rest 4 to seat pad 4 using 2 bolts Cas shown.

Use allen key to turn fitting Clockwise to fix.


Step 3

Attaching front legs

a: Place chair upside down onto a flat, stable, clean and soft surface as shown.

Position front legs 5 and 6 onto seat pad 2.

Note: Ensure that you put the front legs into the correct place as shown.

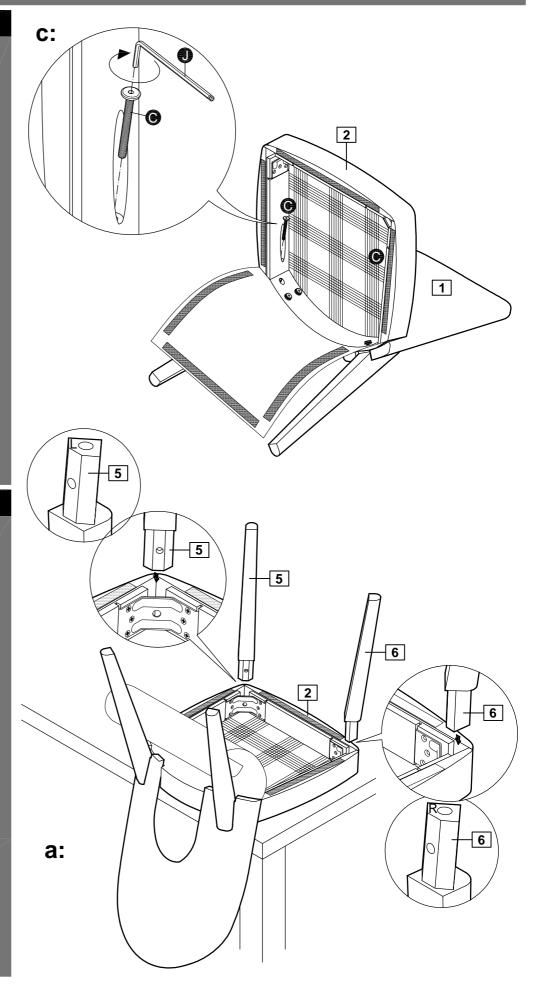

Step 3 - continued


b: Insert threaded bolts

through the pre-drilled hole of metal corner brackets into front legs 5 and 6 as shown.

Tighten threaded bolts into the fittings inside front legs 5 and 6.

C: Insert flat washers , lock washers onto threaded bolts on then secure into position using hex nuts as shown.

Use spanner h to turn fitting Clockwise to fix.

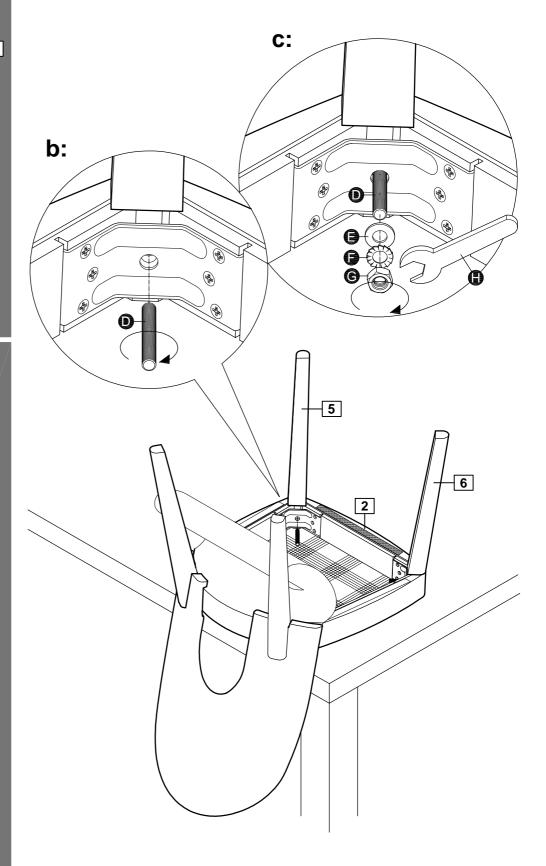

Step 4

Attaching under cloth

Place under cloth back onto frame of seat pad by lining up velcro strips and pushing firmly to fix back in place.

Stand the chair upright.

Repeat complete process for second chair.

