


User Guide

Item No.	8536	8540	8541A
	8536A	8540/2	8541L
	8536L	8540A	8542
	8537	8540L	8543
	8537L	8541	8543A

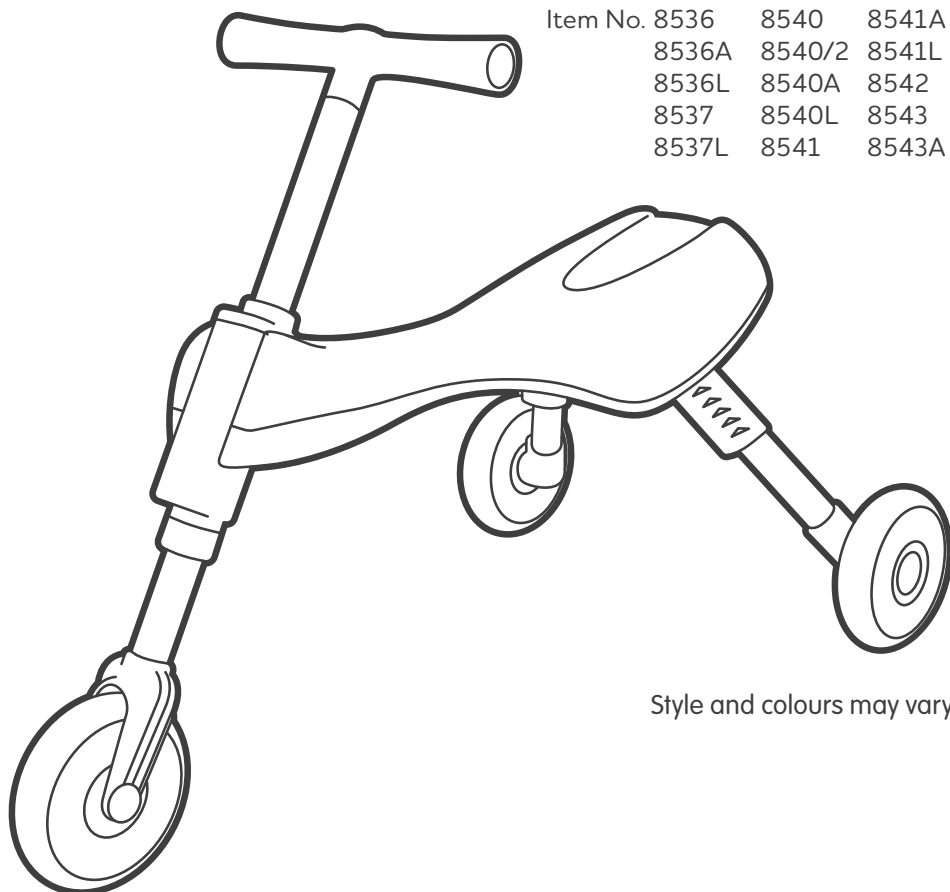

Style and colours may vary.




Contains small parts required for assembly.


Mookie

www.mookie.co.uk



UNFOLDING SCUTTLEBUG™

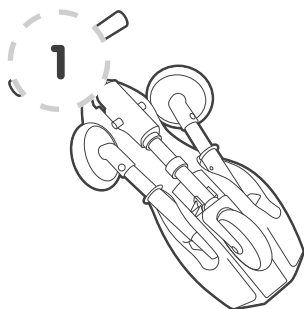


The ScuttleBug™ is packaged in the folded position.

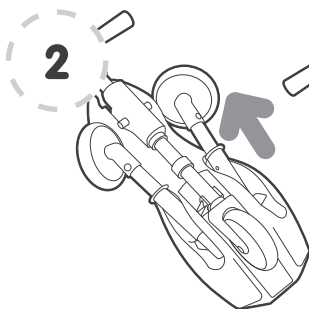

Unfold the rear wheel by pulling rear sleeve towards the wheel (shown by the arrow on the sleeve) to release it from the locked position. Pull outwards (in the direction of the arrow on image) until it locks into place. Repeat for the other rear wheel.

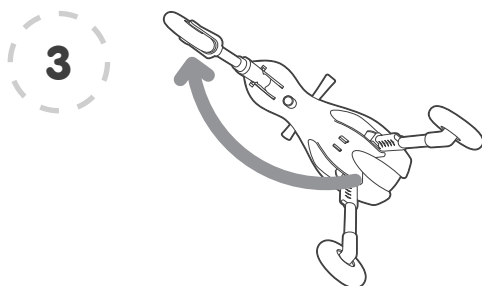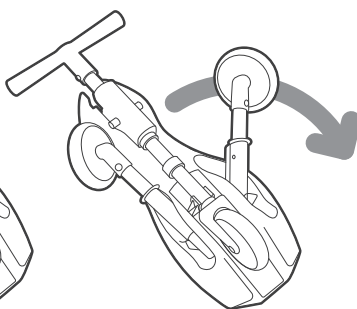


Hold the front wheel and pull out to release from the plastic clasp. Pull forward (in the direction of the arrow) until it locks into place.

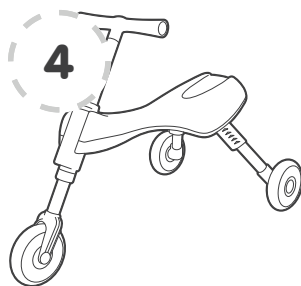


Place the ScuttleBug™ on its wheels and it is ready to ride.


FOLDING SCUTTLEBUG™

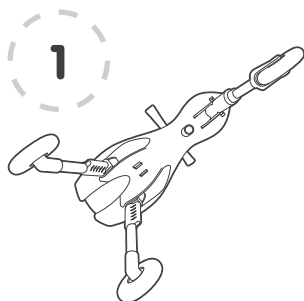


Place the ScuttleBug™ on the floor as indicated.

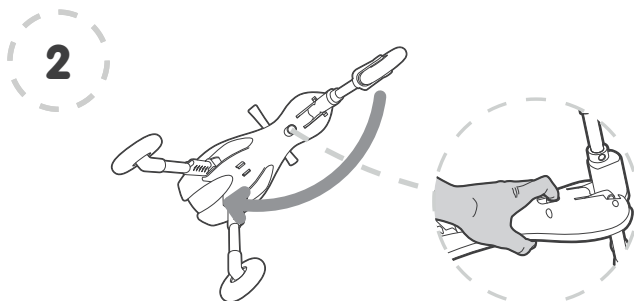


Locate the circular lever on the underside of the ScuttleBug™, pull back (in the direction of the arrow) to unlock and release the front wheel stem.

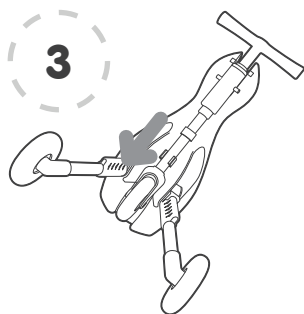

Fold the front wheel strut down into the underbody. Pull the wheel to extend and slot into the clasp.

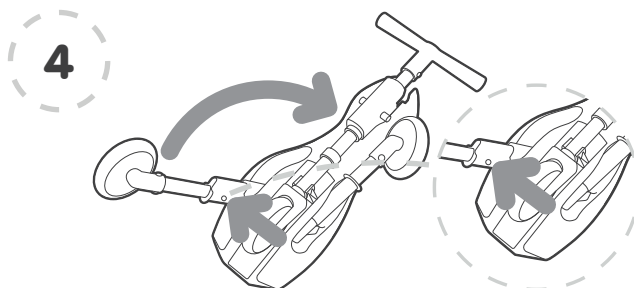

Fold the rear wheel by using your finger to press down the spring loaded button on the inside of the sleeve. Once fully compressed, maintain pressure on the button and slide the sleeve outwards (in the direction of the arrow shown on the rear of the sleeve) to release it from the locked position. Fold inwards (in direction of the arrow shown in the diagram) until the rear leg locks into place. Repeat for the other rear wheel.

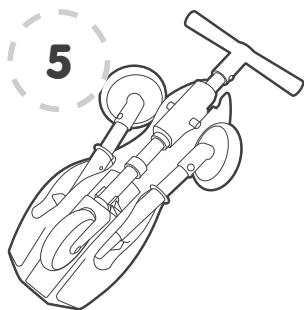

The ScuttleBug™ is now ready for storage.

WARNING!

Not to be used by children over 36 months. Not to be used by a child over 20kg.

Safety Information

- Using this product could result in injury unless proper safety precautions are taken.
- Read and understand the enclosed owners manual before letting children use this product.
- Safety equipment such as a helmet is recommended.
- Direct adult supervision required at all times.
- Use only in controlled environments free of potential traffic hazards and not on public streets.
- Child must maintain a hold on the handlebars at all times.
- NEVER allow more than one child at a time to ride the product.
- NEVER use near steps, sloped driveways, hills, roadways, alleys, or swimming pool areas.
- This toy has no brakes.
- Keep fingers and other body parts away from the product when folding or unfolding. Adult must not allow children to assist in folding or unfolding of the product.
- The product is not recommended for children under 12 months old.

Failure to use common sense and heed the above warnings presents and enhances risks or serious injury.

One Year Limited Warranty

Mookie Toys warrants this product to the original retail purchaser as follows:

This product is warranted against defective materials or workmanship for one year from the date of original purchase. An original receipt is required to validate your warranty.

To the extent permitted by law, Mookie Toys will, as its option, provide replacement parts or replace this product. Mookie Toys reserves the right to substitute if the part or model has been discontinued.

To make a claim under this warranty you may contact your distributor as indicated on the box. Proof of purchase is required.

Warranty Limitations

This warranty does not include damages which arise from misuse or abuse of this product.

This one year warranty is in addition to consumer protection conditions and warranties implied by Australian and European laws.



Mookie, Flitwick, Bedfordshire, MK45 5BX, U.K.

Please email: help@mookie.co.uk

or contact our helpline on 0845 504 6410

(9am-5pm Mon-Fri)

Made in China. © Mookie 2015

www.mookie.co.uk



Item No.	8536	8537	8540/2	8541	8542
	8536A	8537L	8540A	8541A	8543
	8536L	8540	8540L	8541L	8543A

IN4005-A_03 16