 


Nordic - 2 Door Wardrobe

Assembly Instructions - Please keep for future reference

1441572

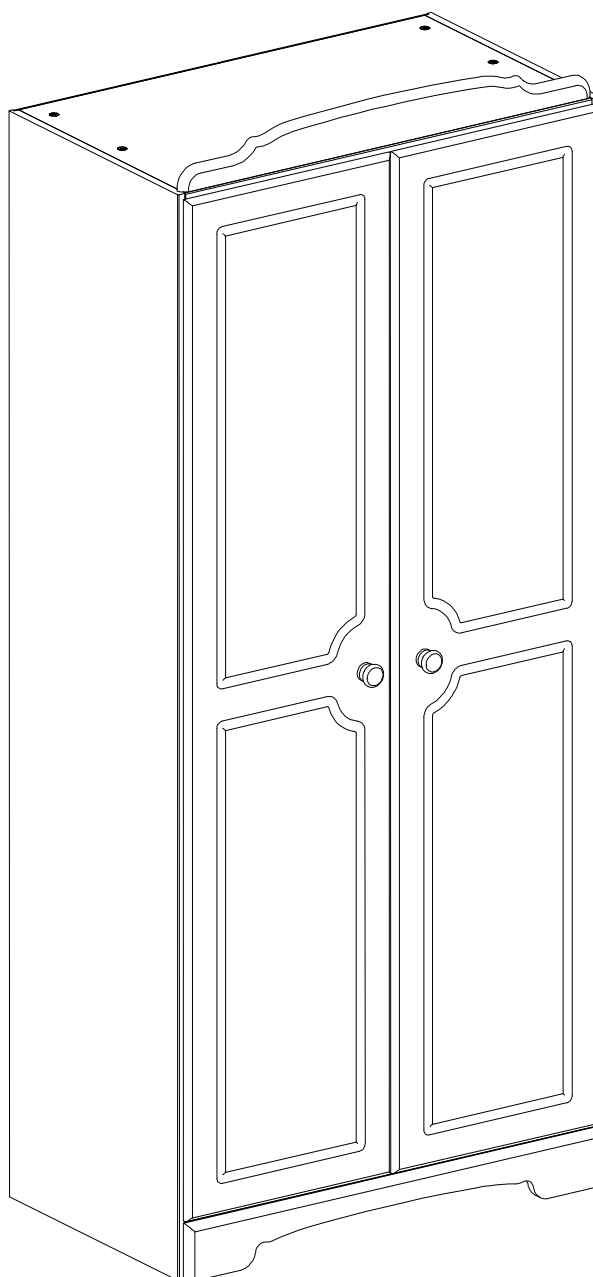

Dimensions

Width : 81.1 cm

Depth : 49,0 cm

Height : 191,3 cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the Customer Helpline: 0845 640 30 30



Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 3 and 4.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- We do not recommend the use of power drill/drivers **for inserting screws**, as this could damage the unit. Only use hand screwdrivers.
- Dispose of all packaging carefully and responsibly.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners. °
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

 
Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

Components - Panels


If you have damaged or missing components, call the **Argos Customer Helpline: 0845 640 30 30**

Please check you have all the panels listed below


1 Side, Left
V155841
1833x475x15 mm

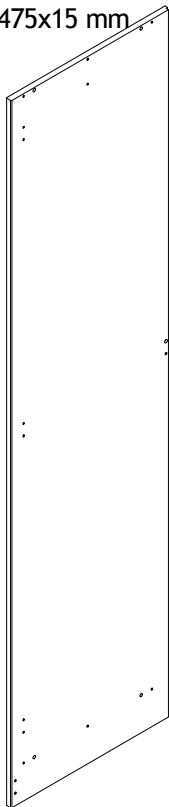


2 Side, Right
V155837
1833x475x15 mm

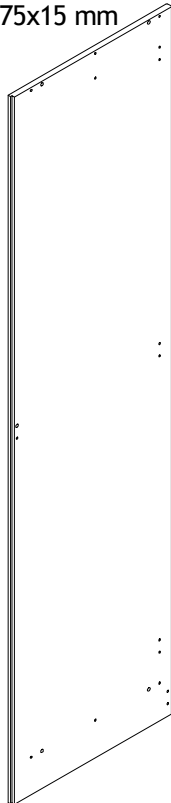 


3 Top/Bottom x2
V155864
781x470x15 mm

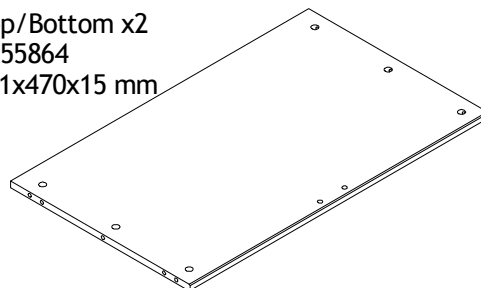 


4 Plinth, back
P155866
781x60x15 mm

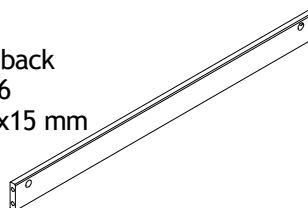 


6 Top rail
V155806
792x80x15 mm

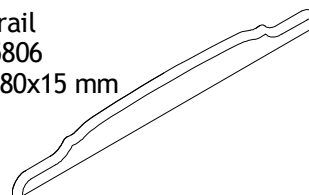 


5 Plinth, front
V155803
793x96x15 mm

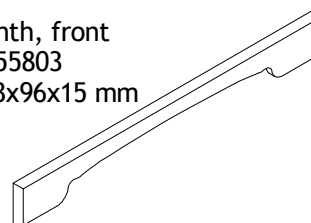 

8 Door x2
V155822
1725x395x15 mm

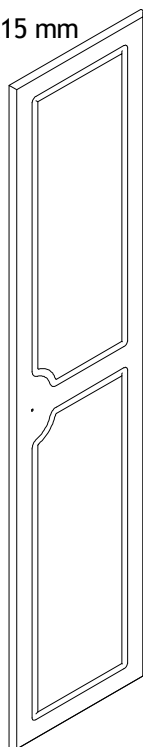 


7 Back x2
NM415853
1741x397x3 mm

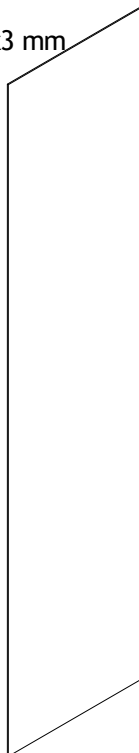 


16 Door rail x4
V155827
316x25x15 mm



 10 Hanging rail
L220053 - 771
771x22x15 mm

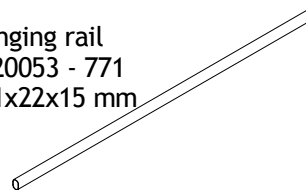

15 H-profile
B81700 - 1700
4x1700 mm

  
 
 
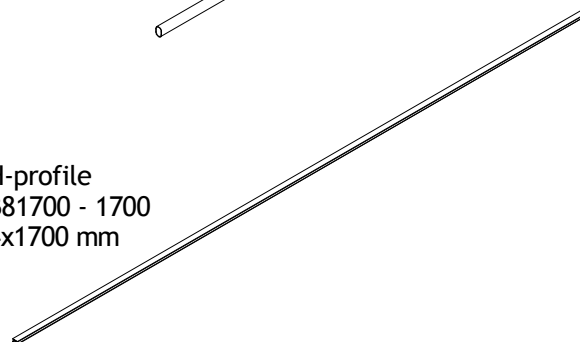 

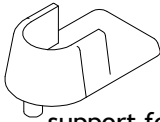 

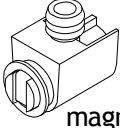 

 

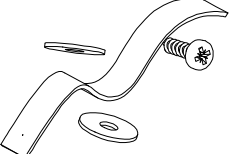 








Components - Fittings

If you have damaged or missing components, call the **Argos Customer Helpline: 0845 640 30 30**

Please check you have all the panels listed below

    
Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.
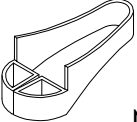
<p>A</p>  <p>BA10390 ø8x30 mm wooden dowel x10</p>	<p>G</p>  <p>BA10468 ø40x30 mm Wooden knob x2</p>	<p>O</p>  <p>BA10130 ø4,0x35 mm screw x12</p>
<p>R</p>  <p>BA10170 ø4,0x35 mm screw x2</p>	<p>T</p>  <p>BA10050 ø3,5x15 mm screw x22</p>	<p>L</p>  <p>BA10731 15x22 mm support for hanger x2</p>
<p>C</p>  <p>BA10590 ø15x9,5 mm cam x14</p>	<p>M</p>  <p>BA10715-1 ø10x8 mm magnet x4</p>	<p>N</p>  <p>BA10715-2 ø10x8 mm magnet catch x4</p>
<p>D</p>  <p>BA10603 ø5/11x34 mm bolt x14</p>	<p>i</p>  <p>BA10025 ø1,2x20 mm nail x50</p>	<p>J</p>  <p>BA182002 wallstrap and instruction</p>
<p>V</p>  <p>BA10801 20x20x2 angle x4</p>	<p>E</p>  <p>BA10240 ø6,1x11,5 mm screw x8</p>	
<p>P</p>  <p>BA10532 0 mm/37 mm crossplate x6</p>	<p>Q</p>  <p>BA10508 ø26 cup hinge x6</p>	<p>Y</p>  <p>Ba10688 500x250x Nail holder x1</p>
<p>W</p>  <p>BA10815 50x50x2 mm angle x2</p>		

Tools required



 Flatblade screwdriver
(Medium)



Hammer



Phillips screwdriver
(Medium & large)

Ruler - Use this ruler to help correctly identify the screws

 


Assembly Instructions

Step 1

Knock down the Dowels A into the holes indicated on top/bottom 3 and the back plinth 4 using a small hammer.

Press the magnets M into holes indicated.

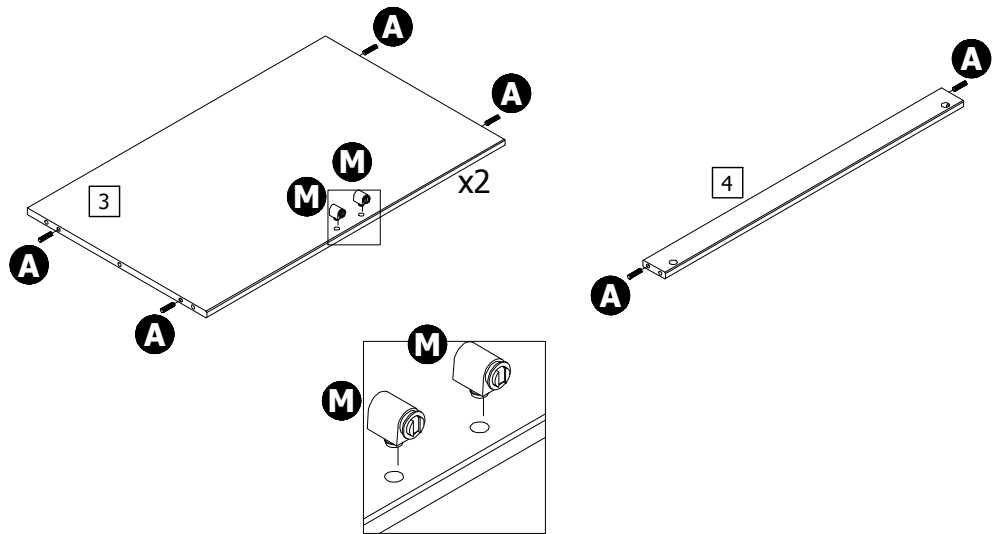


Step 2

Fix the support for hanger rail L to the sides 1 and 2 using screws T.

Fix the crossplates P to the sides 1 and 2 using the premounted screws. See details. position the crossplate exactly as shown.

Screw the bolts D into the holes indicated.

 Fix the angles V to the sides 1 and 2 using screws E. Place the angles as shown. See details.

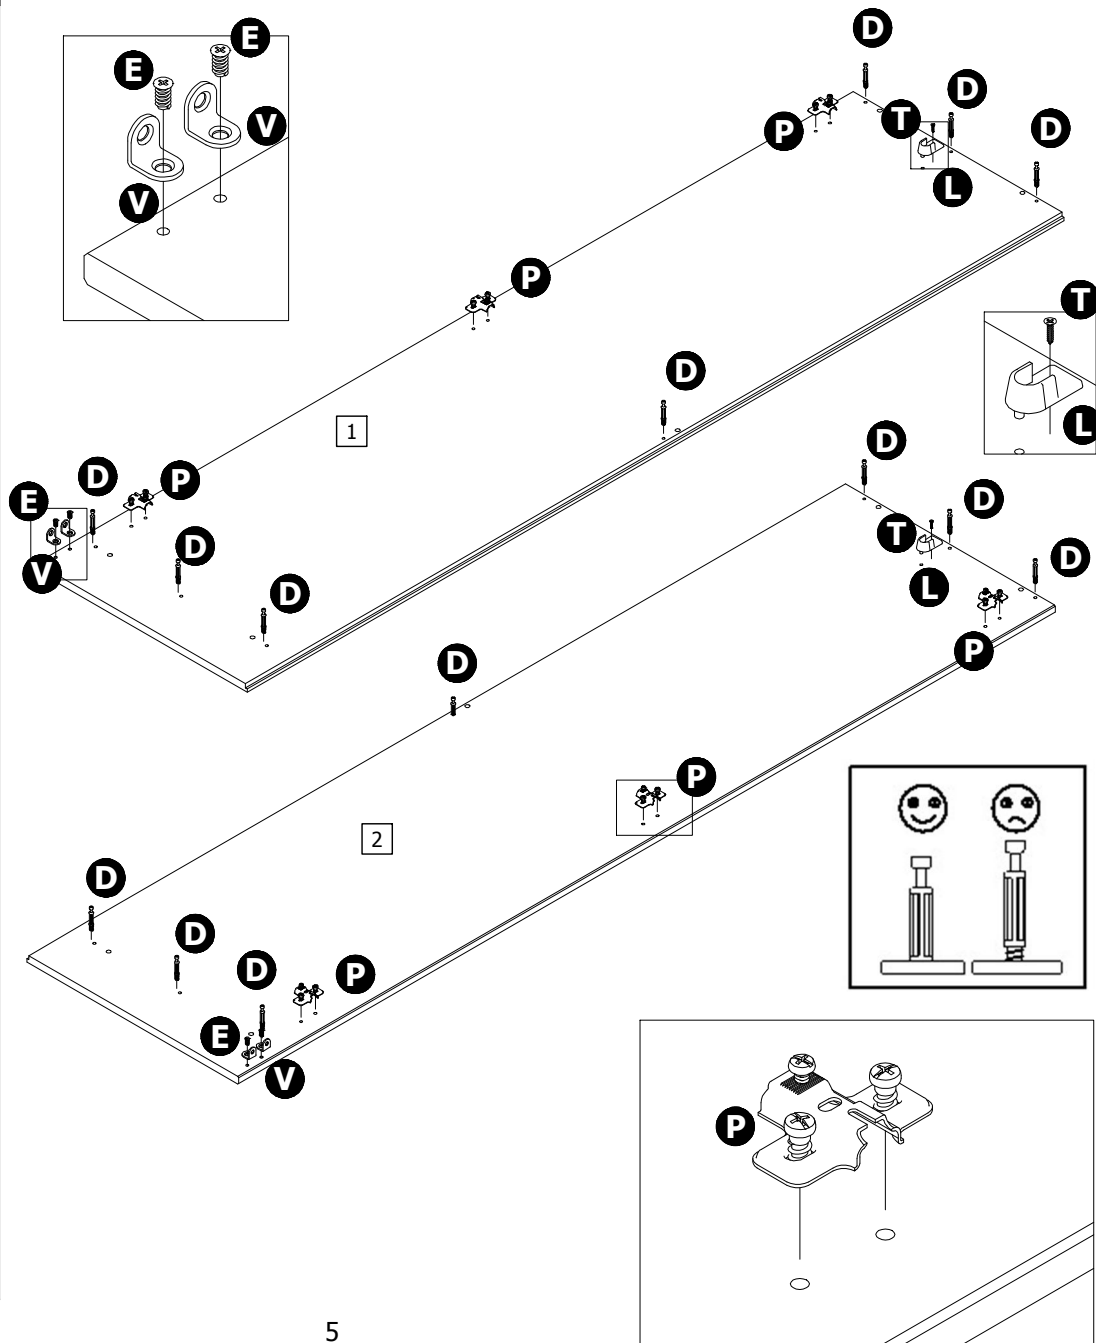


Assembly Instructions

Step 3

Place the sides 1 and 2 onto the top 3, the back plinth 4 and the bottom 3.


Push cams into holes indicated, arrows pointing towards sides.

 Turn the cams C to the right to fix the top and bottom 3 and the back plinth 4.
See details.

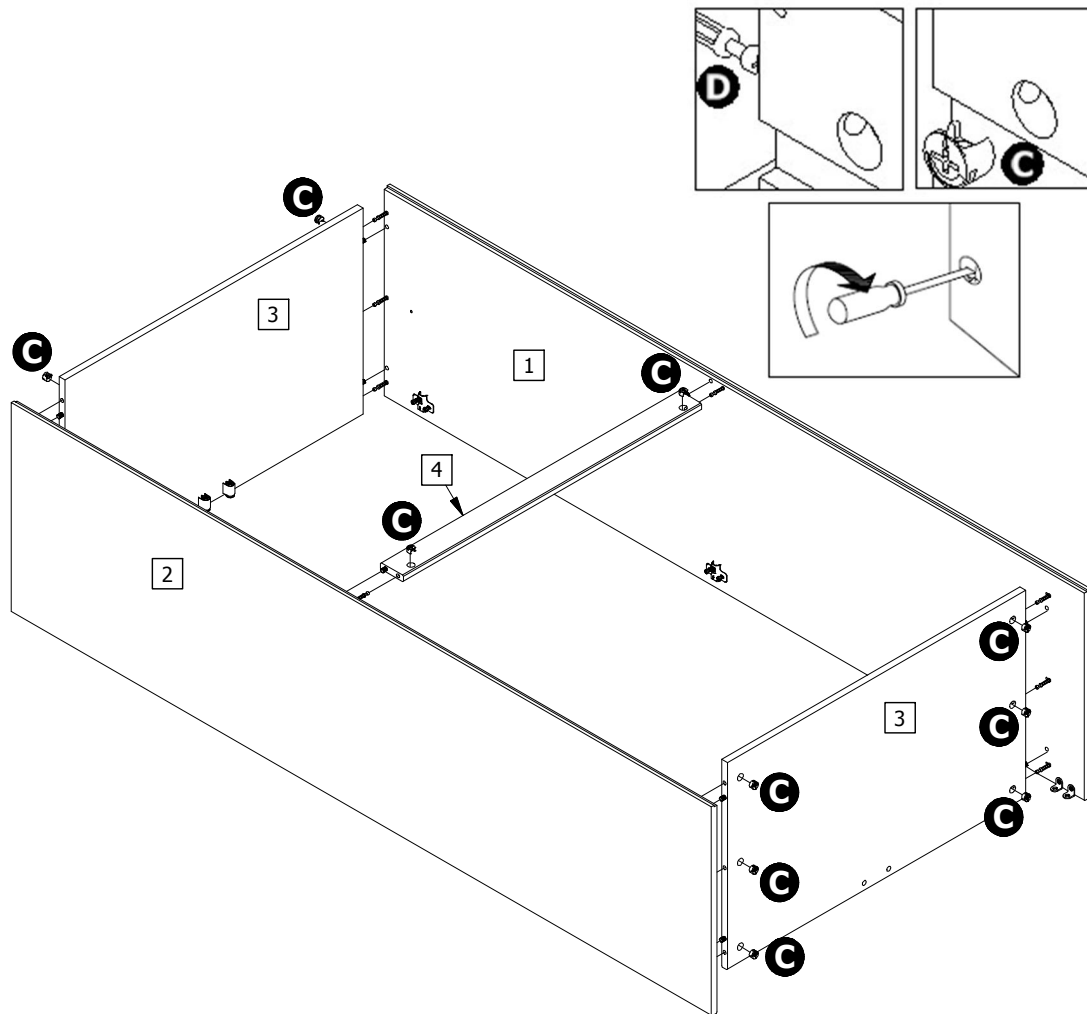

Step 4

 Fix the front plinth 5 onto the angles V using screws E.

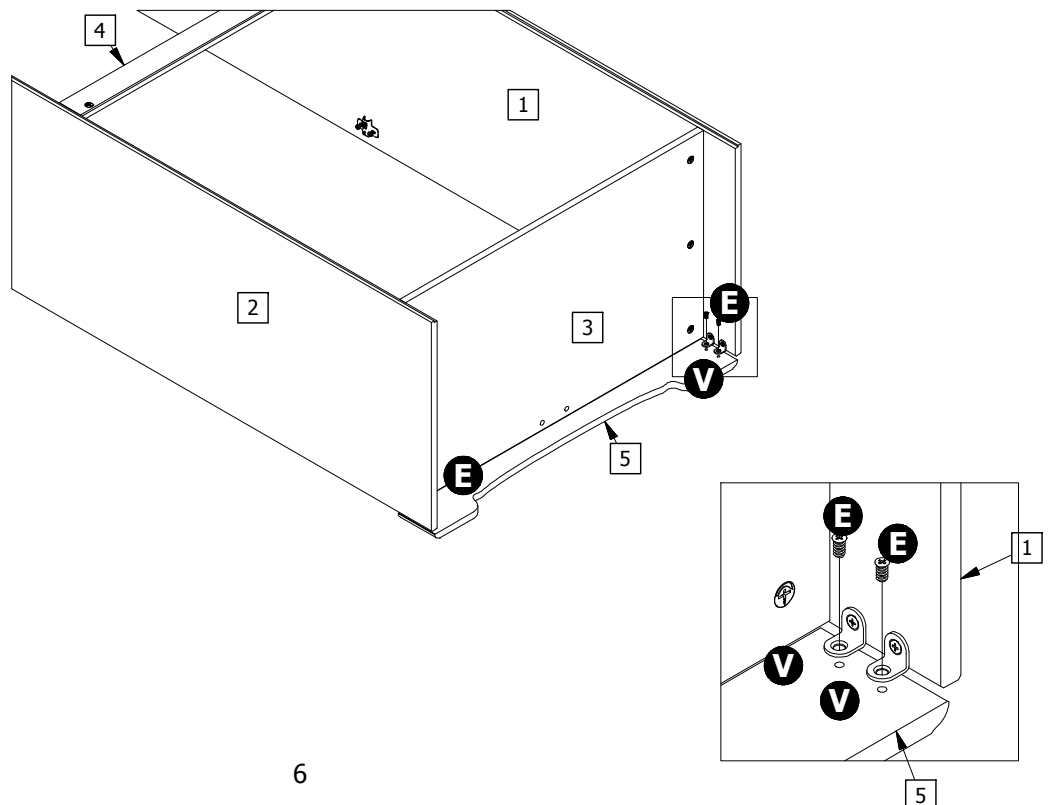

Assembly Instructions

Step 5

 
 
Place the backs 7 into rebates in the sides 1,2 and into the H-profile 15.



Important!
Make sure the angle between the top and the sides is 90° when the back is attached.

Fix the backs to the sides 1,2, the top 3 and the back plinth 4, using nails i.

Use the nail holder Yd and a small hammer.

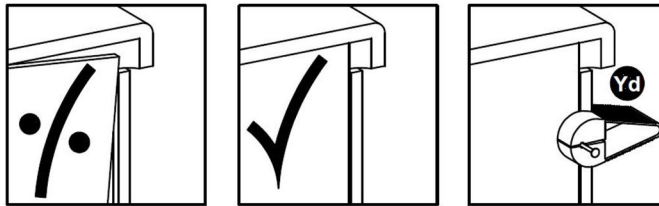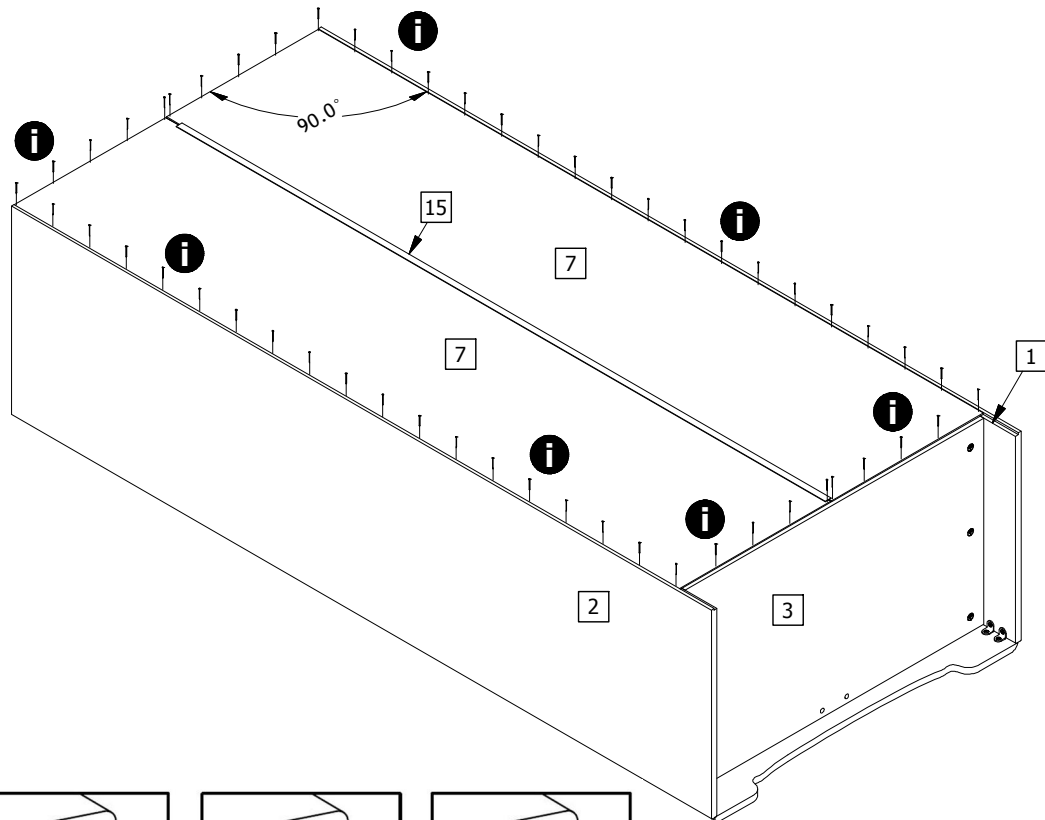


Step 6

Place the cup hinges Q into the holes indicated on the doors 8.

Fix the hinge Q using screws T.

 Place the magnet catches N in the holes indicated on doors 8, using a small hammer.

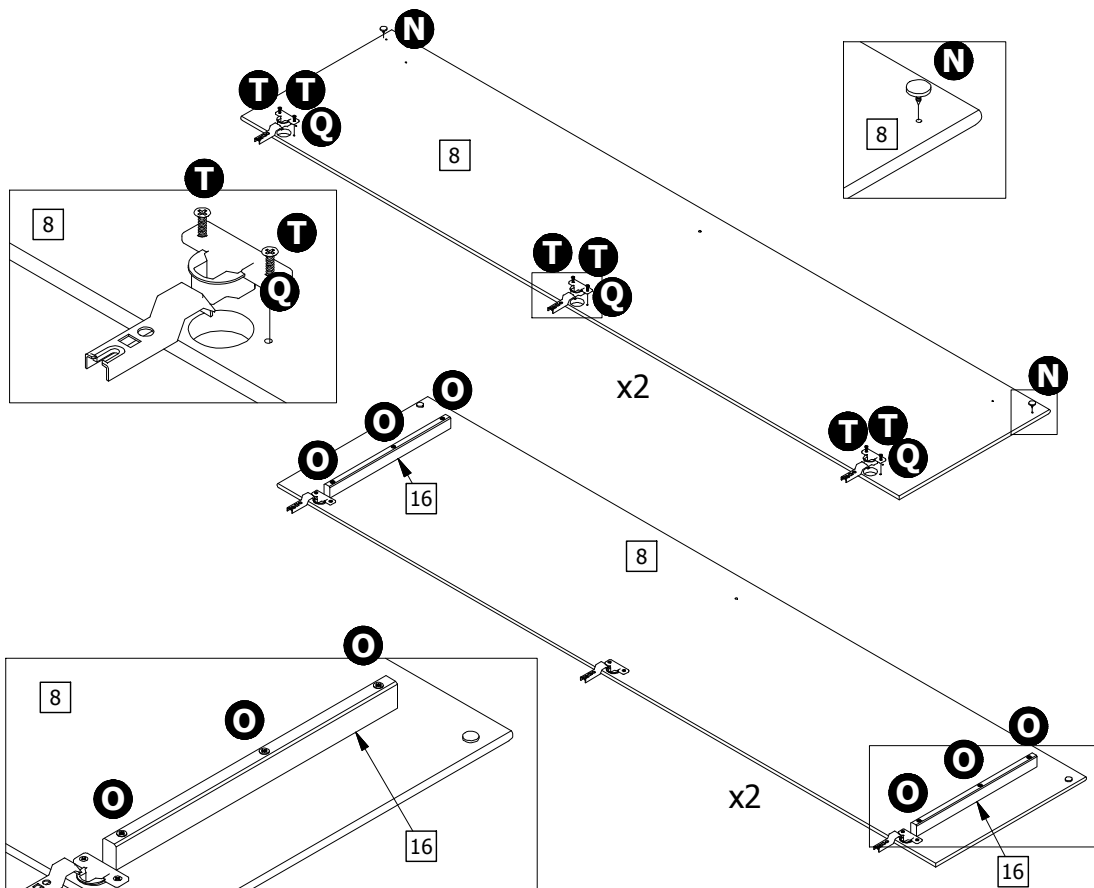

Step 7

 
 
Fix the door rails 16 to the doors 8 using screws O.

Assembly Instructions

Step 8

Place the top rail 6 onto the top 3.

Fix the top rail to the top using angles W and screws T




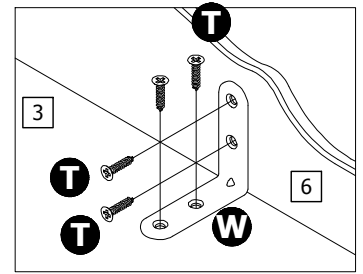
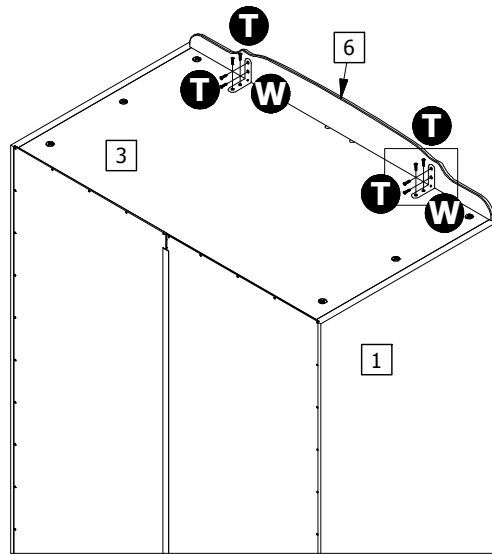


Step 9



Place the hanger rail 10 into the support L.

To fix the doors 8, slide the cup hinges Q onto the crossplates P. Fix the hinges using the pre-mounted screw in the crossplates. See details.

     Fix the wooden knobs G to the doors using screws R.

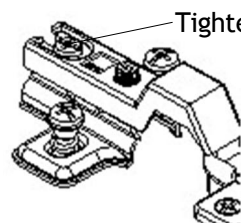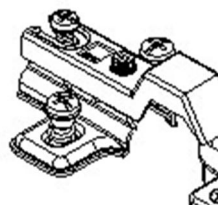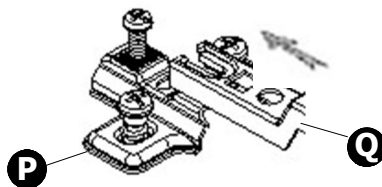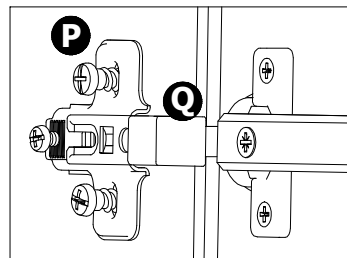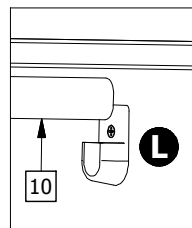

Tighten these screws

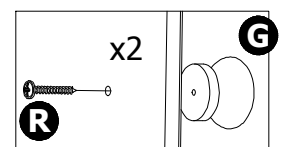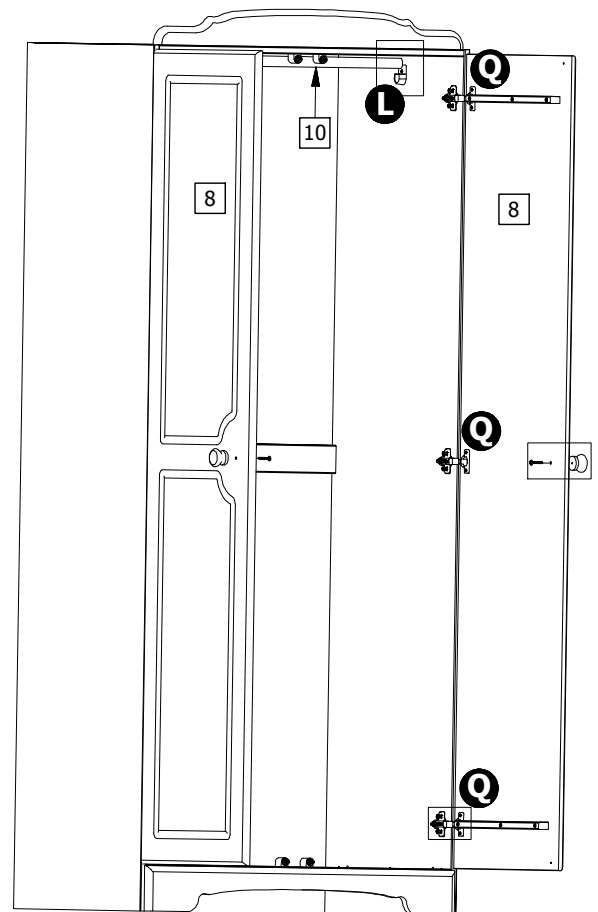  

Assembly Instructions

Step 10



 
Warning!
The wardrobe is heavy. Lift with care.

Its recommended that the wardrobe is fixed to the wall.

Use the fittings J.
Follow the instruction included with the fittings.



Wallstrap and instruction

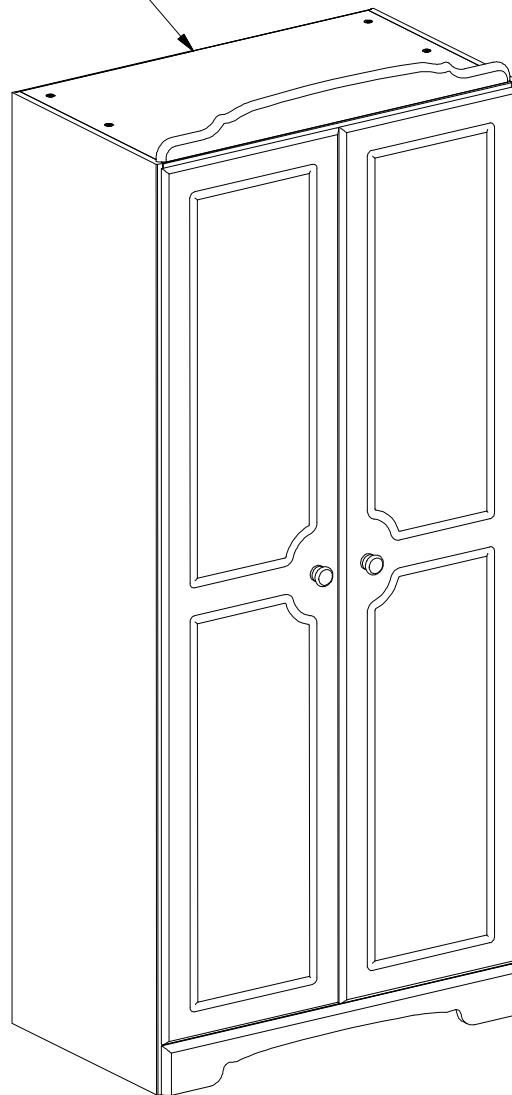

Assembly Instructions

Step 11

Adjusting the doors left/right.

a:
To adjust the door towards the left hand side - turn the adjusting screw to the right.

b:
To adjust the door towards the right hand side - turn the adjusting screw to the left.

Adjusting the doors forwards/backwards.

a:
Loosen the fixing screw.

b:
Push the cup hinge/the door forwards or backwards to adjust.

 
c:
Tighten the fixing screws of ALL the crossplates.

Adjusting the doors up/down.

a:
Loosen the two pre-mounted screws of each crossplates, BUT ONLY as much as it will allow the crossplates to move up and down.

b:
Push the door up or down to adjust.

c:
Tighten the pre-mounted screws of ALL crossplates.

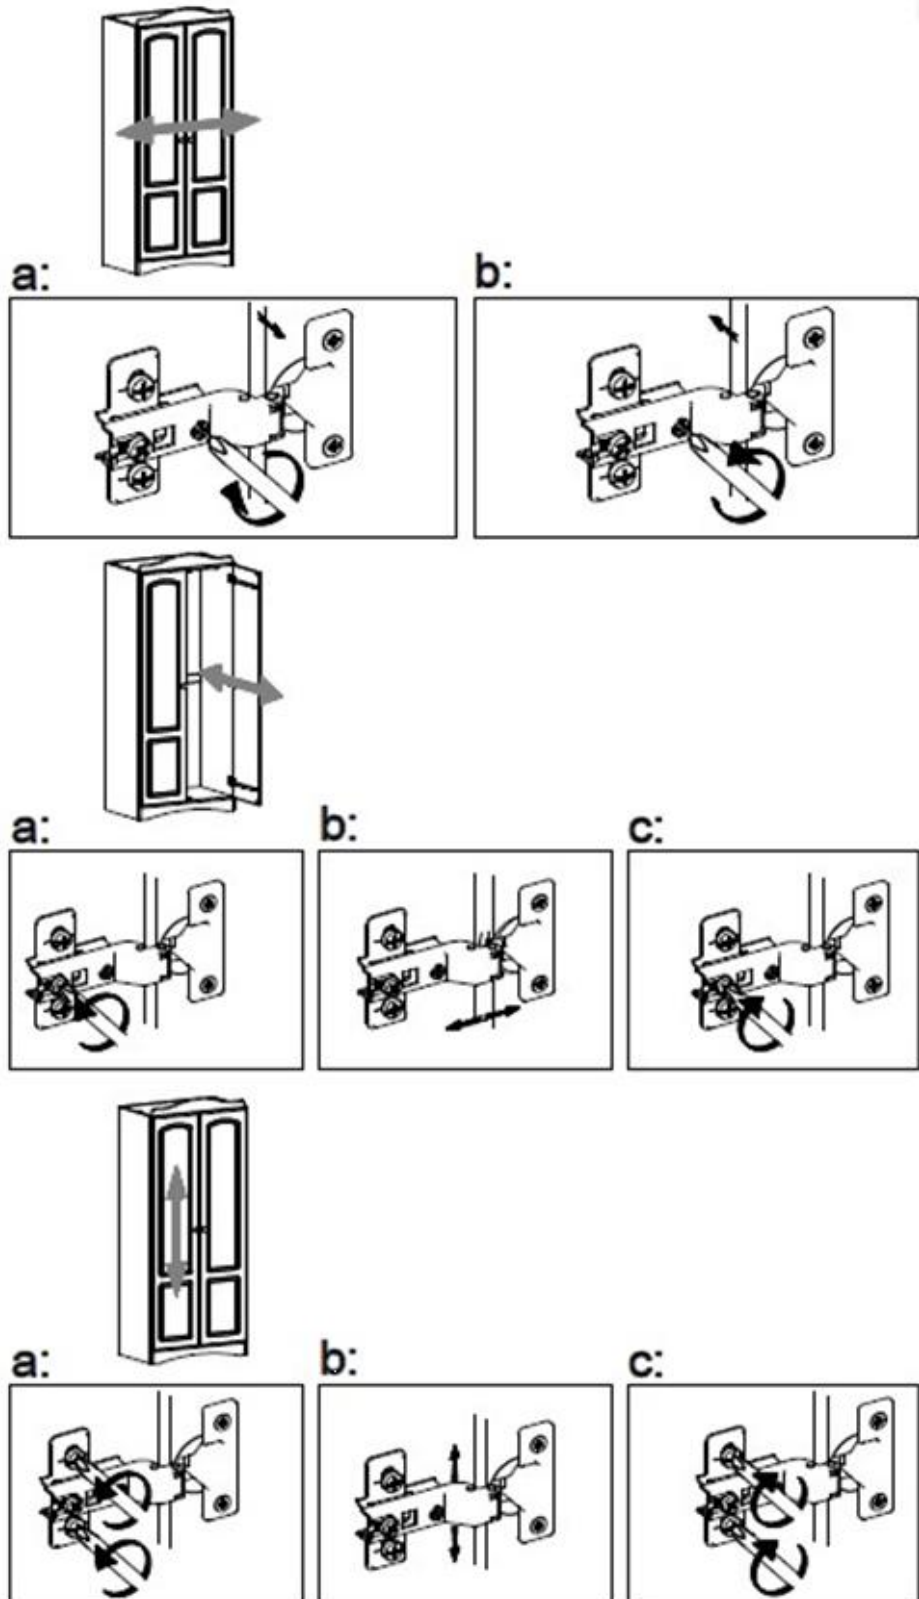

If you need help or have damaged or missing parts, **call the Customer Helpline: 0845 640 30 30**
Home Retail Group - 489-499 Avebury Boulevard - Saxon Gate West - Central Milton Keynes MK9 2NW