
Penton - TV Unit

Assembly Instructions - Please keep for future reference

609/7093 609/7103

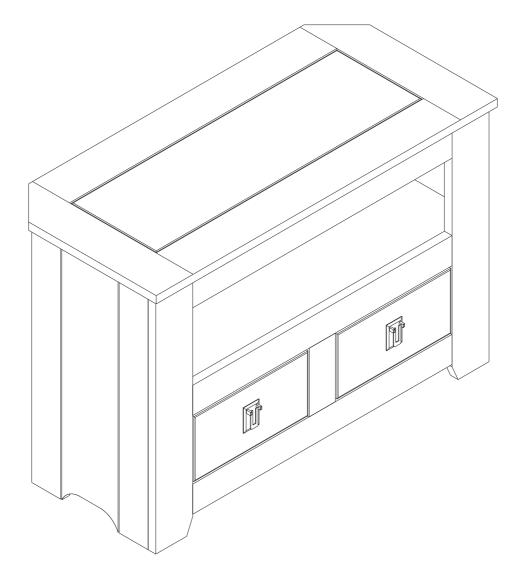

Dimensions

Width - 85cm Depth - 40cm Height - 57cm

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the Customer Helpline: 08456 400 800



Important - Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• This product has been produced from natural timber; you may notice some variation in the grain and colour of different component parts which is normal for furniture produced using natural wood and is not the result of any manufacturing fault.

• The product has been treated with a wax and oil finish to prevent dirt ingress and preserve moisture.

• On unpacking the furniture you may notice an odour due to this treatment; this will disappear once the furniture is unpacked and assembled after a period of time.

• This process may leave some staining on the packaging material; please take care to ensure this does not transfer to clothing or carpeted surfaces during assembly.



• We do not recommend the use of power drill/drivers *for inserting screws*,

as this could damage the unit. Only use hand screwdrivers.

• Parts of the assembly will be easier with 2 people.

• Dispose of all packaging carefully and responsibly.

Care and maintenance

• Use an appropriate furniture polish for natural wood furniture and a dry cloth to clean the product.

• Avoid placing the furniture in direct sunlight as this will cause the timber to prematurely age.


• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

Components - Panels

Please check you have all the panels listed below

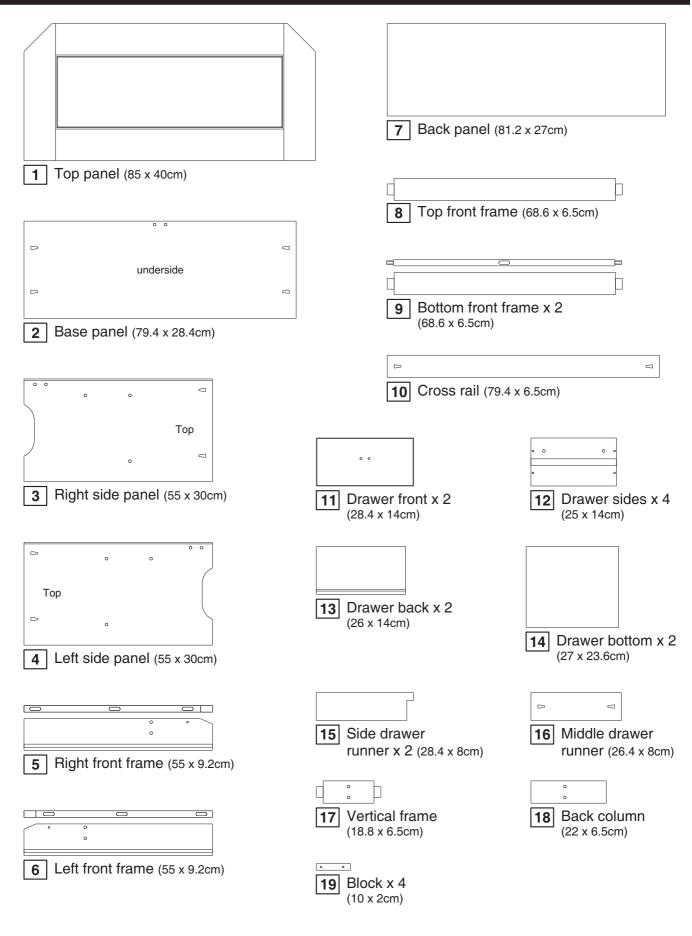

Components - Fittings

If you have damaged or missing components, call the **Customer Helpline: 08456 400 800**

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

	B ())))))))		
Wooden dowel x 34	14mm Screw x 2	30mm Screw x 16	
		F	
35mm Screw x 32	22mm Bolt x 4	Drawer handle x 2	
G ()>			
Nail x 16			

Tools required

	Phillips sc (small & m		2m	Ruler/tape measure
		Small hammer		Eye protection (when using a hammer or glue)
Ruler - Use this ruler to help correctly identify the screws				

 $0 \quad 5 \quad 10 \quad 15 \quad 20 \quad 25 \quad 30 \quad 35 \quad 40 \quad 45 \quad 50 \quad 55 \quad 60 \quad 65 \quad 70 \quad 75 \quad 80 \quad 85 \quad 90 \quad 95 \quad 100 \quad 105 \quad 110 \quad 115 \quad 120 \quad 125 \quad 130 \quad 135 \quad 140 \quad 145 \quad 150 \quad 155 \quad 160 \quad 165 \quad 170 \quad 100 \quad 10$

Step 1

Fixing right front frame to the right side panel (Two people required for an easier assembly).

a: Position right front frame **5** to the right side panel **3** through joints.

Note: Before fixing the blocks 19 into place it is important to ensure that the slot and groove of parts 3 and 5 are fully pushed together and lined up correctly at the top and bottom.

b: Place blocks **19** in the positions shown. First fix to the side panel using screws **D**.

C: Fix through blocks **19** into front frame using screws **D**.

Step 2


Fixing left front frame to the left side panel (Two people required for an easier assembly).

a: Position left front frame 6 to the left side panel 4 through joints.

Note: Before fixing the blocks 19 into place it is important to ensure that the slot and groove of parts 4 and 6 are fully pushed together and lined up correctly at the top and bottom.


b: Place blocks **19** in the positions shown. First fix to the side panel using screws **D**.

C: Fix through blocks **19** into front frame using screws **D**.

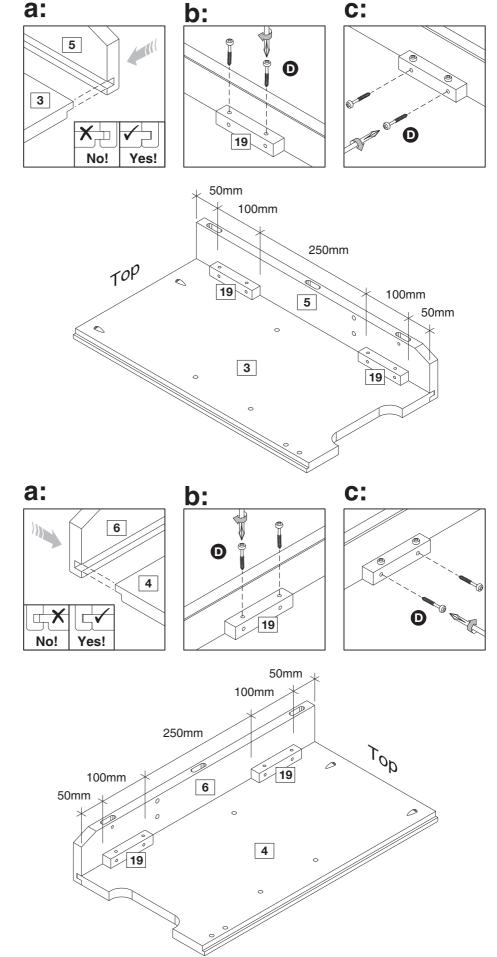

Step 3

Insert dowels (A) into the indicated parts.

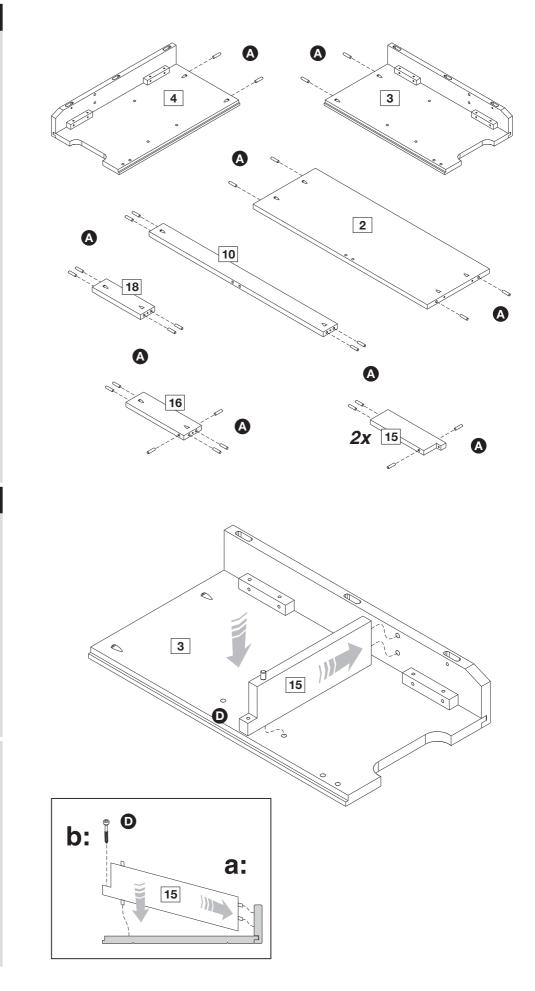

Step 4

Fixing side drawer runner on right side panel.

a: Fit side drawer runner **15** first in the front frame then after in the side panel as shown.


b: Attach side drawer runner using screw **D**.

Repeat step 4 for the left side panel and side drawer runner.

Step 5


Assembling parts.

Put parts **9** and **17** together as shown in the diagram.

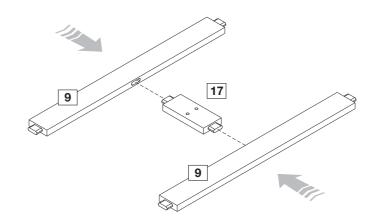

Step 6

Insert the assembled frame and top front frame **8** into the holes on left side panel **4**.

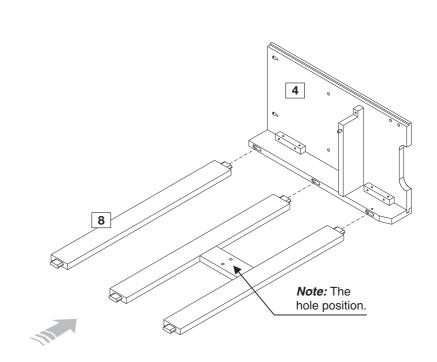


Step 7

Fixing base panel.

Fit base panel 2 to the left side panel then fix it using screws **D**.



Note: The hole position on the base panel.

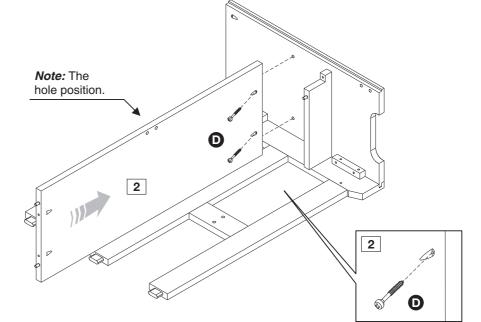

Step 8

Fixing middle drawer runner.

Fit middle drawer runner **16** to the vertical frame then fix using screw **D**.

Attention: Make sure middle drawer runner is positioned as shown in the diagram prior to fixing.

Step 9

Fixing back column.

Fit back column 18 to the base panel 2 and middle drawer runner 16 then fix it using screws **D**.


Attention: Correct position of the back column. Longer side of back column 18 (11cm) must be facing to base panel.


Step 10


Fixing cross rail.

 
Fit cross rail **10** to the left side panel 4 and back column 18 then fix it using screws **D**.

 
Attention:

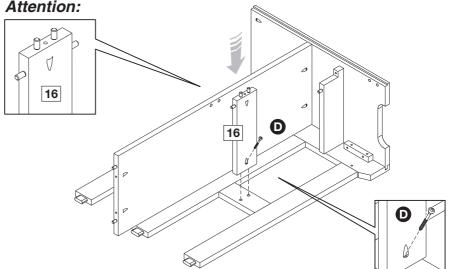

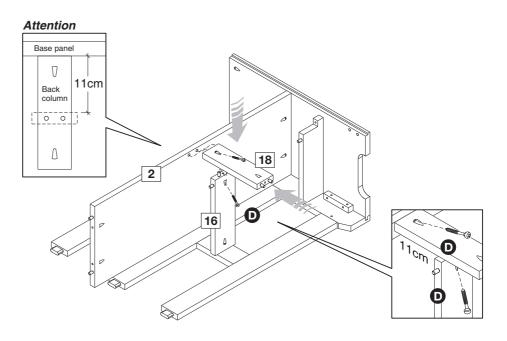

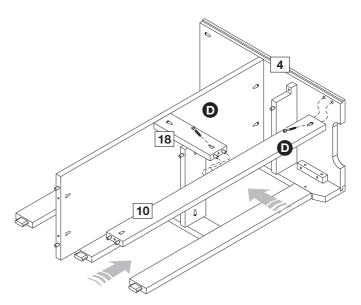





Step 11

Fixing right side panel.

Place right side panel 3 properly ensuring dowels and front frames are all fitted into their holes at the same time.

a: Fix base panel 2 and cross rail 10 to the side
3 using screws **D**.

b: Fix bottom front frame
9 to the right and left
side panels using screws
B as shown in the
diagram.

Step 12

Fixing top.

Caution: Carefully lay the top panel on a soft and clean surface to avoid damaging the product.

With help, fit cabinet to the top panel 1 then fix using screws **D**.



Attention: Do not over tighten screws.


Step 13

 
Fixing back panels.

 
Cabinet MUST be 'square' when back panels are attached.

Attach the back panel 7 using nails **G**.


With help, carefully stand the product upright.

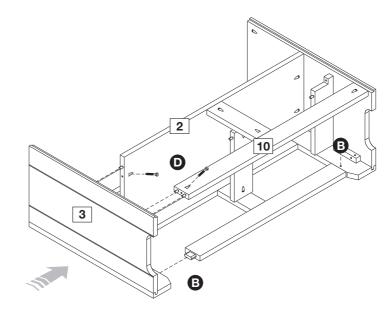








Note: Correct position of the panels.

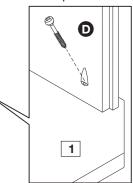

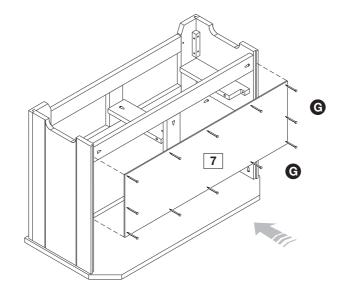

 

 

Step 14

Drawer assembly.

a: Attach drawer sides
12 to the drawer front
11 using screws **O**.

b: Slide drawer bottom
into slots on drawer sides
and position drawer back
13 in place.

C: Holding the drawer back 13, press the drawer sides and fix them using screws **G**.


d: Using bolts **(B)** attach the drawer handle **(B)** to the drawer front.


Repeat step 14 for the other drawer.


Step 15


Insert drawers into unit. With the back of the drawers past the front frames, use a hammer to tap dowels (A) in flush to drawer sides. This is a safety catch to stop drawer falling out.

Assembly is complete.

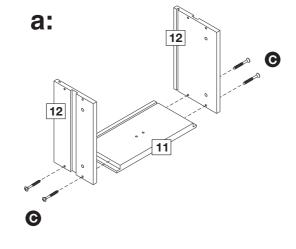


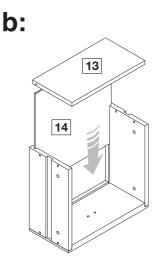

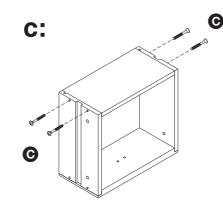

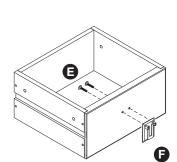

d:

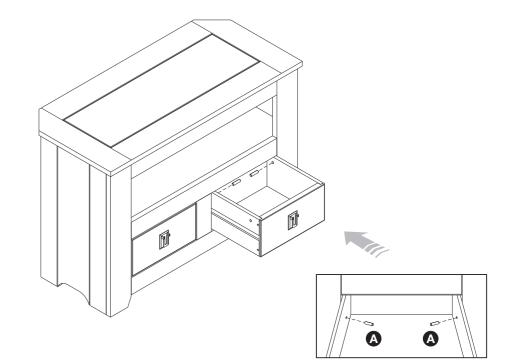

If you need help or have damaged or missing parts, call the Customer Helpline: 08456 400 800