

Hamlin - 2 Doors Robe


Assembly Instructions - Please keep for future reference

152/8062

151/7358

hygena

151/2683

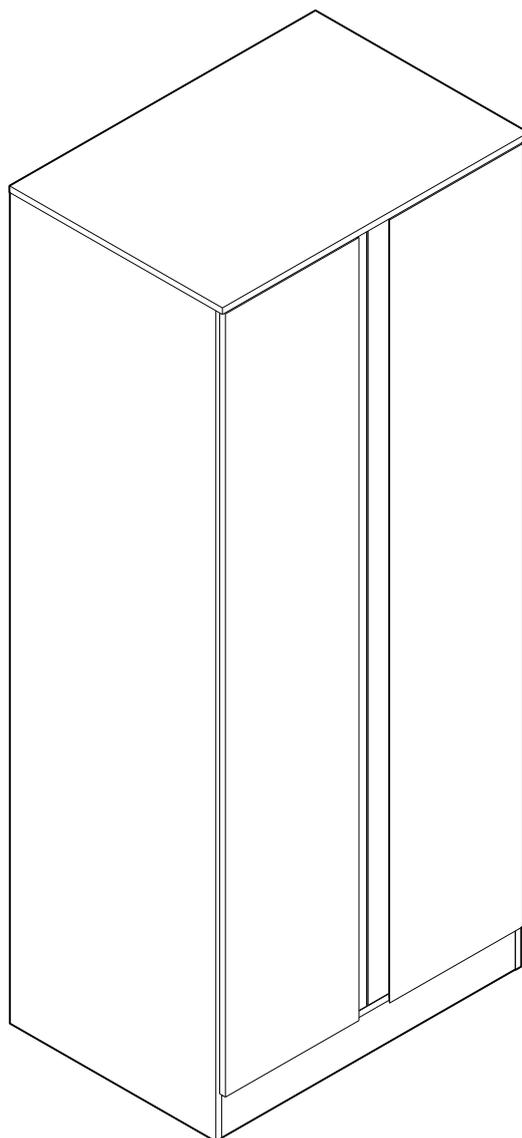

Dimensions

Width - 80,2cm

Depth - 55,8cm

Height - 192cm

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400 800**



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2 and 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.



• We do not recommend the use of power drill/drivers **for inserting screws**, as this could damage the unit. Only use hand screwdrivers.

- Parts of the assembly will be easier with 2 people.
- Dispose of all packaging carefully and responsibly.


Care and maintenance

- Avoid placing the furniture in direct sunlight as this will cause the timber to prematurely age.
- Use a dry cloth to clean the product, furniture polish is not recommended.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.


Note: If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

Components - Panels


Please check you have all the panels listed below

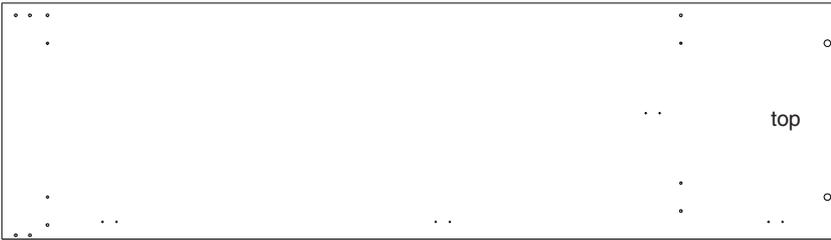


1 Right side panel (190 x 54cm)

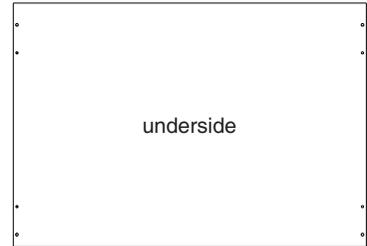


7 Top panel (80.2 x 55.8cm)

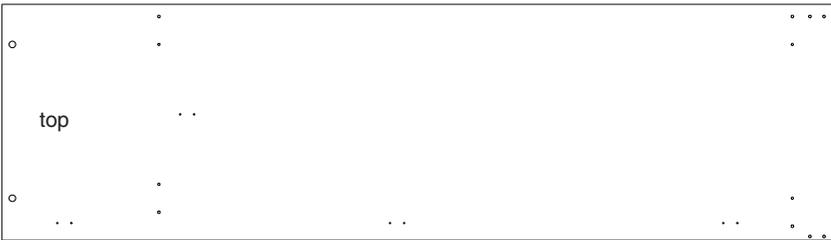


2 Left side panel (190 x 54cm)

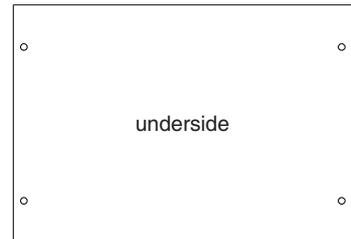

8 Base panel (77 x 54cm)

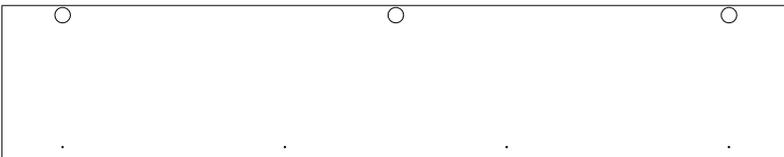

3 Door x 2 (179 x 35cm)

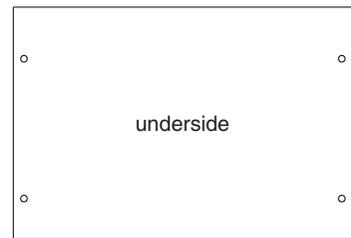

9 Shelf (77 x 52.7cm)



4 Door knocker x 2 (178 x 8cm)



10 Bottom frame (77 x 9.6cm)



5 Back panel x 2 (180.8 x 39.1cm)



11 Unfinished bottom frame (77 x 9.6cm)



6 H profile (179 x 1.8cm)









12 Hanging rail (76.2 x 3cm)

Components - Fittings


If you have damaged or missing components, call the **Customer Helpline: 08456 400 800**

Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

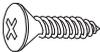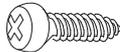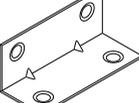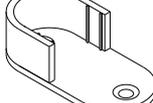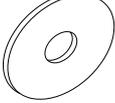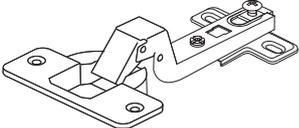A  Wooden dowel x 20	B  14mm Screw x 28	C  14mm Screw x 24
D  16mm Screw x 1	E  25mm Screw x 14	F  Metal dowel x 12
G  Locking nut x 12	H  Nail x 67	I  Nail x 4
J  Plastic feet x 4	K  L shaped bracket x 6	L  Hanging rail support x 2
M  Washer x 2	N  Plastic cap x 12	O  Wall strap x 1
P  Door hinge x 6		


Tools required

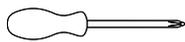


Phillips screwdriver
(small & medium)

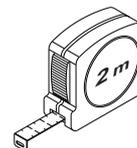

Ruler/tape
measure

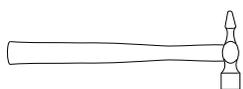

Small
hammer

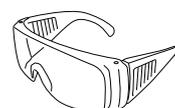

Eye protection
(when using a
hammer or glue)

Ruler - Use this ruler to help correctly identify the screws




Assembly Instructions

Step 1

Insert dowels **A** into the indicated parts.

Fix hanging rail support **L** in the pre marked holes on right side panel **1** and left side panel **2** using screws **B**, as shown.

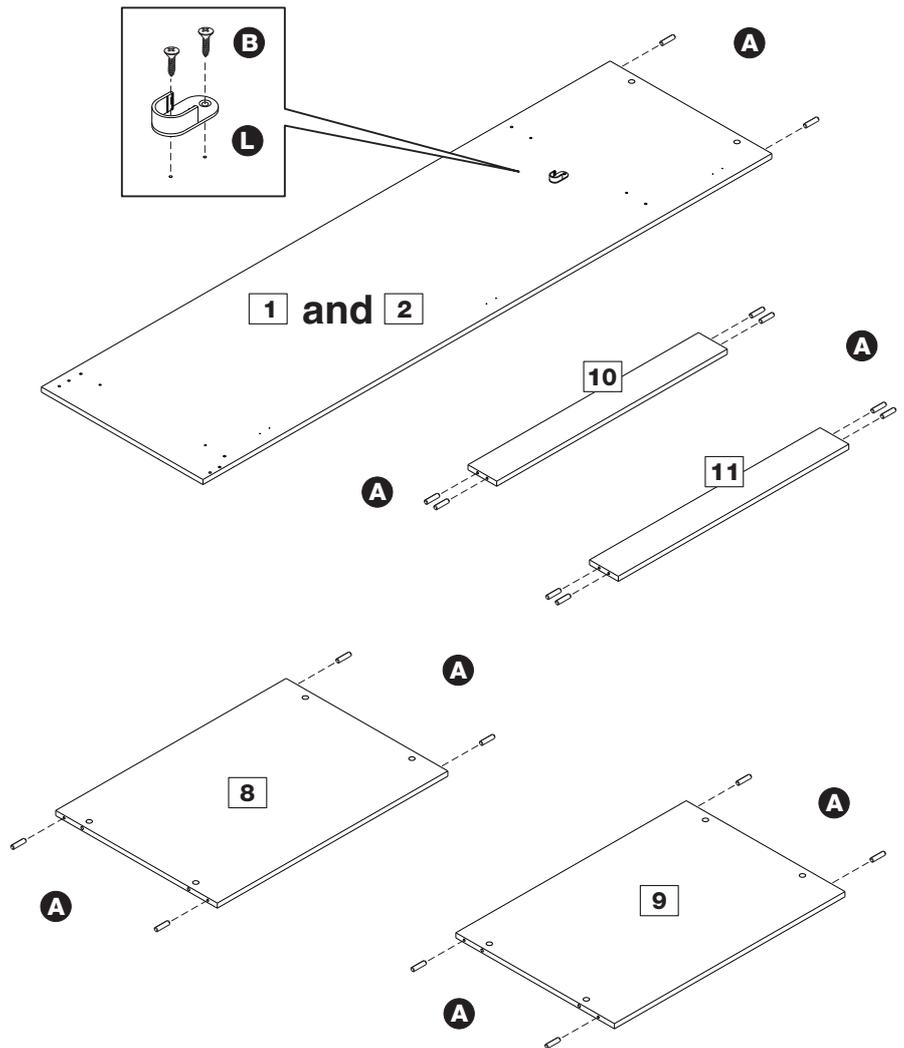


Step 2

Fixing L shaped brackets.

Fix L shaped brackets **K** in the bottom frame **10** and unfinished bottom frame **11** using screws **B**, as shown.

Attention: Leave **1mm** gap from the edge of the bars as shown. Fix L shaped brackets to the unfinished side in bottom frame **10**.

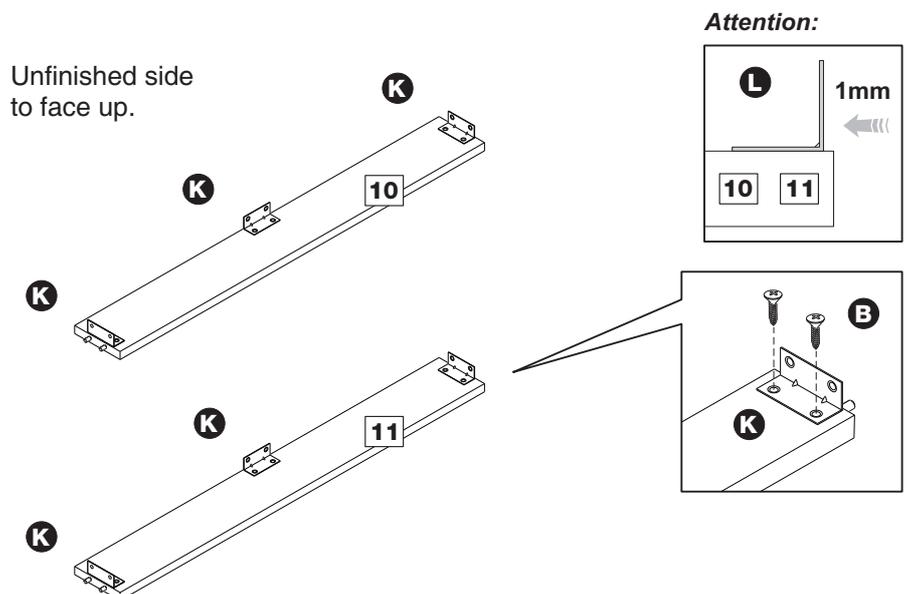

Assembly Instructions

Step 3


Fitting Metal dowels.

Screw metal dowels **F** into right side panel **1**, left side panel **2** and top panel **7**.



Note: Insert metal dowels as far as shown.



Do not over tighten.

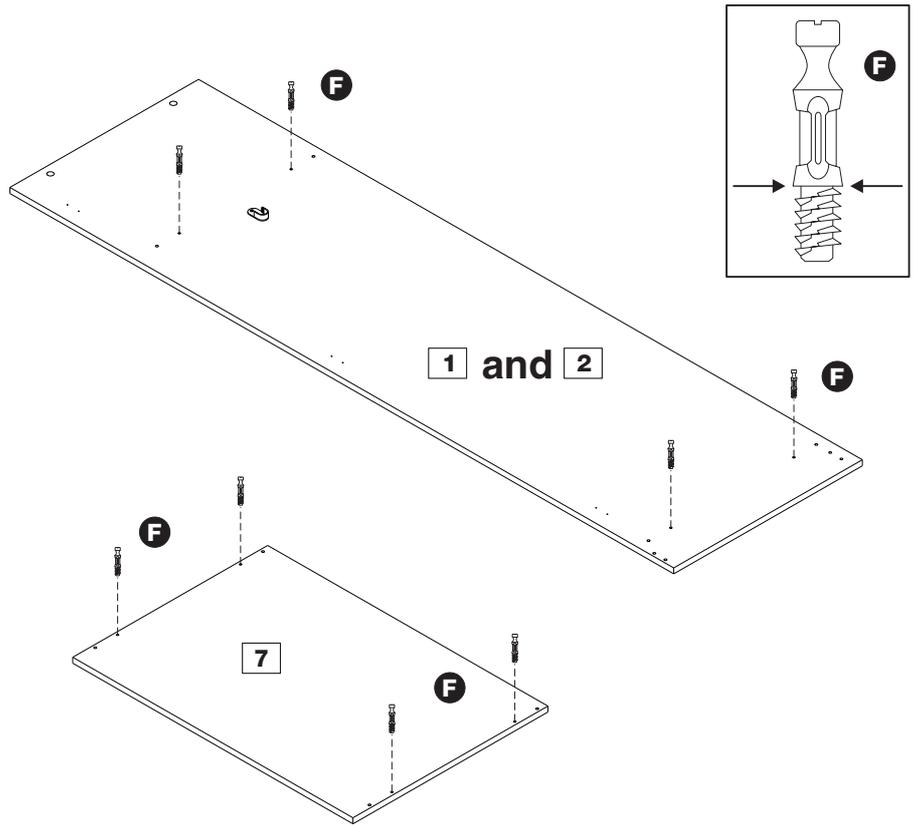


Step 4

Fitting hinges.

a: Loosen screw in door hinge **P** and separate the 'back plate'.

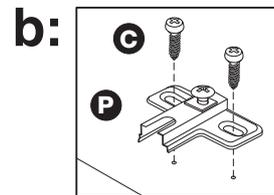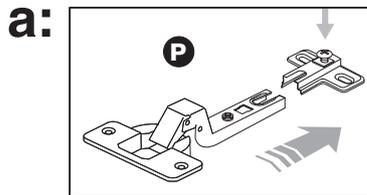

b: Attach 'back plates' **P** in the pre marked holes on right and left side panels **1** and **2** using screws **C**.

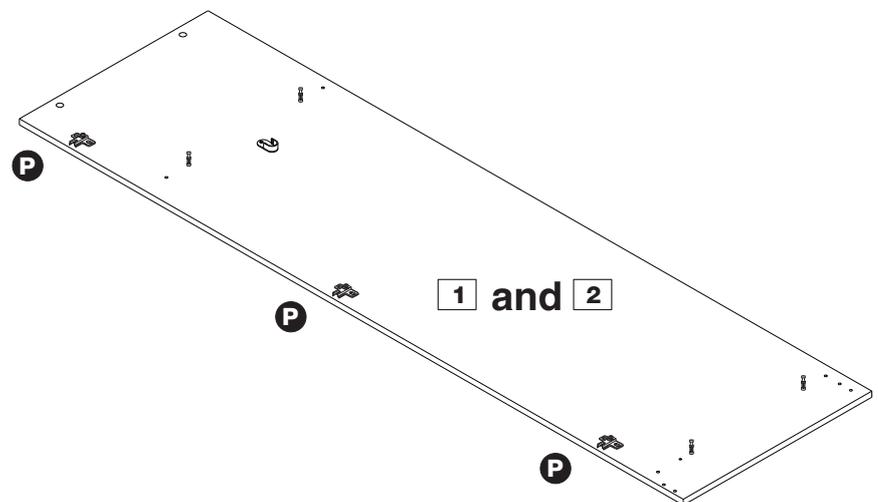

Assembly Instructions

Step 5

Fixing panels and frames.

With help, fit base panel **8**, shelf **9**, bottom frame **10** and unfinished bottom frame **11** to left side panel **2**.

 Finished side of base panel **8** to face up and finished edges of base panel **8** and shelf **9** to face front.



Insert 4 locking nuts **G** into base panel and shelf where shown

Use a screwdriver to turn locking nuts **G** clockwise to lock

Do not over tighten.

After screwing locking nuts, insert plastic caps **N**.

Fix bottom frames **10** and **11** in the side panel through L shaped brackets **K** using screws **B**.

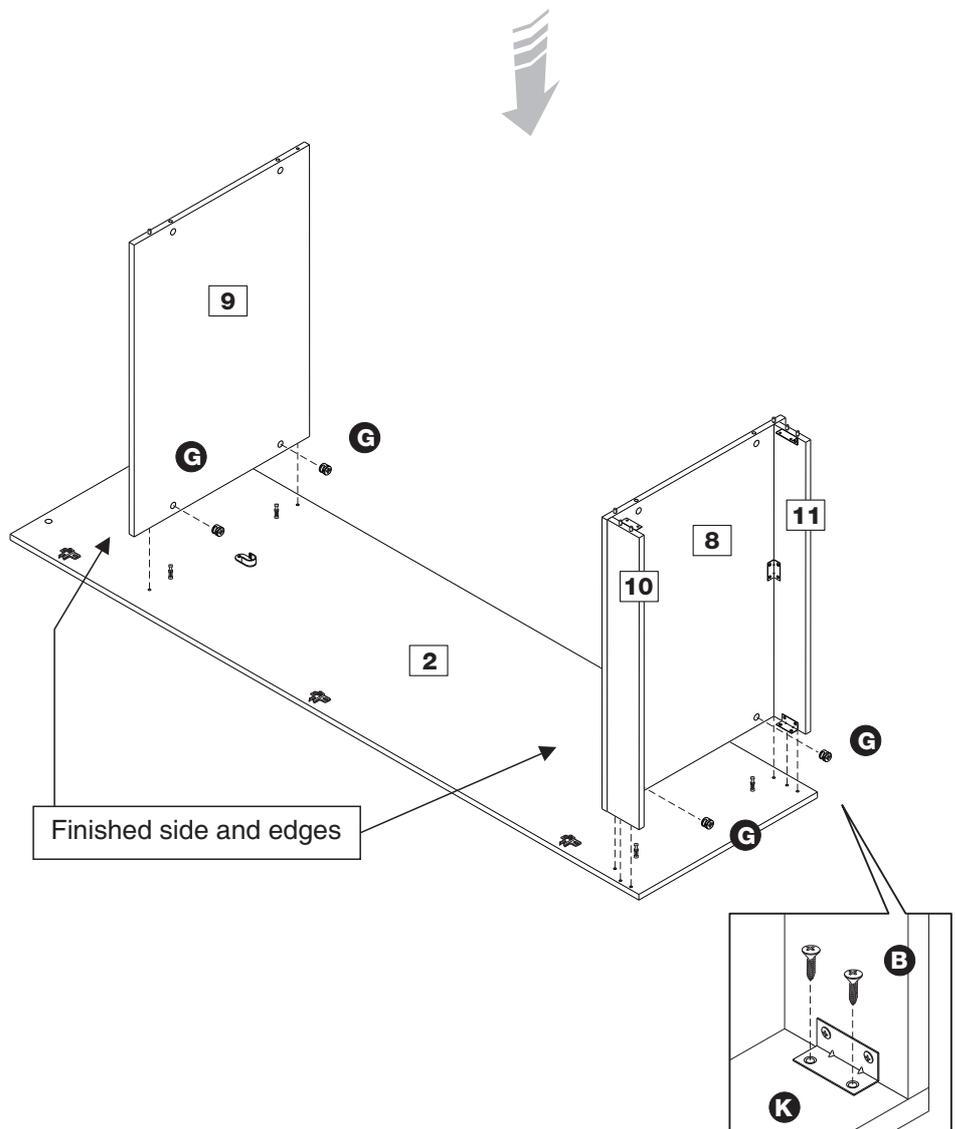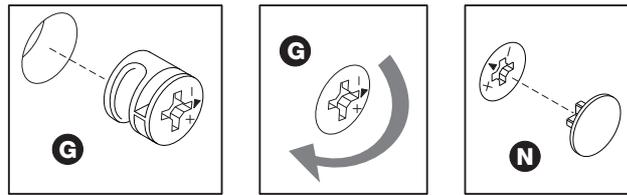

Assembly Instructions

Step 6

Fixing right side panel.

Place right side panel **1** properly ensuring dowels and bottom frames are all fitted into their holes at the same time.



Insert 4 locking nuts **G** into base panel and shelf where shown

Use a screwdriver to turn locking nuts **G** clockwise to lock

Do not over tighten.

After screwing locking nuts, insert plastic caps **N**.

Fix bottom frames **10** and **11** in the side panel and base panel through L shaped brackets **K** using screws **B**.

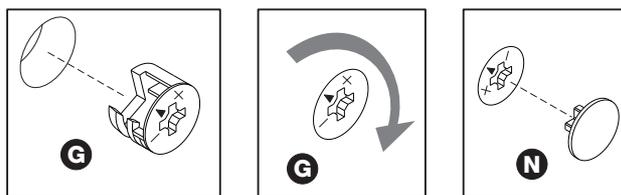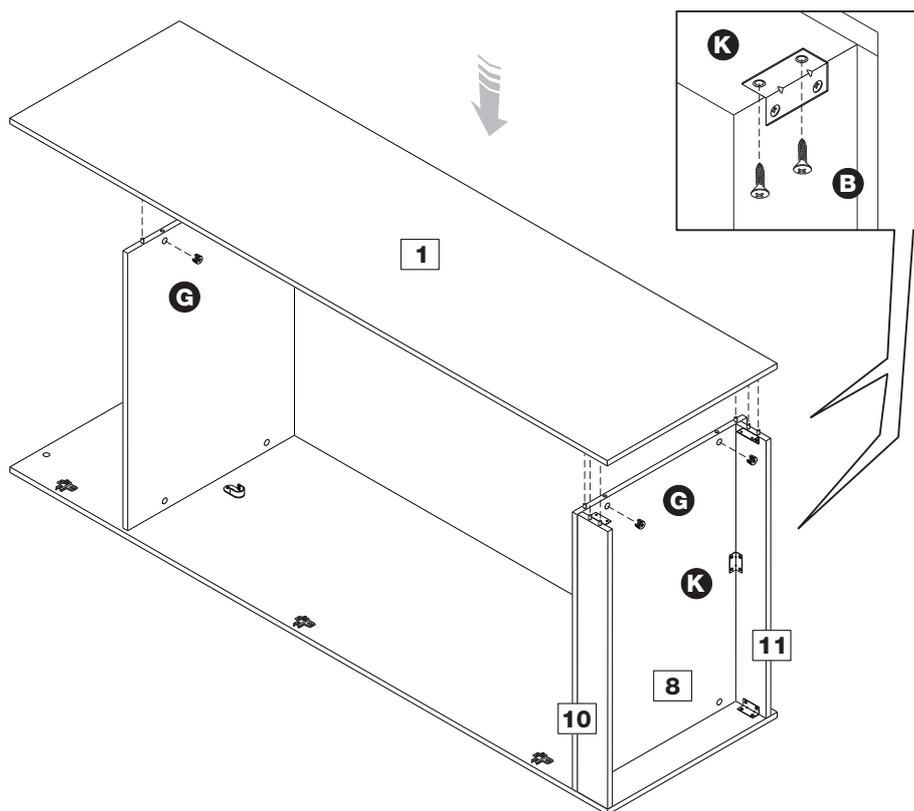

Step 7

Fixing top panel.

With help, carefully lay down the product.



With help, fit top panel **7** to the cabinet.

Insert 4 locking nuts **G** into side panels where shown

Use a screwdriver to turn locking nuts **G** clockwise to lock

Do not over tighten.

After screwing locking nuts, insert plastic caps **N**.

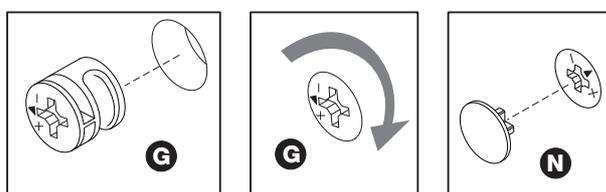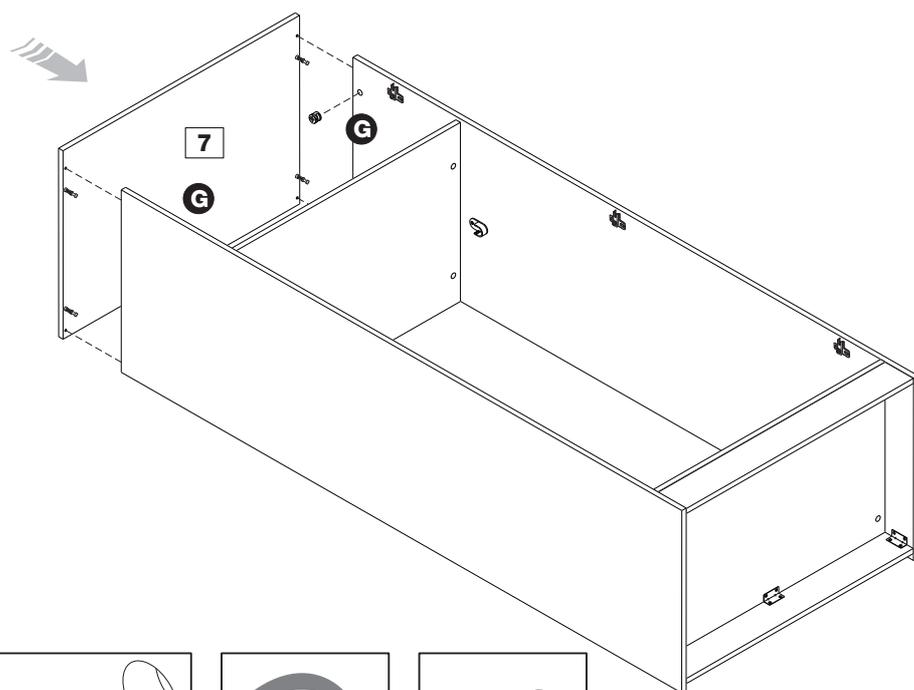


Assembly Instructions

Step 8

Attach plastic feet.


Attach plastic feet **J** in the bottom edge of the right and left side panels using nails **I**.

After attach plastic feet, with help, carefully stand the product upright.

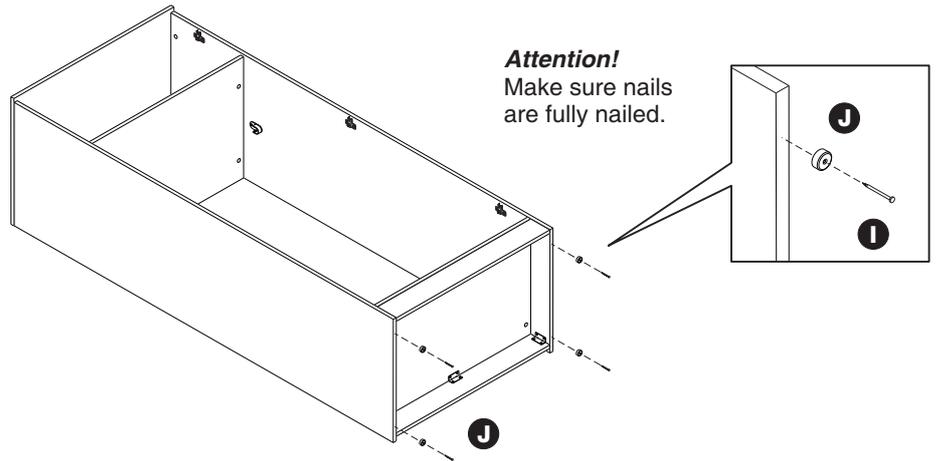

Step 9

Insert hanging rail **12** into the supports **L**.

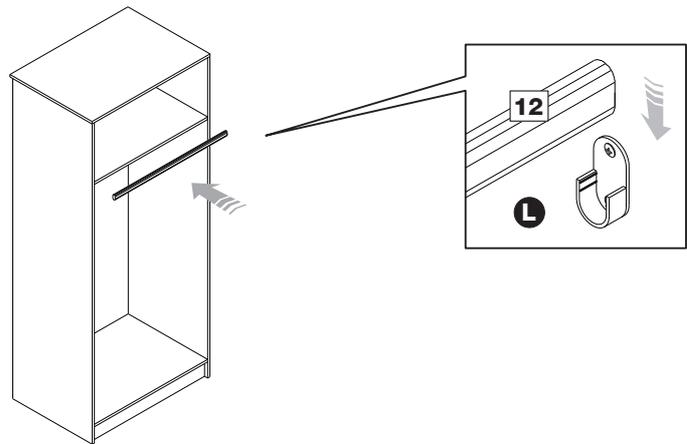

Step 10

Fixing back panels.



Important:


Cabinet **MUST** be 'square' when back panels are attached. Make sure back panels are in flush with the edge of the top panel prior to fixing.

a: Attach the right back panel **5** first using nails **H**.

Note: Back panel's finished side to face inside

b: Position profile **6** onto back panel (just attach).

c: Carefully slot the second back panel **5** into the profile and fix it to the cabinet using nails **H**.

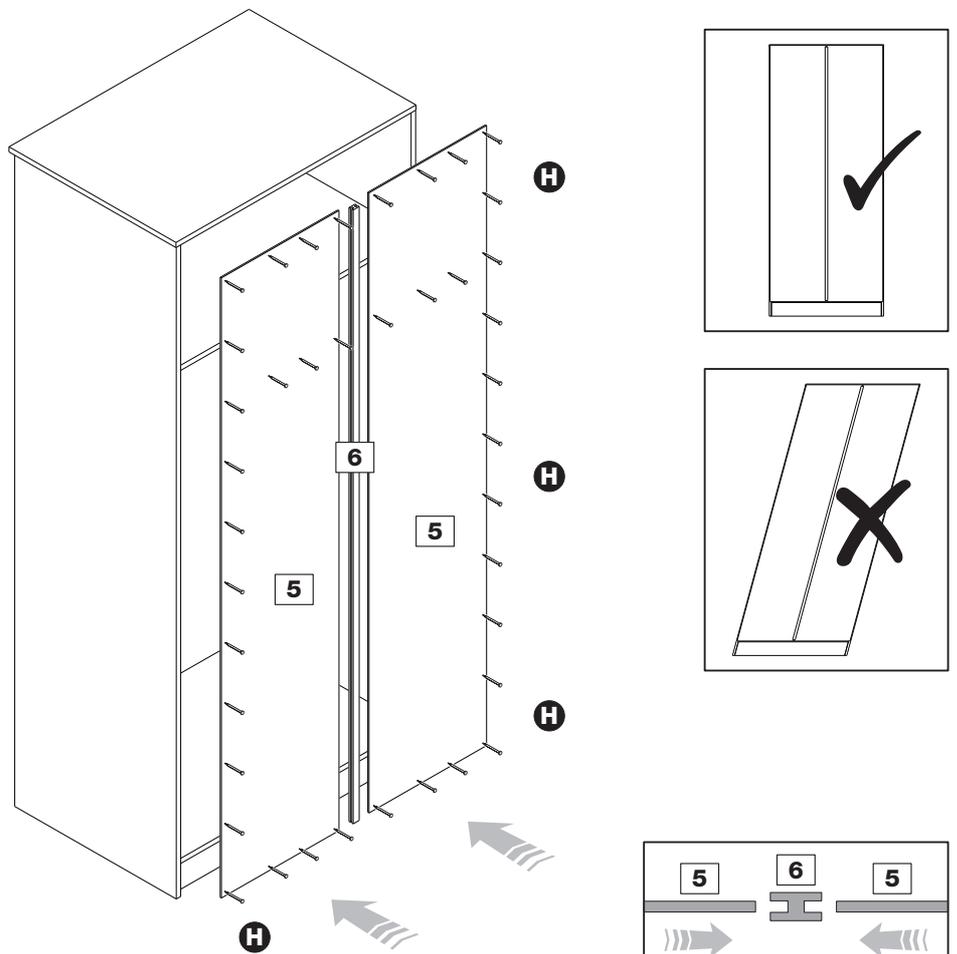

Assembly Instructions



Step 11

Fitting hinges to doors.

a: Insert hinges **P** in the holes on door **3**, as shown.

b: Attach hinges **P** in the the door using screws **C**, as shown.

Repeat step 11 for the other door.

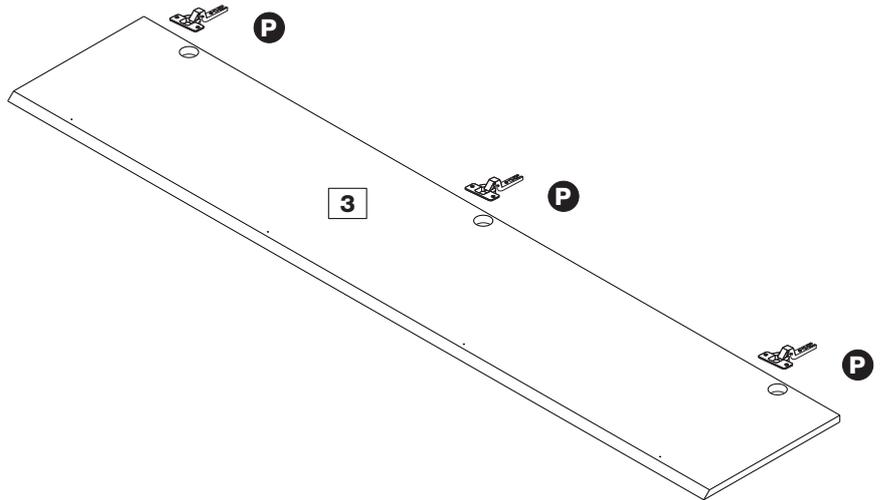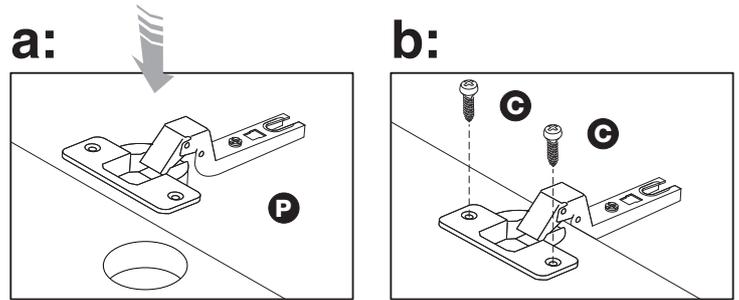

Step 12




Hanging doors.

a: With help, slot door hinges **P** onto 'hinge plates'.

b: Tighten screw shown to lock hinges in position.

Repeat **a** and **b** for other door.

See 'hinge adjustment' in step 14 if the doors need adjusting.

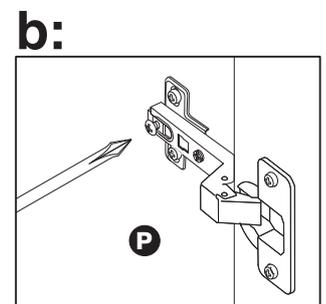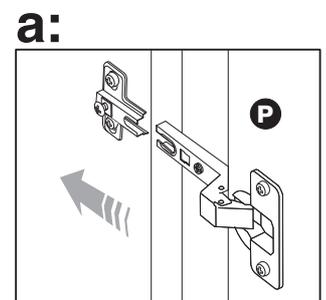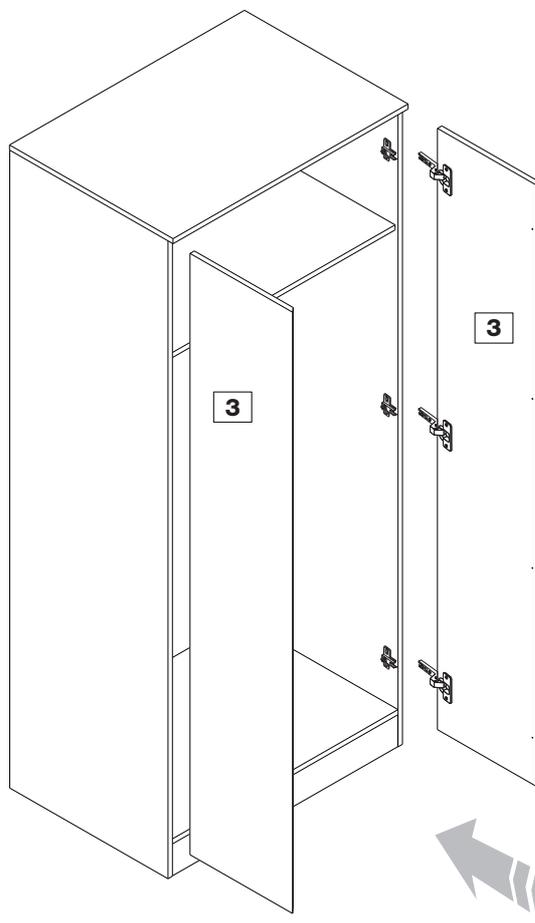


Assembly Instructions

Step 13

Fixing door knocker.

Attach door knocker **4** in the pre marked holes on door using screws **E**, as shown. Make sure knocker is aligned at top of door before fixing.

Repeat step 13 for the other door.

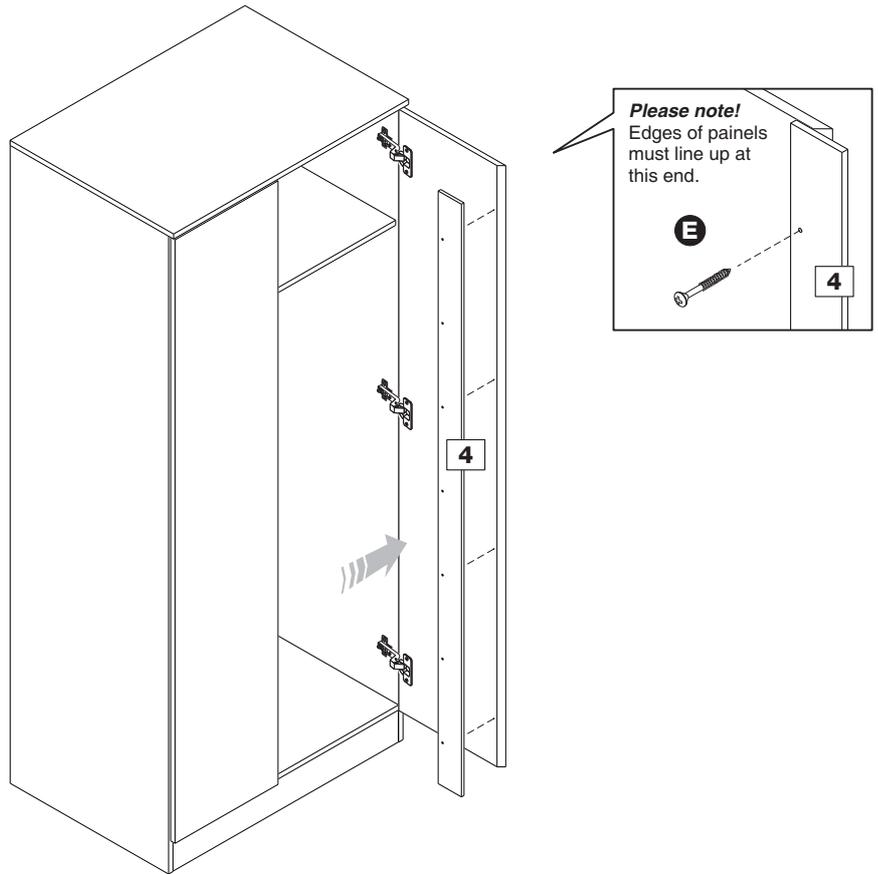



Step 14

Hinge adjustment.

a: To move doors up or down: loosen screws shown and move doors to suit.

Re-tighten screws



a:

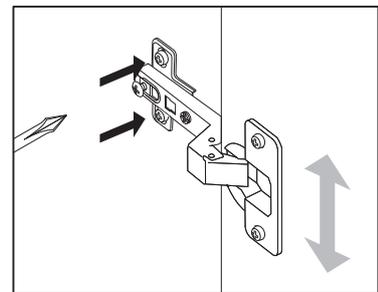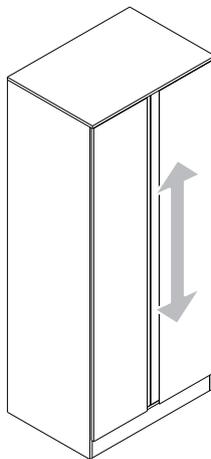

b: To move doors in or out: loosen screw shown and move doors to suit.

Re-tighten screws

b:

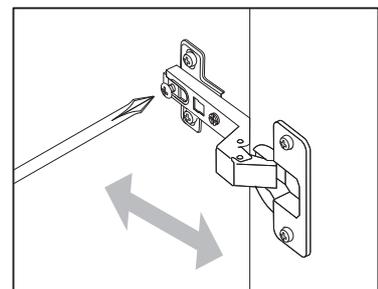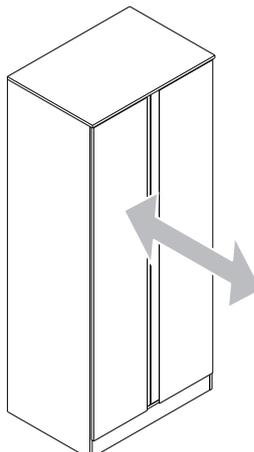

Continued on next page.



Assembly Instructions

Step 14 - continued

C: To move doors left or right: loosen screw shown and move doors to suit.

Re-tighten screws.

C:

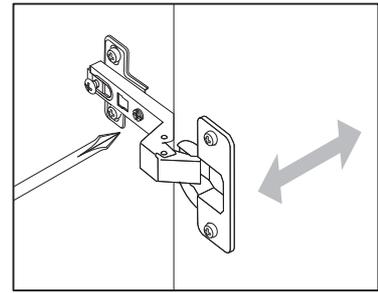
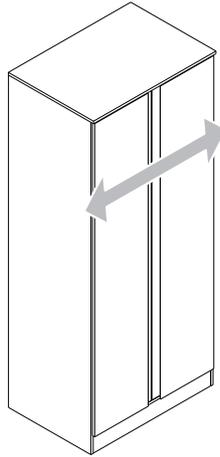


Step 15

Fixing to wall.

Furniture must be fixed to a wall. Fix wall strap **O** to top of furniture using washer **M** and screw **D**. With help, move furniture into position.

Note: Wall plugs not supplied. The correct type of fixing must be used for your wall, seek professional advice if in doubt.

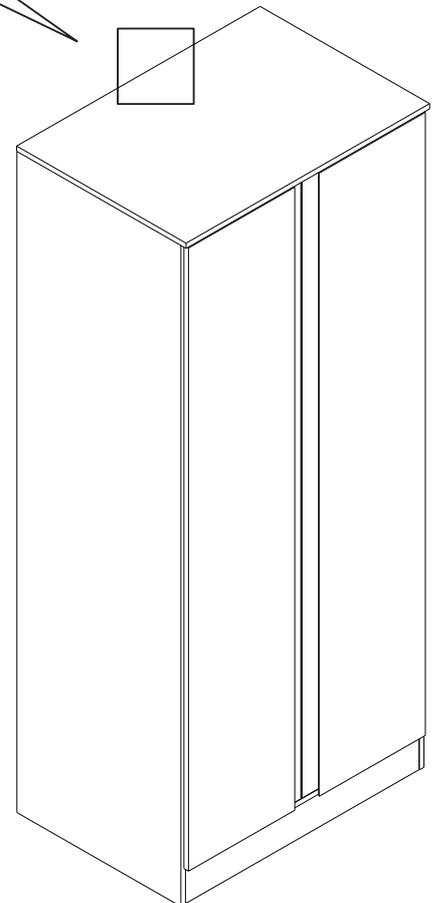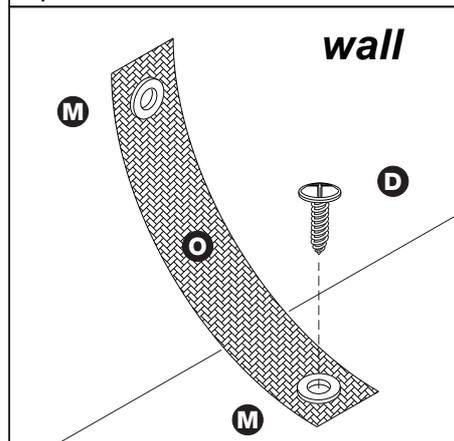

Assembly is complete.

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400 800**

A Guide to - Wall Mounting & Fixings

Important note:

If plastic wall plugs are supplied with your product:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using incorrect fixings is the responsibility of the installer.



Important: When drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.


Hints:

- 1: General rule:**  Always use a larger screw and wall plug if you are not sure.
- 2:** Ensure you use the recommended drill bit to match the wall plug and hole size.
- 3:** Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
- 4:** Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
- 5:** Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 "General Purpose" wall plug

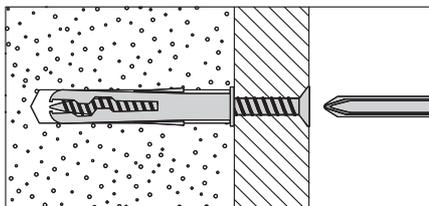


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

No.2 "Plasterboard" wall plug

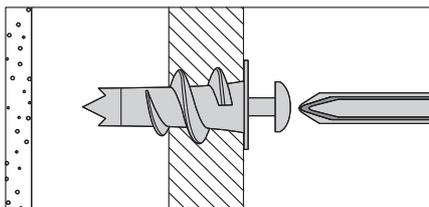


For use when attaching light loads on to plasterboard partitions.

No.3 "Cavity Fixing" wall plug

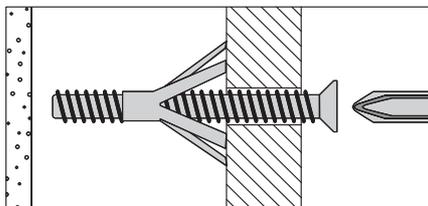


For use with plasterboard partitions or hollow wooden doors.

No.4 "Cavity Fixing-Heavy Duty" wall plug

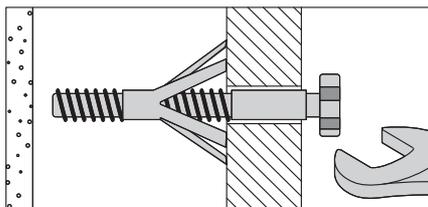


For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

No.5 "Hammer Fixing" wall plug

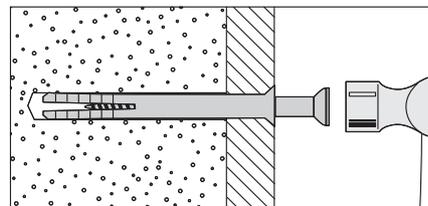

For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

No.6 "Shield Anchor" wall plug Heavy loads

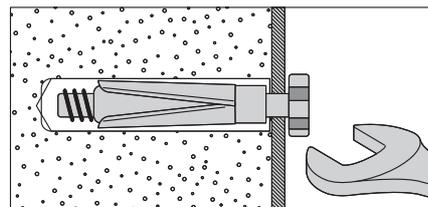

For use with heavier loads such as TV & HiFi speakers and satellite dishes etc.



Care & Maintenance

Safety: Always check the fitting and location to ensure your safety in and around the home.

Fitting: From time to time check the fitting to ensure the wall plugs or screws do not become loose.