



2 year
guarantee

Grime Pro+

Detergent + Steam Handheld

Let's get started



S4S-A+

vax.co.uk

Let's talk safety



Basic safety precautions

This steam cleaner is intended for household use only and NOT for commercial or industrial use.

- Only use the steam cleaner indoors and keep the area you're cleaning well lit
- Keep fingers, hair and loose clothing away from moving parts and openings whilst using the steam cleaner
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children should not play with the appliance. Cleaning and user maintenance should not be made by children without supervision

- Please refer to the manufacturer's care recommendations before use, and test your surfaces by running the steam cleaner over a small hidden area, if no damage occurs continue cleaning. Not suitable for use on leather, wax polished surfaces, acrylic surfaces and synthetic, velvet or steam/water sensitive materials
- This steam cleaner should not be used to clean electrical appliances such as microwaves, televisions and electrical heating systems etc
- Only Vax recommended tools should be used with this steam cleaner and ensure all parts are correctly fitted before use
- Turn off all controls before unplugging
- Always remove the mains plug from the socket and allow the steam cleaner to cool down completely before topping up with water

Please keep instructions for further use.



Don'ts

- ✗ Don't touch any hot areas/accessories on the steam cleaner. It's normal for the steam cleaner and accessories to heat up during use, always allow them to cool down before handling or changing
- ✗ Don't over fill the clean water/solution tanks or exceed the maximum amount required as the steam cleaner will deliver water droplets or very little steam
- ✗ Don't use the steam cleaner if it has been dropped, damaged, immersed in water or left outdoors
- ✗ Don't handle the plug or use the steam cleaner with wet hands
- ✗ Don't run over the power cord or use the steam cleaner if the power cord or plug is damaged. Please contact our Customer Care Line
- ✗ Don't pull or carry the steam cleaner by the power cord. Don't use the power cord as a handle, pull the power cord around corners, sharp edges or close a door over the power cord. Don't unplug the steam cleaner by pulling on the power cord
- ✗ Don't use the steam cleaner without the tank cap in place, and ensure the tank cap is fully screwed down
- ✗ Don't use the steam cleaner without water in the clean water tank. Always turn off and allow the steam cleaner to fully cool down before refilling
- ✗ Don't attempt to remove blockages with sharp objects as this may cause damage to the steam cleaner, remove blockages only as instructed in this guide
- ✗ Don't aim the steam cleaner at people, animals, plants and electrical components such as interior of ovens or wires. Never touch the steam burst or floor head from a short distance (there is a risk of scalding)
- ✗ Don't use the steam cleaner with incorrect voltage as this may result in damage or injury to the user. The correct voltage is listed on the ratings label
- ✗ Don't use the steam cleaner to clean or refresh any items of clothing that are still being worn on the body
- ✗ Don't use an extension cord



Do's

- ✓ Always fill the water tank with water only, never add perfume, and stain removers or products containing alcohol. Please use the measuring jug provided
- ✓ Always keep the steam cleaner away from rain and moisture, not suitable for outdoor use
- ✓ Always unplug the steam cleaner before carrying out any maintenance or when unattended
- ✓ Take extra care when cleaning on the stairs
- ✓ Always replace the fuse in the plug with a British 13amp fuse.
- ✓ Always protect the power cable from heated surfaces or near open flames. Turn off all controls on the steam cleaner before disconnecting or connecting the power cord
- ✓ Use only CE approved 13amp extension cords, non-approved extension cords may overheat. Care should be taken to arrange the extension cord as it can be a trip hazard
- ✓ Always carry the steam cleaner by the handle
- ✓ Store the steam cleaner in a cool, dry area. Before storing the steam cleaner please ensure the water tank is thoroughly clean and dry
- ✓ Always switch the appliance off and remove the mains plug from the socket if leaving the work area

Thank you for buying this Grime Pro+.

Taking care of your upholstery/surfaces

The Grime Pro+ is designed to make steam cleaning your upholstery/surfaces regularly, as effective and efficient as possible, and this user guide will help you get the most out of your machine.

Maintaining your upholstery/surfaces with the Grime Pro+ will ensure they keep hygienically clean.

Taking care of your Grime Pro+

Also inside this guide are instructions on maintaining your new machine, so that it's always ready when you are to tackle your upholstery/surfaces.

Taking care of you

We're here if you need us. Instead of taking me back to the shop, simply visit:

vax.co.uk/support or call:

(UK) **0844 412 8455** (ROI) 1-800 928 308

Monday-Friday 8.30am to 6.30pm, Saturday 9.00am to 5.00pm

Calls are charged at the UK local rate. Please make a note of the serial number and model number of the handheld steamer before calling.

Alternatively, you can write to us at:

Vax Ltd., Kingswood Road, Hampton Lovett, Droitwich, Worcestershire, WR9 0QH, UK




Let us know what you think @VaxUK

Contents

- Let's talk safety
- Getting to know your machine
- Getting started
- Using your machine
- Taking care of your machine
- What to do if it goes wrong
- Getting in touch
- Accessories
- Notes

Grime Pro+

Included with your machine

-  Measuring jug
-  Window/upholstery tool
-  Upholstery tool cloth
-  Concentration nozzle
-  Small plastic brush
-  Large plastic brush
-  Metal brush
-  Scraper tool
-  Bending nozzle
-  Gap brush with bristles/
Grout brush
-  Accessory Adapter
-  Hose
-  1 x 4 Finger fork
-  1 x 4 Finger fork cloth
-  1 x 2 Finger fork
-  1 x 2 Finger fork cloth
-  Vax Steam detergent
-  Accessory bag

Getting to know your machine

Safety pressure indicator

Water tank cap

Steam nozzle

Steam trigger

Detergent/ Solution control dial

Carry handle

Water tank

Power button

Detergent tank

Steam ready indicator light (green LED)

Power indicator light (water heating) (blue LED)



Technical Specification

Name **Grime Pro+**
Voltage **220-240V-50Hz**
Wattage **1200W**
Water tank capacity **300ml**
Detergent tank capacity **200ml**
Cord length **5m**
Weight **2.5kg**

Subject to technical change without notice.

Accessories & Consumables*


Upholstery cloths (Type 5) 1-1-130746-00	Steam cleaning kit (Type 1) 1-1-132732-00
Microfibre narrow pads (2 Finger fork cloth) (Type 7)* 1-1-133081-00	Steam brush kit (Type 3) 1-1-132730-00
Microfibre wide space pads (2 Finger fork cloth) (Type 8)* 1-1-133082-00	

*To purchase consumables and accessories, please visit vax.co.uk



Getting started

PLEASE READ 'LET'S TALK SAFETY' AT THE BEGINNING BEFORE USE


Filling the water tank

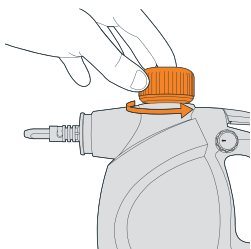


Place steamer on a level surface and ensure steamer is switched off and is cool. To remove lid push down and twist anti clockwise

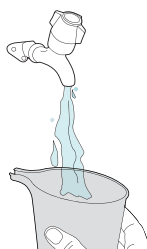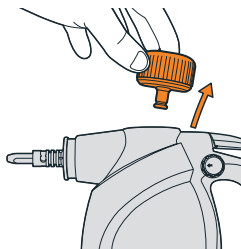

Fill measuring jug with maximum 300ml water

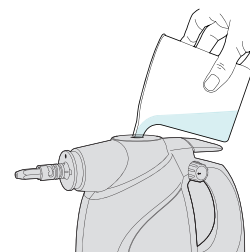


Slowly pour water into water tank. Do not overfill the water tank. Allow space to be left at the top

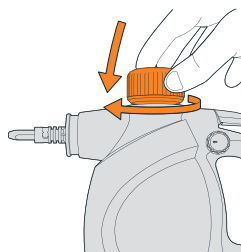


Ensure the lid is securely fastened by turning in a clockwise direction

Filling the detergent tank

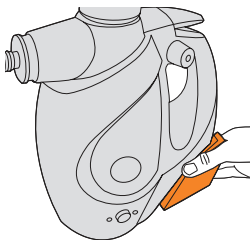

Squeeze tabs on side of detergent tank to slide tank out of steamer

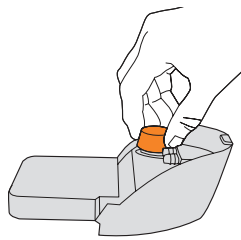

Remove cap from detergent tank and fill with maximum 200ml of Vax detergent. Replace cap firmly and slide solution tank back into steamer


NOTE: For best results, fill with 200ml of detergent. Alternatively dilute the mixture with 80ml detergent and 120ml water

Before you begin cleaning


NOTE: Whilst in use do not recline unit more than 45 degrees.

IMPORTANT: After use, switch off the machine, compress the trigger to release all remaining steam. Allow machine to cool for a minimum of 10 minutes before refilling or storing.


Operating your steamer

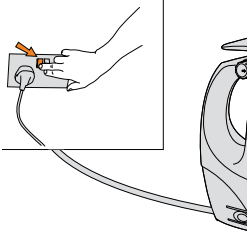


Plug in steamer and switch on at the mains

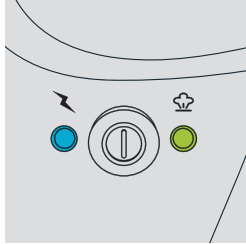

After you plug in and switch on your machine you will see a blue LED which indicates water is being heated. After 5 minutes a green LED will indicate that your steamer is ready to use

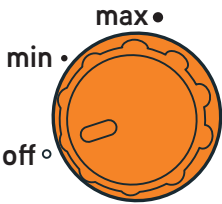

If you wish to clean with steam alone, simply turn the Detergent Control Dial to OFF

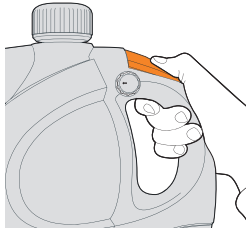

Depress the trigger to release steam/steam+detergent from the nozzle

NOTE: If you wish to clean using Vax Solution, simply turn the Detergent Control Dial to the desired setting. Now, when pressing the Steam Trigger, the steam cleaner will release the amount of solution that is indicated on the Detergent Control Dial as well as steam.

WARNING

Don't use hot or boiling water to fill water tank. Don't open the water tank lid when using the steamer. The steamer is pressurised, don't remove the lid when steamer is hot. Only fill the water tank when cool and don't overfill the water or detergent tank.


Using your machine

IMPORTANT: Test for colour fastness in a small hidden area of upholstery/fabric to check for colour removal before use.


IMPORTANT: Taps should be turned off when steaming around them. Do not steam clean ovens, oven surfaces or grills when hot. Allow to cool to room temperature.

Accessories



Attaching small tools Attaching larger tools

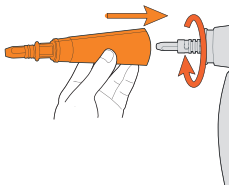

Small tools can be attached via connector when required. Twist to connect

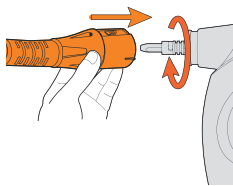


Larger accessories can be attached using the hose. The hose should be rotated clockwise until locked into position and secure. To remove hose, turn anti-clockwise

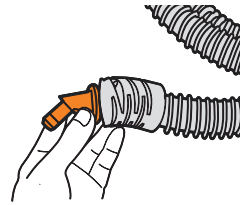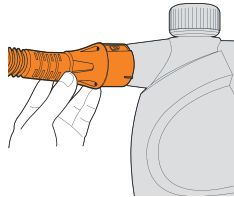


Attach accessory adapter to the hose so that small tools can be used with the hose

Using the tools

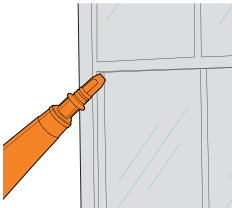

Concentration nozzle

Use to remove soap scum in baths and shower enclosures and to clean heavily soiled areas in kitchens

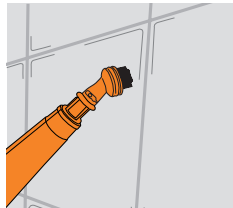


Brush

Ideal for any surface from tiles, sinks, toilets and oven tops




Squeegee tool

Great for leaving your windows, tiles and mirrors gleaming

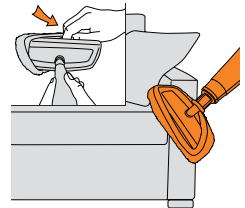


Upholstery/clothes tool

Attach the cloth to the squeegee tool for use on upholstery and cloths

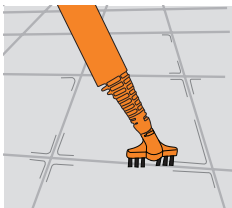


Grout brush

Lifts embedded dirt from inbetween tiles

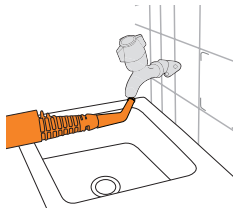


Bending nozzle

For hard to reach areas e.g. around taps

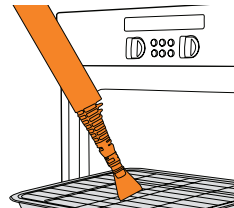

Scraper tool

Ideal for removing dried on residue from in ovens, work surfaces and pans

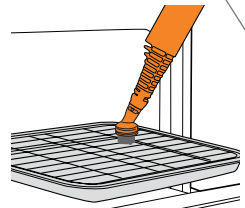


Metal brush

Ideal for BBQs and grills

Taking care of your machine

Refilling and Storing

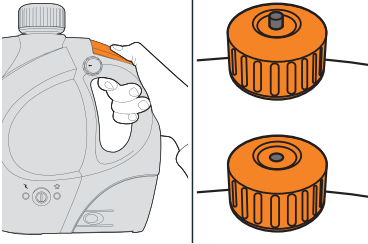

After using the steamer, press the power button to switch OFF and unplug the power cord from the mains. Release excess pressure by depressing the trigger before opening the water cap. The pressure indicator within the water tank cap will indicate all the pressure is released



After allowing the steamer to cool for a minimum of 10 minutes, slowly start to unscrew the water tank cap anti-clockwise whilst gently pushing the trigger. **DON'T FULLY UNSCREW THE WATER TANK CAP.** When fully cooled and the pressure has been released, the water tank cap should turn freely to remove. Empty any residual water and allow the water tank to dry. Clean the external surface with a dry cloth

Cleaning cloths

IMPORTANT: Never use bleach or fabric softener when washing the cloths.

1. Wash by hand or machine washable at 'warm' temperature. Always use a mild detergent.
2. Allow cloths to completely dry before next use.

Cleaning your steamer

IMPORTANT: Always unplug and allow the steam cleaner to fully cool down before carrying out any maintenance.

Only clean the external surface of the steam cleaner with a slightly damp cloth. Vax recommends the water tank is rinsed out after 5 filling operations. Vax recommend filling the water tank with water and giving it a good shake to loosen any limescale that has deposited on the bottom of the water tank. Pour out the water and allow to fully dry before storing away.

The water tank should be treated with limescale remover approximately every 6 months to prolong the steam cleaner's life. When descaling the steam cleaner follow limescale remover instructions for 300ml capacity (using max 50°C water) then pour away liquid and repeat process if necessary, rinse the water tank and allow to fully dry before storing away.

What to do if it goes wrong

Problem

Solution

There is an accessory missing

- Check the 'This pack contains' panel on the box to make sure the part is included with your machine

The steam cleaner has no power?

- The plug may not be fully pushed into the electrical socket
- Check the fuse in the plug if this needs replacing, always replace with a British 13amp fuse
- The power cord may be damaged, please contact our customer care line

Why is the steam cleaner not producing steam?

- There may be no water in the tank, allow to fully cool down and refill
- Check that the safety latch has been unlocked on the steam handle
- Check that the unit has not been overfilled as there must be space in the tank for the water to heat. If overfilled the unit will deliver little steam or water droplets
- The water may not yet be at temperature; the blue and green steam ready indicator light will both be illuminated when the water is at temperature and is ready to use
- Check the water tank for limescale build up

What do I do if the steam cleaner takes a long time to heat up?

- Check the water tank for limescale build up. Go to 'Let's talk technical' page*

Warning: Always unplug the steamer before performing maintenance/troubleshooting checks.

It's quick and easy to
register for your **FREE**

**2 year
guarantee**

Online at: **vax.co.uk/guarantees**

Please retain your original receipt for proof of purchase.

we're here if you need us

Online **vax.co.uk/support**

Call: (UK) **0844 412 8455** (ROI) 1-800 928 308

Monday-Friday 8.30am to 6.30pm, Saturday 9.00am to 5.00pm *

Alternatively, you can write to us at:

Vax Ltd., Kingswood Road, Hampton Lovett, Droitwich, Worcestershire, WR9 0QH, UK

Don't forget your accessories!

Order at: www.vax.co.uk/spares-and-solutions

2x Upholstery Cloths (Type 5)

1-1-130746-00

A set of spare small upholstery cloths for your Vax steamer's upholstery tool.



2x Microfibre Narrow Pads (Type 7)

1-1-133081-00

Ideal for curtains, blinds and upholstery.



2x Microfibre Wide Surface Pads (Type 8)

1-1-133082-00

Ideal for work tops, cabinets and mattresses.



S4 Series Steam Accessory Tool Kit (Type 3)

1-1-132732-00

Tools ideal to use on tiles, grout and BBQ to remove stubborn stains, grease and grime.



Steam Detergent Citrus Burst

1-9-132666-00

Cuts through grease and grime, neutralises odours and eliminates 99.9% of harmful bacteria for up to 7 days and leaves your floors smelling of Citrus Burst.



Steam Detergent Spring Fresh

1-9-132807-00

Cuts through grease and grime, neutralises odours and eliminates 99.9% of harmful bacteria for up to 7 days and leaves your floors smelling of Spring Fresh.



Steam Detergent Pet

1-9-132813-00

Vax Pet Steam Detergent cuts through grease and grime, neutralises odours, eliminates 99.9% of harmful bacteria for up to 7 days and leaves your floors smelling of Apple Blossom.



Steam Detergent Lime Zest

1-9-132809-00

Vax Lime Zest Steam Detergent cuts through grease and grime, neutralises odours, eliminates 99.9% of harmful bacteria for up to 7 days and leaves your floors smelling of Lime Zest.



Steam Detergent Ocean Breeze

1-9-132811-00

Vax Ocean Breeze Steam Detergent cuts through grease and grime, neutralises odours, eliminates 99.9% of harmful bacteria for up to 7 days and leaves your floors smelling of Ocean Breeze.





Notes





Vax Ltd., Kingswood Road, Hampton Lovett, Droitwich, Worcestershire, WR9 0QH, UK
email: info@vax.co.uk website: vax.co.uk

Version 1.0



EEC Statement of Compliance: Manufacturer/EEC importer: Vax Limited, hereby on our own responsibility, declare that the S4S-A+ is manufactured in compliance with the following Directives:
Safety: 2006/95/EC Low Voltage Directive. **EMC:** 2004/108/EC Electromagnetic Compatibility Directive.



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist.
Check with your Local Authority or retailer for recycling advice.