

vaxTM
SteamFresh
COMBI

**VERSATILE CLEANING FOR
ALL AROUND THE HOME**

LET'S GET STARTED.



S86-SF-C

Let's talk safety



Basic safety precautions

This steam cleaner is intended for household use only and NOT for commercial or industrial use.



WARNING: Danger of scalding

- Only use the steam mop indoors and keep the area you're cleaning well lit.
- Keep fingers, hair and loose clothing from moving parts and openings whilst using the steam mop.
- This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction



Don'ts

- Don't touch any hot areas/accessories on your steam mop. It's normal for the steam mop and accessories to heat up during use, always allow them to cool down before handling.
- Don't use the steam mop if it has been dropped, if there are visible signs of damage or if it is leaking, if it has been immersed in water or left outdoors.
- Don't handle the plug or use the steam mop with wet hands.
- Don't pull or carry this steam mop by the power cord.
- Don't leave this steam mop unattended while it is connected to the supply mains.
- Don't aim the steam mop at people, animals, plants and electrical



Do's

- Always make sure the concentration nozzle and accessories are securely connected to the handheld before use.
- Always fill the clean water tank with water only, never add perfume, stain remover or products containing alcohol. Filling the clean water tank with hot or boiling water will damage the machine and invalidate your guarantee.
- Always make sure tanks are fitted correctly before using the steam mop.
- Always vacuum your carpets thoroughly and ensure hard floor areas are free from grit and debris before using the steam mop.
- Always carry the steam mop by the handle.
- Always unplug the steam mop before carrying out any maintenance or when unattended.
- Take extra care when cleaning on stairs.

concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.

- Please refer to floor manufacturers care recommendations before use, and test your flooring/carpet/rugs by running the steam mop over a small hidden area, if no pile distortion or no damage occurs continue cleaning. Not suitable for use on wax polished floors or furniture, acrylic surfaces and synthetic, velvet or steam/water sensitive materials.
- This steam mop should not be used to clean electrical appliances such as microwaves, oven, televisions and electrical heating systems etc.
- Only Vax recommend cloths and detergent should be used with this steam mop. Using other detergents will invalidate the guarantee.

components such as interior of ovens or wires. Never touch the steam burst or floorhead from a short distance (there is a risk of scalding).

- Don't use the power cord as a handle, pull the power cord around corners or sharp edges or close a door over the power cord.
- Don't attempt to remove blockages with sharp objects as this may cause damage to the steam mop, remove blockages only as instructed in this guide.
- Don't unplug steam mop by pulling on the power cord or run over the power cord. If the power cord or plug is damaged please contact our Customer Care Line on 0330 026 8455 (Mon-Fri 8:30am to 6:30pm, Sat 9:00am to 5:00pm)
- Don't use the steam mop with incorrect voltage as this may result in damage or injury to the user. The correct voltage is listed on the ratings label.

- Turn off all controls on the steam mop before disconnecting or connecting the power cord, after use always wrap the power cord around the cord clips provided.
- Always replace the fuse in the plug with a British 13amp fuse.
- Always protect the power cable from heated surfaces or near open flames.
- Use only CE approved 13amp extension cords, non-approved extension cords may overheat.
- Care should be taken to arrange the extension cord as it could be a trip hazard.
- Store the steam mop in a cool, dry area away from children.
- Before storing the steam mop please ensure all water/detergents tanks and hard water filter are thoroughly clean and dry.
- Keep the appliance out of reach of children when it is energised or cooling down.

PLEASE KEEP INSTRUCTIONS FOR FURTHER USE AND USE ONLY AS INSTRUCTED IN THIS GUIDE.

Thank you for buying this Steam Fresh Combi

Taking care of your sealed hard floors and surfaces

The Steam Fresh Combi is designed to make steam cleaning your hard floors and surfaces regularly, as effective and efficient as possible, and this user guide will help you get the most out of your machine.

Maintaining your hard floors and surfaces with the Steam Fresh Combi will ensure they keep looking beautiful, smell fresh and are hygienically clean.

Taking care of your Steam Fresh Combi

Also inside this guide are instructions on maintaining your new machine, so that it's always ready when you are to tackle your hard floors and surfaces.

Taking care of you

We're here if you need us. Instead of taking me back to the shop, simply visit:

vax.co.uk/support or call:

(UK) **0330 026 8455** (ROI) 1-800 928 308

Monday-Friday 8:30am to 6:30pm, Saturday 9:00am to 5:00pm

Calls are charged at the UK local rate. Please make a note of the serial number and model number of the product before calling.

Alternatively, you can write to us at:

Vax Ltd., Plot 302, Stonebridge Cross Business Park, Hampton Lovett, Droitwich, Worcestershire, WR9 0LW, UK

This user guide can be found online at: vax.co.uk/support

The Vax logo is displayed in a bold, orange, sans-serif font. The letters are thick and blocky, with a trademark symbol (TM) at the top right of the 'x'.

Let us know what you think @VaxUK

Contents

Let's talk safety

Getting to know your machine

Getting started

Using your machine

Taking care of your machine

What to do if it goes wrong

Getting in touch

Using your accessories

Accessories

Notes

Steam Fresh Combi

Included with your machine



2x Microfibre
Cleaning Pads



Carpet Glider



Hose



Metal Brush



Small Plastic Brush



Large Plastic Brush



Window Tool



Window Tool Cloth



Scraper Nozzle



Concentration Nozzle



Grout Brush



Detail Nozzle



Accessory Bag



250ml Detergent

Getting to know your machine

Handle

Detergent trigger (hidden)

Handheld release button

Handheld steam trigger

Detergent control dial

Steam ready indicator

Steam control dial

On/Off switch

Water tank

Hard water filter (hidden)

Compact scrub brush

Floorhead

Concentration
nozzle storage

Handle release button

Detergent tank

Quick cord
release hook

Plug storage

Tool storage

Quick cord
release hook

Floorhead
release button

Technical Specification

Name **Stream Fresh Combi**

Voltage **220-240**

Wattage **1400-1600w**

Cord length **8m**

Weight **3.7kg**

Accessories & Consumables*

Microfibre Cleaning Pads
(Type 1)

1-1-131448

Pro Cleaning Pads (Type 6)

1-1-132319

Coral Cleaning Pads (Type 3)

1-1-131643

Carpet Glider (Type 3)

1-1-133527

Flat Upholstery Tool

 
1-1-131394

Hard Water Filter (Type 1)


1-1-133327

PLEASE READ 'LET'S TALK SAFETY' AT THE BEGINNING BEFORE USE

Assembling your steam mop

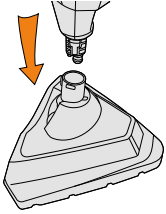

 
Push the main body down into the floorhead until it clicks into place.

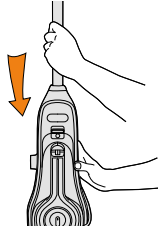


Push the handle into main body until it clicks into place.



 
To stand the steam mop upright push handle until it clicks into place.

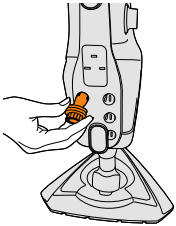

 Insert tools into the back of the steam mop.

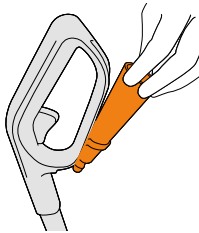

 Insert concentration nozzle into the storage hook on the back of handle.

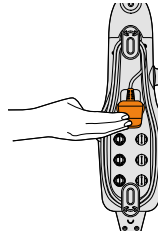


Wrap the power cord around the quick cord release hooks and insert the plug into the plug storage.


Using your machine

IMPORTANT: If you don't want to use detergent on your flooring, turn detergent dial to OFF position. Always test on an inconspicuous area of flooring first before using detergent.

 
Filling water tank

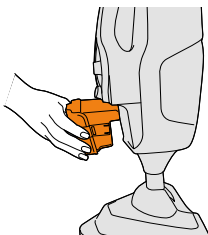

 
Press the water tank release buttons and pull the water tank to remove.

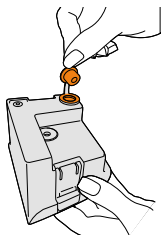

 Pull the tab on the water tank cap to open.

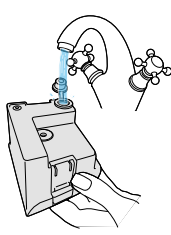


 Fill the water tank with 260ml of water, replace the cap and push firmly to close.

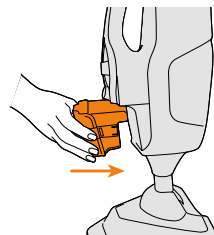


Slide the water tank back into the machine until it clicks into place.

 
Filling detergent tank

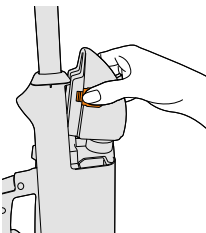

 
To remove the detergent tank press both release buttons and pull to release.

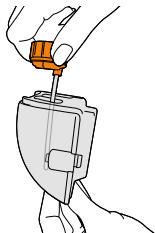

 
Twist the detergent tank cap anti-clockwise and lift to remove.

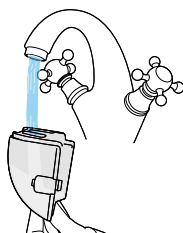

 Pour 50ml of Vax detergent and 150ml of water into the detergent tank.

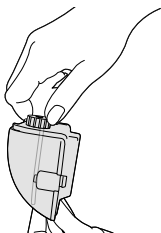

 Replace the detergent tank cap and twist clockwise to close.

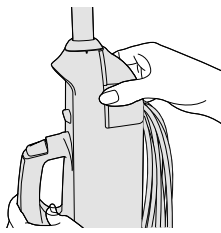


Insert the detergent tank back into the machine until it clicks into place.

Using your machine


IMPORTANT:

- The steam mop and accessories get very hot during use, always allow them to cool down before handling.
- Always unplug and switch off the steam mop when assembling.
- Always switch off the steam mop before emptying the water tank or changing the cleaning pads/accessories.
- **IMPORTANT:** Please refer to floor manufacturer's care recommendations before use and test the steam mop on a discrete area of flooring to begin with.
- When using the steam mop, basic safety precautions should always be observed.
- Don't aim the steam mop at people, animals, plants and electrical components such as interior of ovens or wires. Never touch the steam burst or floorhead from a short distance. (There is a risk of scalding).
- The steam mop is equipped with a thermostat and a thermal cut-out. If for any reason the steam mop overheats it will switch off. If this happens turn off and unplug the steam mop, allow to cool for a least 2 to 4 hours and re-start.

 
Using the steam mop

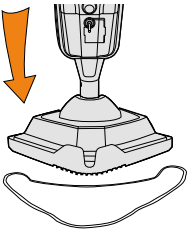

 
Place the microfibre pad on the floor, white side facing up. Place steam mop onto pad making sure the entire pad covers the floorhead.

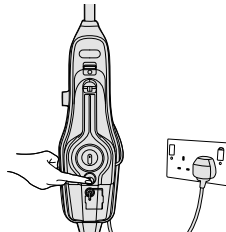

 
Plug into mains and press the power button to switch on. The blue light will illuminate to show power on. The green light will illuminate to show the steam mop is ready to use.

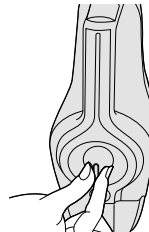

 Adjust the steam dial to desired setting.

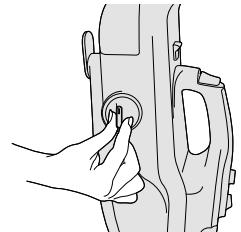

 
To steam your floors with detergent turn the dial to ON and without detergent turn the dial to OFF.

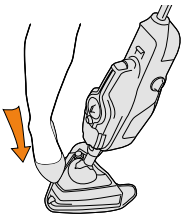


To recline the steam mop place foot on floorhead and pull handle backwards.



 
Push On/Off switch to turn machine on.

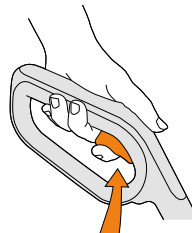

 To produce steam squeeze the trigger in short bursts. Don't hold the trigger continuously to prevent over wetting floors.

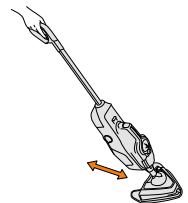

 Move the steam mop slowly backwards and forwards across the floor paying particular attention to high traffic areas. Squeeze/release trigger as required.

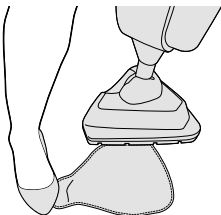


Hold corner of pad down with foot and lift steam mop to peel away.


Using your machine

IMPORTANT: When using on carpets, always make sure the microfibre cleaning pad is used and covers the floorhead entirely before using the carpet glider. Only use the carpet glider when refreshing carpets and turn the detergent dial to OFF.

 
Refreshing carpets

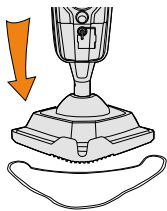

 
Place the microfibre pad on the floor white side facing up. Place steam mop onto pad making sure the entire pad covers the floorhead.

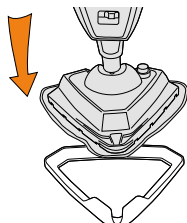

 
With microfibre pad attached, hook the steam mop into the front of the carpet glider and push to clip into place. Carpet glider should only be used when refreshing carpets.

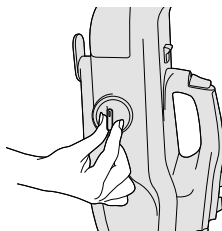

 
Turn the detergent dial to OFF when refreshing carpets.

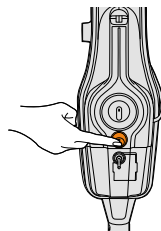


Push On/Off button to switch on.

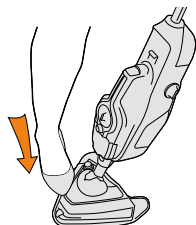 

 
To recline the steam mop place foot on floorhead and pull handle backwards.

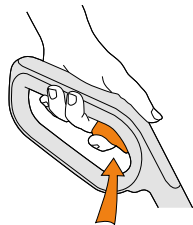

 To produce steam squeeze the trigger. To prevent over wetting the carpet, avoid holding the trigger continuously.

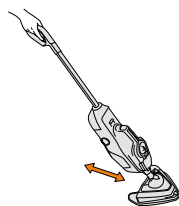


 Move the steam mop slowly backwards and forwards across the carpet paying particular attention to high traffic areas.

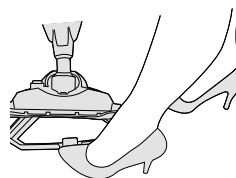


To release the carpet glider, place foot on clip and push down. Lift steam mop to unhook and remove.

 Using compact scrub brush

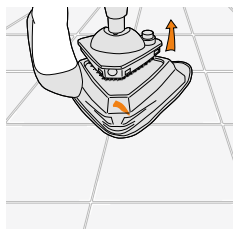

 Place foot on outer floorhead and gently pull away steam mop to release the compact scrub brush.

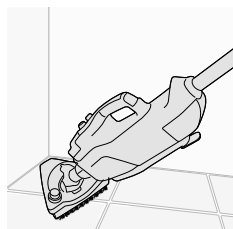


Move steam mop back and forwards across the floor, getting into corners and awkward places.

IMPORTANT: Always switch off the steam mop before attaching or removing the floorhead.


Using your machine

WARNING: Always switch off the handheld steamer before attaching the concentration nozzle and accessories.

 
Using the handheld steamer

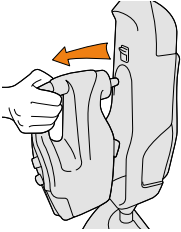

 
Lift the handheld release button and gently pull the handheld to release from the steam mop.

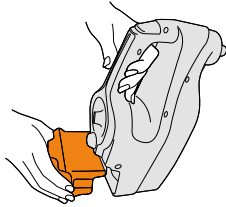


 
Remove water tank and refill before use.

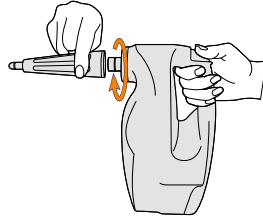

 When using the handheld always attach the concentration nozzle or hose. Push the concentration nozzle/hose onto the handheld nozzle and twist clockwise to lock into position.

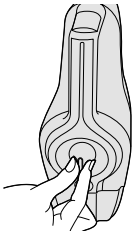


  Adjust the dial on the front of the handheld to desired steam setting and push On/Off button to switch on.

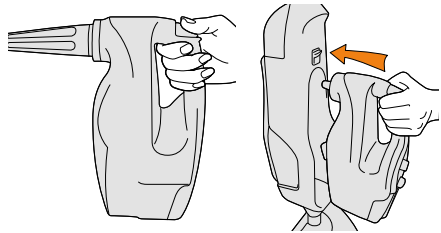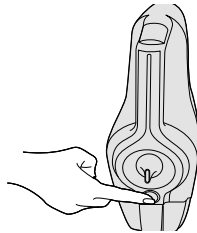


Insert the handheld back into the machine until it clicks into place.

 Using small accessories

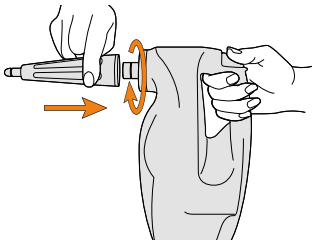

Small tools can be attached via concentration nozzle, twist clockwise until locked into position and secure. To remove concentration nozzle, turn anticlockwise.

 Using large accessories

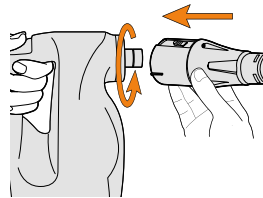


Larger accessories can be attached using the concentration nozzle or hose. To attach the hose twist clockwise until locked into position and secure. To remove hose, turn anti-clockwise.


Taking care of your machine

IMPORTANT: Allow the steam mop to fully cool down before performing any maintenance or troubleshooting checks. Don't leave water or detergent in the tanks between uses, as this can effect the machines performance, the water/detergent tanks need to be emptied and rinsed after each use.

 
Emptying the water tank

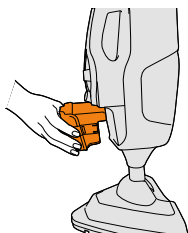

 
Press the water tank release button and lift the water tank by the handle.

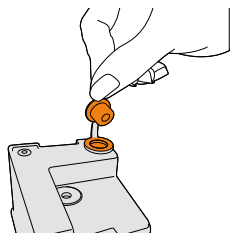

Pull the tab on the water tank to open.

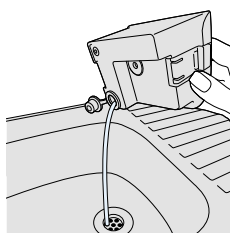 


Empty any excess water into the sink.

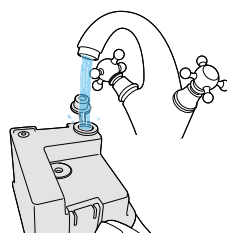 


Rinse water tank with water and replace water tank tab, push firmly to close before replacing back onto the machine.

 
Emptying the detergent tank

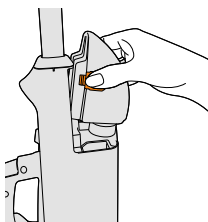

 
Push both detergent tank release buttons and lift to remove.

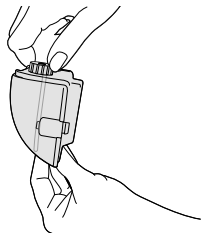

 Twist detergent tank cap anti-clockwise and lift to remove.

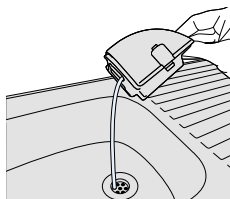


 Empty any excess detergent over the sink.

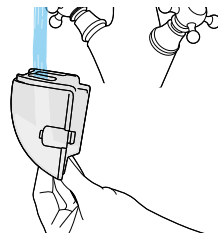


Rinse detergent tank with water and replace detergent tank cap, turn clockwise to tighten before replacing back onto the machine.

 Removing cleaning pads

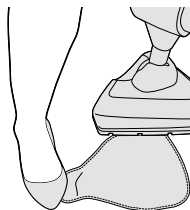

 Hold corner of pad down with foot and lift steam mop to peel away.

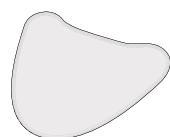


Max 40°C

All cleaning pads are machine washable (Max 40°C). Allow to fully dry before use.


Taking care of your machine

IMPORTANT: Don't operate the steam mop without the hard water filter in place. The condition of the filter affects the performance of your machine, check and change the filter periodically. If you live in an area of hard water the filter will discolour or darken over time. Depending on water hardness and frequency of use, the filter should be changed every 3 to 6 months or if the filter has discoloured.

 Replacing the hard water filter

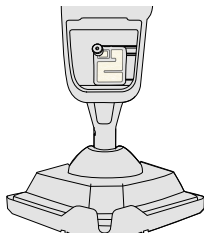


 Remove the water tank to access the hard water filter.

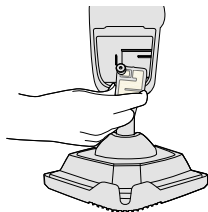


Pull to remove the hard water filter.

 3-6 Months



 
Hard water filter should be replaced every 3 to 6 months or if discoloured.

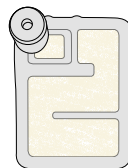


Insert new filter, new filter looks beige/cream in colour.

IMPORTANT: Ensure machine is unplugged before carrying out maintenance

 
Removing blockages

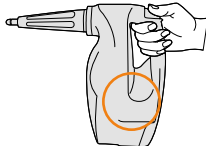

 
If there is an obstruction to the steam flow through the machine, steam may be released through the bleed valve located on the side of the handheld.

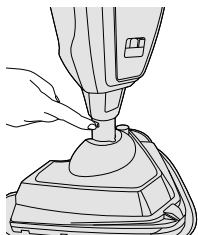

 To remove the floorhead from main body push the floorhead release button and lift.

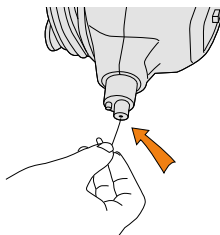

 After floorhead is removed, using a thin object such as a paper-clip (in the area shown), insert to remove the blockage.

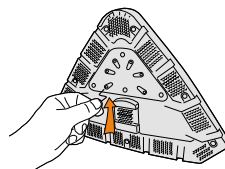

With the pad removed from the floorhead, insert a small thin object such as a paper-clip in to the steam holes to remove a blockage.

Using your Accessories

Using the accessory tools



Concentration Nozzle

A concentrated flow of steam to lift grime. Use on any sealed surface in the home or car to tackle stubborn stains. The nozzle allows a powerful jet of steam to remove dirt even in hard to reach places.



Brushes

A hard-wearing brush for use on sealed surfaces. Always test a hidden area before use.



Squeegee Tool Window/Shower Tool

Clean your windows and mirrors quickly and easily. The Squeegee Tool disperses Steam evenly to any glass surface, including shower doors, ovens glass and in your car. You can then swipe dry to avoid streaks.



Upholstery Tool

Attach the cloth to the Window Tool for use on upholstery and clothes.



Grout Brush

A wide straight brush to tackle grout on tiled floors and surfaces. This lifts embedded dirt from in between tiles and grouting.



Carpet Glider

A detachable Carpet Glider accessory which adapts the floorhead and enables you to make a seamless transition between cleaning hard floors and carpets. This can be used on all carpeted areas around the home.



Detail Nozzle

For those hard to reach places all around the home. This super-concentrated steam nozzle fits in small crevices at a 45° degree angle for easy access. Use to clean taps, under rails and radiators quickly and thoroughly.



Scraper Tool

Perfect for shifting dried on or stubborn residue from ovens, work surfaces, bathroom surfaces and even pots and pans.



Metal Brush

Strong metal bristles to lift resilient grime from tough surfaces. Use when deep cleaning your oven, wire racks or BBQ to make light work of difficult cleaning tasks. Not for use on soft or delicate surfaces such as material or upholstery.

Also available 360° Steam Tools

Order at: www.vax.co.uk/spares-and-solutions

Conversion starter kit (Type 1) – 1-1-137249

Our 360° Connector enables you to access all areas with steam. It twists, so that you don't have to - making steam cleaning easier on the wrist! Your 360° tools attach to this connector, so keep it safe. The 360° Tool Adapter attaches to your Steam Fresh Combi so you can then attach your 360° Connector.



Clean & Scrub Kit (Type 1) – 1-1-137101

All you need to clean and scrub at all angles. 360° Steam Tools provide full rotational cleaning. This kit includes: 1 x Pro Clean Pad and 1 x Microfibre Pad for general cleaning, 1 x Deep Scrub Brush, 1 x Soft Scrub Brush and 1 x Grout Brush for cleaning tough stains around the home. A free accessory bag is also included.

*Must purchase Conversion Starter Kit, in order for the Clean and Scrub Kit to fit.



Multi-Surface Kit (Type 1) – 1-1-137102

All you need to tackle awkward crevices and a multitude of surfaces around the home. 360° Steam Tools provide full rotational for cleaning at all angles. The kit includes: 1 x Window Tool and Pad (for glass, mirrored or shiny surfaces), 1 x Deep Scrub Brush and 1 x Grout Brush, 1 x Extension Hose (for extra flexible reach) and 1 x Flexi-Tool with 2 x Microfibre Socks (for tackling a multitude of surfaces and awkward nooks and crannies). A free accessory bag is also included.

*Must purchase Conversion Starter Kit, in order for the Multi-Surface Kit to fit.



Consumables

 
360° Window Pads – 1-1-137252

Contains 4 x replacement Window Pads for your 360° Window Tool. Pads are machine washable.




360° Scrub Pads – 1-1-137251

Contains 4 x replacement Microfibre Pads and 4 x replacement Pro Cleaning Pads. Pads are machine washable.

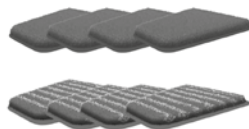

360° Flexi-Tool Socks – 1-1-137250

 Contains 2 x replacement Microfibre Socks for your 360° Flexi-Tool. Socks are machine washable.

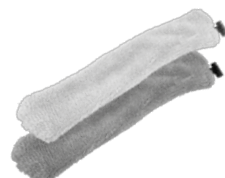

PLEASE NOTE: Actual colours of accessories may vary.

Accessories

Also available 360° Steam Tools for your handheld steamer

Order at: www.vax.co.uk/spares-and-solutions

360° Steam Tools provide everything you need to clean a multitude of surfaces – rotating at 4 angles through 360°, they do the twisting so you don't have to.

Below is a selection of other 360° Steam Tools for you to enhance your steam cleaning experience. We have also put together some handy tool kits on the previous pages. The Conversion Starter Kit is required in order to connect the 360° Steam Tools to your Steam Fresh Combi.

Using the 360° steam tools

Precision Tool

Ideal for hard to access areas such as corners or around taps. The concentrated jet of steam penetrates heavily soiled areas removing soap scum in baths and shower enclosures and blasting away grease and grime from hobs and cookers.



Soft Scrub Brush

Agitates dried on grease and grime and removes build up of dirt. Perfect for use on cookers and hobs, sinks, taps, worktops and more with minimal effort. The soft bristles tackle dirt and are ideal for more delicate surfaces. The integrated scraper edge helps remove stubborn dried on stains without having to change the tool.



The Pads

Tackle everyday surfaces easily with the 360° cleaning pads. Both are easy to attach and detach, and machine-washable for re-use.

Microfibre Pad

The Microfibre Pad captures dirty water and spills, and is ideal for cleaning a variety of surfaces.

Uses: worktops, sinks, cupboards, tables, doors, shelves and much more.



Pro Cleaning Pad

The Pro Cleaning Pad has a textured surface to tackle stuck-on dirt, and is ideal for those grimmer jobs.

Uses: oven doors, hobs, tiles, baths, child seats, work surfaces and much more.



The Brushes

The 360° steam brushes help you tackle dirt and grime. They are easy to attach and detach, with a rounded bristle head that makes reaching awkward angles and small crevices even easier.

Deep Scrub Brush

The Deep Scrub Brush has tough, strong bristles that help tackle more stubborn dirt and grime. The specially designed 'scraper edge' helps you to remove stuck-on dirt without changing tools.

Uses: oven doors and hobs, grills, taps, work surfaces and much more.



Grout Brush

The Grout Brush is the tool you need for tackling dirt, mould and mildew on tile grout. The slim bristle head design means you can target the grout line with ease.

Uses: tile grout in all areas.



The Window Tool

The Window Tool is perfect for cleaning glass and other mirrored surfaces. It is designed to give edge to edge steam distribution, for a more even steam clean. Use with the squeegee side first to clean and wipe away excess water, and then rotate to use the window pad to dry the surface. The pad is easy to attach and detach, and machine-washable for re-use.

 
Uses: windows, shower screens, tiles, mirrors and other similar surfaces.



The Flexi-Tool

The Flexi-Tool is our ultimate steam cleaning tool for a multitude of tasks. The long, thin, flexible design helps to reach into crevices or tackle large flat surfaces quickly. It comes with 2 coloured Microfibre Socks (one for upholstery/fabrics and one for hard surfaces), allowing you to easily switch between cleaning tasks.

Uses: between blinds, kitchen appliances and cupboard door handles, as well as worktops, cupboards, curved shower screens, curtains, car seats and much more.

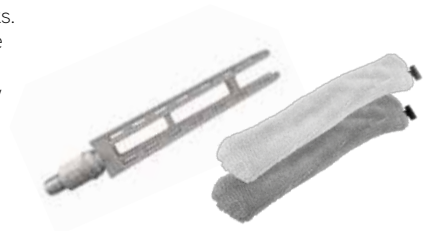

IMPORTANT: Always support the handheld by the handle when using the hose.

The Flexible Extension Hose

The Flexible Extension Hose attaches to your handheld to provide some extra cleaning reach. Use with the 360° connector and Steam Tools for high or hard to reach areas.

 


Using your Conversion Starter Kit with the Steam Fresh Combi Handheld

Using the 360° connector with cleaning tools



To attach cleaning tools to the 360° connector, line up the edge of the tool with the 360° connector and in a hinge like manner rotate the tool until it clicks securely in place.

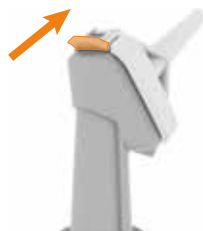

To remove the tool from the 360° connector, push the release tab at the front of the tool.



Slide the rotation collar forward and rotate the 360° connector to the most suited cleaning position.



With the adaptor and cleaning tool attached to the 360° connector, insert it into the handheld.



Twist the adaptor clockwise and listen for the locking click.



To remove the 360° connector, slide the release button forward and un-twist the adaptor.



Then grip the adaptor and pull it away from the handheld.

Attaching and detaching the hose



Push the end of the hose into the adaptor. Then insert the hose and adaptor into the handheld nozzle, until it clicks into place. Make sure the locking clip on the flexi-hose is securely attached by gently pulling the flexi-hose.



Push and attach the 360° connector with tool attached into the other end of the flexi-hose until it clicks into place. Make sure the locking clip is securely attached by gently pulling the 360° connector.



Press the unlocking button on the flexi-hose and pull to remove the hose from handheld.

What to do if it goes wrong

Problem

Solution

There is an accessory missing

- Check the 'This pack contains' panel on the box to make sure the part is included with your machine.

The steam mop won't turn on

- Check the On/Off switch is in the On position.
- The plug may not be fully pushed into the electrical socket.
- Check the fuse in the plug if this needs replacing, always replace with a British 13amp fuse.

Why is the steam mop not producing steam/detergent?

- There may be no water in water tank.
- Check the water tank is securely fitted and the hard water filter is in place.
- Hard water filter may be blocked and need to be replaced.
- Steam path may be blocked. Go to 'Let's talk technical'.
- Check correct setting has been selected.
- Check the detergent has been diluted to correct strength.

Why won't the cleaning pad pick up dirt?

- The cleaning pad may already be saturated or dirty, wash the cleaning pad. Go to 'Taking care of your machine'.

Why is steam coming from the side of the steam mop?

- Steam coming from the side of the machine may indicate a blockage within the machine. To clear any blockages go to 'Taking care of your machine'.

Warning: Always unplug the steam mop before performing maintenance/troubleshooting checks.

It's quick and easy to
register for your **FREE**

**2 year
guarantee[†]**

Online at: **vax.co.uk/guarantees**

Please retain your original receipt for proof of purchase.

we're here if you need us

Online **vax.co.uk/support**

Call: (UK) **0330 026 8455** (ROI) 1-800 928 308

Monday-Friday 8:30am to 6:30pm, Saturday 9:00am to 5:00pm*

Alternatively, you can write to us at:

Vax Ltd. Plot 302, Stonebridge Cross Business Park, Hampton Lovett,
Droitwich, WR9 OLW, UK

[†] Registration required. Terms and conditions apply, see vax.co.uk for details.

* Calls are charged at the UK local rate. Please make a note of the serial number and model number of the product before calling.

Don't forget your accessories!

Order at: www.vax.co.uk/spares-and-solutions

2x Microfibre Cleaning Pads (Type 1)

1-1-131448

Microfibre Cleaning Pads, ideal to remove dirt and grime. These cleaning pads attach to the base of the steam mop.



S4 Series Steam Accessory Tool Kit (Type 3)

1-1-132732

 
Tools ideal to use on tiles, grout and BBQ to remove stubborn stains, grease and grime.



Pro Cleaning Pads (Type 6)

1-1-132319

3x Pro Cleaning Pads. Ideal for stubborn stain removal throughout your home. These cleaning pads attach to the base of the steam mop.

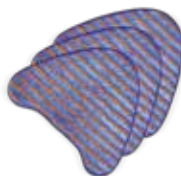

Steam Mop Cleaning Pads

(1-1-131864

2x Microfibre Cleaning Pads, ideal to remove dirt and grime.

2x Coral Cleaning Pads for your steam mop cleaner. Super absorbent and ideal for removing stubborn stains.



Total Home Microfibre Cleaning Pads

1-1-132528

8x Microfibre Cleaning Pads. Avoid cross contamination between different areas of your home with this Total Home Cleaning Kit. Kit contains 8 x coloured Microfibre Cleaning Pads for all areas of your home. Kit also contains a free wash bag worth £9.99.



Hard Water Filter (Type 4)

1-1-133719

3x Hard Water Filters to prevent the build-up of lime scale deposits in hard water areas.



Steam Detergent Spring Fresh

1-9-132807

Vax Spring Fresh Steam Detergent cuts through grease and grime, neutralises odours, eliminates 99.9% of harmful bacteria and continues to eliminate bacteria for up to 7 days. Leaves your floors smelling spring fresh.



Steam Detergent Pet

1-9-132813

Vax Pet Steam Detergent cuts through grease and grime, neutralises pet odours, eliminates 99.9% of harmful bacteria and continues to eliminate bacteria for up to 7 days. Leaves your floors smelling of apple blossom.



Steam Detergent Citrus Fresh

1-9-132666

Vax Citrus Burst steam detergent cuts through grease and grime, helps neutralise odours, kills 99.9% of harmful bacteria* and continues to eliminate bacteria for up to 7 days after use** leaving floors smelling fresh.

* Tests to the BS EN 1276 standard.

** Tested on ceramic floor tiles with 4 bacteria types per BS EN 1276 and BS EN 13697.



GET IN TOUCH

 **0330 026 8455**  **info@vax.co.uk**  **vax.co.uk**  **VaxVacuums**  **@VaxUK**

EEC Statement of Compliance: Manufacturer/EEC importer: Vax Limited, hereby on our own responsibility, declare that the S86-SF-C manufactured in compliance with the following Directives: **Safety:** 2006/95/EC Low Voltage Directive.
EMC: 2004/108/EC Electromagnetic Compatibility Directive.

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

© 2016 Vax Limited. All rights reserved. The VAX trade mark and Vax lozenge is the property of Techtronic Floor Care Technology Ltd and is registered in the EU and may be pending or registered in other countries.

