# Nordic - 6x6 Drawer Chest

Assembly Instructions - Please keep for future reference

1709441



#### Dimensions

Width: 123.3 cm

Depth: 39,7 cm

Height : 104,2 cm

#### Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the Customer Helpline: 0845 640 30 30



### Safety and Care Advice

#### Important - Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on pages 3 and 4.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• We do not recommend the use of power drill/drivers **for inserting screws**, as this could damage the unit. Only use hand screwdrivers.

• Dispose of all packaging carefully and responsibly.

#### Care and maintenance

• Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners. • From time to time check that there are no loose screws on this unit.


• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

**Note:** if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

### Components - Panels

If you have damaged or missing components, call the **Argos Customer Helpline**: **0845 640 30 30** 


Please check you have all the panels listed below

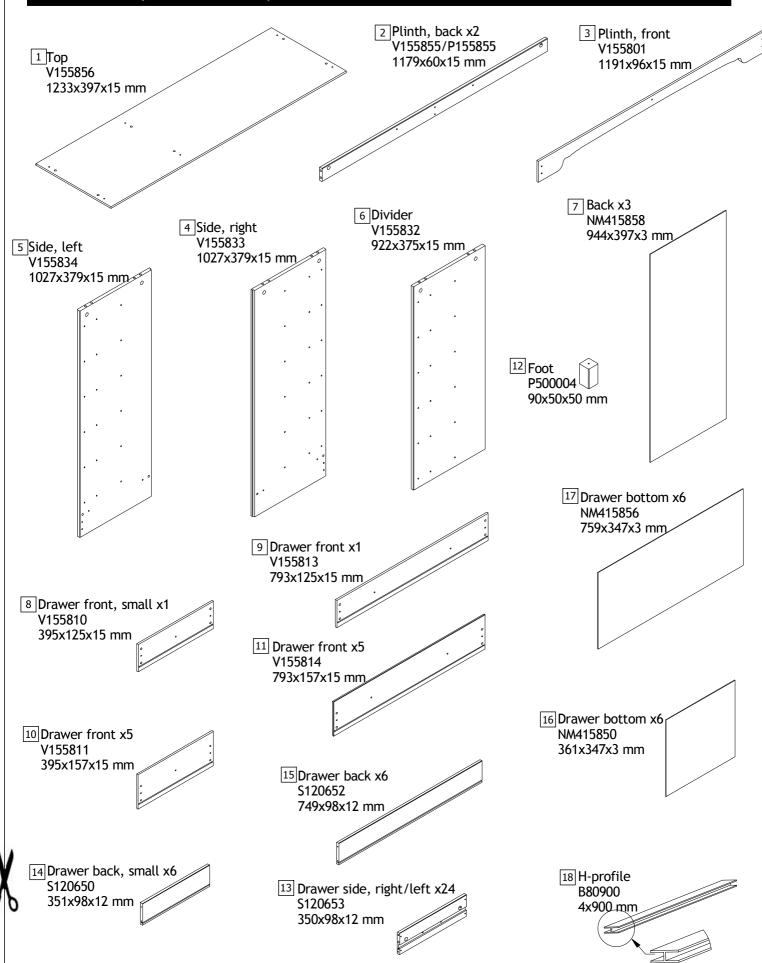


## Components - Fittings If you have damaged or missing components, call the Argos Customer Helpline: 0845 640 30 30

#### Please check you have all the panels listed below

**Note:** The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

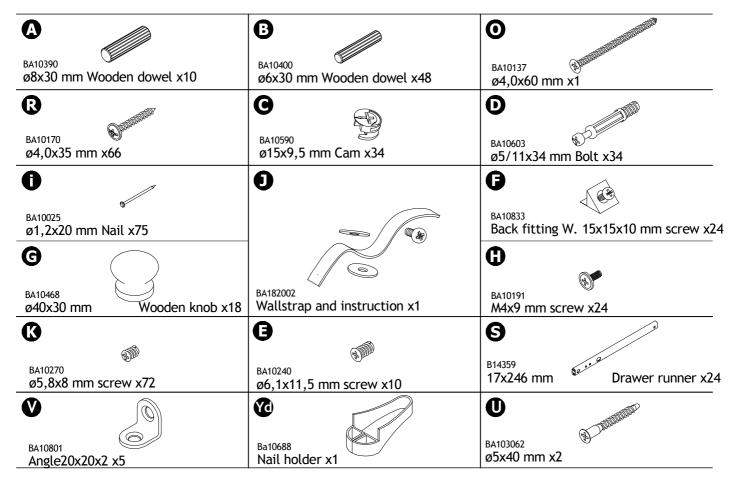


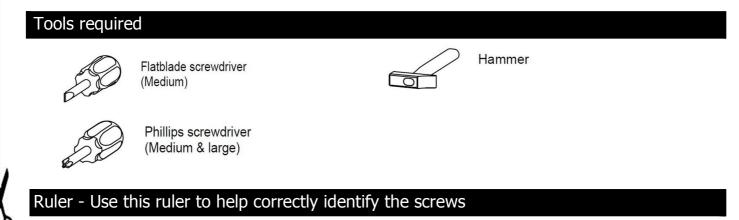

0 5 10 15 20 25 30 35 40 45 50 55 60 65 70 75 80 85 90 95 100 105 110 115 120 125 130 135 140 145 150 155 160 165 170

### Step 1

Fix the drawer sides 13 to the drawer backs 14 and 15 as shown, using screws R.

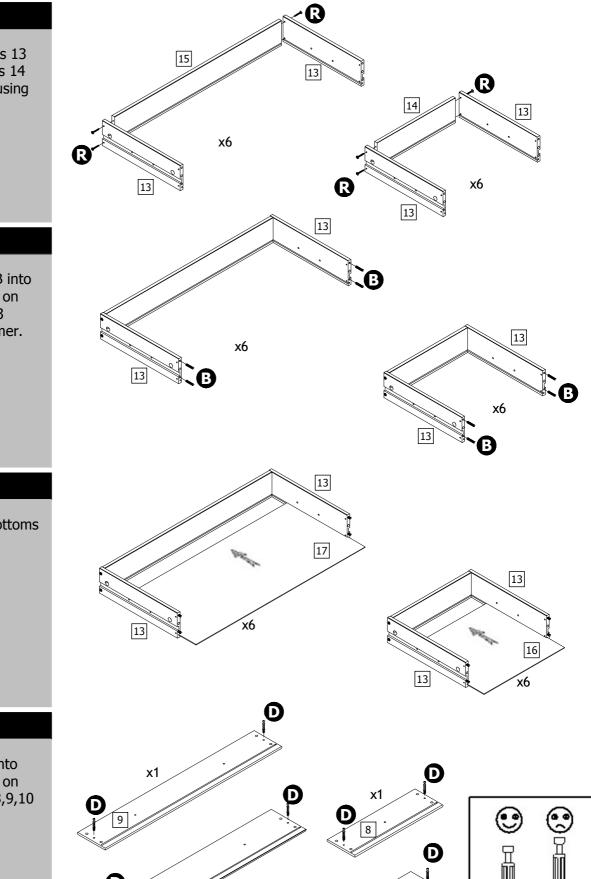

### Step 2

Knock the dowels B into the holes indicated on the drawer sides 13 using a small hammer.

### Step 3

Slide the drawer bottoms 16 and 17 into the drawer sides 13.

#### Step 4

screw the bolts D into the holes indicated on the drawer fronts 8,9,10 and 11.

10

x5

x5

#### Step 5

Push the drawer fronts 8,9,10 and 11 onto the drawer sides 13 as shown.

Push the cams C into the holes indicated. Arrow pointing towards the front.

Turn the cams C to the right to fix the fronts 8,9,10 and 11.

#### Step 6


Important! Make sure the between the drawer fronts 8,9,10 and 11 and the drawer sides 13 is 90° before the drawer bottoms 16 and 17 is fixed.

Fix the drawer bottoms 16 and 17 to the drawer backs 14 and 15 and the drawer fronts 8,9,10 and 11 using F.

To adjust the angle between the drawer sides and the drawer fronts push the fitting F sidewards. See details.

#### Step 7

Fix the Wooden knobs G to the drawer fronts 8,9,10 and 11 using screws R.

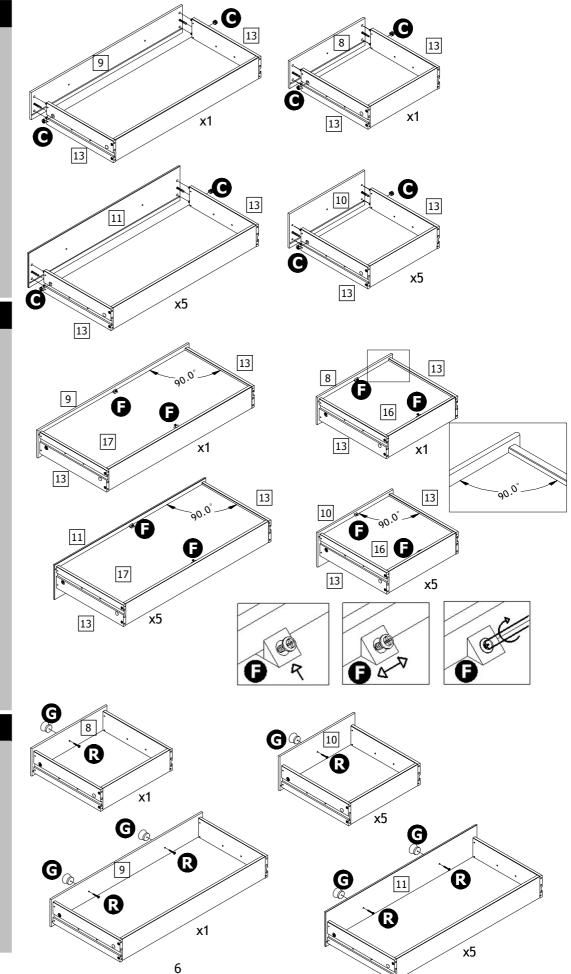

### Step 8

Knock down the dowels A into the holes indicated on the divider 6 using a small hammer.

#### Step 9

Slide the top of the drawer runners S backwards.

Fix the front end of the drawer runners S to the divider 6 using screws K into the hole indicated. See details.


Slide the top of the drawer runners S forwards.


Fix the backend of the drawer runners S to the divider 6 using screws K into the holes indicated. See details.

### Step 10

Turn around the divider 6.

Fix the drawer runners S to the divider 6 as shown. Same procedure as step 9.

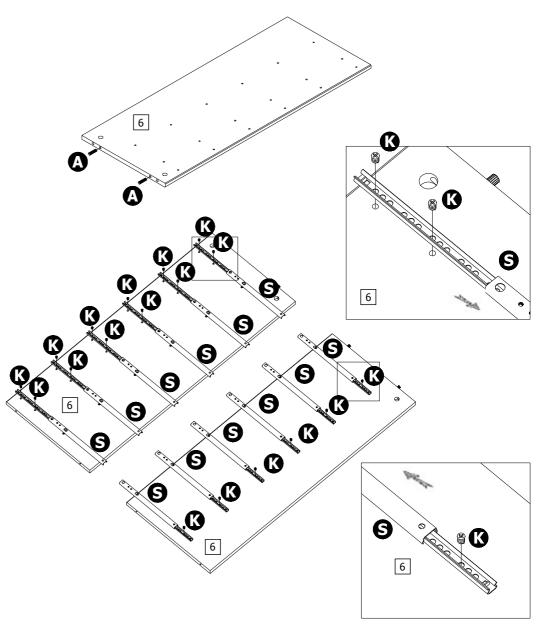

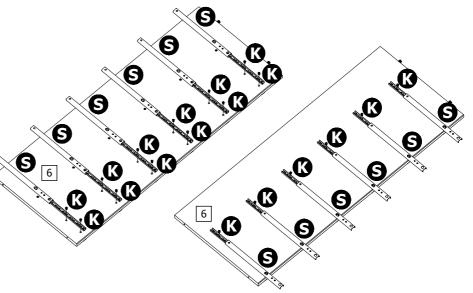

#### Step11

Screw the bolts D into the holes indicated on the sides 4 and 5.

Fix the angle V to the sides 4 and 5 using screws E. Place the angles as shown. See details.

Knock down the dowels A into the holes indicated on the sides 4 and 5 using a small hammer.

#### Step12


Slide the top of the drawer runners S backwards.

Fix the front end of the drawer runners S to the sides 4 and 5 using screws K through the holes indicated. See details.

### Step 13


Slide the top of the drawer runners S forwards.

Fix the backend of the drawer runners S to the sides 4 and 5 using screws K through the holes indicated. See details.

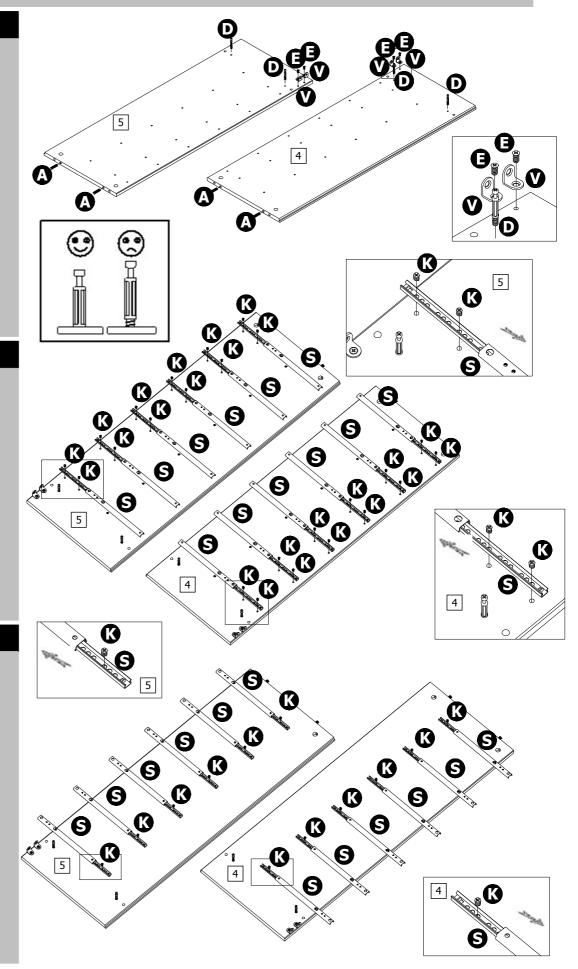

### Step 14

Screw the bolts D into the holes indicated on the top 1.

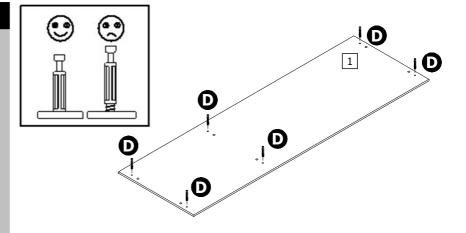

### Step 15

Place the divider 6 onto the top 1.


It's important that the divider 6 is placed exactly as shown. Note the holes indicated.


Push the cams C into the holes indicated. Arrow pointing towards top 1.

Turn the cams C to the right, to fix the divider 6.

### Step 16

Knock down the dowels A into the holes indicated on the back plinths 2.

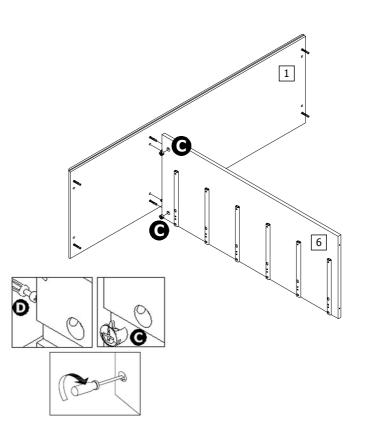

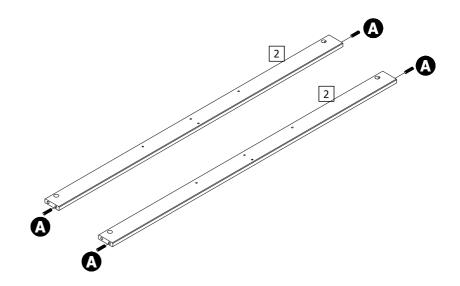


### Step 17

fix the back plinth 2 to the sides 4 and 5.

Push cams C into the holes indicated on the back plinth 2. Arrow pointing towards sides 4 and 5.

Turn the cams C to the right to fix the sides 4 and 5.

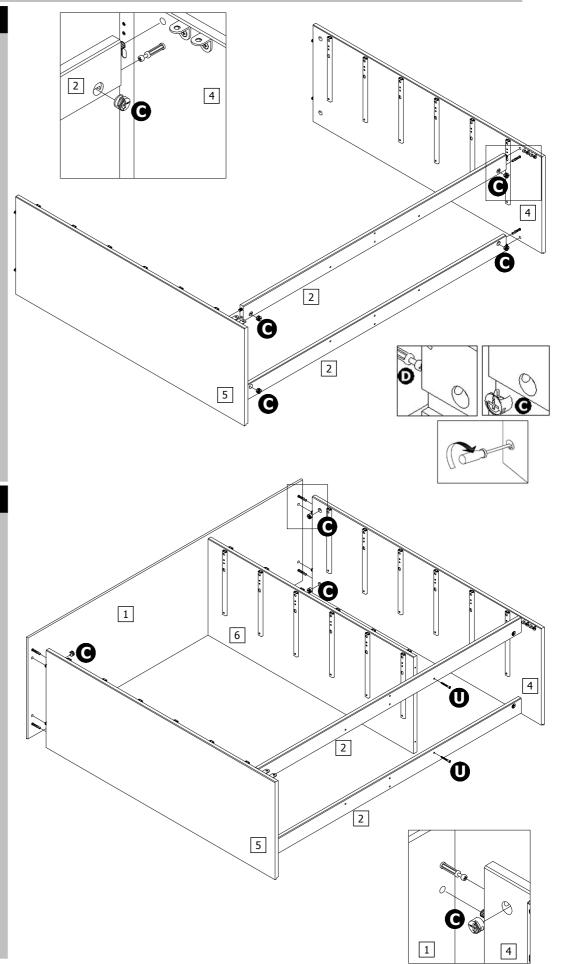

### Step 18

Press the top 1 onto the sides 4 and 5.

Push cams C into the holes indicated on the sides 4 and 5. Arrow pointing towards the top 1.

Turn the cams C to the right to fix the top 1.

Fix the divider 6 to the back plinths 2 using screws U. Tighten using the allen key X.

#### Step 19

Turn around the chest so that it lies on its front edge.

Place the front plinth 3 as shown.

Fix the front plinth 3 to the sides 4 and 5 using screws E into the angles V.

Fix the foot 12 onto the back plinth 2 using screw O.




Place the backs 7 into the rebates in the sides 4 and 5 and the top 1



Important! Make sure the angle between the top and the sides is 90° when the back is attached.

Fix the backs 7 to the sides 4,5 the top 1, the divider 6 and the bottom plinth 2 using nails i.

Use the nail holder Yd and a small hammer.

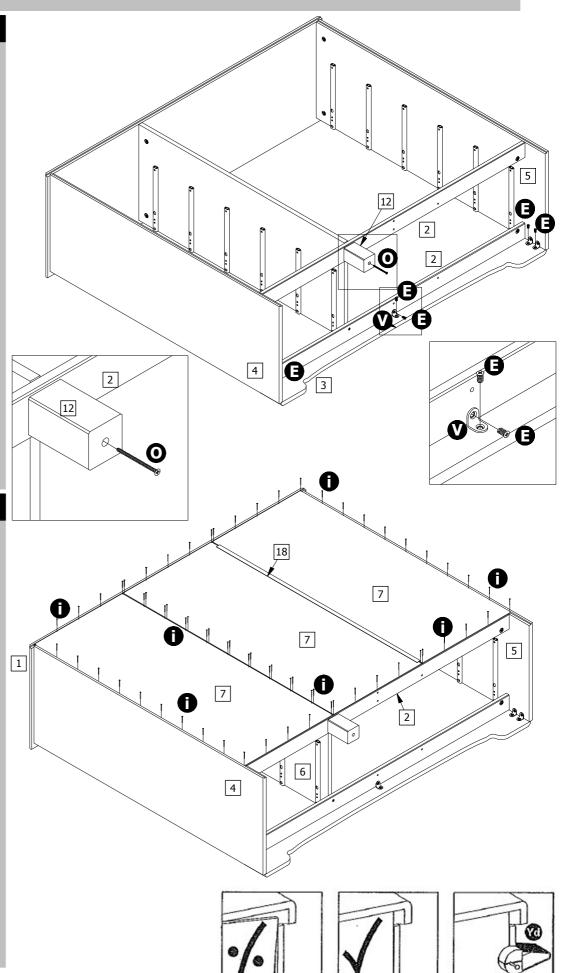

### Step 21



Step 22

Pull out the drawer

Fit and fix the lower

Fix drawers to the

drawer runners using

your way up.


screws H.

drawer first and work

Warning! The chest of drawers is heavy. Lift with care.

It's recommended that the chest is fixed to the wall.

Use fittings J. Follow the instructions included with the fittings.

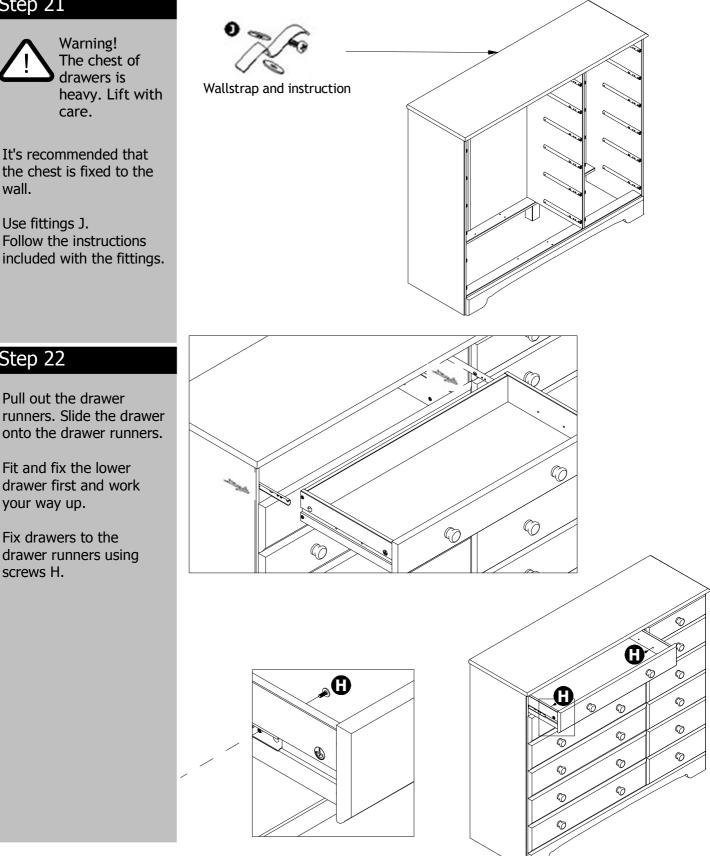

If you need help or have damaged or missing parts, call the Customer Helpline: 0845 640 30 30 Home Retail Group - 489-499 Avebury Boulevard - Saxon Gate West - Central Milton Keynes MK9 2NW