

**WATCH GUARANTEE**

**INTRODUCTION TO YOUR WATCH**

We would like to pass on to you some information, which we hope you will find interesting and helpful.

Your watch has been produced to a high quality standard and with careful use will give you many years of satisfactory service.

You can greatly assist in improving the life of your watch by following a few simple suggestions:

**HANDLE WITH CARE**

Although your watch is shock resistant, please do not take unnecessary risks by wearing the watch whilst carrying out rough work, etc.

**PLATING**

Gold, Silver and Rhodium plated cases can be damaged by hair or body sprays. Please therefore, whenever possible, place your watch on your wrist after using such sprays - not before.

**BATTERIES**

The battery life should be approximately 18 months. Battery changes require special tools and expertise — particularly in water resistant watches which may have an inner seal and which could be broken whilst opening the case back Your battery replacement should therefore be done by a qualified person. Please do not attempt to do this yourself as you may cause damage and therefore invalidate the guarantee.

**SETTING**

- 1.To set your Quartz watch; Pull the crown (winder) out gently and turn it clockwise. When the correct time is reached simply push the crown back into place.
- 2.For date models: to adjust the date, pull the crown out one position and turn the crown clockwise. Pull the crown out one position further to adjust the time.
- 3.For day date models: To adjust the date, pull the crown out one position and turn the crown clockwise. To adjust the day, turn the crown anti-clockwise. Pull the crown out one position further to adjust the time.

Dial/case back marking	Water Resistance			Snorkeling, diving, wind surfing, etc.
	Splashes rain etc.	Showering washing up,	Swimming, bathing etc.	
No marking	✗	✗	✗	✗
Water resistant	✓	✗	✗	✗
30 meters 3ATM	✓	✓	✗	✗
50 meters 5ATM	✓	✓	✓	✗

**Warning: Please ensure the crown is fully pushed in before exposure to water, the crown or any buttons on the watch must not be operated when wet.**

Your watch is guaranteed for 2 years from the date of purchase. Should your watch develop a fault during this time please send it back (well wrapped). Please enclose a cheque or postal order for £3.50, payable to PH Services, to cover postage and insurance for loss or damage in transit. All watches should be returned by registered or recorded post to:

**PH Services, Precision House, Starley Way, Birmingham International Business Park, Bickenhill Lane, Solihull, B37 7GN**

The original receipt or proof of purchase should be included along with the completed enclosed form. In order to process your repair quickly, please give a brief indication of the fault. Please allow 20 days for repair and return postage

NB. Your guarantee does not cover the following:

1. Batteries, straps or bracelets.
2. Damage caused from accidents, or mishandling to any part of the watch, including strap buckles, bracelets and watch glasses.

3. Water penetration, except in watches marked as water-resistant.

4. Tarnishing of the watch bracelet or case.

The terms of this guarantee provide rights that are in addition to your statutory rights and do not effect your statutory rights as a consumer.

**Disposal of Electric and Electronic Equipment**

The consumer has a significant role to play in reducing the impact of waste electrical and electronic equipment, batteries and accumulators on the environment, through re-using or recycling such articles.

Some batteries and accumulators and some of the components used in electrical and electronic equipment may contain hazardous substances that can damage the environment and present a risk to human health if not properly disposed of.

The crossed out wheelee bin symbol is to remind you that waste electrical and electronic products, batteries and accumulators,

should not be disposed of with household waste.

If you are unable to reuse or recycle your article it should be disposed of at a civic amenity site or a local authority recycling facility.

**Please retain this information as it is important**

Where Purchased .....

Date of purchase .....

Owners Name .....

Address .....

.....

.....

Telephone No: .....


e-mail address .....

Fault .....



**INSTRUCTIONS FOR ATK1016**

**※STANDARD DISPLAY AND BUTTON FUNCTION※**

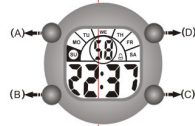

- ALARM ON
- A AM :MORNING TIME
- P PM :AFTERNOON TIME
- A—LIGHT :COLD LIGHT BUTTON (with 3-second delay function)
- B—MODE :FUNCTION SELECT BUTTON

- D—START: DIGIT CARRY BUTTON DATE DISPLAY BUTTON STOPWATCH TIMEKEEPING ON/OFF BUTTON
- C—RESET: TIME ADJUST BUTTON ALARM TIME DISPLAY STOPWATCH RESET BUTTON

**※ OPERATION ※**

- How to set the time
- In normal time display, press button “B” three times
  - The seconds will flash
  - Press button “D” the reset second to zero
  - Press button “C”, minute will flash
  - Press button “D” to adjust
  - Press button “C”, hour will flash

- Press button “D” to adjust
- Press button “C”, date will flash
- Press button “D” to adjust
- Press button “C”, month will flash
- Press button “D” to adjust
- Press button “C”, day will flash
- Press button “D” to adjust
- Press button “B” to confirm and accept changes.

**Alarm and chime**

- To switch ON/OFF alarm
- Press and hold button “C”
- Press button “D” to turn alarm on/off. Alarm on - “8” displayed
- Release all button and display return to normal time

- To switch ON/OFF hourly chime
- Press and hold button “C”
- Press button “B” to turn hourly chime alarm on/off. Chime ON - all days of week displayed
- Release all button and display return to normal time

**How to set alarm**

- In normal time press button “B” twice to enter alarm mode with hour flashing and “ALM” displayed (alarm on)
- Press button “D” to adjust
- Press button “C” minute flashing
- Press button “D” to adjust
- Press button “B” to accept changes and return to normal time with alarm set

**How to use stop watch**

- In normal time press button “B” once to enter chronograph mode
- Press button “D” to start
- Press button “D” again to stop
- Press button “C” to reset

**Lap time operation**

- When time is running press button “C” to measure lap
- Press button “C” again to return to the count

- Press button “D” to stop the time at the end of the event
- Press button “C” to reset
- Press button “B” to return to normal time

**How to use light**

- In any mode press button “A”



**SIZE:270X84MM**