 


Freja Tall Boy

habitat 

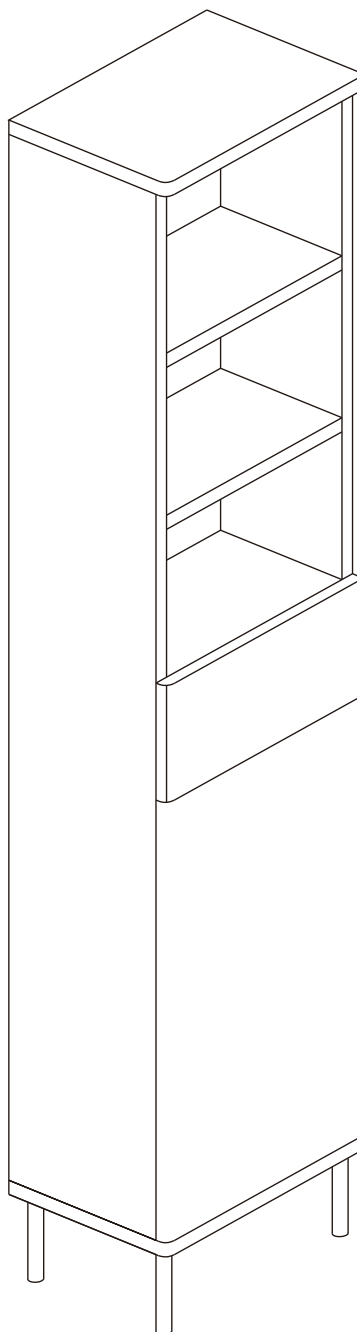


Spare Parts

 www.argos-support.co.uk

 Help@ClickSpares.co.uk

 0370 112 1928

Customer Support

 0345 640 2020



Safety and Care Advice

Product Details

Grey 2028987

IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- This product has been constructed to be used in the domestic environment only and not for commercial purposes.

- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.



- We do not recommend the use of power drill/drivers for inserting screws as this could damage the unit. Only use hand screwdrivers.
- Parts of the assembly will be easier with 2 people.
- Dispose of all packaging carefully and responsibly.

Care and maintenance

- Only clean using a damp cloth and mild detergent. Do not use abrasive cleaners.
- From time to time check that there are no loose screws, nuts or bolts. If there are please re-tighten.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Additional Guidance

Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts.

Regularly check and ensure that all bolts and fittings are tightend properly.

WARNING!

IN ORDER TO PREVENT OVERTURNING THIS PRODUCT MUST BE USED WITH THE WALL ATTACHMENT DEVICE PROVIDED.

Serious or fatal crushing injuries can occur from furniture tipping over. To help prevent topple over:


- Use the wall attachment device provided.
- Never allow children to climb or hang on drawers, doors or shelves.
- Place heaviest items in the lower drawers or shelves.
- Unless specifically designed to accomodate, do not set TV's or other heavy objects on top of this product.
- Never open more than one drawer at a time.

An attachment device is provided with your product, however you will need to source suitable fixings for your wall type. If in doubt, please consult a qualified trades person.


Always ensure the wall to be drilled is free from hidden electrical wires, water and gas pipes.

Fittings (Screws and Bolts shown to scale)

 
Bag 1




A Cam Stud x 24

 

B Cam Socket x 24

 


C Metal Drawer Runner x 2

 

D 12mm Screw x 9



 
E 14mm Screw x 14




F 35mm Screw x 4



 
G Shelf Support x 4

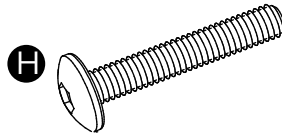


H 30mm Bolt x 4

 

I Hexagonal Key x 1

 


J Wall Bracket x 2

 

K 14mm Screw x 10



 L 12mm Bolt x 2



M Push to Open Mechanism x 1



 
N Rubber Stopper x 4



O Hinge x 2




P Washer x 4



Q Panel Stiffener x 10



 R Large Washer x 1




S Wall Plug x 2



T 45mm Screw x 2

 
Tools required




Crosshead screwdriver
(small & medium)



 Flathead screwdriver
(small & medium)

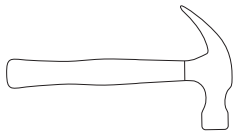


Hammer

 


Pencil



 
Drill Heads



Ruler/tape
measure

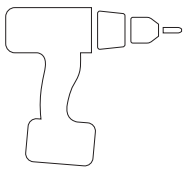 


Power Drill

 


Eye protection
(when using a
hammer or glue)

 Panels

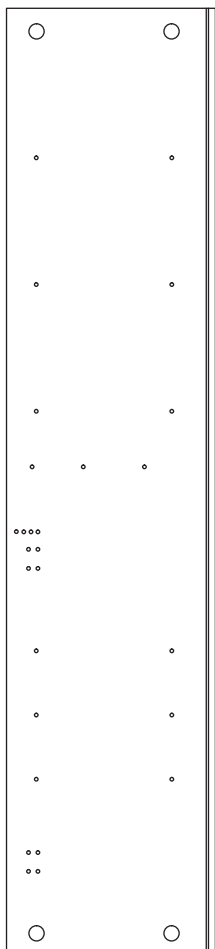

1 Left side panel
(279x 1434mm)

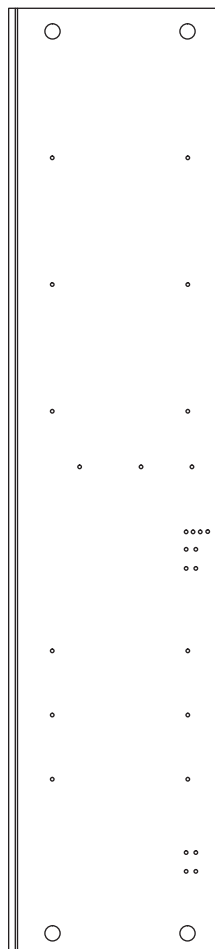 


2 Right side panel
(279x 1434mm)




3 Upper back panel
(684x 322mm)



 
5 Lower back panel
(748x 322mm)

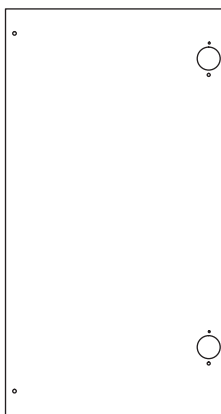


4 Door panel
(348x 590mm)

 


6 Adjustable shelf
(310x 262mm)

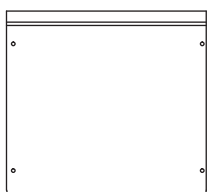 


7 Top panel
(350x 300mm)

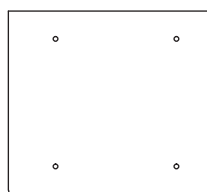 


8 Bottom panel
(350x 300mm)

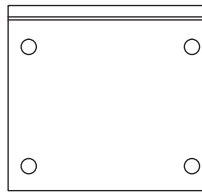 

9 Middle fixed Shelf
(312x 278mm)

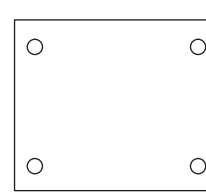 


10 Shelf x 2
(312x 264mm)

 


11 Drawer front
(348x 160mm)



 12 Drawer back
(274x 120mm)




13 Left drawer side
(260x120mm)

 

14 Right drawer side
(260x 120mm)








 15 Drawer bottom
(281x 252mm)




16 Leg x 2
(290x 120mm)

   
 
 
1

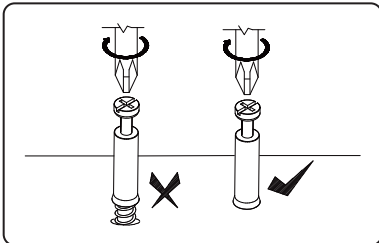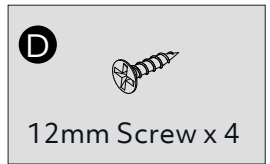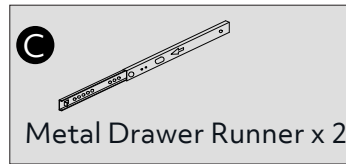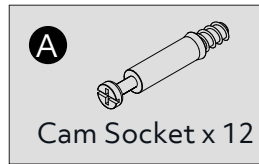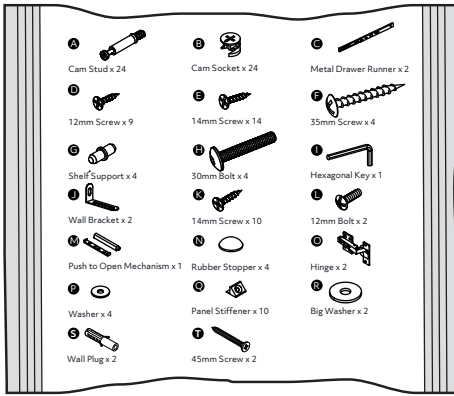

I

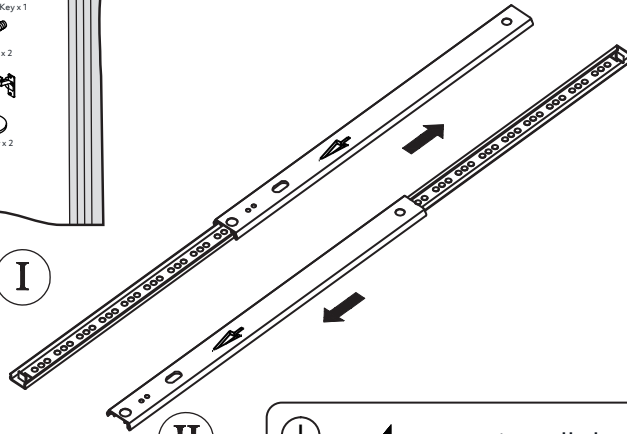 


II

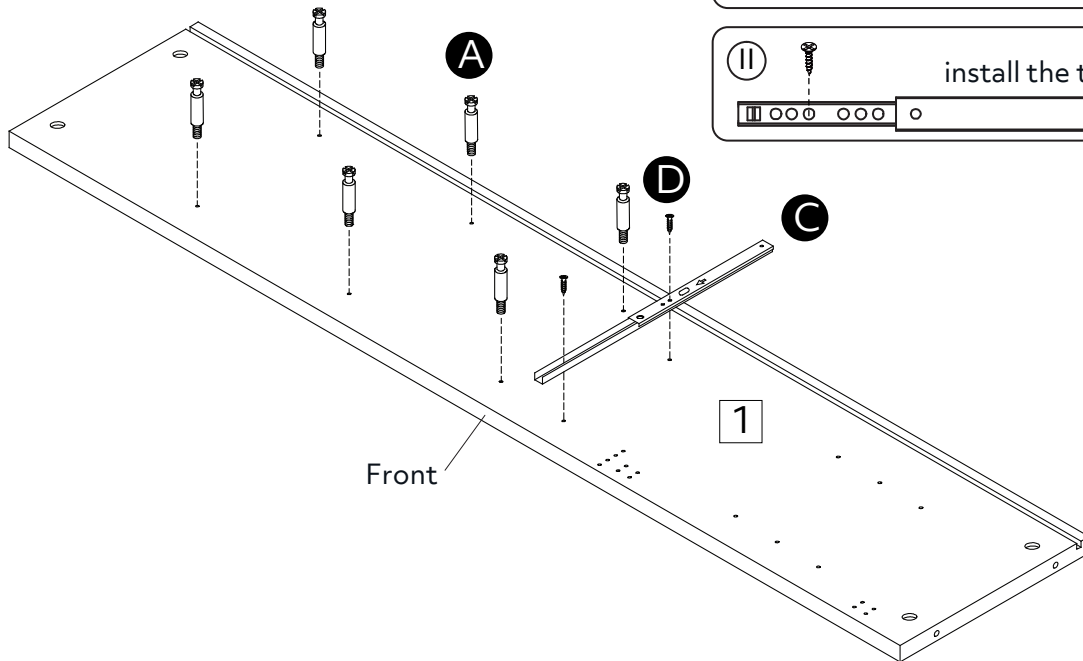   


For how to use
camlocks watch
our video:


 
[www.youtube.com/
watch?v=tBMdYxtpu88](https://www.youtube.com/watch?v=tBMdYxtpu88)

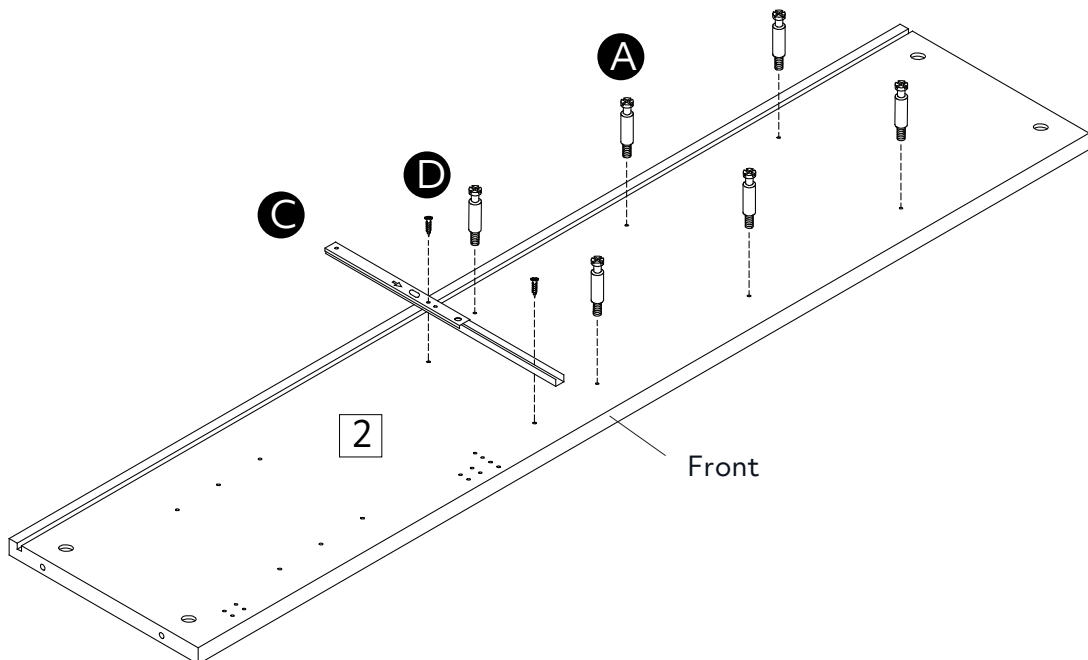



2

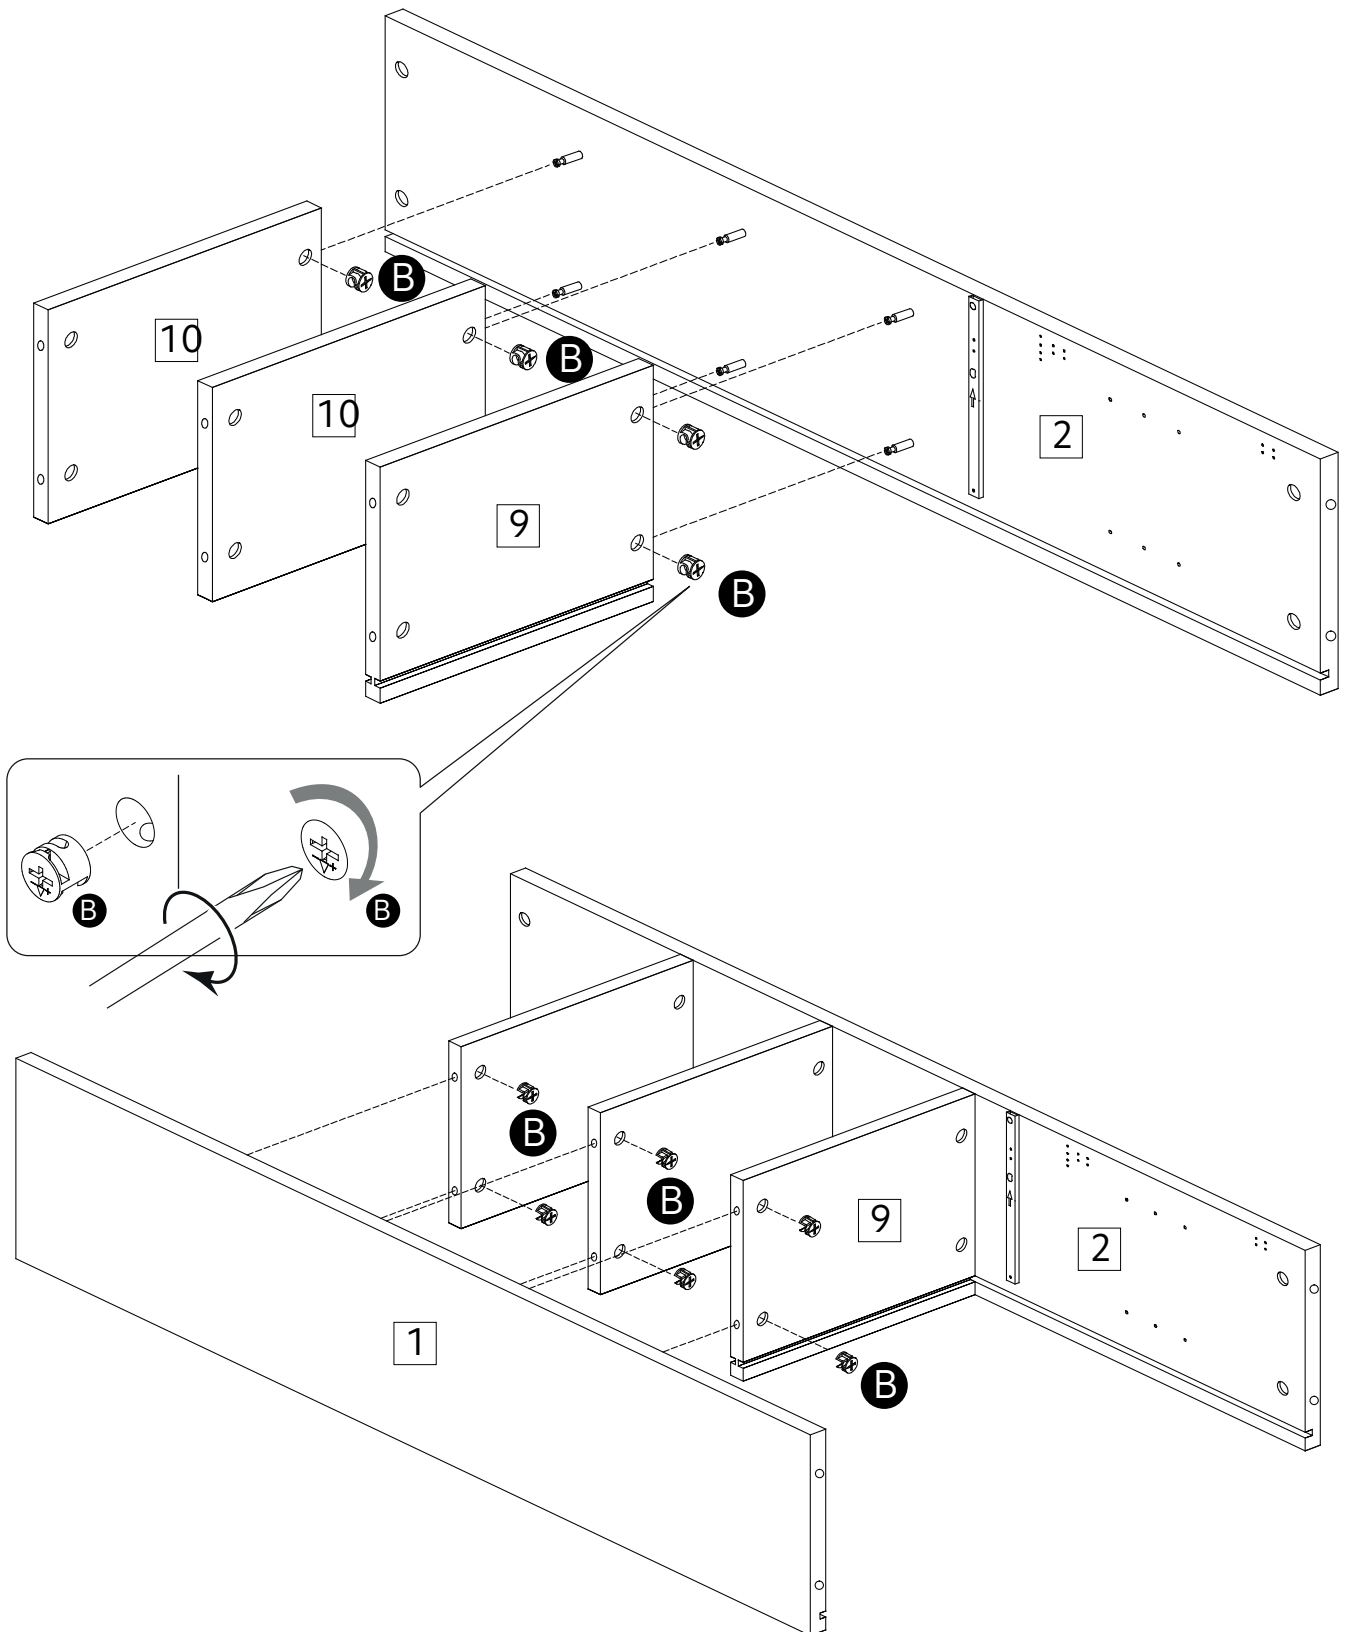 



3

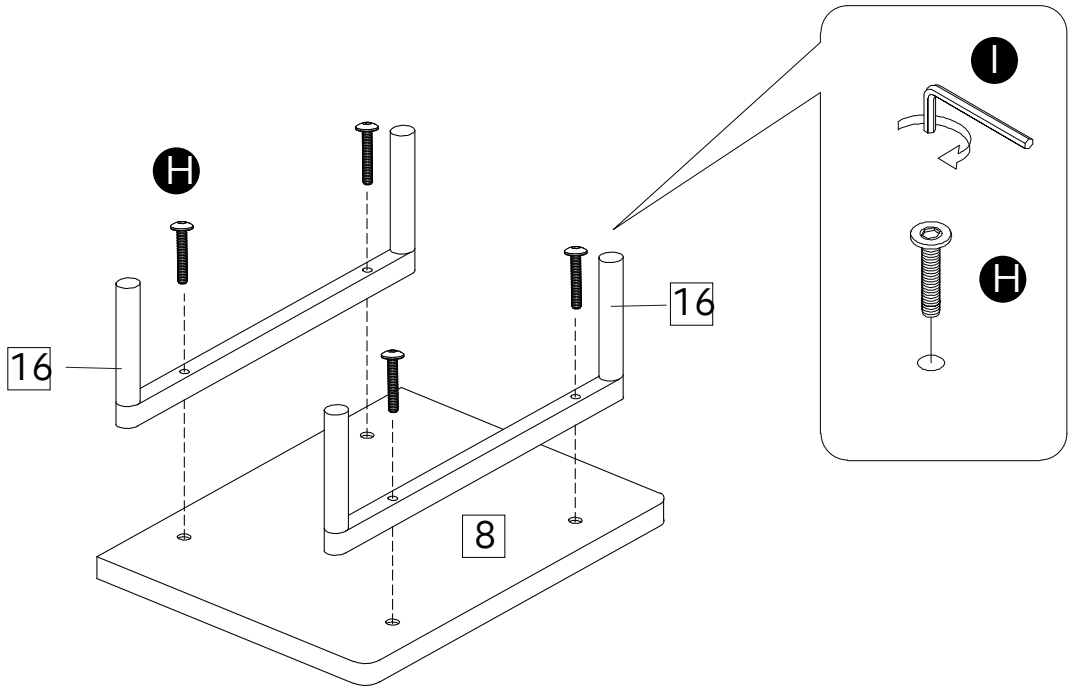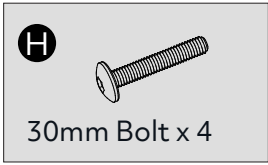  






4

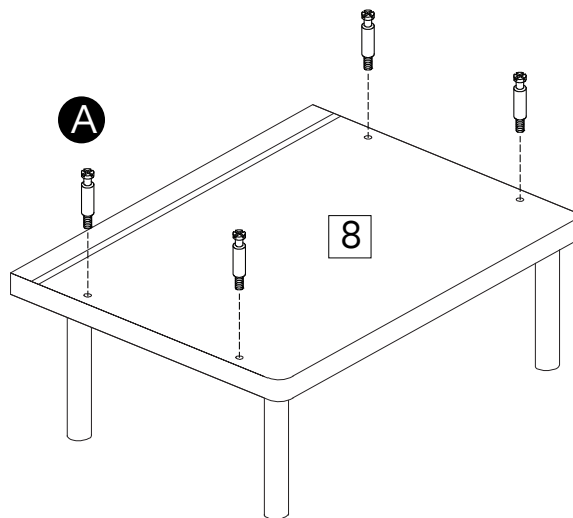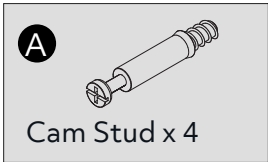  




5

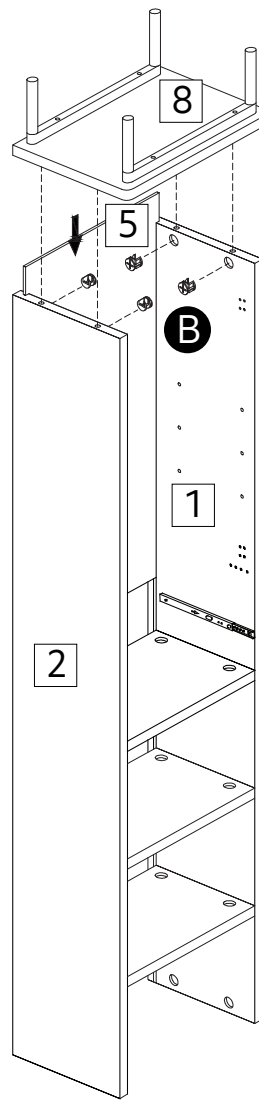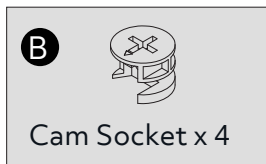  

6

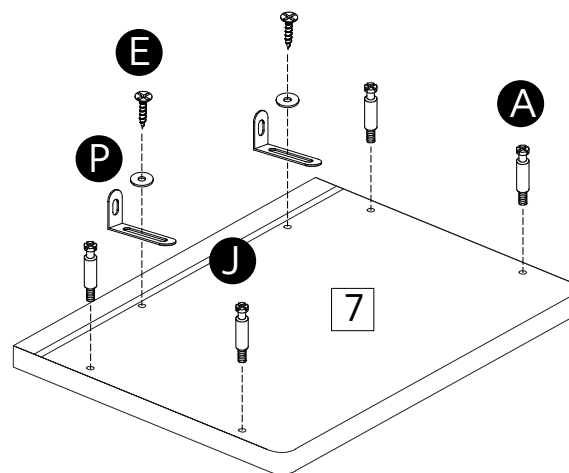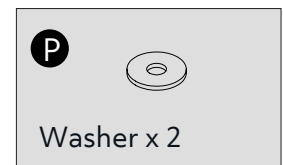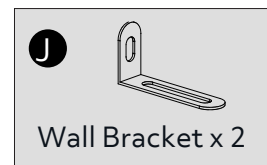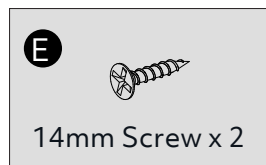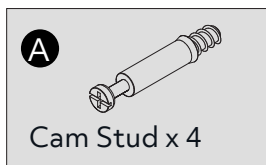     


7

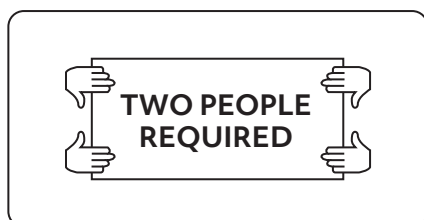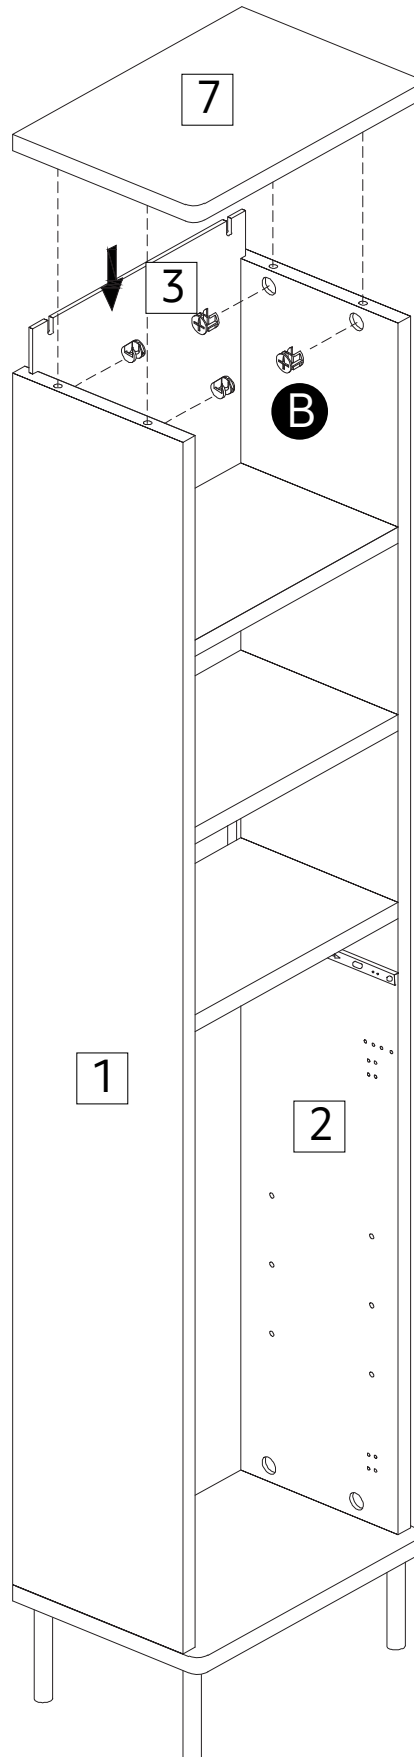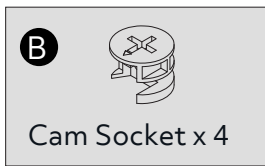   

8

 A




Cam Stud x 4

B




Cam Socket x 4




 
F






35mm Screw x 4

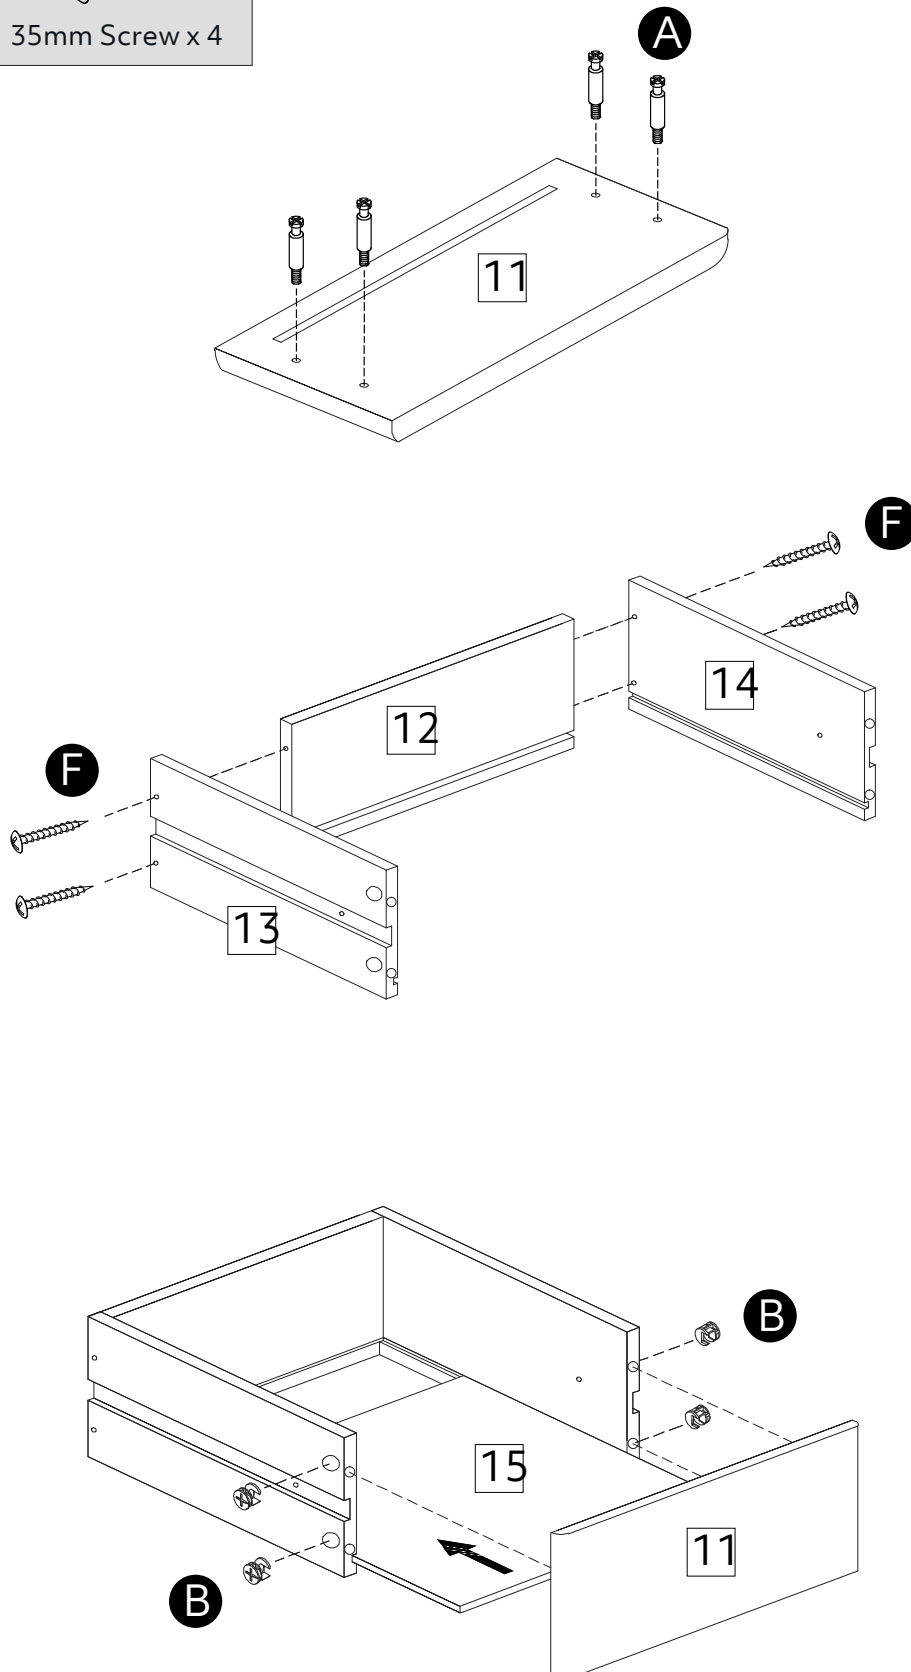 


9

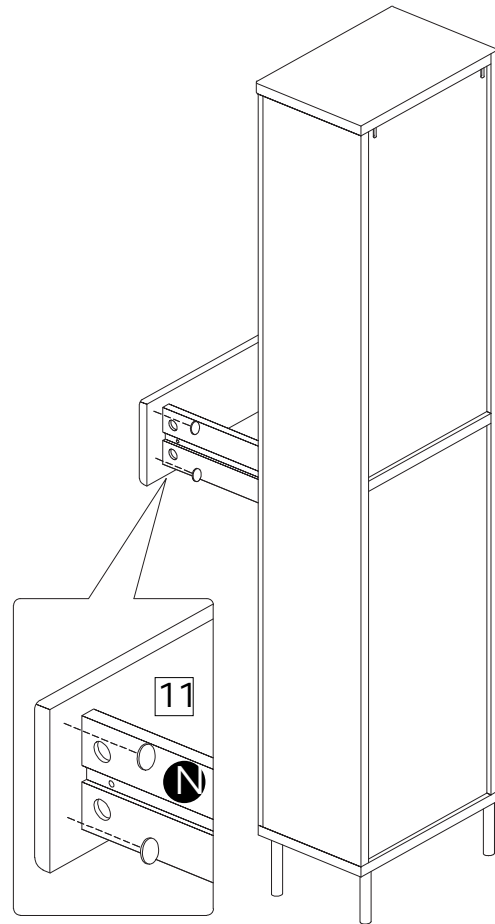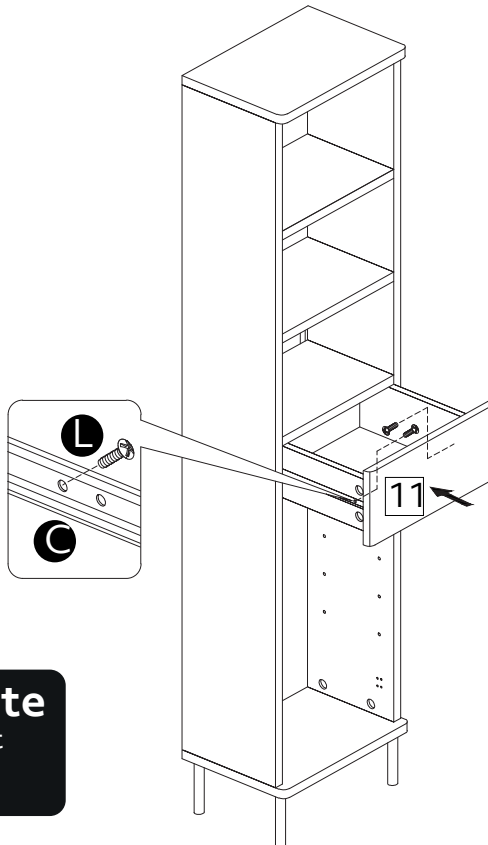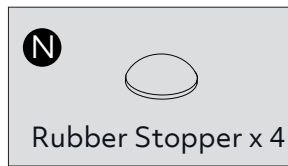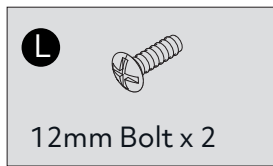    


10

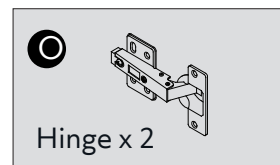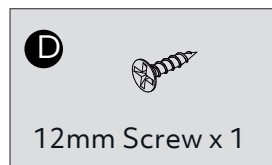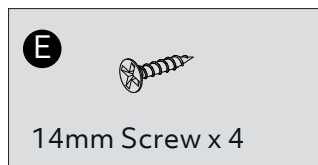   



Left Hand Opening

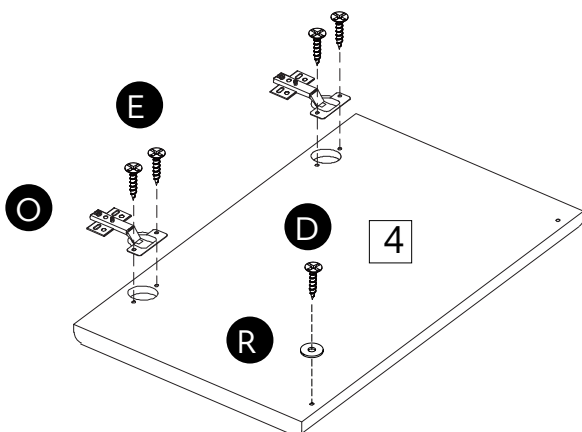 

Right Hand Opening





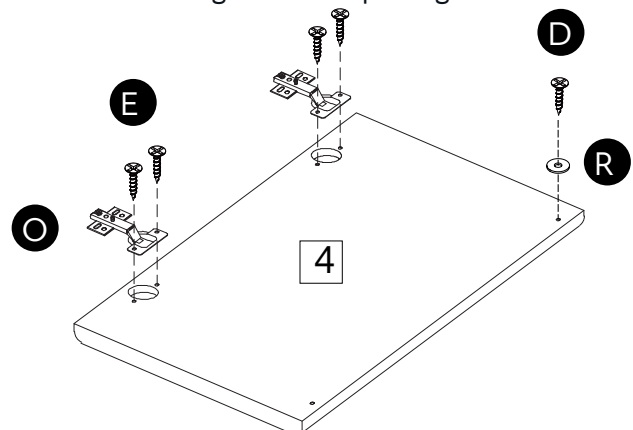 


11

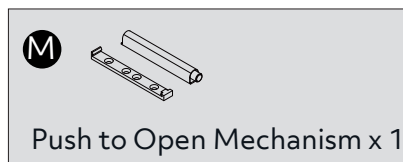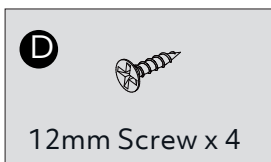  

Left Hand Opening

     Right Hand Opening

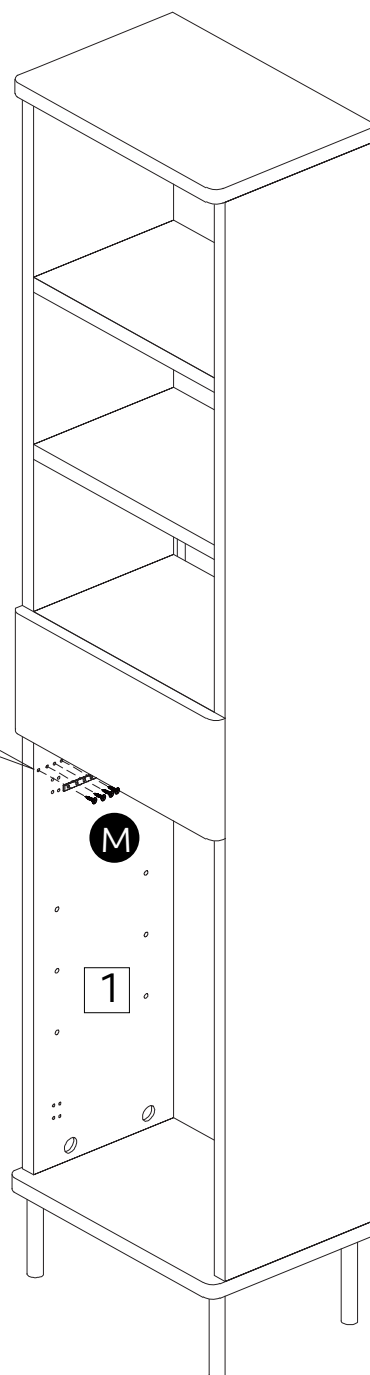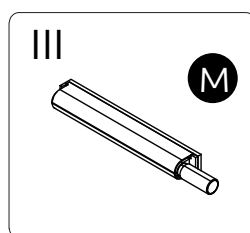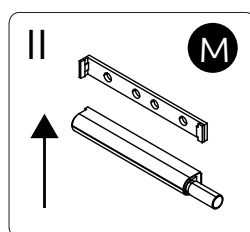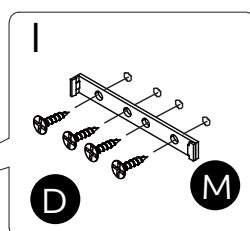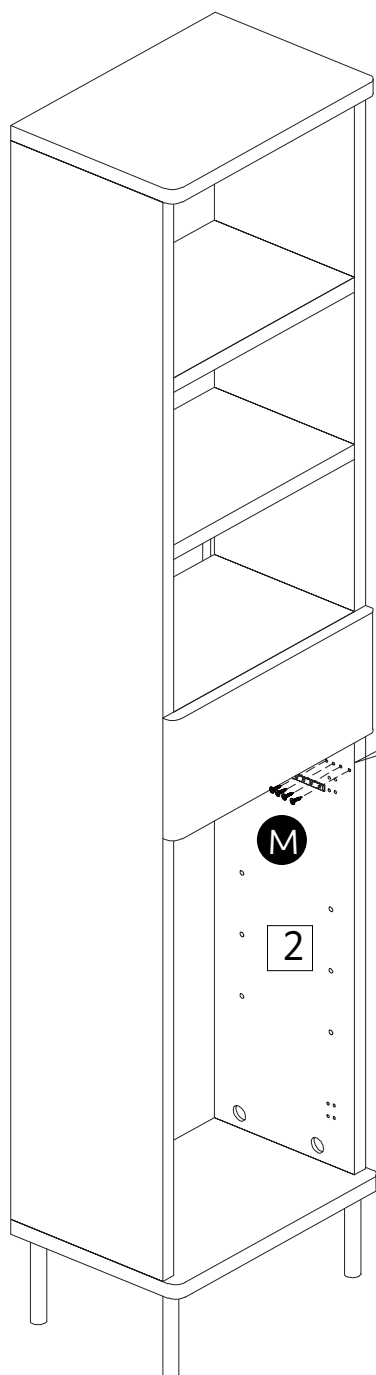

12

 
 
 
 
 
 
E



14mm Screw x 8

Left Hand Opening

Right Hand Opening

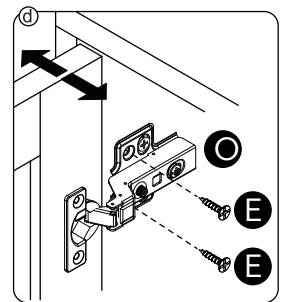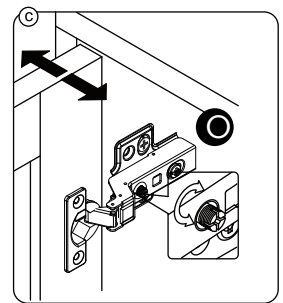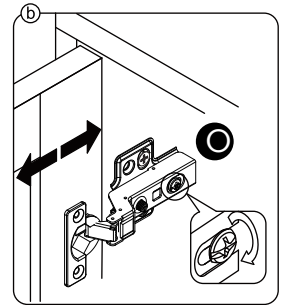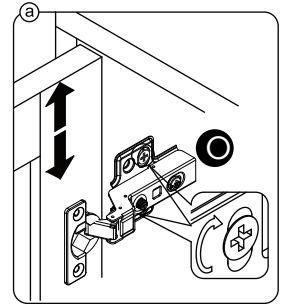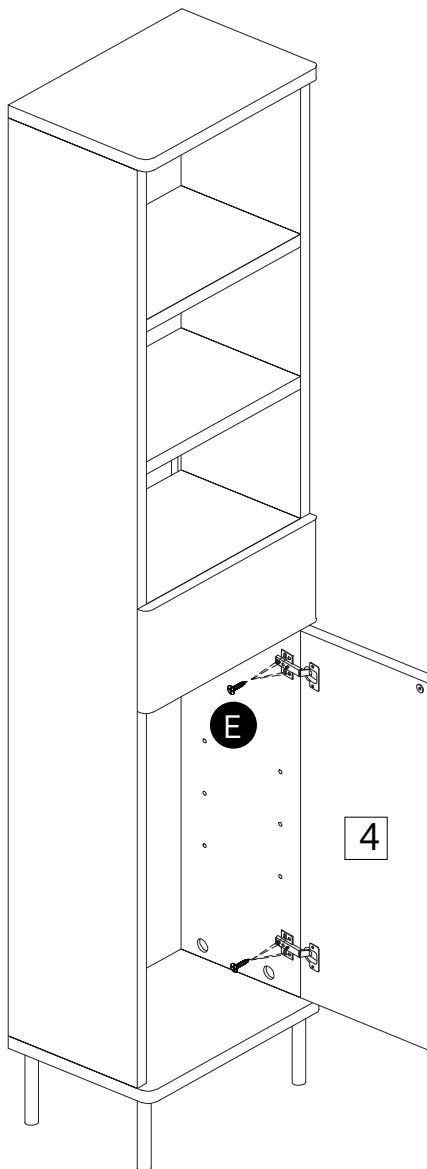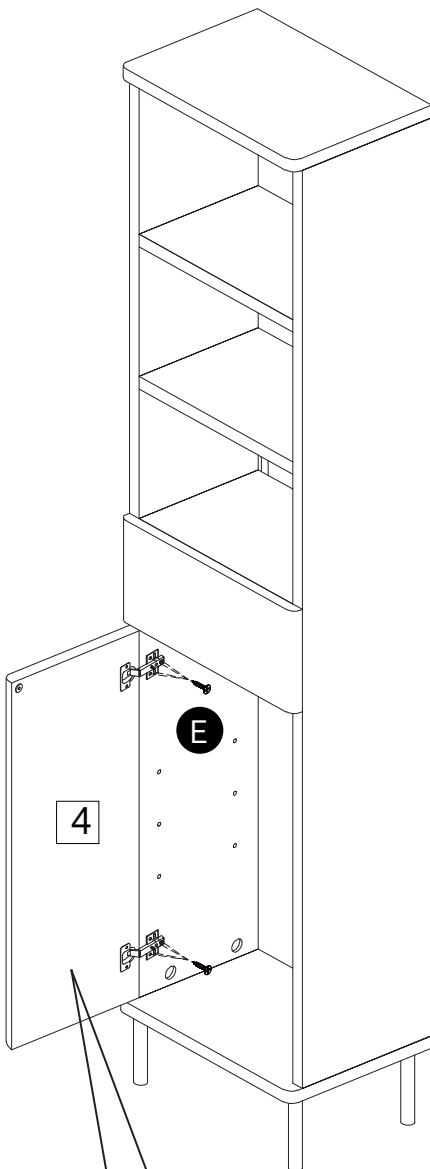

13

K

 


14mm Screw x 10

Q



Panel Stiffener x 10


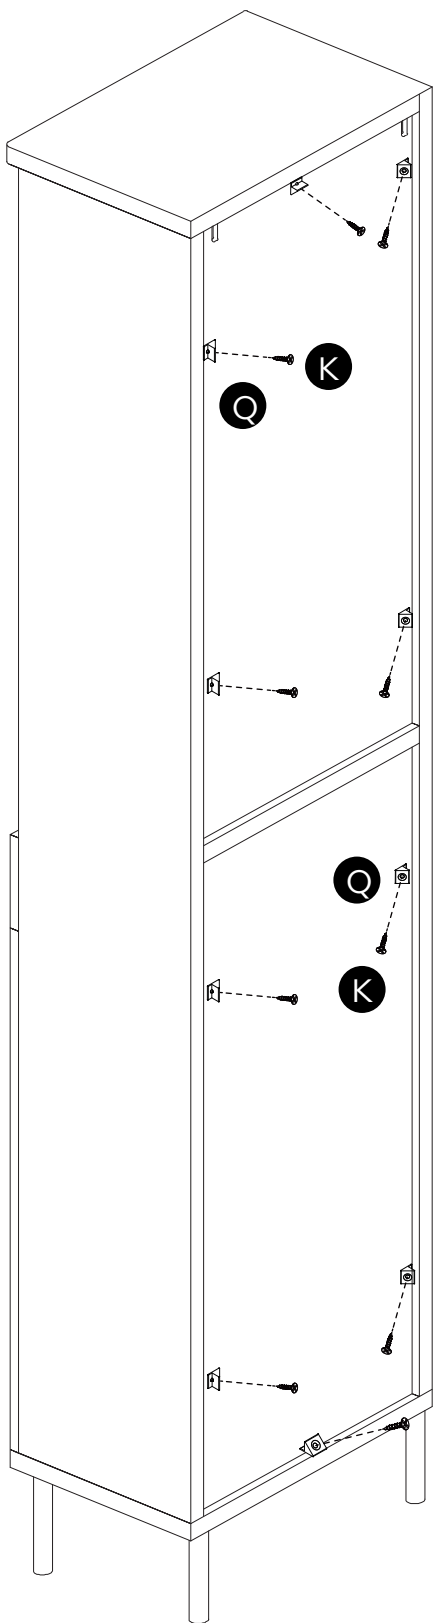


14

G




  Shelf Support x 4

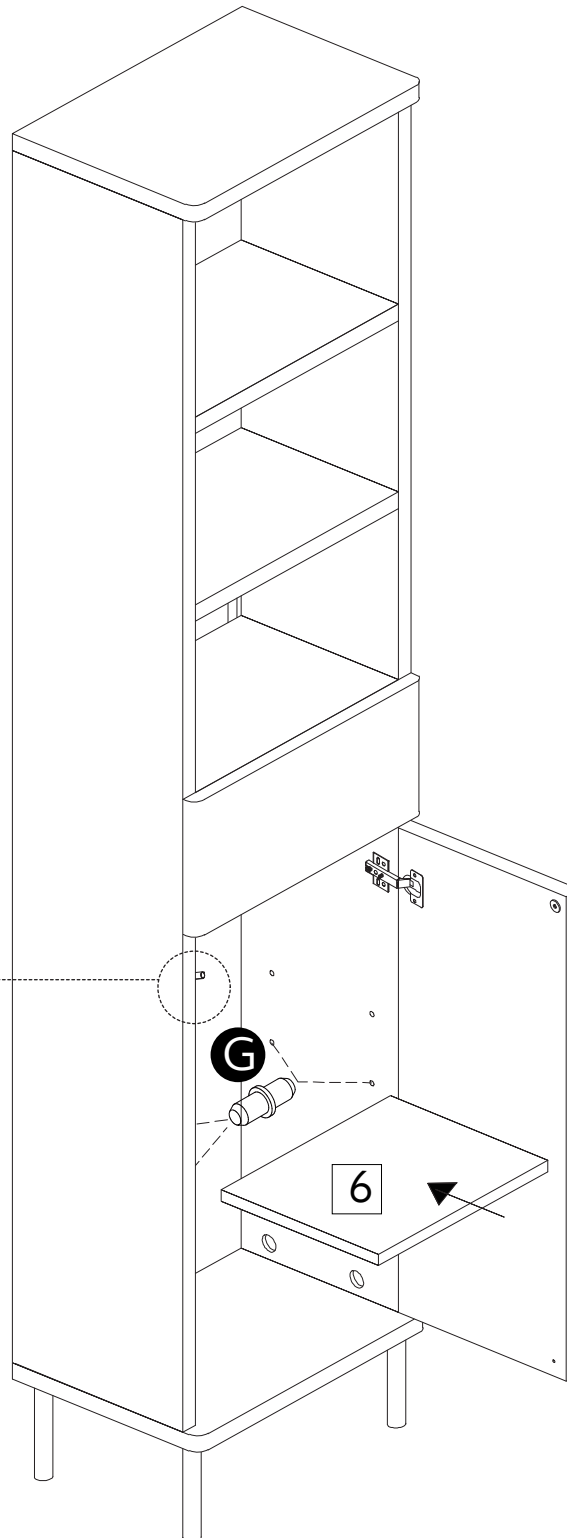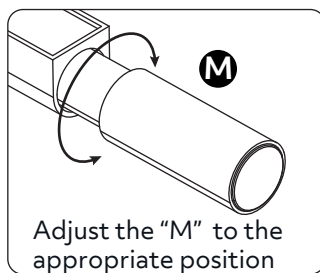


15

 S



Wall Plug x 2

 T



45mm Screw x 2

P



 
 
 
Washer x 2

WARNING!

BEFORE DRILLING,
CHECK WALL FOR HIDDEN
PIPES AND CABLES.

WARNING!

IN ORDER TO PREVENT OVERTURNING
THIS PRODUCT MUST BE USED WITH
THE WALL ATTACHMENT DEVICE
PROVIDED.

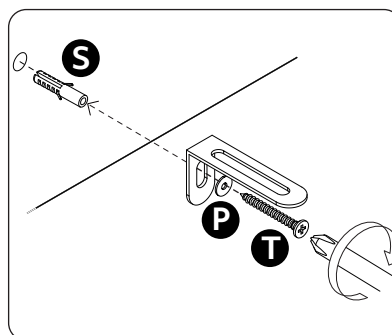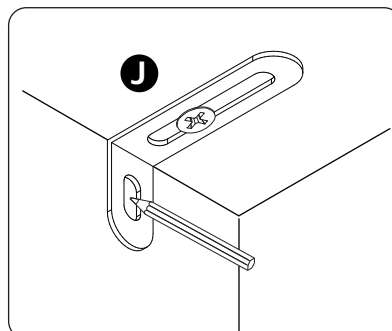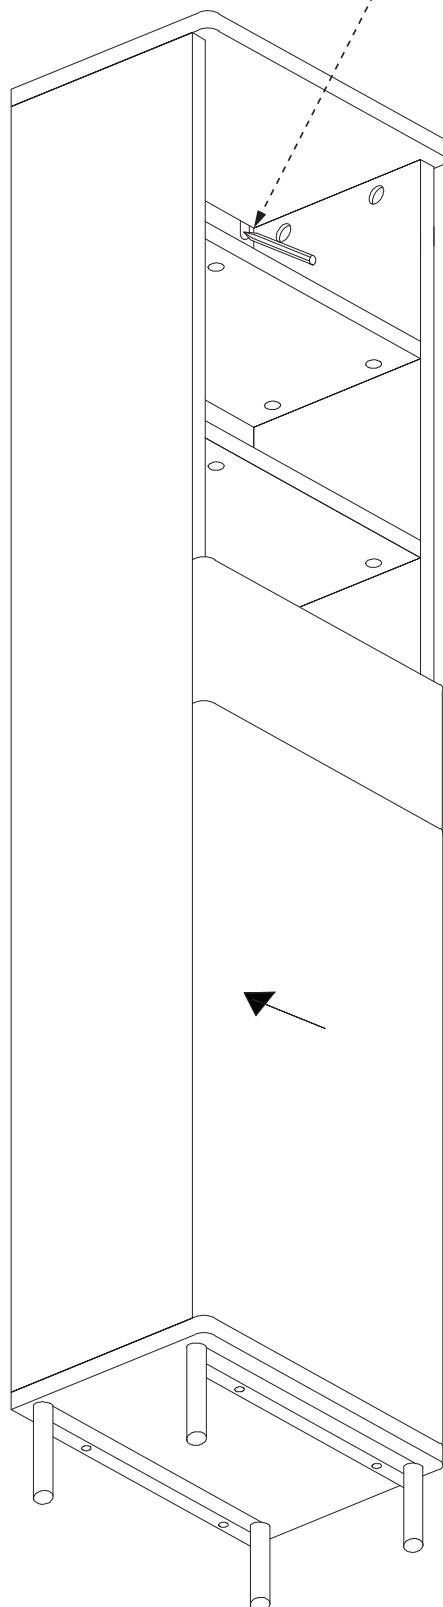

Push to open

**ASSEMBLY
COMPLETE**

A Guide to Wall Mounting & Fixings

Important note:

If plastic wall plugs (rawl plugs) are supplied with your product, eg:



- these are suitable for use in masonry walls

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using the incorrect fixings is the responsibility of the installer.



Important: when drilling into walls always check that there are no hidden wires or pipes

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.



 
Hints:

1. General rule: always use a larger screw and wall plug if you are not sure.
2. Ensure you use the recommended drill bit to match the wall plug and hole size.
3. Ensure you drill the hole horizontally; do not force the drill or enlarge the hole.
4. Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
5. Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No. 1 "General Purpose" wall plug

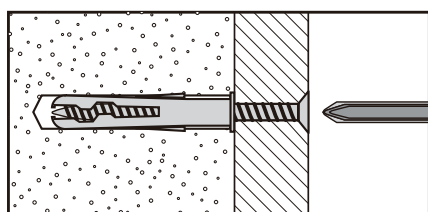


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

 No. 3 "Cavity Fixing" wall plug

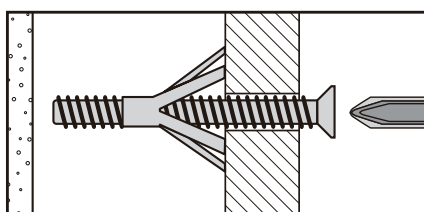


For use with plasterboard partitions or hollow wooden doors.

 No. 5 "Hammer Fixing" wall plug

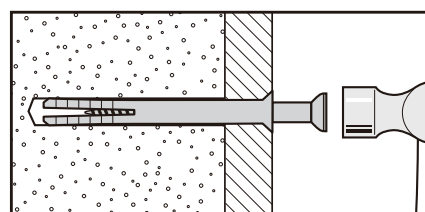


For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

 No. 2 "Plasterboard" wall plug

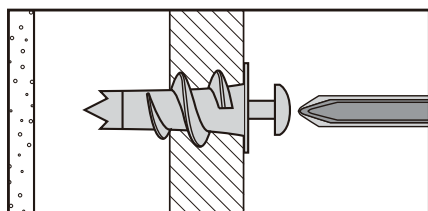


For use when attaching light loads onto plasterboard partitions.

 No. 4 "Cavity Fixing - Heavy Duty" wall plug

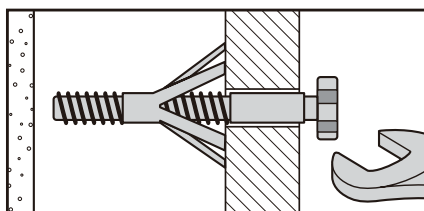

For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

 No. 6 "Shield Anchor" wall plug - heavy loads

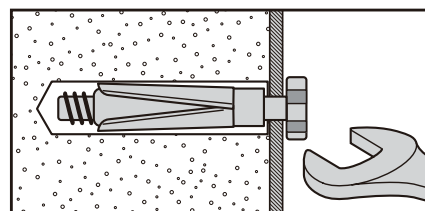

For use with heavier loads such as TV and HiFi speakers and satellite dishes etc.



Care & Maintenance

 
Safety: Always check the fitting and location to ensure your safety in and around the home.

Fitting: From time to time check the fitting to ensure the wall plugs or screws do not become loose.

Using camlocks


Step 1:

Connect the cam stud as directed in the assembly instructions using a screwdriver.

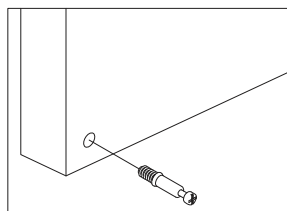

Step 3:

 
Push the cam stud into every hole.

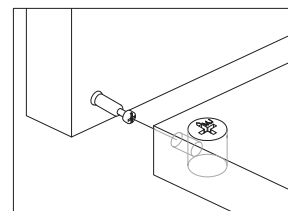

Step 2:

Insert the cam socket as shown in the instructions.

 Note: Ensure that the arrow on the top of the camlock points towards the entry hole for the cam socket.

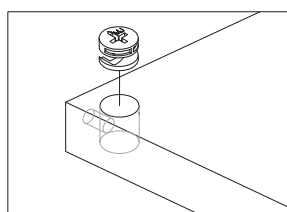


Step 4:

Turn the cam socket with a screwdriver.

You should feel a click when the camlock is locked in place.

 The joint is now secure.

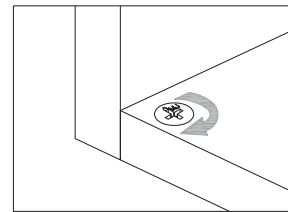

For how to use camlocks watch our video:

www.youtube.com/watch?v=tBMdYxtpu88

Adjusting hinges

Hinge adjustment

Step 1:

To move the door up or down, loosen screws shown and move the door to suit.

Step 2:

 
To move the door in or out, loosen screws shown and move the door to suit.

Retighten screws


Step 3:

To move the door left or right, adjust screws shown.

1.

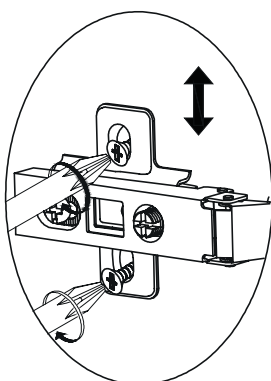

 2.

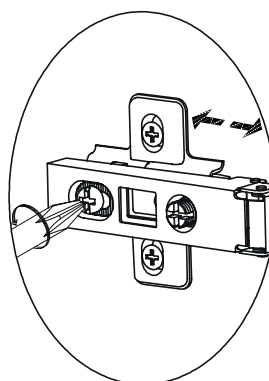

3.

