
Wooden Filer

Assembly Instructions - Please keep for future reference

227/6966

 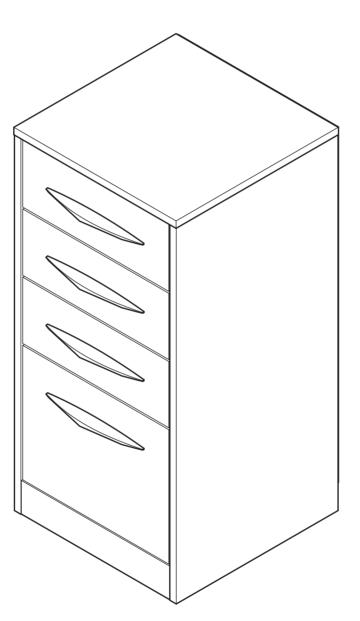


Dimensions

Width - 39cm Depth - 39.5cm Height - 80cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline:** Argos = 0345 6400800



Important - Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on the following pages.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• During assembly do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.

• To reduce the likelihood of damaging your product please ensure that your

power drill is set on a low torque setting.

Glue safety - Take care when using glue, please follow the advice below

Skin contact: Remove contamination by washing with soap and water. This procedure should also be followed prior to eating and drinking. **Eye contact:** Rinse immediately with clean water for 15 minutes and seek medical advice.

If swallowed: Seek medical advice immediately.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners. • From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints


• Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts • Regularly check and ensure that all bolts and fittings are tightend properly.

Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

Components - Panels

If you have damaged or missing components, call the **Customer Helpline: Argos = 0345 6400800**

Please check you have all the panels listed below

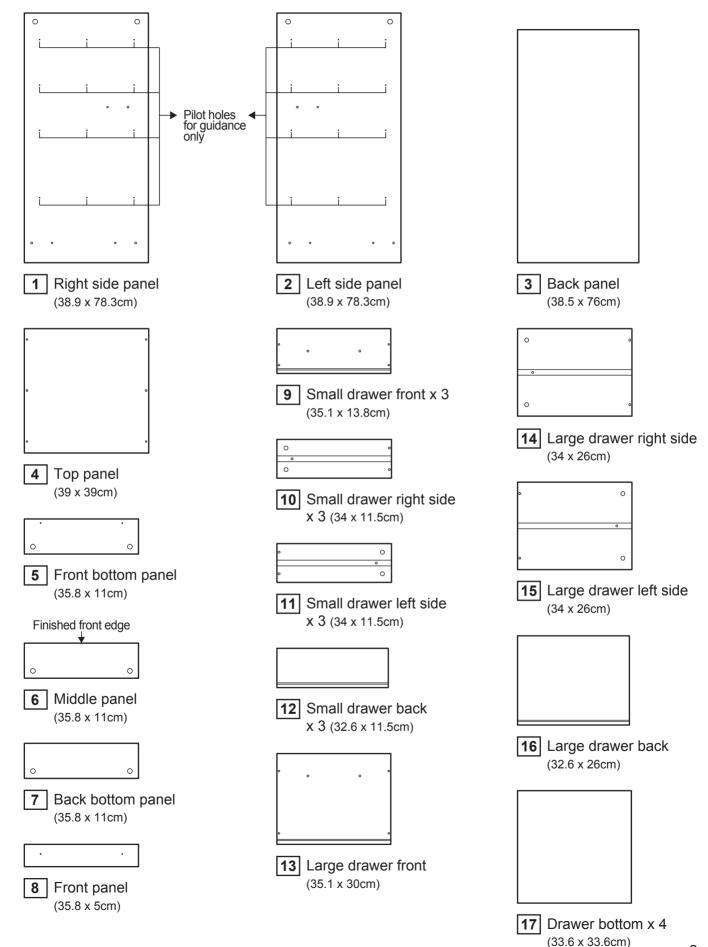


Components - Fittings

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

	(This Screw is included in the bag of runner)	6
Runner x 8	12mm Screw x 24	30mm Dowel x 8
	● €))))>	G
39mm Locking pin x 26	14mm Screw x 5	Plastic support x 2
G		
15mm Locking nut x 10	Nail x 14	12mm Locking nut x 16
	8	
Glue x 1	Plastic file support x 2	30mm Screw x 24
		• (This screw is included in the
Handle x 4	12mm Screw x 8	Wall strap x 1wall strap bag)Wall strap x 1
Wall plug x 1		

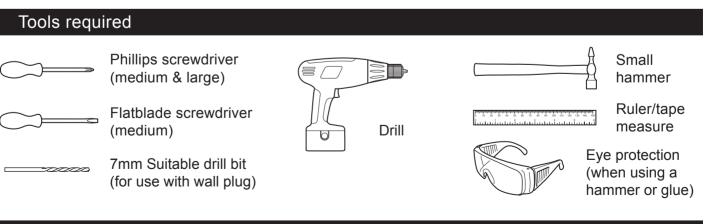



Ruler - Use this ruler to help correctly identify the screws

0 5 10 15 20 25 30 35 40 45 50 55 60 65 70 75 80 85 90 95 100 105 110 115 120 125 130 135 140 145 150 155 160 165 170 1

The screws length is measured from the head to the point (30mm screw shown).

Step 1

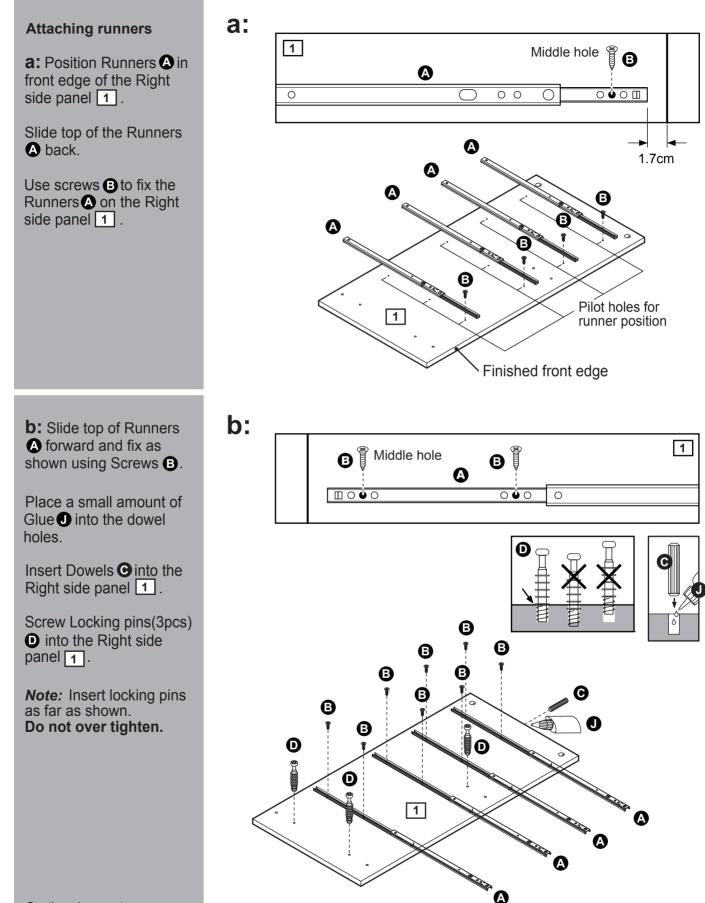

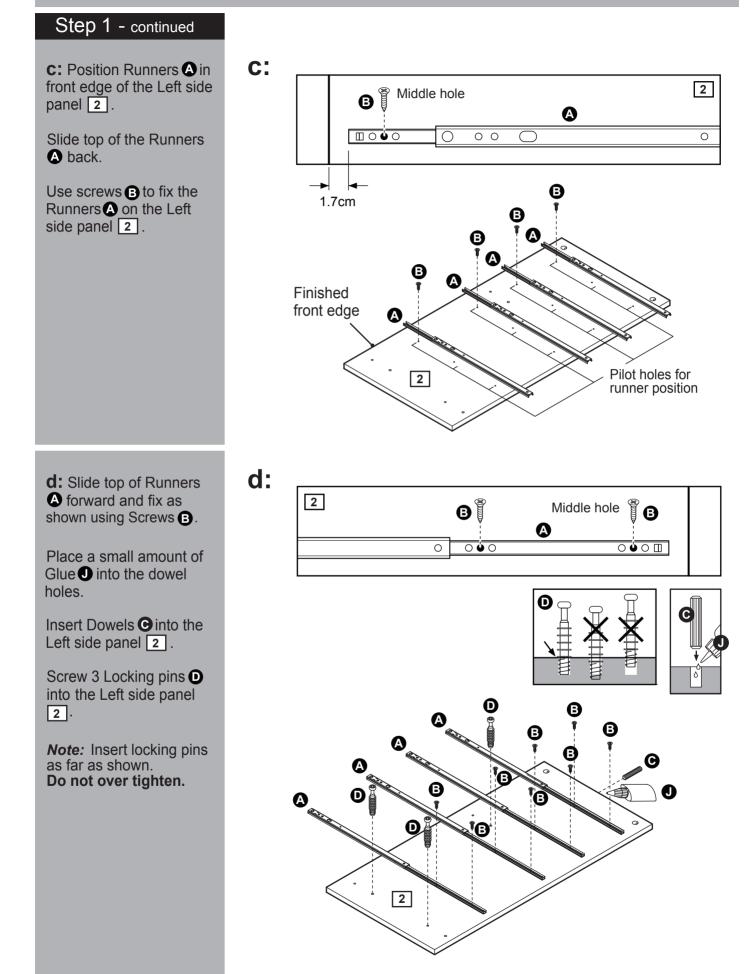

a:

b:

Step 2

Attaching plastic supports

a: Use Screws **(**) to fix Plastic supports **(**) onto the Front bottom panel **5**.

b: Use Screws (a) to fix Front bottom panel [5] onto the Front panel [8].

Place a small amount of Glue I into the dowel holes.

Insert Dowels **G** into the Front bottom panel **5**.

Step 3

Attaching bottom panel and support panel

a: Place a small amount of Glue **1** into the dowel holes.


Insert Dowels ⓒ into the Middle panel ⓒ and Back bottom panel 7.

 
b: Position Front bottom panel **5** and and Front panel **8** onto the Left side panel **2**.


Insert Locking nuts **G** into the Front bottom panel **5**.

 
Use a screwdriver to turn Locking nuts **G** clockwise to lock.


Continued on next page.

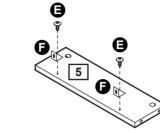


 


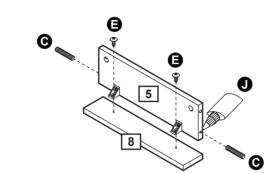




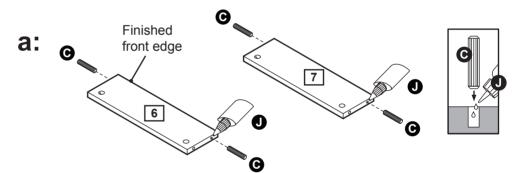

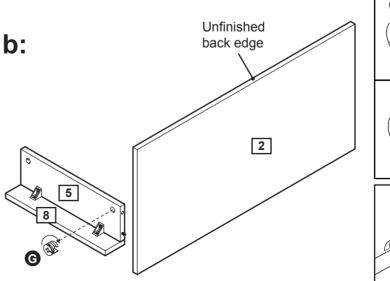



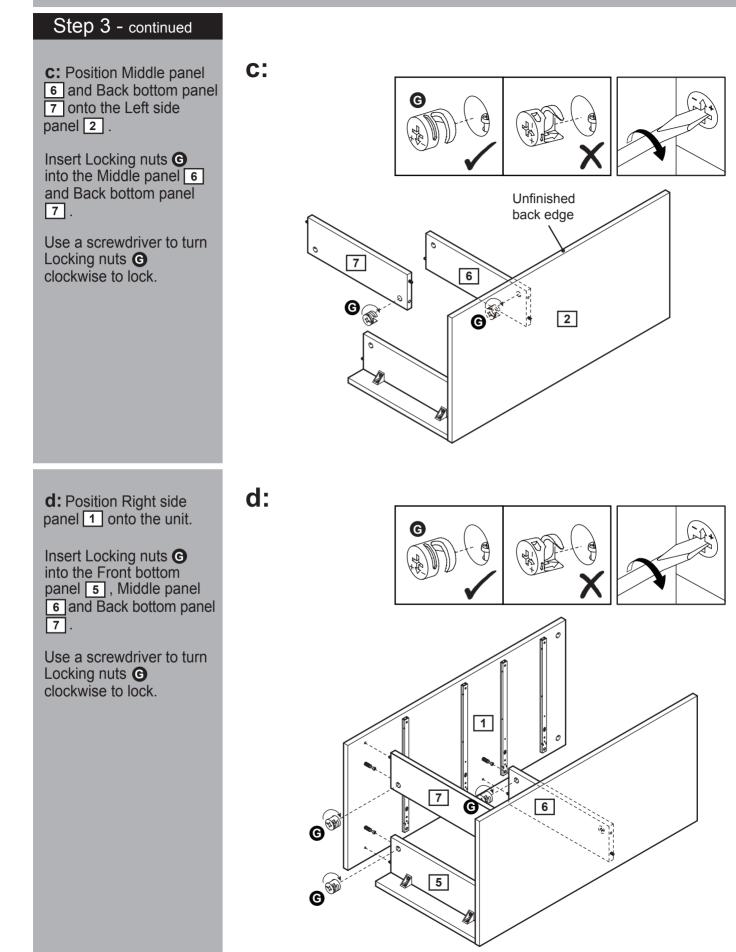

a:

b:

Step 4

Attaching top panel

 
a: Screw Locking pins **D** into the Top panel **4**.


Note: Insert Locking pins as far as shown. **Do not over tighten.**

b: Carefully locate the Top panel 4 onto the unit.

Insert 4 Locking nuts **G** into the unit.

Use a screwdriver to turn Locking nuts Colockwise to lock.



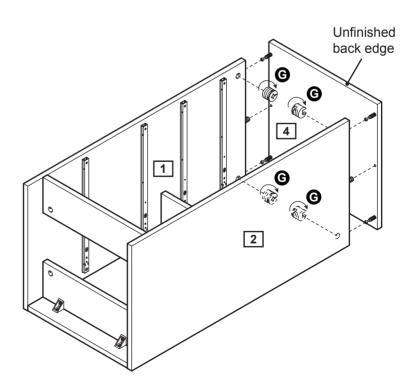


Step 5

Fixing back panel

Attach Back panel 3 onto the unit using Nails • .



Important: The unit **MUST** be 'square' when back is attached.

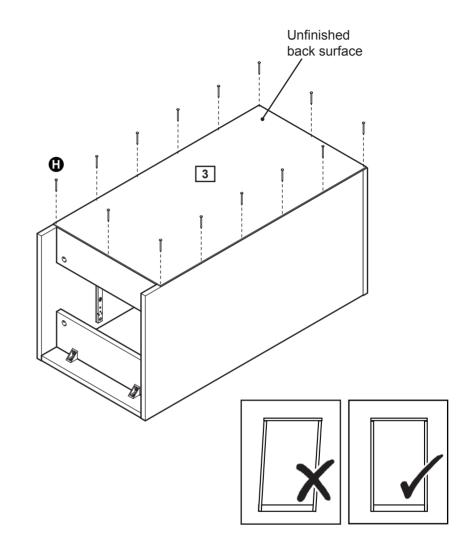

Step 6


Small drawer assembly

 
a:


a: Screw Locking pins **D** into the Small drawer front **9**.


Note: Insert Locking pins as far as shown. **Do not over tighten.**


Continued on next page.

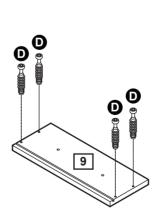



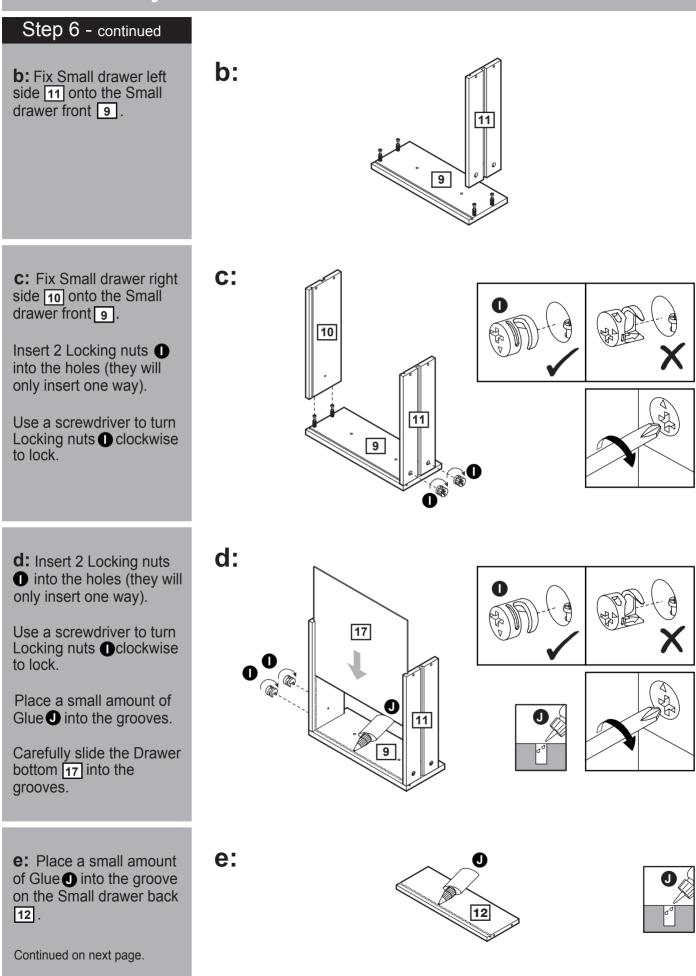

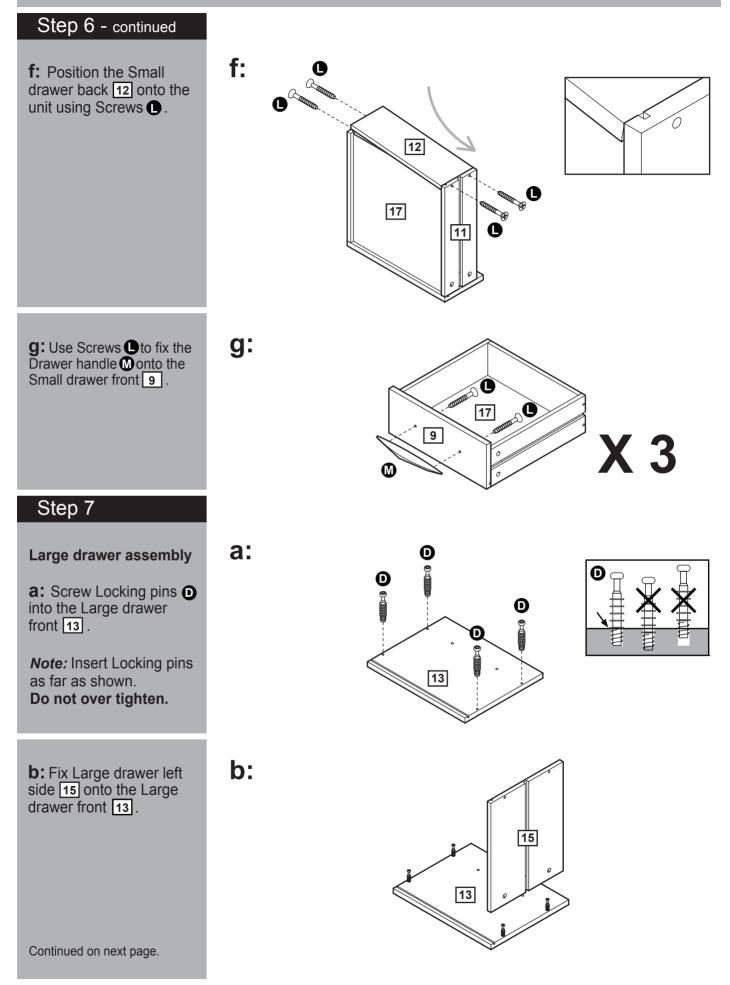


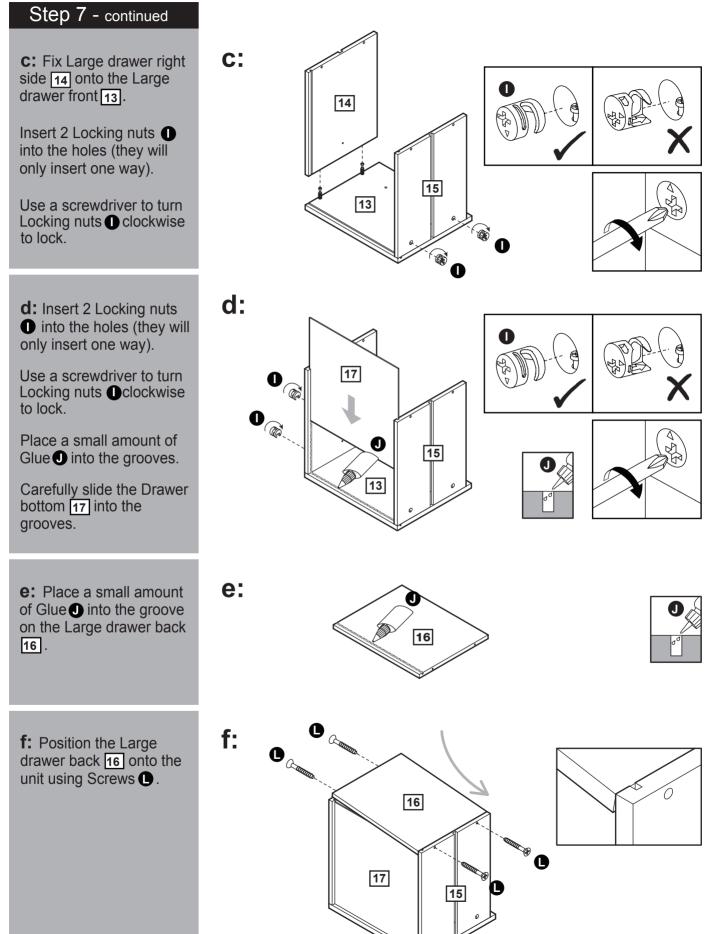



Step 7 - continued

g: Use Screws to fix the Handle onto the Large drawer front 13.

  Position Plastic filer supports (C) onto the Drawer side panels.

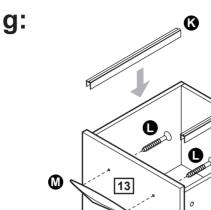





Step 8

Inserting drawers


With help, carefully stand unit upright.



Warning: The unit is heavy. Lift with care.

a: Pull runners out. Slide drawers onto runners so they butt up against back of drawer front.

b: Fix through drawer sides into runners using screws **N**.

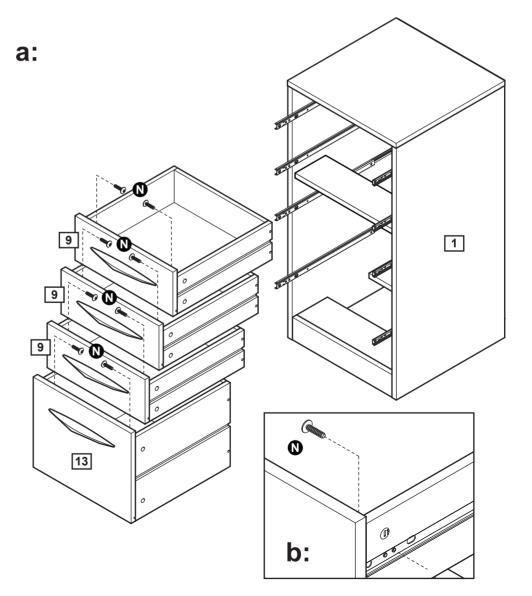

Step 9

Fixing to wall

It is recommended that the unit is fixed to a wall.

Fix Wall strap **O** to back of top panel using Screw **O**.

With help, move the unit into position.



Warning: The unit is heaty. Lift with care.

Mark fixing hole on wall and remove unit.


Drill a hole and insert Wall pulg **P**.



Warning: Before drilli

Before drilling, check wall for hidden pipes and cables.

Reposition the unit and fix wall strap using Screw ().

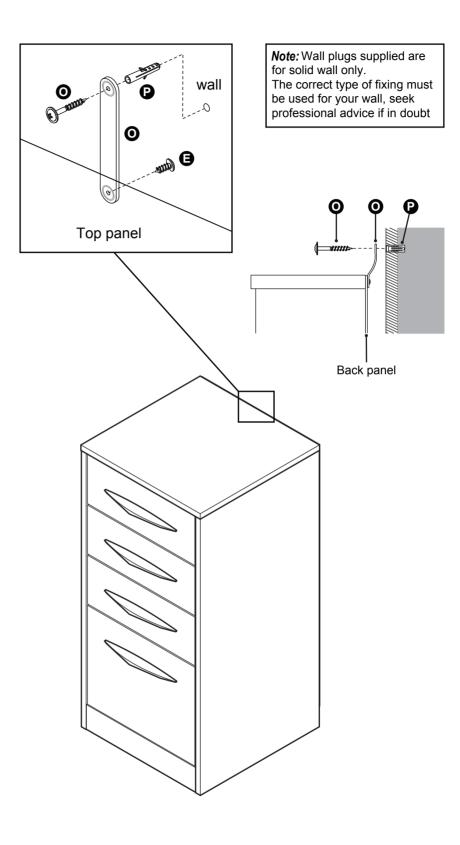

Assembly is complete.

If you need help or have damaged or missing parts, call the **Customer Helpline:** Argos = 0345 6400800

A Guide to - Wall Mounting & Fixings

Important note:

If plastic wall plugs are supplied with your product:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using incorrect fixings is the responsibility of the installer.




Important: When drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.

Hints:


- **1: General rule:** Always use a larger screw and wall plug if you are not sure.
- **2:** Ensure you use the recommended drill bit to match the wall plug and hole size.
- **3:** Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
- **4:** Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
- **5:** Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls

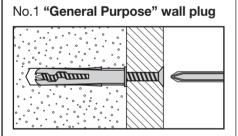

Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

 
No.2 "Plasterboard" wall plug



For use when attaching light loads on to plasterboard partitions.




 You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.



For use with plasterboard partitions or hollow wooden doors.

 
No.4 "Cavity Fixing-Heavy Duty" wall plug



For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.


Safety: Always check the fitting and location to ensure your safety in and around the home.

 No.5 "Hammer Fixing" wall plug



For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

 No.6 "Shield Anchor" wall plug Heavy loads



For use with heavier loads such as TV & HiFi speakers and satelite dishes etc.

Fitting: From time to time check the fitting to ensure the wall plugs or screws do not become loose.