FITTING INSTRUCTIONS

WATER PRESSURE

These taps are suitable for use at all supply pressures.

If the taps are installed at low pressure (tank fed), then the minimum height from the outlet of the nozzle to the underside of the cold tank should be 1.8 metres to ensure adequate performance.

These taps should be installed in compliance with water regulations, For further details contact your local water authority.

INSTALLATION

NOTE: If you are not entirely sure of how to connect and fit the taps please consult a qualified plumber.


- Identify all components and check for completeness, particularly before arranging fitting.
- Install the taps into the basin, bath or sink, using the washers and backnuts provided.
- 3. Connect the hot and cold water supplies.
- 4. Turn on the water supplies. Open both taps letting the water flow for a few minutes to flush the system.
- 5. Check all joints and connections for leaks.
- 6. See below for aftercare instructions.

MAINTAINENCE

If the fitting begins to drip

- 1. Turn off the water supply.
- 2. Remove fitting handle and valve.
- 3. Carefully clean seating and rubber washer.
- 4. Replace valve, handle and turn on water supply.

Basin, Bath And Sink Taps

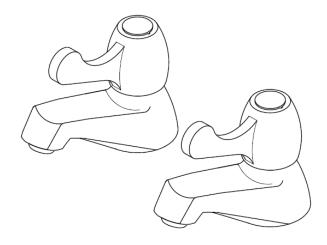

C - COLD H - HOT

AFTERCARE INSTRUCTIONS

Your fitting has a high quality finish and should be treated with care to preserve the visible surfaces.

All surface finishes will wear if not cleaned correctly, the only safe way To clean your tap is to wipe with a soft damp cloth. Stains can be removed using washing up liquid. All bath cleaning powders and liquids will damage the surface of your fitting even the non-scratch cleaners.