


4 IN 1 MULTI GAME TABLE

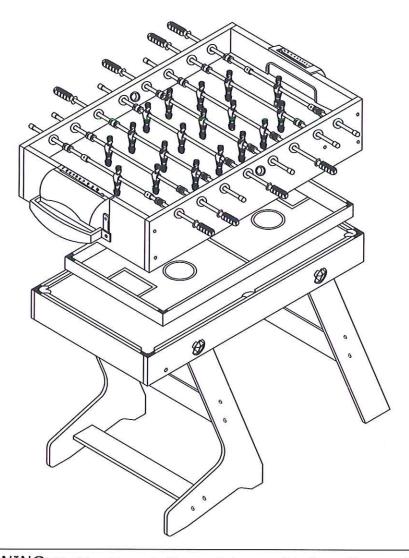

<u>/i\</u>

WARNING: Choking Hazard--Toy contains small balls and/or small parts.Not for children under 3 years.

- -Caution! Adult assembly required.
- -Sharp point on screws; unpack and assemble with care. Keep small parts and polybag away from children during & after assembly. You need a wrench and screwdriver (not included) to assemble.

IMPORTANT!

Please Keep Your Instructions. Before attempting assembly, please read through this instruction book to familiarize yourself with all the parts and assembly steps. Please refer to the Parts List below and be sure that all parts have been included.




Item: HP03102


PARTS LIST

	T	1	1
#1	#2	#3	#4
		5	<i>Q</i>
Table bolt 4 pieces	16mm Washer 4 pieces	Safety pin 4 pieces	35mm Round head screw 12 pieces
#5	#6	#7	#8
(Januar)	(d)111111111111111111111111111111111111		
13mm Round head screw 8 pieces	38mm Round head screw 12 pieces	Triangle 1 piece	Net post 2 pieces
#9	#10	#11	#12
			6000000
Allen key 1 piece	Playfield support brace 2 pieces	End panel 2 pieces	Side panel 2 pieces
#13 Playing field 1 piece	#14 Pool table 1 piece	#15 LegA/B 2 pieces	#16 LegA/B 2 pieces
)
#17	#18	#19 A	#20
Hockey/Table tennis 1 piece	Leg panel 3 pieces	Goal 2 pieces	Football 2 pieces


PARTS LIST

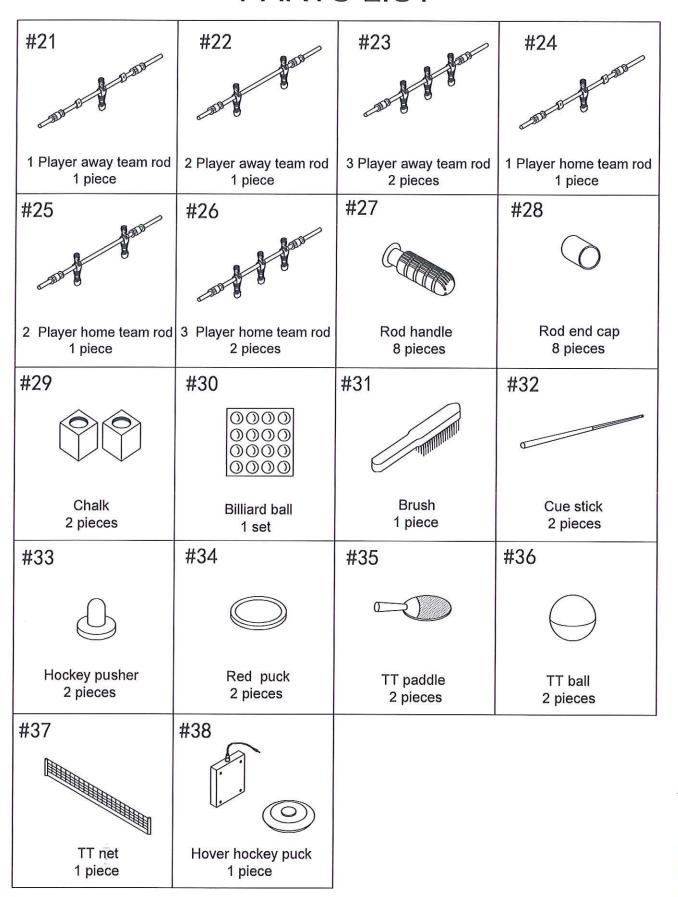


Step 1-Insert Player Rods #21 through #26 (follow order shown) into side panel #12.

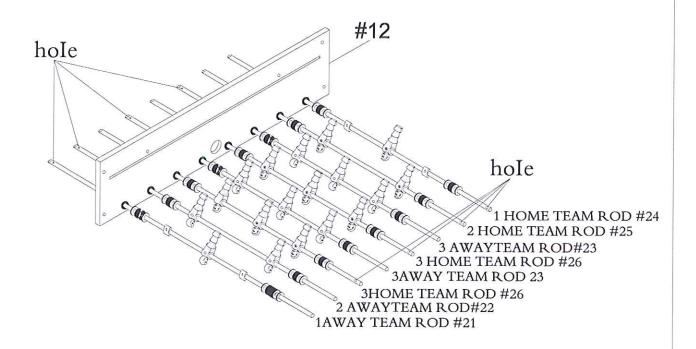


Step 2-Place opposite side panel #12 over the rods. Insert the playing field #13(upside down) into side panels.

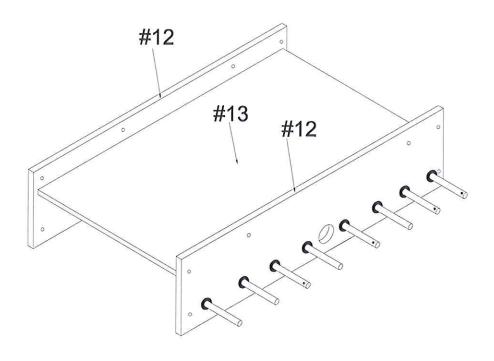


Step 3-Attach the two end panels #11 to the side panels #12 using screw #4 and screw driver as shown in figure 3.Remember the groove of end panel #11 must face inward toward the playfield.

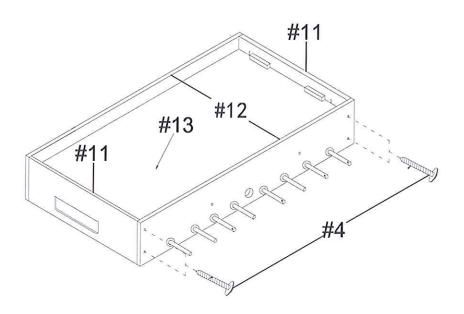


Step 4-Attach field support braces #10 to the side panels #12 using screw #4 and screw driver.

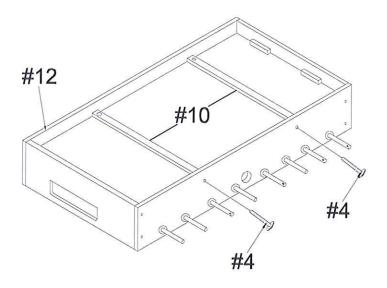


Step 5 - Carefully turn the table top right way up and attach Goal #19A/B to both end panels using screw5. Slide the handles #27 onto the end of the rods . Slide the end caps #28 onto the opposite end of the rods.

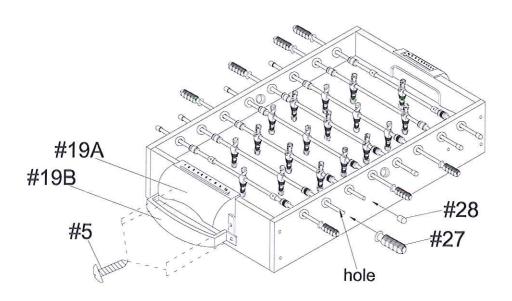


Step 6 - Turn the pre-assembled pool table #14 over and attach the leg #15 and #16 using table bolt #1 and washer #2

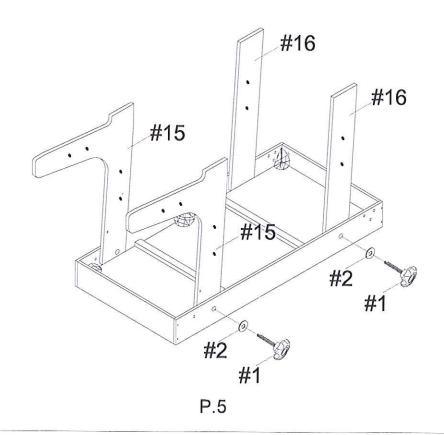


Step 7 - Attach #18 leg panel to legs using screw #6

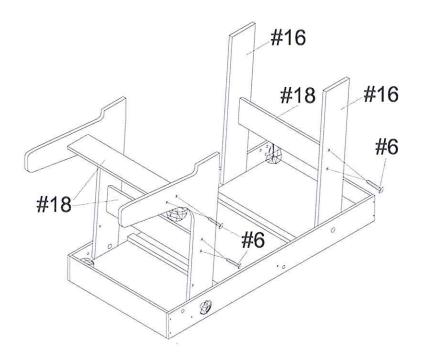

Step 8 - Carefully screw the safety pins into the table body the yellow circles on the side of the pool table indicate where the safety pins should be attached.

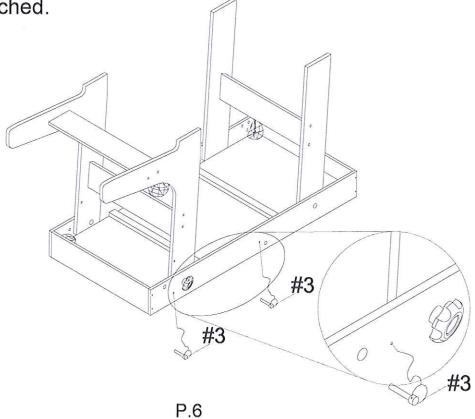

Step 9 - Once the table is built, carefully turn the table upright (use two adults for this step)

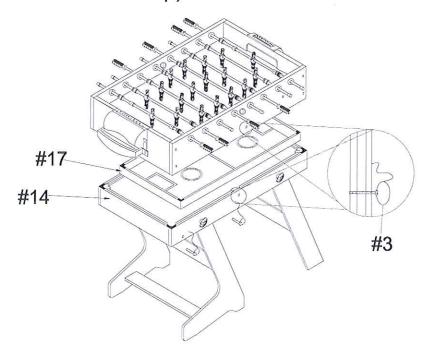


Attach the table football unit to the main body by placing the safety pin (#3) into and through the hole in the football table unit as shown in the image.

Step 10 -

When raising the table first ensure that the safety pin in the centre of the table are secured through the hole in the football table unit the lightly unscrew the table bolts #1 on both sides of the table.

Using at least two adults carefully raise the table towards its standing position. Once done insert the safety pins #3 located on the edge of the unit into the hole between the angled legs and the main table frame.

Carefully tighten table bolts on the angled legs and loosen the table bolts on the straight legs so that the legs can be folded against the table. Whenever the table is raised or lowered be sure to use a minimum of two adults to perform this operation. Please ensure that the space around the table is clear and free of obstructions and once the operation is completed please secure all bolts and screws again. Please take care at all times when the table is in the raised position

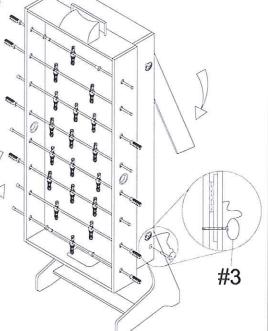



Directions for use of the Hover Hockey,

- 1. Carefully remove the battery compartment cover using a screw driver.
- 2. Insert batteries, ensuring correct polarity.
- 3. Replace and secure cover by tightening the screw.







To charge the Hover Hockey puck, connect with the battery box. Normal charging time is around 30min.

Please ensure you charge the Hover Hockey Puck for a minimum of 1 hour for the first initial charge.

Battery warning:

- 1. Should not connect to more than the recommended number of battery
- 2. Non-rechargeable batteries are not to be recharged
- 3. Rechargeable batteries are not to be charged under adult supervision
- 4. Rechargeable batteries are to be removed from the toy before being charged
- 5. Different types of batteries or new and used batteries are not to be mixed
- 6. Batteries are to be inserted with the correct polarity
- 7. Exhausted batteries are to be removed from the toy
- 8. The supply terminals are not to be short-circuited.