
# Oakington X Leg Glass Coffee Table

Assembly Instructions - Please keep for future reference

239/2077

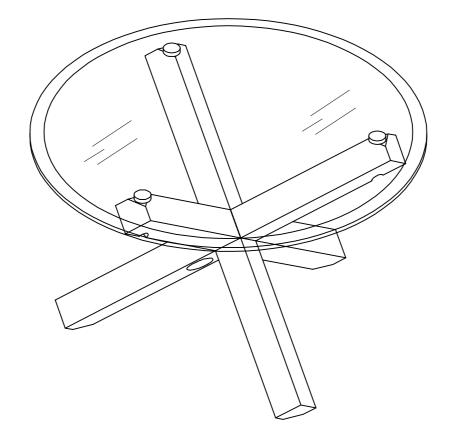



### Dimensions

Width - 70 cm Depth - 70 cm Height - 45 cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the Customer Helpline: 0345 640 0800

## Safety and Care Advice

### Important - Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their group.

• Keep children and animals away from the work area, small parts could choke if swallowed. • Do not stand on the product, this could cause damage.

- Assemble the item as close to its final position (in the same room) as possible.
- Make sure you have enough space to layout the parts before starting.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.
- Dispose of all packaging carefully and responsibly.

#### Solid Wood

 $\cdot$  This product has been finished using natural materials. As a living material, you may notice some variation in the grain and colour shade between the different components.

 $\cdot$  Unlike a synthetic or man-made material which has a uniform finish, a feature of natural wood is its variation in grain and colour. We wish to reassure you that this is quite normal and is not the result of any manufacturing fault.

 $\cdot\,$  Where sheets of wood are joined together, a line may be detected. Again, this is normal and is not an imperfection.

#### Care and maintenance

• Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.


• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

## **Components - Parts**

If you have damaged or missing components, call the customer helpline: 0345 640 0800

### Please check you have all the parts listed below

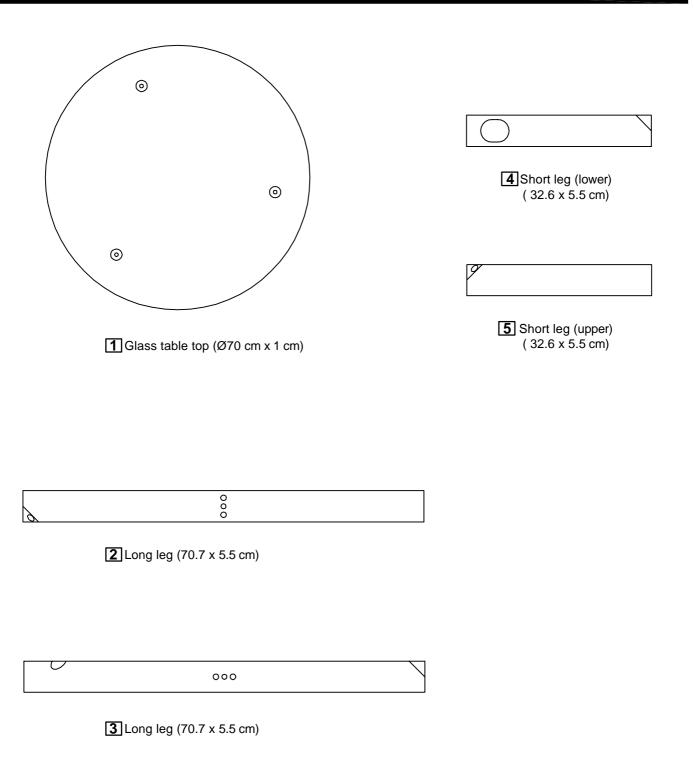

## **Components - Fittings**

### Please check you have all the fittings listed below

*Note:* The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

0			©
	Ø10x30 Wooden Dowel x 4	M8x110mm Long Threaded Rod x 1	M8 Hex Nut x 1
O	$\bigcirc$		
	Spring Washer x 1	Washer x 1	Curved Washer x 1
G			
	Spanner x 1	M8x40mm Short Threaded Rod x 3	M8x18 mm Female nut x 3
ß			
	Allen key M4 x 1		

**Tools required** 

Ruler/tape measure

### Ruler - Use this ruler to help correctly identify the bolts


0 5 10 15 20 25 30 35 40 45 50 55 60 65 70 75 80 85 90 95 100 105 110 115 120 125 130 135 140 145 150 155 160 165 170


### Step 1

### Preparing short legs.

Insert wood dowels (A) into the ends of short legs (4) and (5).


Screw long threaded rod into the central hole of upper short leg 5

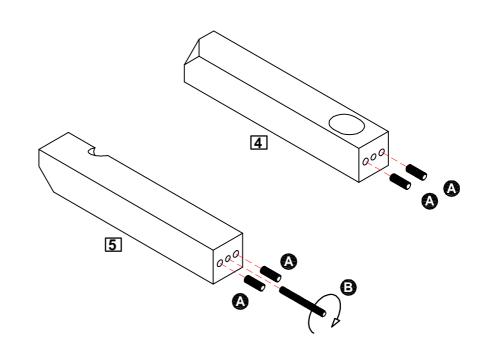

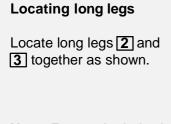

Step 2

Note: Ensure the holes in one end of legs **2** and **3** are located on the same side as shown.

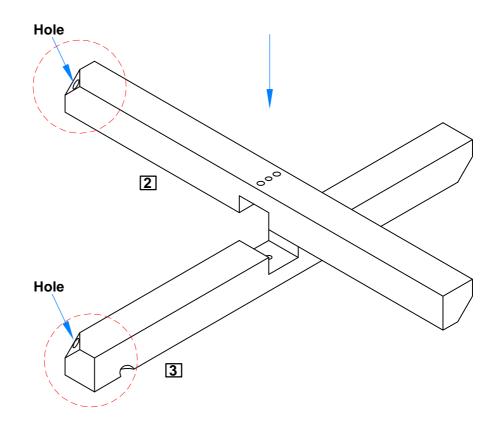

### Step 3


#### Assembling leg frame

Assemble the upper and lower short legs **4** and **5** on either side of the long legs as shown.

**Note:** Ensure the fixing holes are located as shown.

Secure the assembly using fixings ( ) ( ) ( ) and ( )

**Note:** Do not fully tighten at this stage!

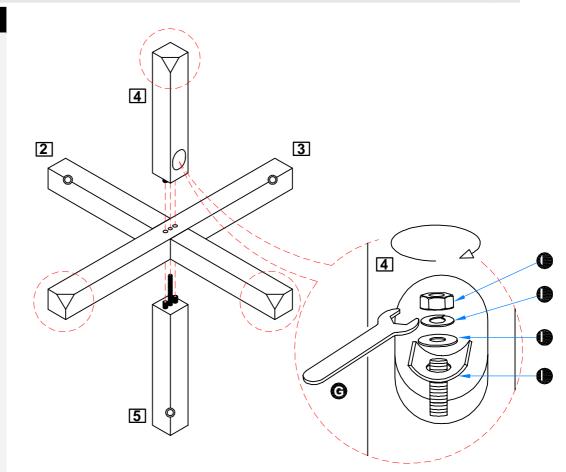


### Step 4

#### Preparing glass top.

With help, carefully place glass top **1** upside down onto a clean flat surface.


Screw short threaded rods () into the metal discs on the underside of the glass top.

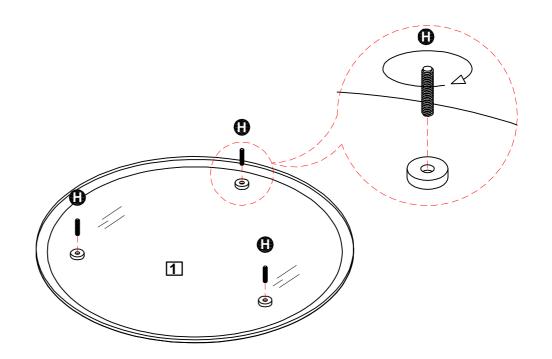


### Step 5

Assembling leg frame onto glass top.

a: With help, carefully align the leg frame onto glass top 1

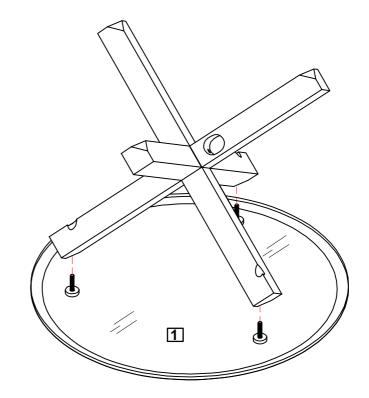


**b**: Secure using female nuts

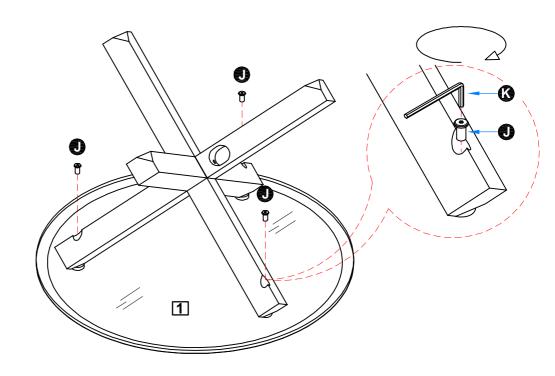

### Step 6

### **Final tightening**


Fully tighten nut **G** inside lower short leg **4** 

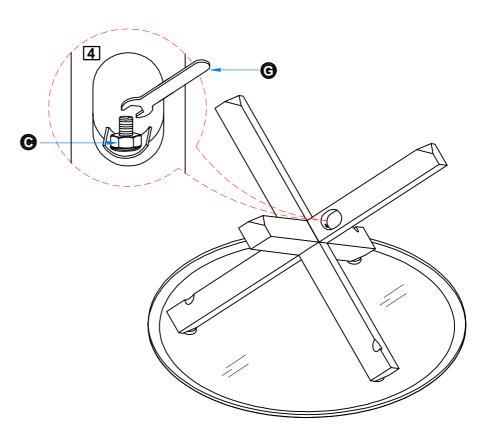

### Step 7

#### Turn upright

With help, carefully turn the table upright.

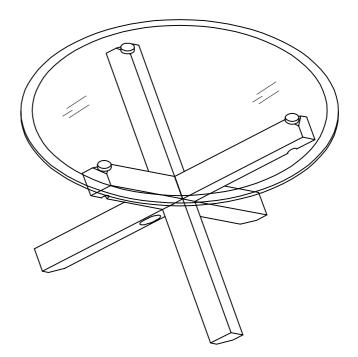

#### Assembly is complete

If you need help or have damaged or missing parts, call the **Customer Helpline: 0345 640 0800** Home Retail Group, 489-499 Avebury Boulevard, Saxon Gate West. Central Milton Keynes MK9 2NW