 


COOKWORKS

Instruction Manual - Please keep for future reference

Cookworks Table Top Mini Oven

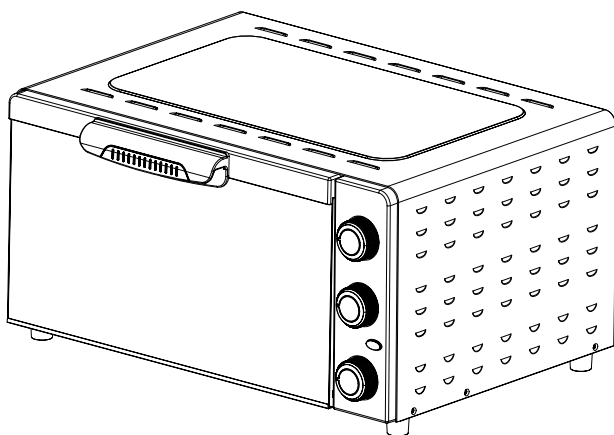

MG18CHV

IMPORTANT SAFETY INSTRUCTIONS



Read all instructions before use and keep for future reference.



WARNING

- Misuse or modification of this appliance may result in breakdown or injury.
- To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.



IMPORTANT INFORMATION

- The appliance is intended for household use only.
- The appliance should always be turned to OFF before plugging or unplugging from socket. Never yank cord to disconnect from socket; instead, grasp plug and pull to disconnect.

IMPORTANT SAFETY INSTRUCTIONS



Read all instructions before use and keep for future reference.

- Check that the voltage on the rating plate of your product corresponds with your local electricity supply which must be A.C. (Alternating Current).
- If the mains sockets in your home are not suitable for the plug supplied with this product, check with a qualified electrician for replacement.



FOR OPTIMUM PERFORMANCE

- Do not use in environments which are extremely hot, cold, dusty or humid.
- Keep the unit free from dust and clean with a dry cloth.
- Do not use in areas exposed to direct sunlight or where it can become extremely hot.
- Keep away from sources of strong magnetism - such as televisions or speakers.
- Avoid placement where there is a lot of movement, vibration or on an unstable surface.

IMPORTANT SAFETY INSTRUCTIONS



Read all instructions before use and keep for future reference.



FOR SAFETY

DO NOT:

- Attempt to disassemble this unit or carry out repairs.
- Attempt to modify the unit in any way.
- Make sure that foreign objects do not get inside the unit.
- Place naked flame sources - such as lit candles on or near the unit.
- Place objects filled with liquids - such as vases, on or next to the unit.
- Cover the unit - allow the unit to be well ventilated.
- Drop the unit or subject it to strong shocks.
- Use parts not recommended by the manufacturer.
- Use if any parts damaged - replace before further use.
- Use with programmer, timer or any other device that switches it on automatically.

IMPORTANT SAFETY INSTRUCTIONS



Read all instructions before use and keep for future reference.



CHILDREN

- Children do not always understand the dangers associated with operating electrical appliances. Never allow children to use this appliance.
- Children should be supervised to ensure that they do not play with the appliance.



POWER SUPPLY

- If the unit uses a mains supply, ensure that the plug is securely inserted into the mains socket, and it is easily accessible.
- Protect the power lead from sharp objects, excessive heat and damp or wet locations. Check the power lead periodically, and replace if damaged.
- Check that the voltage on the rating plate of your product corresponds with your local electricity supply which must be A.C. (Alternating Current).
- Any repairs should only be carried out by a fully qualified electrician or an authorised service agent.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

IMPORTANT SAFETY INSTRUCTIONS



Read all instructions before use and keep for future reference.



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK), THERE ARE NO USER SERVICEABLE PARTS INSIDE, REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



ATTENTION : Your oven should be cleaned regularly to prevent grease and food particles from building up on the inside surface. The accumulated grease / food particles may cause a fire hazard.



SPECIFIC SAFETY INSTRUCTIONS

- Do not touch hot surfaces. Use handle or knobs. The outer surfaces may become hot when the oven is on.
- To protect against electric shock, do not immerse cord, plug, or any parts of the oven in water or other liquids.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas hob, electric burner, or in a heated oven, or in a microwave oven.

IMPORTANT SAFETY INSTRUCTIONS



Read all instructions before use and keep for future reference.

- The use of accessory or attachments other than supplied may cause damages and injuries.
- When operating the oven, keep at least 10cm of space on all sides of the oven to allow for adequate air circulation.
- Unplug from the mains when not in use, or before cleaning. Allow it to cool before replacing parts or before cleaning.
- Do not cover CRUMB TRAY or any part of the oven with metal foil. This may cause the oven to overheat.
- Use extreme caution when removing tray or disposing of hot grease or other hot liquids.
- Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
- Oversized foods or non-metal utensils must not be inserted into the oven as they may create a fire or risk of electric shock.
- Extreme caution should be exercised when using containers constructed of anything other than metal or glass.

IMPORTANT SAFETY INSTRUCTIONS



Read all instructions before use and keep for future reference.

- Do not place any of the following materials in the oven: cardboard, plastic, paper or any other flammable materials.
- Do not store any materials, other than manufacturer's recommended accessories in this oven.
- Always wear protective, insulated oven mitts when inserting or removing items from the hot oven.
- Do not use outdoors.
- The glass Door cannot support goods in the open position.
- To reduce the risk of fire or shock, do not operate unit unless the removable top tray is in place.
- If the electric circuit is overloaded with other appliances, this appliance may not operate properly. The Toaster Oven should be operated on a separate electrical circuit from other operating appliances.
- The temperature of accessible surfaces may be high when the appliance is operating.

IMPORTANT SAFETY INSTRUCTIONS



Read all instructions before use and keep for future reference.

- A fire may occur if the appliance is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation. Do not put any items on top of the appliance when in operation.
- All containers placed inside the oven must not be airtight. Also, they need to have enough room to allow for expansion of fluids.
- Clean this appliance regularly as build up of grease may cause a fire. Make sure that this appliance is not placed near curtains, any drapery, or other flammable material.
- In order to prevent accidental burns, always use the handle and knobs to operate this appliance.
- The temperature of the door or outer surface may be high when the appliance operating
- The oven should be cleaned regularly and any food deposits removed. Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.

IMPORTANT SAFETY INSTRUCTIONS




Read all instructions before use and keep for future reference.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities. Or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- The appliance must be placed against a wall when grill is in use.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Keep the appliance and its cord out of reach of children less than 8 years.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

IMPORTANT SAFETY INSTRUCTIONS



Read all instructions before use and keep for future reference.


- The appliances are not intended to be operated by means of an external timer or separate remote-control system.
- The temperature of accessible surfaces may be high when the appliance is operating .
- The rear surface of appliances shall be placed against a wall.
- This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - by clients in hotels, motels and other residential type environments;
 - farmhouses;
 - bed and breakfast type environments.
- **WARNING:** This appliance includes a heating function. Surfaces, other than the functional surfaces may develop high temperatures. Since temperatures are perceived differently by different people, this device should be used with **CAUTION**. Hold the appliance exclusively to grip surfaces intended to hold and use such heat protection measures as heat protection Gloves or pot holders. Areas which are not intended to grips must be given sufficient time to cool.

CONTENTS

Know Your Machine	12
Operation	13
Before Using Your Oven.....	13
About Control Settings.....	15
How To Use The Oven.....	17
Toasting	18
Broiling/ Grilling	20
Baking	21
Care and Cleaning	23
Cleaning removable crumb tray	23
Specifications	24

KNOW YOUR MACHINE




Mini Oven

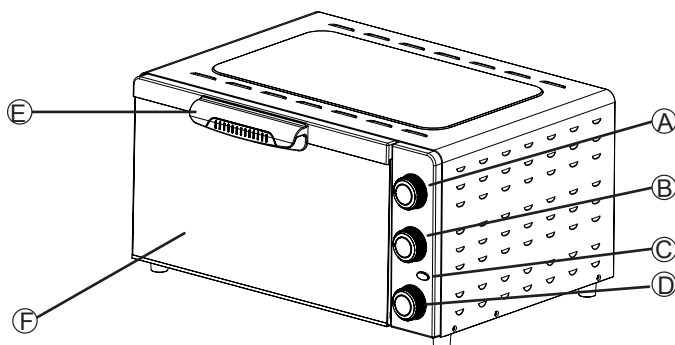

Ⓒ 1 x Grill Rack

Ⓗ 1 x Food Tray

   Ⓘ 1 x Crumb Tray
(packed inside oven)

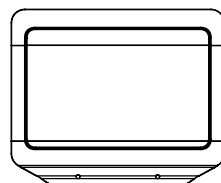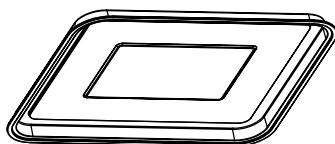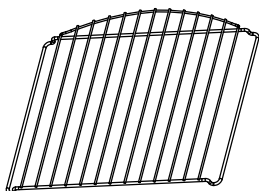

- Ⓐ Temperature Knob
- Ⓑ Function Knob
- Ⓒ Indicator Light
- Ⓓ Timer Knob
- Ⓔ Door Handle
- Ⓕ Oven Door
- Ⓖ Grill Rack
- Ⓗ Food Tray
- Ⓘ Crumb Tray

OPERATION



IMPORTANT:

Please read the important safety instructions before use.

BEFORE USING YOUR OVEN

- Before using your oven for the first time, be sure to:

1. Make sure oven is unplugged and Timer Knob ① is in the OFF position.

See fig. 1.


2. Remove all racks and trays. Wash in hot soapy water or in dishwasher.
3. Thoroughly dry all accessories and re-assemble in oven.
4. Place Oven on a flat counter or other stable surface.

NOTE: Do not operate on the same circuit with another appliance.

5. Position the Oven so that it is at least 10cm from any surrounding objects. Ensure that nothing has been placed on top of the Oven. Plug the Power Cord into the mains socket.

NOTE: Make sure your local voltage is 230V/240V~, 50Hz.

fig. 1

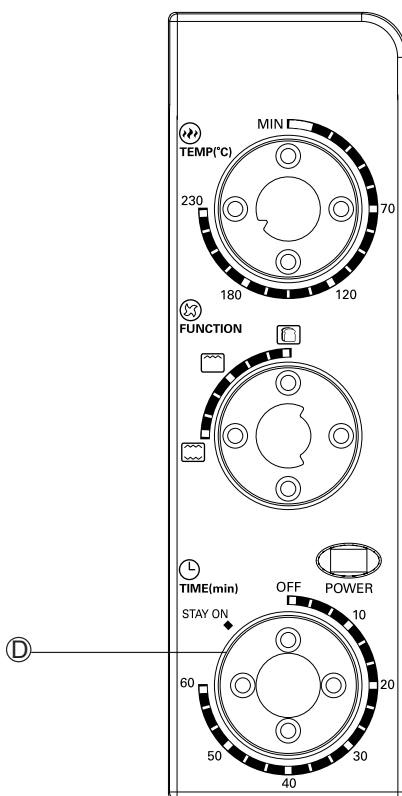


OPERATION

6. After re-assembling your oven, turn the Temperature Knob **A** to 230°C and turn the Timer Knob **D** to 15 minutes to eliminate any oil coatings on parts after production.
See fig. 2.

NOTE: The oven may smoke during this process. This is normal for a new Oven and will not last more than 15 minutes.

WARNING: Foils used to cover items during cooking should not be allowed to come into direct contact with the elements.

fig. 2

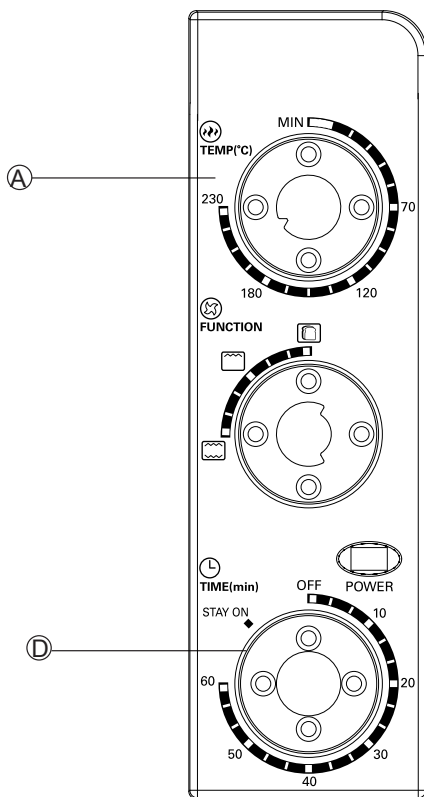

OPERATION

ABOUT CONTROL SETTINGS

Time Setting

- **Timer Range 0-60 Minutes:** The Timer can be set up to 60 minutes. The oven will not turn "on" without the timer being set. When the Timer Knob (D) is in the "off" position, the oven will not operate. To set the time, turn the knob to the desired time. Indicator Light (C) is lit only when Time has been set. When the Timer reaches the off position, a bell will sound and the oven will switch off automatically.

IMPORTANT NOTE:

- **Stay On Time** - If you have not finished cooking you can set the Time Knob (D) to "Stay On" and the oven will stay on. It will **Not Turn Off** automatically. To turn off you need to manually turn the Timer Knob (D) to the off position until you hear the bell ring. **See fig. 3.**

WARNING: Close supervision is necessary for the stay on setting.


Adjusting Time

- The Timer can be changed during cooking. Adjust the timer to the desired time and continue cooking.

Temperature Setting

- Turn the Temperature Knob (A) to the desired temperature setting. The temperature can be set from 70°C to 230°C. **See fig. 3.**

fig. 3

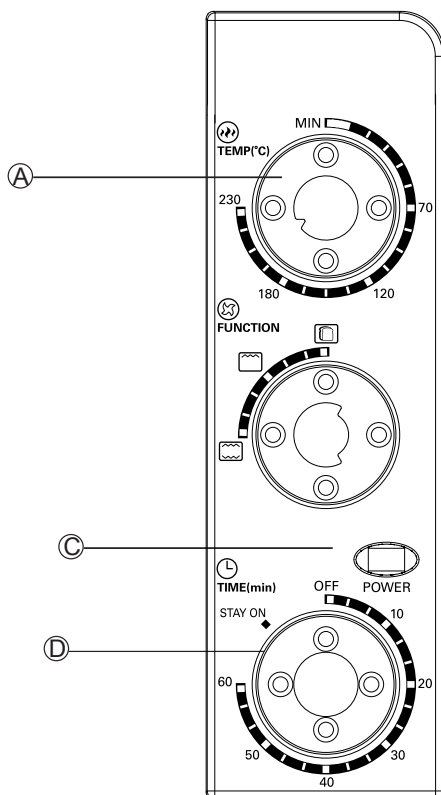


OPERATION

Indicator Light

- The Indicator Light ③ will light up when the oven is operating. When the Timer Knob ④ is in the "OFF" position, the Indicator Light ③ will not be lit.

See fig. 4.

fig. 4

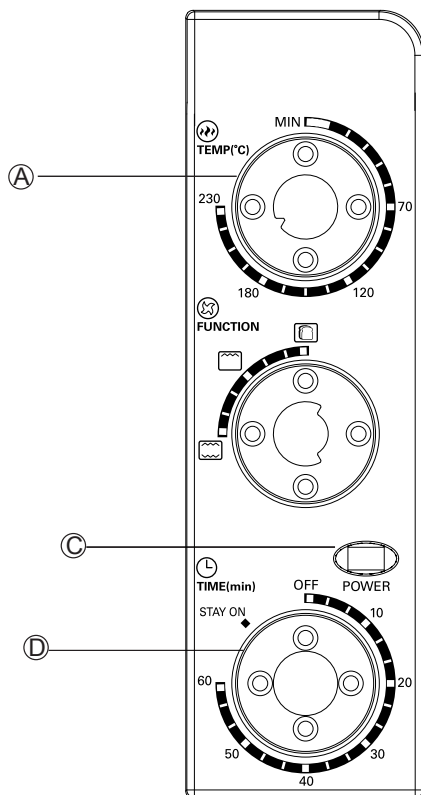

OPERATION

HOW TO USE THE OVEN

CAUTION: The oven surfaces will be hot during and after use.

General Instructions

1. Place the Grill Rack **G** in position that will accommodate the height of the food to be cooked.

See fig. 5.

2. Place the food on the Rack. Make sure that you always use an ovenproof container in the oven.

NOTE: Never use plastic or cardboard containers in the Oven.

NOTE: Never use glass or ceramic pans or lids, Which are not designed for oven.

NOTE: DO NOT let juices run to the bottom of the oven. Use the oven tray **H** when cooking. See fig 6.

3. Set the temperature as suggested by the recipe or as desired.
4. Securely shut the door and set the cooking time to begin operating the oven.

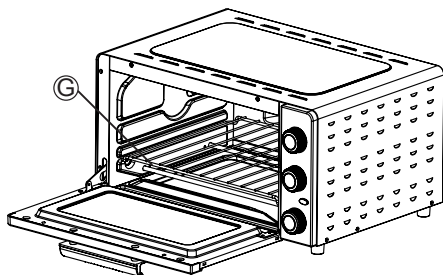


fig. 5





 


fig. 6

OPERATION

HOW TO USE

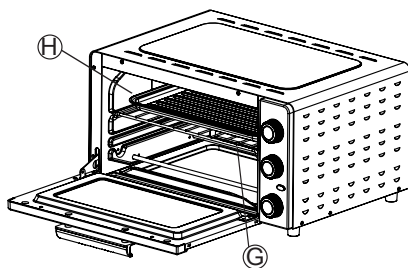Toasting

1. Set the function knob to "". Rotate the temperature knob to desired temperature.
See fig. 7.
2. Open the Oven Door  and place sliced bread on the Grill Rack . Place one slice of bread in the center of Grill Rack , or 4 slices side by side.
See fig. 8.
3. **Time Setting** - Select the length of time to toast your chosen food. It is advisable to test the toasting function by starting at a short time, increasing it to suit your toasting preferences.

NOTE: To set the timer for 5 minutes or less, turn the timer to over 5 minutes, then back to your chosen time. This ensures that the timer is accurately set.

fig. 7

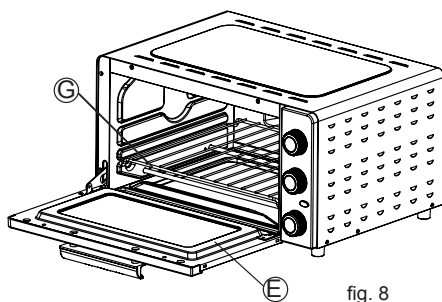
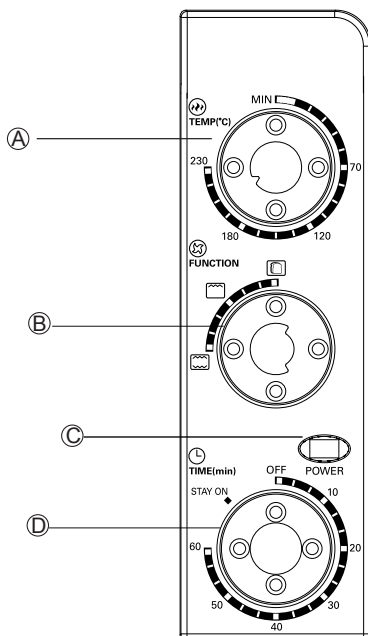


fig. 8

OPERATION

4. When toasting is finished the bell will ring and the electrical power is automatically turned off. To stop the cycle at any time, turn the Timer Knob ① anti-clockwise to "off" position and the bell will ring.


See fig. 9.

NOTE: The bread may catch fire if the toasting time is too long. Close supervision is necessary during toasting.

NOTE: Do not set the timer for long periods of time.


 

 
5. When set to Toast, both the heating elements will work.

fig. 9

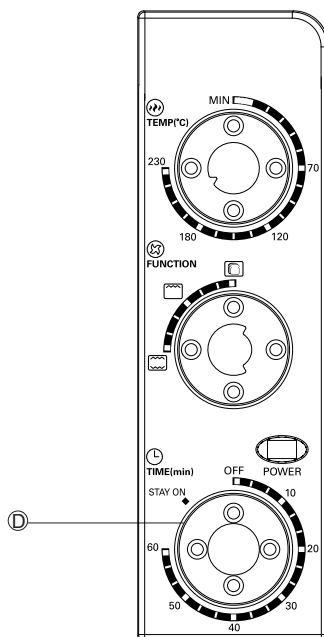


 
OPERATION

Broiling /Grilling

1. Slide grill rack  into the oven. Always put the food on the grill tray . When the broiling food like chicken wings or drumsticks which contain fat/oil, put the food on the grill tray and put it on the on the grill rack. **See fig. 10.**
2. Put the grill tray  on the grill rack .
3. When set to Broil, only top heating element will work.

NOTE: We always suggest preheating oven about 3-5 minutes before cooking the food.

4. Set the function knob to "  ". Rotate the temperature knob to desired temperature. **See fig. 11.**

5. Depending on the food you are cooking, set an appropriate time with the Timer Knob . If you need to cook food longer than 60 minutes, set the Timer to the Stay On setting. **See fig. 11.**

NOTE: When using the Stay On setting, you must manually stop the timer.

WARNING: Do not use this function unattended.

NOTE: Always check the food when using this setting to prevent overcooking. If required, turn the food over for even cooking.

NOTE: Food and tray will become very hot. Use suitable oven gloves to prevent burning to hands.

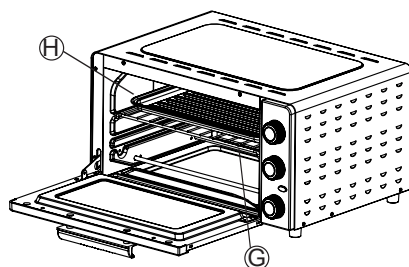


fig.10







 
fig. 11

OPERATION

 
Baking

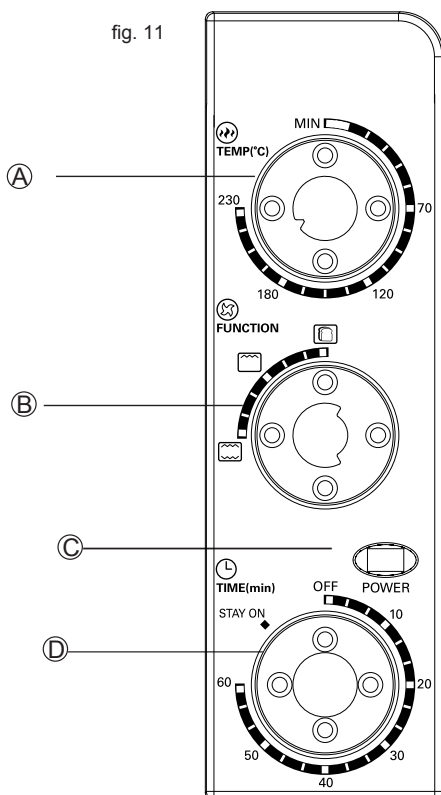1. Place food on the Food Tray  .
See fig. 12.
2. Slide the grill rack  into the oven, then put the grill tray  on the rack.
3. When setting in Bake, both top and bottom heating elements will work.

NOTE: We always suggest preheating oven 5 minutes at this setting before cooking the food.

4. Set the function knob to "  ".
Rotate the temperature knob to desired temperature.

See fig. 13.

5. Depending on the food you are cooking, set an appropriate time with the Timer Knob . If you need to cook food longer than 60 minutes, set the Timer to the Stay On setting.

See fig. 13.

NOTE: When using the Stay On setting, you must manually stop the timer. The food may catch fire if the baking time is too long

NOTE: Always check the food when using this setting to prevent overcooking. If required, turn the food over for even cooking.

NOTE: Food and tray will become very hot. Use suitable oven gloves to prevent burning to hands.


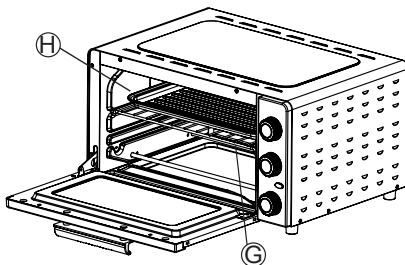


fig. 12

fig. 13

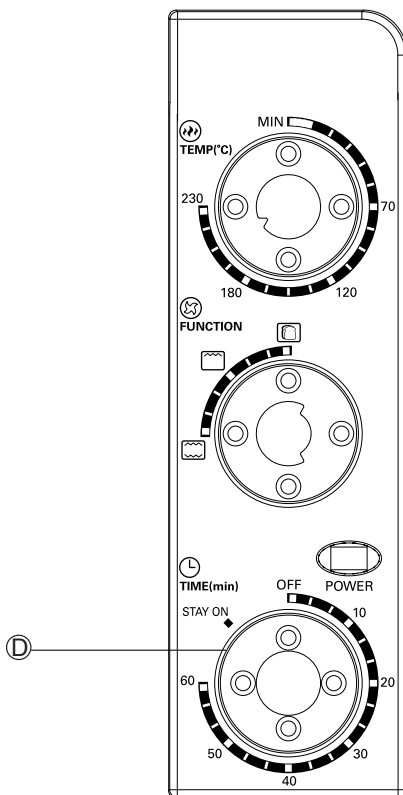

OPERATION

ABOUT RACK LEVELS

- There are 3 rack levels. The Food Tray or Grill Rack can be inserted on either level, depending on your cooking requirements.

See fig. 14.

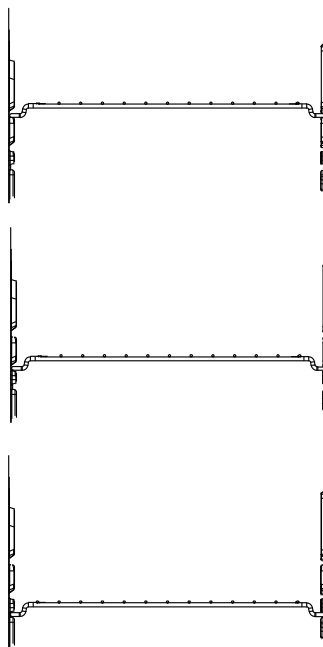


fig. 14

CARE AND CLEANING



NOTE:

Always Unplug and allow to cool before cleaning

CARE AND CLEANING

1. Before cleaning unplug the toaster oven and allow it to cool completely.
2. Wash all the attachments with mild, soapy water including the rack and the baking tray.
3. Do not use abrasive cleaners, scrubbing brushes and chemical cleaner as this will cause damage to the non-stick coating of baking tray.
4. Use a wet cloth to wipe the inner surfaces of the oven.
5. Clean the door by using a wet cloth and detergent or soap.
6. Never immerse the unit in water or other liquid.

TO STORE

- Unplug unit, allow to cool and clean before storing. Never wrap cord tightly around the appliance, use the Cord Storage area on the back of the oven. Do not pull on the cord where it enters the unit, as this could damage the cord.

CLEANING REMOVABLE

CRUMB TRAY

- Open the oven door, take out the crumb tray to clean with a wet cloth.
- Put it back after cleaning.

See fig. 16.

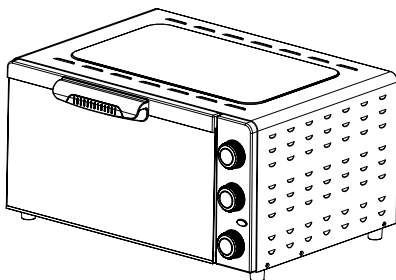 


fig. 15

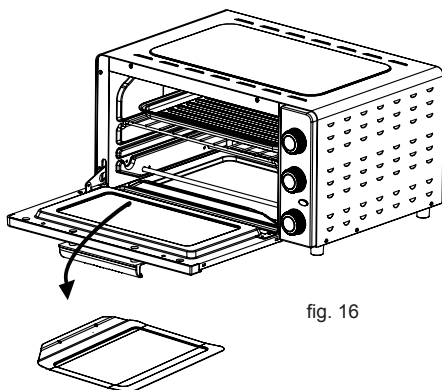 


fig. 16

SPECIFICATIONS

Technical Data

Model:	MG18CHV
Power Supply:	220-240V ~50Hz
Power Consumption:	1300W

Connecting to Power

Check that the voltage marked on the product corresponds with your supply voltage. This product is fitted with a 13A plug complying with BS1363. If this plug is unsuitable or needs to be replaced, please note the following :

Plug Replacement

If you need to replace the fitted plug.



WARNING :

Never connect live or neutral wires to the earth terminal of the plug. Only fit an approved 13 Amp BS1363/A plug and the correct rated fuse. If in doubt, consult a qualified electrician.

IMPORTANT

This unit is a Class 1 Appliance and must be fitted with an Earthed Plug fitted with a 13A fuse.

The wires in this mains lead are coloured as follows:


Yellow & Green-Earth

Blue-Neutral

Brown-Live

As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is Coloured Yellow & Green must be connected to the terminal which is marked E or coloured Yellow or Green. The wire which is coloured blue must be connected to the terminal which is marked with N or coloured blue. The wire which is coloured brown must be connected to the terminal which is marked L or coloured brown. Always ensure that the plug cord grip is fastened correctly. If a 13A (BS1363) fused plug is used it must be fitted with a 13A fuse conforming to BS1362 and be ASTA approved. If in doubt contact a qualified electrician.

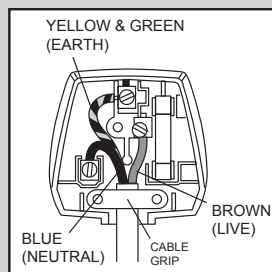

Correct Disposal of this product

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Guarantee



PRODUCT GUARANTEE

This product is guaranteed against manufacturing defects for a period of



Year

This product is guaranteed for twelve months from the date of original purchase.

Any defect that arises due to faulty materials or workmanship will either be replaced, refunded or repaired free of charge where possible during this period by the dealer from whom you purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in this manual.
- It must be used solely for domestic purpose.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- The manufacturer disclaims any liability for the incidental or consequential damages.
- The guarantee is in addition to, and does not diminish your statutory or legal rights.

Guarantor: Argos Ltd
489 - 499 Avebury Boulevard
Central Milton Keynes
MK9 2NW

