

# ***BaByliss®***



## **PRO 235 ELEGANCE**

**Model 2198MU**



## **PRO 235 ELEGANCE**

The new BaByliss Pro 235 Elegance straightener reaches 235°C salon temperature and is ready to use in just 15 seconds. The 25% longer nano-ceramic plates, straighten larger sections of hair at one time for fast results and give the ultimate smooth finish. With its Advanced Ceramics™ heating system, it has ultra fast heat recovery to maintain constant high heat during use.

### **FEATURES**

- 235°C salon temperature performance
- Ready to use in 15 seconds
- Advanced Ceramics™ heating system
- 3 temperature settings: 180°C, 200°C and 235°C
- 25% longer nano-ceramic plates
- Multi-voltage for worldwide use
- On/off button with indicator light
- Auto shut off
- 3m salon swivel cord
- Salon heat wrap
- 5 year guarantee

### **SAFETY CAUTIONS**

- This appliance should only be used as described within this instruction booklet. Please retain for reference.

### **IMPORTANT CHILD SAFETY**

**WARNING!** Polythene bags over a product or package may be dangerous. To avoid danger of suffocation, keep this wrapper away from babies and children. This bag is not a toy.

## **WARNING! THIS APPLIANCE GETS HOT!**

- ALWAYS keep out of reach of children (during and after use and whilst cooling).
- This appliance should not be used, cleaned or maintained by children.
- Always take extra care if used on children or near children.
- Do not use on very young children.

## **IMPORTANT SAFETY**

**WARNING!** Do not use this appliance near water contained in basins, bathtubs or other vessels.



- Do not use the appliance in the bathroom.
- Do not immerse the appliance in water or other liquids.
- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged, or if the appliance has been dropped. In the event of damage, contact the Conair Customer Care Line (refer to 'UK After Sales Service' section for further information).
- Do not use the appliance if the lead is damaged. In the event of damage, discontinue use immediately. If the lead is damaged it must be replaced by the manufacturer. Return the appliance to the Customer Care Centre (refer to 'UK After Sales Service' section for further information). No repair must be attempted by the consumer.
- Do not leave the appliance unattended when switched on or plugged in.
- During use do not place the appliance on any heat sensitive surface, even when using the heat mat

provided.

- Take care to avoid the hot surface of the appliance coming into direct contact with the skin, in particular the eyes, ears, face and neck.
- In the event of the appliance left switched on, the appliance will automatically shut off after 72 minutes. If you wish to continue using the appliance after this time, simply press the 'I' button to turn the power on.
- This appliance should not be used by adults whose reduced physical, sensory or mental capabilities, or whose lack of experience and knowledge, might cause a hazard, unless they have been correctly instructed to understand the safe use and hazards involved and are adequately supervised.
- After use, switch off and unplug the appliance. Immediately wrap the appliance in the heat mat provided and continue to keep out of the reach of children as it will remain hot for several minutes. Allow the appliance to fully cool before storing away
- Only use the salon heat wrap as described within the Information Booklet.
- After use, do not coil the lead around the appliance as this may cause damage. Instead, coil loosely by the side of the appliance.
- This appliance complies with the requirements of Directives 2004/108/EC (Electromagnetic Compatibility) and 2006/95/EC (Electrical Safety of Domestic Appliances).

**IMPORTANT!** The BaByliss Pro 235 Elegance Straightener has a high performance Advanced Ceramics™ heater and is designed to reach very high temperatures. If the maximum setting is too hot for your hair type then there are two lower temperature settings available to use.

**CAUTION!** This is a high heat appliance. Care must be taken to avoid the hot surfaces including the housing around the outside of the plates coming into direct contact with the skin, in particular the eyes, ears, face and neck.

## **INSTRUCTIONS FOR USE**

- Ensure hair is dry and combed through.
- Press the button marked 'I' to switch on.
- Slide the temperature switch to select the desired straightening temperature, using the symbols shown as a guide:
  - = 180°C
  - = 200°C
  - = 235°C
- If you have delicate, fine or coloured hair, use the lower heat setting. For thicker hair, use the higher heat setting.
- The red indicator light will blink until the straightener has reached the temperature setting requested.
- The green light will illuminate to indicate the appliance is on. The red indicator light will blink until the temperature setting selected has been reached. Once the temperature has been reached, the red light will remain illuminated.
- Separate a section of hair.
- Place the section of hair between the straightening plates, close to the roots.
- Hold the hair firmly between the straightening plates and slide down the length of the hair, from root to tip.
- Repeat as necessary.
- Allow the hair to cool before combing through.
- After use, press the button marked 'O' to switch off and unplug the appliance. Wrap the appliance in the salon heat wrap and allow to cool before storing away.

## **Salon Heat Wrap**

The straightener comes with a salon heat wrap for use during and after styling. During use do not place this appliance on any heat sensitive surface, even when using the heat mat provided. After use, switch off and unplug the appliance. Immediately wrap the appliance in the heat wrap provided and allow to fully cool down. Continue to keep it out of the reach of children as it will remain hot for several minutes.

**IMPORTANT:** The purple satin material is not heat resistant and the appliance should not be placed on this material whilst hot.

## **Auto Shut Off**

This appliance has an automatic shut off feature for added safety. If the appliance is switched on for more than 72 minutes continuously, then it will automatically switch off. If you wish to continue using the appliance after this time, simply press the 'I' button to turn the power on.

## **UK GUARANTEE**

This BaByliss appliance is guaranteed for consumer use for 5 years.

This guarantee covers defects under normal use from date of purchase and ceases to be valid in the event of alteration or repairs by unauthorised persons. If the appliance does not perform satisfactorily due to defects in materials or manufacture, it will be repaired or replaced through Conair UK After Sales Service. The Conair Group Ltd reserves the right to amend terms and specifications without prior notice.

This guarantee in no way affects your statutory rights.

## **UK AFTER SALES SERVICE**

For further advise on using the appliance, contact the Conair Customer Care Line on 0870 5 133191 (09:00 to 17:00 Monday to Friday) or email your enquiry to [ukinfo@conair.com](mailto:ukinfo@conair.com).


If you should need to return your appliance to us please send it to the following address:

Customer Care Centre  
Conair Logistics  
Unit 4  
Revolution Park  
Buckshaw Avenue  
Buckshaw Village  
Chorley  
PR7 7DW

Please enclose your name and address, together with a copy of proof of purchase and details of the fault.

## **SAFE DISPOSAL**



The  symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be handed to an appropriate collection point for the recycling of Electrical and Electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about the recycling of this product, please contact your local council office or your household waste disposal service.

## **UK WIRING INSTRUCTIONS**

The wires in the mains lead are coloured in accordance with the following code:

BLUE = NEUTRAL  
BROWN = LIVE

As the colours of the wire in the mains lead of this appliance may not correspond with the colour marking identifying the terminals on your plug, proceed as follows:

- The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N.
- The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L.
- Neither the BLUE nor BROWN wires should be connected to the terminal which is marked with the letter E or the  $\perp$  symbol.

This appliance is supplied fitted with a BS1363 mains plug and a BS1362 5A fuse. If this plug is removed from the appliance please ensure it is disposed of safely as a disconnected plug is dangerous if reconnected to the mains. If any other type of plug is used, a 5A fuse must be fitted.