



White Knight

WM126V
WM126VS
WM 126VB

WASHING MACHINE
INSTRUCTION MANUAL

Please read this instruction manual carefully before you use this product

CONTENTS

SECTION 1: BEFORE USE

- Safety warnings
- Recommendations

SECTION 2: INSTALLATION

- Removal of transportation screws
- Foot adjustment
- Electrical connection
- Water supply connection
- Drain connection

SECTION 3: TECHNICAL SPECIFICATIONS

SECTION 4: CONTROL PANEL

- Start/Pause button
- Function indicator lights
- Function buttons
- Program knob
- Washing programs

SECTION 5: WASHING YOUR LAUNDRY

- Before washing
- Running the machine

SECTION 6: MAINTENANCE AND CLEANING

- Water inlet filters
- Pump filter
- Detergent drawer
- Siphon plug
- The cabinet
- The drum
- Limescale removal

SECTION 7: PRACTICAL INFORMATION

SECTION 8: AVOIDING MINOR FAULTS

SECTION 9: AUTOMATIC FAILURE DETECTION SYSTEM

SECTION 10: INTERNATIONAL WASHING SYMBOLS

SECTION 1: BEFORE USE

SAFETY WARNINGS

- Do not use a multiple socket or extension cable.
- Do not connect a plug with a damaged cord into a socket.
- If the cord is damaged it should be replaced by the manufacturer or appointed service agent in order to avoid a hazard.
- Never remove the plug from the socket by pulling the cord section. Remove the plug only by gripping the plug itself.
- Do not plug the machine to the power supply with wet hands.
- Never touch the machine with wet hands or feet.
- Never open the detergent drawer while the machine is running.
- Never force open the door of the machine whilst the machine is running.
- The machine can reach high temperatures while running, so do not touch the drain hose and water during the draining cycle.
- In the event of any failure, first unplug the appliance and close off the water tap. Do not attempt to repair. Please contact your authorised service agent.
- Keep the packing materials from your machine away from children to avoid any hazards.
- Do not let children play with the washing machine.
- Keep pets away from your machine.
- Your machine should only be used by adults and in accordance with the information written in this manual.
- Your machine is designed for use in a domestic environment. The warranty will be invalid if you use it for commercial purposes.
- The appliance should not be put on a carpet which can block the air ventilation on the bottom side.
- The appliance is not intended for use by people (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they don't play with the appliance.

RECOMMENDATIONS

- Detergent or softener in contact with air for a long time can dry out and stick to your detergent drawer. To avoid this, put your detergent and softener into the detergent drawer just before washing.
- It is recommended that you use the pre-washing program for only very dirty clothes.
- Please do not exceed the maximum loading capacity.

- If you plan not to use your machine for a long time, unplug it, shut off the water supply and leave the door open in order to keep the inside of the machine dry and to prevent unpleasant odours in the drum.
- As a result of our quality control procedures, a certain amount of water may remain in your machine from testing. This is not harmful for your machine and is perfectly normal.

SECTION 2: INSTALLATION

Please pay attention to the following issues before using your washing machine for the first time.

REMOVAL OF TRANSPORTATION SCREWS

- The 4 transportation screws, which are located at the back of the machine, must be removed before running the machine.
- Loosen the screws by turning them anti-clockwise with a suitable spanner. (DIAGRAM-1)
- Pull out the screws, rubber washers and plastic spacers. (DIAGRAM-2)
- The holes where the transport screws have been removed should be covered with the plastic transport caps found in the accessories bag. (DIAGRAM-3)
- The transportation screws that have been removed from the machine must be re-used in any future transporting of the machine.



DIAGRAM-1

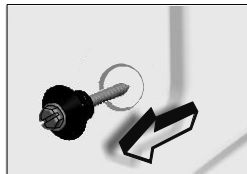


DIAGRAM-2



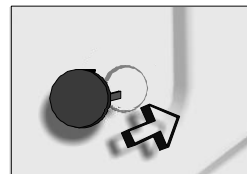


DIAGRAM-3

FOOT ADJUSTMENT

- Do not install your machine on rugs or similar surfaces.
- For your machine to work silently and without any vibration, it should be installed on a flat, non-slippery, firm surface. Any suspended floor must be suitably strengthened.

- You can level your machine by adjusting its feet.
- First, loosen the plastic adjustment nut away from the cabinet base.
- Change the level by adjusting the feet upwards or downwards.
- When the machine is level and stable, tighten the plastic adjustment nut again by rotating it upwards against the base of the cabinet.
- Never put cartons, wooden blocks or similar materials under the machine to balance irregularities of the floor.

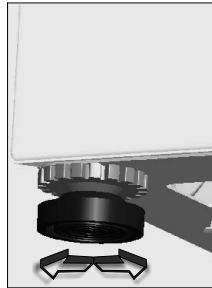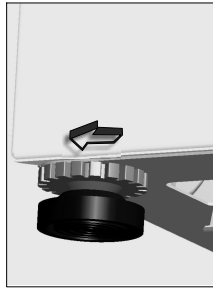


ELECTRICAL CONNECTION

- Your washing machine requires a 50Hz supply of 220-240V.
- A special earthed plug has been attached to the supply cord of your washing machine. This plug must be fitted to an earthed socket. The fuse value fitted to this plug must be 13A. If you have any doubts about your electrical supply, consult a qualified electrician.
- Insert the machine's plug into an earthed socket which you can easily reach.

⚠ WARNING: This appliance must be earthed.

WATER SUPPLY CONNECTION


- Your machine has a single (cold) water inlet.
- To prevent leakage from the connection joints, a rubber washer is included in the hose packing. Fit this washer at the end of the water inlet hose on the tap side.
- Connect the hose to the water inlet valve at the rear of the machine and the other end to your tap. Tighten the plastic connector by hand. Please call a qualified plumber if you are unsure about this.
- Water pressure of 0,1-1 MPa from your tap will enable your machine to work more efficiently. (0,1 MPa pressure means water flow of more than 8 litres in 1 minute from a fully opened tap)
- After connection is complete, check for leakage by turning on your tap completely.
- Ensure that the water inlet hose is not folded, broken or crushed, when the washing machine is in its final position.
- Connect the water inlet hose to a 3/4" threaded water tap.

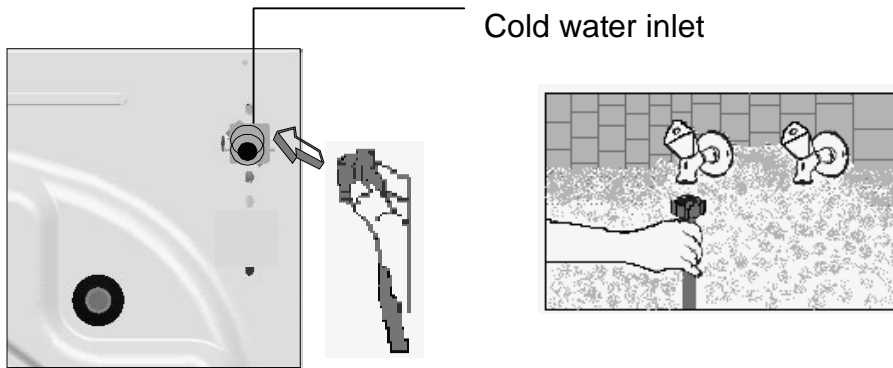

DRAIN CONNECTION

- The drain hose should be mounted at a minimum height of 60 cm and a maximum height of 100 cm from the floor.
- The end of the drain hose can be connected directly to a drainage stand-pipe or alternatively to a special connection point designed for that purpose on the waste outlet of a sink unit
- Do not extend the drain hose or your guarantee will be invalidated.

Note: The outlet hose of this appliance must only be connected to a “dirty water” drain. Water must not be discharged into a “fresh water” drain.

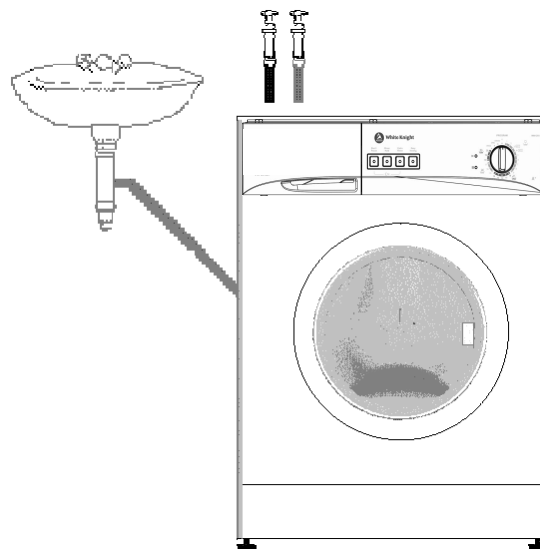


SECTION 3: TECHNICAL SPECIFICATIONS

	WM126V WM126VS WM 126VB
Maximum dry laundry capacity (kg)	6
Recommended loading (kg)	5,5
Height (cm)	85
Width (cm)	59,6
Depth (cm)	54
Maximum spin cycle (rpm)	1200

SECTION 4: CONTROL PANEL

WM126V- WM126VS- WM126VB

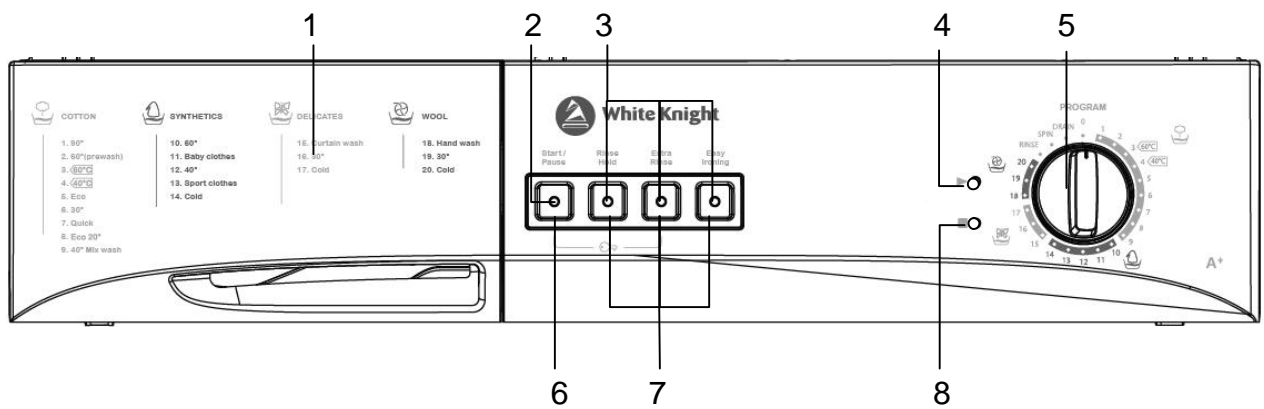

1 - Detergent drawer

2 - Start/pause light

3 - Function indicator lights

4 - Program ready light

5 - Program knob

6 - Start/pause button

7 - Function buttons

8 - Program end light

Our product has an electronic card and soft-touch buttons. To activate the functions touch the buttons gently.

START/PAUSE BUTTON

Used to start a selected program or pause during running.

Note: The program knob must be brought to the O(off) position before selecting the program or changing an existing program.

FUNCTION INDICATOR LIGHTS

When the start/pause button or any function button is pressed, the corresponding light turns on. The light turns off when the function button or start/pause button is re-pressed, or when the process or selected function is completed.

The function indicator lights are also used in the failure detection system mentioned in section 9.

FUNCTION BUTTONS

Rinse Hold

This function is recommended to be used when the clothes cannot be removed immediately after the end of the program. This will prevent creasing. When this function is selected, the last rinsing water is not drained. At this point in the program the Rinse Hold Indicator will flash. To continue the program, press the Start/Pause button. The water will then be drained and the load spun.

If you do not want your sensitive clothes to be spun, turn the program knob to the O (off) position. Turn the program knob to the Drain program and press the Start/Pause button. The machine will then drain the water from the drum.

Extra Rinse

Provides one additional rinse in addition to the rinses which your washing machine normally performs.

Easy Ironing


By using this function, your clothes will come out less wrinkled after washing.

Note: Depending on which program has been selected, it may be possible to select the function buttons after the machine has started. If the light comes on when the function button is pressed then the function will be activated. If the light does not come on then the additional function will not be activated

PROGRAM KNOB

With the program knob, you can select the program with which you desire to wash your clothes. You can adjust the program selection process by turning the program knob in both directions. Ensure that the mark on the program knob is aligned with the program you want to select. When you bring the program knob to the O(off) position, while your machine is running, your program will remain incomplete.

1-COTTON 90°
2-COTTON 60° (PREWASH)
3-COTTON 60°
4-COTTON 40°
5-ECO WASH
6-COTTON 30°
7-QUICK WASH
8-ECO 20°
9-MIX WASH
10-SYNTHETIC 60°
11-BABY CLOTHES
12-SYNTHETIC 40°
13-SPORT CLOTHES
14-SYNTHETIC COLD
15-CURTAIN WASH
16-DELICATE 30°
17-DELICATE COLD
18-HAND WASH
19-WOOL 30°
20-WOOL COLD
21-RINSING
22-SPINNING
23-DRAINING

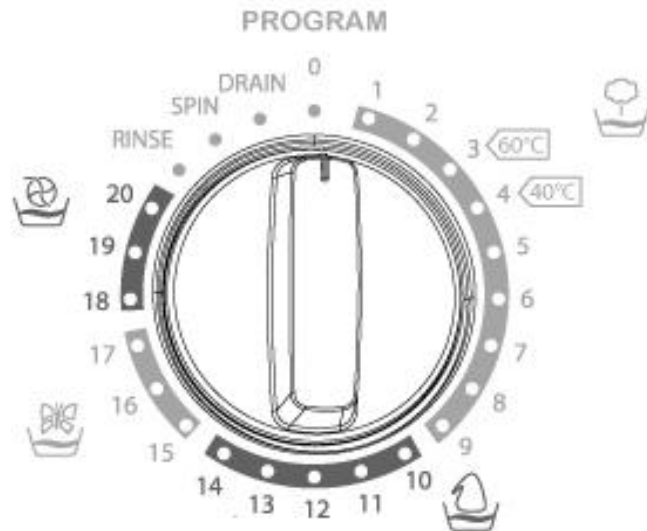

PROGRAM	DETERGENT COMPARTMENT	MAX DRY LOAD CAPACITY (kg)	PROGRAM TIME (MINS)	ENERGY CONSUMPTION (kWh)	WATER CONSUMPTION (litres)	TYPE OF LAUNDRY	EXPLANATIONS
1-COTTON 90°	2	6	210	2,59	85	Dirty, boil, cotton and linen textile	Underwears, sheet, table cloth, t-shirt, shirt, towel (max.3 kg)
2-COTTON 60° (PREWASH)	1+2	6	170	1,56	93	Very dirty, cotton, coloured and linen textile	
3-COTTON 60°	2	6	200	1,02	49	Dirty, cotton, coloured and linen textile	
4-COTTON 40°	2	6	190	0,82	55	Dirty, cotton, coloured and linen textile	
5-ECO WASH	2	6	105	0,38	53	Dirty, cotton, coloured and linen textile	
6-COTTON 30°	2	6	130	0,28	65	Slightly dirty, cotton, coloured and linen textile	
7-QUICK WASH	2	3	30	0,09	53	Slightly dirty, cotton, coloured and linen textile	
8-ECO 20°	2	3	102	0,19	44	Slightly dirty cotton, coloured and linen textile. Washed without heating the tap water.	
9-MIX WASH	2	6	100	0,55	58	Dirty or very dirty, stain , cotton, coloured and linen textile	
10-SYNTHETIC 60°	2	3	100	0,8	55	Dirty, synthetic or synthetic mixture textile	Nylon socks, blouse
11-BABY CLOTHES	2	3	140	1,03	91	Baby laundry	All baby laundry
12-SYNTHETIC 40°	2	3	86	0,53	53	Slightly dirty, synthetic or synthetic mixture textile	Nylon socks, blouse

TABLE - 1

PROGRAM	DETERGENT COMPART.	MAX DRY LOAD CAPACITY (kg)	PROGRAM TIME (MINS)	ENERGY CONSUMPTION (kWh)	WATER CONSUMPTION (litres)	TYPE OF LAUNDRY	EXPLANATIONS
13-SPORT CLOTHES	2	3	93	0,47	53	Sport clothes	All sports clothes and jeans
14-SYNTHETIC COLD	2	3	77	0,13	53	Slightly dirty, synthetic or synthetic mixture sensitive laundry.Washed without heating the tap water.	Nylon socks, blouse
15-CURTAIN WASH	1+2	2	150	0,9	73	Tulle and curtain as sensitive laundry	Tulle, curtain, diolen, dralon
16-DELICATE 30°	2	2	85	0,38	73	Slightly dirty, cotton, coloured, synthetic or synthetic mixture sensitive laundry	Silk mixture, shirt, blouse, polyester, poliamid, mixture textile
17-DELICATE COLD	2	2	80	0,12	82	Very slightly dirty, cold water with to wash cotton, coloured, synthetic or synthetic mixture sensitive laundry	
18-HAND WASH	2	2	80	0,28	65	Slightly dirty, wash in hand cotton, coloured, synthetic or synthetic mixture laundry	Hand wash to all laundry
19-WOOL 30°	2	2	61	0,15	75	Dirty, hand and machine to wash wool laundry	All wool laundry
20-WOOL COLD	2	2	60	0,03	70	Very slightly dirty, cold water, hand and machine to wash wool laundry	
21-RINSING			45	0,06	54	When you need an additional rinsing to be done to your clothes after the washing process, you can use this program for all kinds of clothes.	
22-SPINNING			15	0,05	-	When you need an additional spinning to be done to your clothes after the washing process, you can use this program for all kinds of clothes.	
23-DRAINING			3	0,01	-	This program is used to drain the dirty water inside after the washing process of your machine. If you want the water inside your machine to be drained before the program ends, you can use this program.	

TABLE - 1 (Continued)

Note: You can use fabric softeners in all programs (except spin and drain programs) as required. Please use the quantity of softener as recommended by the softener producer. Put the softener in the * (softener) compartment of the detergent drawer.

The Cotton 60° and Cotton 40° are the standard washing programs to which the information on the energy label and product fiche relates. These programs are suitable to clean normally soiled cotton laundry. They are the most efficient programs in terms of combined energy and water consumption.

If the machine is left powered up it will consume 0.68W. When the program dial is in the O (off) position the machine will consume 0.08W, until the power is switched off.

Based on test results of standard 60 ° C cotton programme at full load and partial load, and standard 40 ° C cotton programme at partial load, remaining moisture content is (%) 53.

The actual water temperature achieved may differ from the declared program temperature.

It is recommended to use liquid detergent for low temperature washing programs.

SECTION 5: WASHING YOUR LAUNDRY

- Plug in the machine. Switch on the power.
- Connect the hoses to the water supply and to the drain. Open the water tap.

First wash cycle

It is recommended that the first wash cycle should be made without any laundry to ensure that the drum is clean and any water left from the factory testing is removed. Pour half a measuring cup of normal all purpose detergent into compartment 2 and select cotton program at 90°C.

BEFORE WASHING

Sorting your laundry

- Sort your clothes according to their types (cotton, synthetic, sensitive, woollen, etc.), washing temperatures and level of dirtiness.
- Never wash your white and coloured clothes together.
- Since your new coloured clothes may shed dye on the first wash, wash them separately.
- Be careful that no metal pieces are found on or in the pockets of your clothes, remove if there are any.
- Zip and button your clothes.
- Remove the plastic or metal hooks from curtains and remove laces or place them inside a washing bag and tie.
- Pull textiles like trousers, knitted fabric, t-shirts and sweat shirts inside out.
- Wash your small clothes, like socks and handkerchiefs, in a washing bag.



Wash up to 90 °C



Wash up to 60 °C



Wash up to 30 °C



Not washable in
a washing machine

Placing clothes into the machine

- Open the door of your machine.
- Load your clothes into your machine in an even manner.
- Load each item separately.
- When you shut the door of your machine, be careful that no cloth is jammed between the door and the rubber gasket.
- Shut the door of your machine tightly otherwise your machine will not start the washing process.

Putting detergent into the machine

The quantity of the detergent that you will put in your machine depends on the following criteria:

- Your detergent consumption will change according to the dirtiness of your clothes. For your slightly dirty clothes, do not pre-wash and put a small amount of detergent in compartment 2 of the detergent drawer.
- For excessively dirty clothes, select a program with pre-washing. Put $\frac{1}{4}$ portion of the detergent you will use in compartment 1 in the detergent drawer and the remaining portion in compartment 2.
- Only use detergents developed specifically for automatic washing machines. The quantities that will be used for your clothes are written on the detergent packaging.
- As the hardness of your water increases, the amount of the detergent to be consumed will also increase.
- As the amount of your clothes increases, the amount of the detergent to be consumed will also increase.
- Put softener in the softener compartment in your detergent drawer. Do not exceed the MAX level. Otherwise, the softener will diffuse in the washing water via the siphon.
- Concentrated softeners should be diluted with some water before putting in the drawer. This is because the softener with a high density can obstruct the siphon and prevent the correct flow of the softener.
- You can use fluid detergents in all programs without pre-washing. For this, mount the fluid detergent level plate in the second compartment of the detergent drawer and arrange the amount of fluid detergent according to the levels on this plate.

RUNNING THE MACHINE

Program selection and features

Select the program and additional functions appropriate for your clothes from Table-1.

Start/Pause

By pressing this button, you can start the program you have selected or pause a running program.

Starting the program

- Turn the program knob to the program you desire.
- The program ready light will come on.
- If you want, you can select one or more additional functions.
- Run the program which you have selected by pressing the Start/Pause button.

Changing the program

If you have selected a program and you do not want it to continue:

- Press the start/pause button.
- Turn the program knob to the O(off) position.
- Turn the program knob to the program you require. (You can select the program that you desire from Table-1).
- The program ready light will come on.
- By pressing the start/pause button, run the program which you have selected.

Cancellation of the program

If you desire to end a running program early:

- Press the start/pause button.
- Turn the program knob to O(off) status.
- Turn the program knob to the “Drain” or “Spin” programs.
- The program ready light will come on.
- Run the program you have selected by pressing the start/pause button.

Program ending

- Your machine will automatically stop when the program you have selected ends.
- The program end light will be on.
- Turn the program knob to the O(off) position.
- The door will be unlocked approximately two minutes after the program ends. You can open the door by pulling the handle of the door towards yourself and take out your clothes.
- After you unload your clothes leave the door open to dry the interior of your machine.
- Unplug your machine.
- Close the water tap.

WARNING!

If the mains supply should go off during a wash cycle the machine will stop, but when the mains supply comes back on the program will continue. This is not harmful for your machine.

Child lock

Child lock is used in order to protect the washing cycle from the effects of unwanted button activations during the cycle. Child lock is activated by pressing the first and third buttons on the control panel at the same time, for more than 3 seconds. When child lock is activated, the lights on the function buttons blink to indicate that child lock is active. In order to de-active child lock, the same buttons (1st and 3rd) should be pressed again for more than 3 seconds. De-activation of child lock is shown by blinking of the light on the Start/Pause button.

WARNING!

Your machine will de-activate the function buttons when the child lock is activated.



SECTION 6: MAINTENANCE AND CLEANING

- Unplug your machine.
- Close the water tap.

WATER INLET FILTERS

On the tap part of your machine's water inlet hose and at the end of the water inlet valve, there are filters to prevent entrance of dirt and foreign materials in the water to the machine. If the machine is unable to receive sufficient water, although your water tap is opened, these filters should be cleaned.

- Remove the water inlet hose.
- Remove the filter found on the water inlet valve by using a pair of pliers and wash thoroughly with a brush.
- Clean the filter of the water inlet hose, located on the tap side, by removing manually together with the seal.
- After you clean the filters, you can fit them the same way as you have removed them.

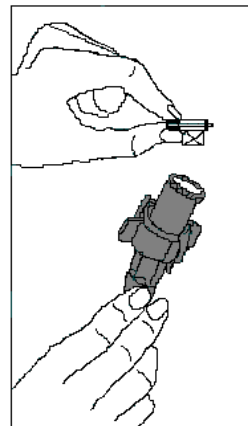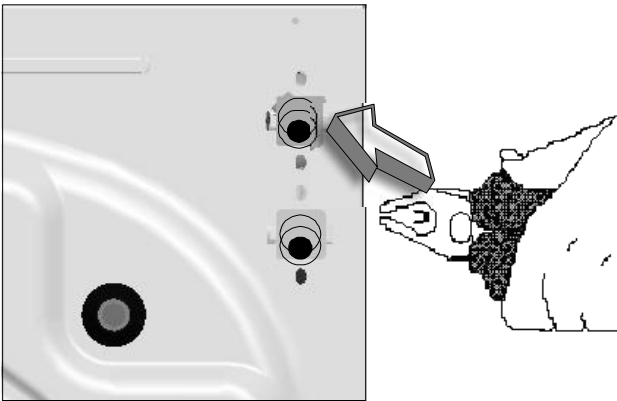

PUMP FILTER


The pump filter system elongates the life of your pump, which is used to drain the dirty water. It prevents lint from entering the pump. Cleaning of your pump filter every 2-3 months is recommended. To clean your pump filter:

- Open the kick-plate's cover, by pressing down at the top.
- Before opening the filter cover, place a shallow tray under the outlet.
- Loosen the filter cover by rotating it anti-clockwise and drain the water.
- Remove any foreign materials from the filter.
- Check for the rotation of the pump manually.
- After you have cleaned the pump, fit the filter cover by rotating clockwise.
- Put the kick-plate cover into place.
- Do not forget that if you do not fit the filter cover properly, it will leak water.

⚠ WARNING!

Danger of being scalded!

Since the water inside the pump maybe hot, wait for it to cool.

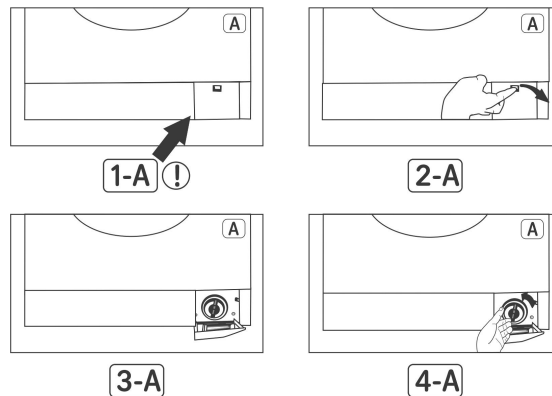

DETERGENT DRAWER

Detergents may form sediment in your detergent drawer or in the housing of the detergent drawer over time. To clean the sediment, pull out the detergent drawer from time to time.

To pull out the detergent drawer:

- Pull the detergent drawer to the end.(DIAGRAM-1)
- Press the blue siphon plug in the drawer and continue to pull the drawer until it is removed. (DIAGRAM-2)
- Wash with an old toothbrush and plenty of water.
- Ensure that any leftover detergent does not drop into your machine.
- After drying the detergent drawer return it into the housing in the same way that you pulled it out.

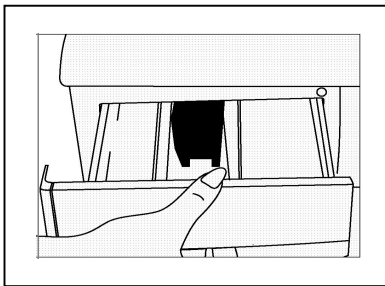


DIAGRAM-1


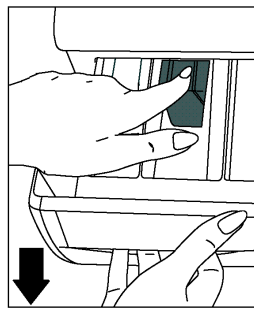


DIAGRAM-2

SIPHON PLUG

Pull out the detergent drawer. Remove the siphon plug and clean the residues of the softener thoroughly. Fit the cleaned siphon plug in its location. Check it is fitted properly.

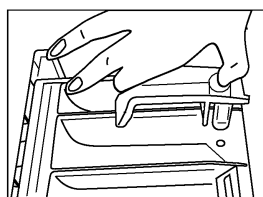

THE CABINET

Clean the exterior surface of the cabinet of your machine with lukewarm water and a cleaning substance that will not damage the cabinet. After rinsing with clean water, wipe it with a soft and dry cloth.

WARNING!

If the machine is installed in a location where the ambient temperature can fall below 0°C, ensure the following procedure is used when it is not in use:

- Plug in the machine.
- Close the water tap and remove the water inlet hose from the tap.
- Place the ends of the water drain and water inlet hose in a cup on the ground.
- Turn the program knob to “Drain” program.
- The program ready light will come on.
- Run the program by pressing the start/pause button.
- Unplug your machine when the program is over (program end light is on).

When you complete this process, the remaining water inside the machine will be drained and thus formation of ice in the machine will be prevented. When you operate your machine again, be sure that the ambient temperature is above 0°C.

THE DRUM

Do not leave metal parts like needles, staples or coins inside your machine. These pieces cause rust stains in the drum. To eliminate these stains, use a suitable cleaning substance and follow the recommendations of the cleaning substance producer. For cleaning rust stains, never use scouring pads or similar rough objects.

LIMESCALE REMOVAL

If you use the correct amount of detergent, there will be no need for limescale removal. However, if you wish to remove limescale, use the limescale protectors available in the market and pay attention to their warnings.

WARNING!

The limescale eliminating substances contain acids and this may cause colour modifications in your clothes along with an adverse effect on your machine.

SECTION 7: PRACTICAL INFORMATION



Alcoholic beverages: The stain point should first be washed with cold water, than wiped with glycerine and water and then be rinsed with water mixed with vinegar.



Shoe Polish: The stain should be slightly scratched without ruining the cloth, rubbed with detergent and rinsed. In case it is not eliminated, it should be rubbed with 1 unit of pure alcohol (96 degrees) mixed in 2 units of water and then washed with lukewarm water.



Tea and coffee: Stretch the stained area of your cloth on the top of a container and pour water as hot as the type of your cloth can endure on it. If the type of your cloth is suitable, wash it with lye.



Chocolate and cocoa: By leaving your clothes in cold water and rubbing with soap or detergent, wash it in the highest temperature that the type of your cloth can endure. If there is still a stain of oil left, wipe with oxygenated water (in proportion of 3%).



Tomato paste: After scraping the dried pieces without ruining the cloth, leave in cold water for about 30 minutes and wash by rubbing with detergent.



Meat broth-egg: Eliminate the dried stain residues and wipe with a sponge or soft cloth wetted in cold water. Rub with detergent and wash with diluted lye.



Grease and oil stains: First wipe the residues. Rub the stain with detergent and then wash with lukewarm soapy water.



Mustard: First apply glycerine to the stained area. Rub with detergent and then wash. If the stain still does not disappear, wipe with alcohol (On synthetic and coloured cloth, a mixture of 1 unit alcohol, 2 units water should be used)



Blood stain: Lay your clothes in cold water for 30 minutes. If the stain still does not disappear, lay in mixture of water and ammonia (3 table-spoons of ammonia in 4 litres of water) for 30 minutes.



Cream, ice-cream and milk: Lay your clothes in cold water and rub the stained area with detergent. If the stain has still not disappeared, apply lye on the fabric of your clothes in proper proportion. (Do not use lye on coloured clothes).



Mould: Mould stains should be cleaned as soon as possible. The stain should be washed with detergent and if it does not disappear, it should be wiped with oxygenated water (in proportion of 3%).



Ink: Hold the stained area under cold water and wait until the inky water completely runs off. Then rub with water diluted with lemon juice and detergent, wash after waiting for 5 minutes.



Fruit: Stretch the stained area of your clothes on the top of a container and pour cold water on it. Do not pour hot water on the stain. Wipe with cold water and apply glycerine. Wait for 1-2 hours and rinse after wiping with a few drops of white vinegar.



Grass stain: Rub the stained part with detergent. If the type of fabric is suitable for use of lye, wash it with lye. Rub your woollen clothes with alcohol. (For coloured ones, a mixture of 1 unit pure alcohol and 2 units of water).



Oil Paint: The stain should be eliminated before it dries by applying thinners on it. Then it should be rubbed with detergent and washed.



Burnt stain: If your cloth is suitable for use of lye, you can add lye into your washing water. For woollen fabric, a cloth dampened in oxygenated water should be covered on the stain and it should be ironed with a dry cloth on it. It should be washed after rinsing well.

SECTION 8: AVOIDING MINOR FAULTS

All repairs carried out on the machine should be done by authorised service agents only. When a repair is required for your machine or you are unable to eliminate the failure with the help of the information given below:

- Unplug the machine.
- Close the water tap.
- Call your authorised service agent.

FAILURE	PROBABLE CAUSE	METHODS OF ELIMINATION
Your machine does not operate.	It is unplugged.	Insert the plug into the socket.
	The fuse is blown.	Change the fuse.
	The electric power is off.	Check the electric power.
	Start/pause button has not been pressed.	Press the start/pause button.
	The program knob is in the O(off) position.	Turn the program knob to the required program.
	The door is not shut properly.	Shut the door properly. You should hear the click.
Your machine does not receive water.	Water tap is closed.	Open water tap.
	The water inlet hose may be bent.	Check the water inlet hose.
	The water inlet hose is obstructed.	Clean the filters of water inlet hose. (*)
	The valve inlet filter is obstructed.	Clean the valve inlet filter. (*)
	The door is not shut properly.	Shut the door properly. You should hear the click.
Your machine is not draining water.	The drain hose is obstructed or bent.	Check the drain hose.
	The pump filter is obstructed.	Clean the pump filter. (*)
	The clothes are not placed inside the machine in a well-balanced manner.	Spread the clothes inside the machine in an orderly and well-balanced manner.
Your machine is vibrating.	The feet of your machine are not adjusted.	Adjust the feet. (**)
	Transportation screws are not removed.	Remove transportation screws. (**)

(*) See the section concerning the maintenance and cleaning of your machine.

(**) See the section concerning installation of your machine.

FAILURE	PROBABLE CAUSE	METHODS OF ELIMINATION
Your machine is vibrating.	There is a small amount of clothes in the drum.	It does not prevent operation of the machine.
	Excessive amount of clothes are filled in the machine or the clothes are not placed in a well-balanced manner.	Do not exceed the recommended quantity of clothes and spread your clothes in the machine in a well-balanced manner.
	Your machine touches a rigid object.	Prevent your machine from touching other objects.
Excessive foam in the detergent drawer.	Too much detergent has been used.	Press the start/pause button. In order to stop the foam, dilute one table-spoon of softener in half litre of water and pour it into the detergent drawer. Press the start/pause button after 5-10 minutes. Arrange the amount of the detergent properly in the next washing process.
	Wrong detergent has been used.	Use only detergents produced for full automatic washing machines.
The washing result is bad.	Your laundry is too dirty for the program you have selected.	Select a suitable program. (see Table-1)
	The amount of detergent used is not sufficient.	Use more detergent, according to the detergent producer.

FAILURE	PROBABLE CAUSE	METHODS OF ELIMINATION
The washing result is not good.	Clothes exceeding the maximum capacity have been filled in your machine.	Put the clothes in your machine in a manner not to exceed its maximum capacity.
	Your water may be hard.	Use the amount of detergent according to the declaration of the detergent producer.
	Distribution of the clothes in your machine is not well-balanced.	Spread the clothes inside the machine in an orderly and well-balanced manner .
The water is drained from the machine as soon as it is filled.	The end of the water drain hose is in a position too low according to the machine.	Place the water drain hose in an appropriate height.(**)
No water is seen in the drum during washing.	No failure. The water is at the lower part of the drum.	-
There are residues of detergent on the clothes.	The pieces of some detergents which do not dissolve in water may stick to your clothes as white stains.	By setting your machine to the "Rinse" program, make an additional rinse or eliminate the stains after drying, with the help of a brush.
There are grey stains on the clothes.	These stains may be caused by oil, cream or ointment.	In the next washing operation, use the maximum detergent amount declared by the detergent producer.

(**) See the section concerning installation of your machine.

FAILURE	PROBABLE CAUSE	METHODS OF ELIMINATION
The spinning process is not done or starts with delay.	No failure. The unbalanced load control works in that way.	The unbalanced load control system will try to distribute your clothes in an homogenous manner. After your clothes are distributed, passage to the spinning process will be realised. In the next washing process, place your clothes into the machine in a well-balanced manner.

SECTION 9: AUTOMATIC FAILURE DETECTION SYSTEM

Your machine is equipped with systems which will both take the necessary precautions and warn you in case of any failure by controlling itself constantly during the washing processes.





FAILURE CODE	FAILURE INDICATOR	PROBABLE FAILURE	THE PROCESS TO BE DONE
Err 01	The start/pause light blinks.	The door is not shut properly.	Shut the door properly so that you hear the click. If the problem persists, turn off the machine, unplug and contact the authorised service agent immediately.





FAILURE CODE	FAILURE INDICATOR	PROBABLE FAILURE	THE PROCESS TO BE DONE
Err 02	The program ready light blinks.	The water level in your machine is below the heater. The pressure of your water supply may be low.	Turn the tap fully on. Water may be cut, check it. If the problem is still continuing, your machine will automatically stop after a while. Unplug your machine, turn off the tap and contact the authorised service agent.
Err 03	The start/pause light and program ready light blinks.	The pump has failed or the pump filter is obstructed.	Clean the pump filter. If the problem persists, contact the authorised service agent. (*)
Err 04	The program end light blinks .	There is an excessive amount of water in your machine.	Your machine will automatically drain the water. After your machine has completed the draining process, shut down your machine and unplug. Close the tap and contact the authorised service agent.





(*) See the section regarding the maintenance and cleaning of your machine.




FAILURE CODE	FAILURE INDICATOR	PROBABLE FAILURE	THE PROCESS TO BE DONE
Err 05	The start/pause light and program end light blink.	The heater of your machine or the heat sensor has failed.	Shut down your machine and unplug. Turn off your tap and contact the authorised service agent.
Err 06	The program ready light and program end light blink.	The motor has failed.	Shut down your machine and unplug. Turn off your tap and contact the authorised service agent.
Err 07	The program start/pause light, ready light and program end light stays on permanently.	Configuration error.	Shut down your machine and unplug. Turn off your tap and contact the authorised service agent.
Err 08	The start/pause light, program ready light and program end light blink.	Fault error	Shut down your machine and unplug. Turn off your tap and contact the authorised service agent.
Err 09	The program ready light and program end light stays on permanently.	The network voltage is too high or too low.	If the network voltage is lower than 150V or higher than 260V, your machine will automatically stop. When the network voltage has recovered, your machine will continue its operation.

SECTION 10: INTERNATIONAL WASHING SYMBOLS

			
Washing temperature.	Do not wash (hand wash)	Lukewarm iron.	Medium hot iron.

			
Hot iron.	Do not iron.	Do not tumble dry.	Hang to dry.

			
Drip dry.	Dry flat.	Do not bleach.	Handy to bleach.

		
<p>All of these are dry cleaning symbols. The letters are to instruct the cleaner what type of solvent to be used. Garments bearing these symbols should not be washed in your machine unless the label says otherwise.</p>		