
Tolga - Desk 2drws

DR8252021

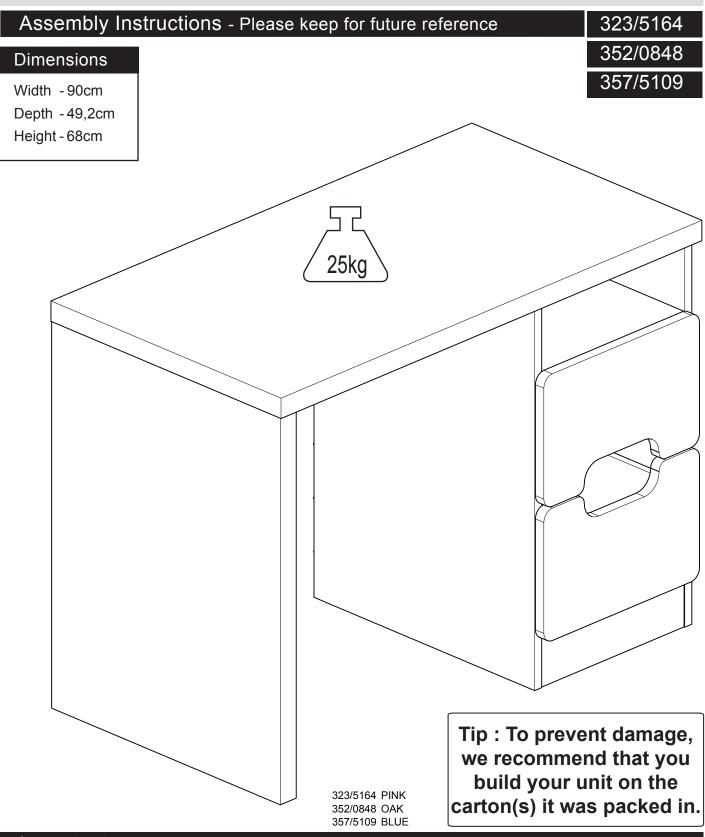

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, please visit: **www.argos-support.co.uk** or email: **Help@ClickSpares.co.uk** (quoting your original order number) Alternatively, call the Spares Helpline on: **0370 112 1928** For any other queries please contact the Customer Helpline on: **0345 640 2020**



Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on the following pages.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• During assembly do not stand or put weight on the product, this could cause damage.

- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



• To reduce the likelihood of damaging your product please ensure that your

power drill is set on a low torque setting.

• Assembly should be carried out by a competent adult only.

 do not use this item if any components are missing or damaged.

• this item is suitable for childeren from the age of 6.

Glue safety - Take care when using glue, please follow the advice below•

Skin contact: Remove contamination by washing with soap and water. This procedure should also be followed prior to eating and drinking. **Eye contact:** Rinse immediately with clean water for 15 minutes and seek medical advice.

If swallowed: Seek medical advice immediately.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners. • From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.


Handy Hints

• Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts • Regularly check and ensure that all bolts and fi ttings are tightend properly.

Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

Components - Panels For damaged or missing parts, please visit: www.argos-support.co.uk or email: Help@ClickSpares.co.uk


Please check you have all the panels listed below

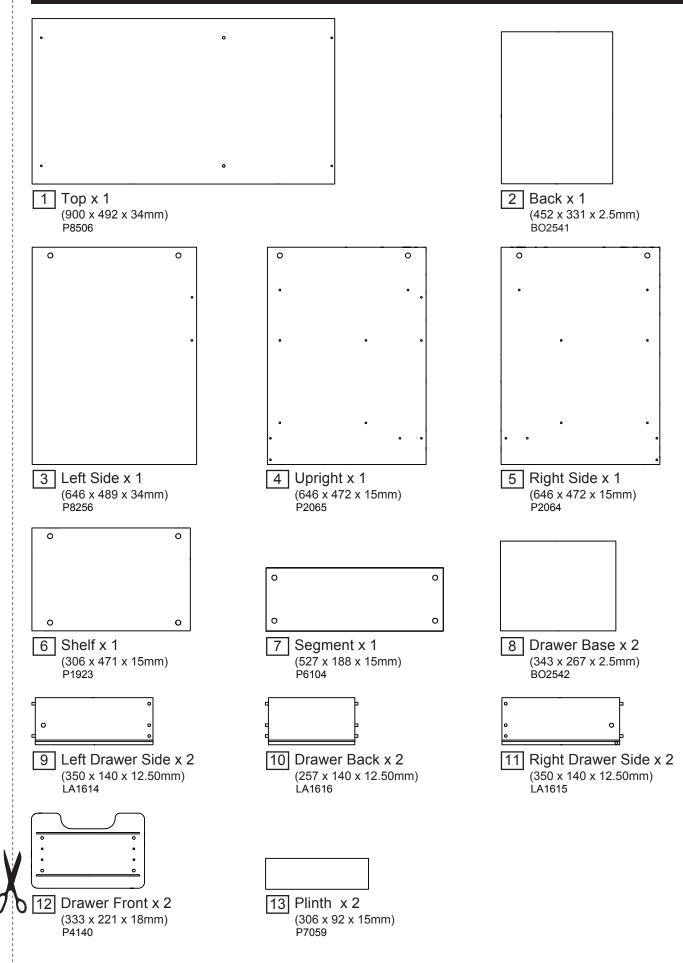


Components - Fittings For damaged or missing parts, please visit: www.argos-support.co.uk or email: Help@ClickSpares.co.uk

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

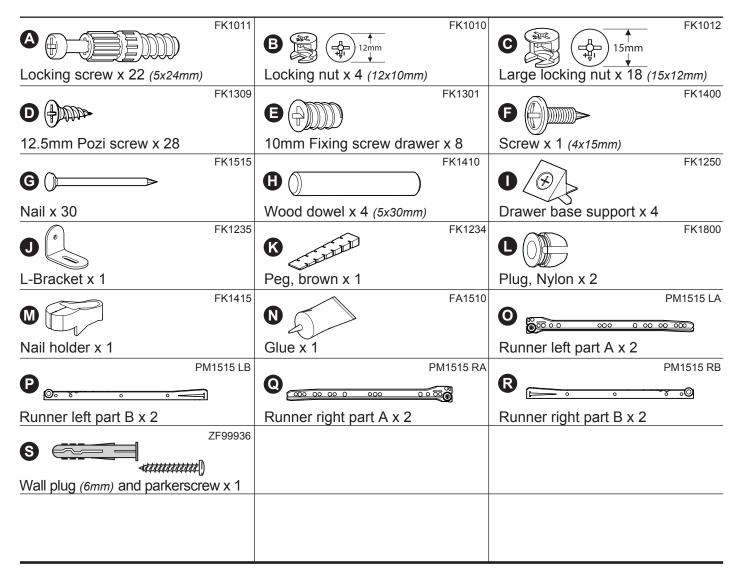

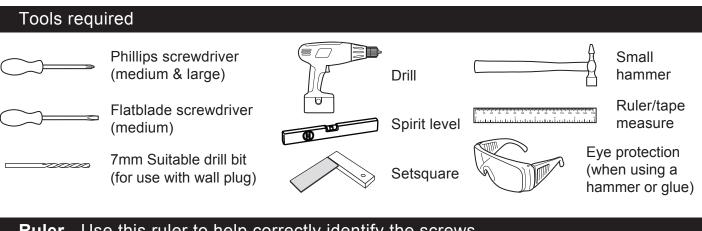

Ruler - Use this ruler to help correctly identify the screws 0 5 10 15 20 25 30 35 40 45 50 55 60 65 70 75 80 85 90 95 100 105 110 115 120 125 130 135 140 145 150 155 160 165 170

antan hartan hartan

The screws length is measured from the head to the point (30mm screw shown).

Step - 1

Insert large locking nuts **(**) into plinth **1**3.

Make sure the 'arrow' on locking nuts \bigcirc points towards the hole in the edge of 13.

Put drop of glue **N** into the 2 holes of plinth 13.

Put dowels \bigoplus into the holes of plinth 13.

Do this step twice

Step - 2

Attaching runners a: Fix runner right part A on right right side shown usesing 10mm fixing screw drawer into right side 5.

Note: look carreful for the right postion.


Insert large locking nuts \bigcirc into right side 5.

Make sure the 'arrow' on locking nuts \bigcirc points towards the hole in the edge of $\boxed{5}$.

Screw 24mm locking screw (A) into right side 5.

Note: Insert 24mm locking screw (A) as far as shown. **Do not over tighten.**

b: Insert 12,5mm pozi screw **D** as shown into right side the <u>5</u> to fix runner right part A **Q**.

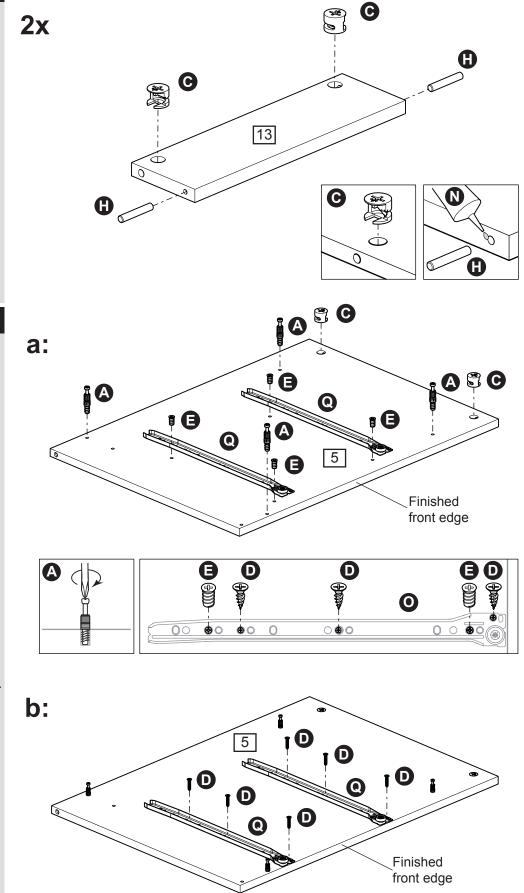

Step - 3

Attaching runners a: Fix runner left part A (O) on upright (4) as shown usesing 10mm fixing screw drawer (E) into upright (4).

Note: look carreful for the right postion.

Insert large locking nuts **(** into upright <u>4</u>.

Make sure the 'arrow' on locking nuts **C** points towards the hole in the edge of **4**.

Screw 24mm locking screw (A) into upright [4].


Note: Insert 24mm locking screw A as far as shown. **Do not over tighten.**

b: Insert 12,5mm pozi screw **D** as shown into left side the 4 to fix runner right part A **O**.

Turn upright 4

c: Screw 24mm locking screw (A) into upright (4).


Note: Insert 24mm locking screw (A) as far as shown. **Do not over tighten.**

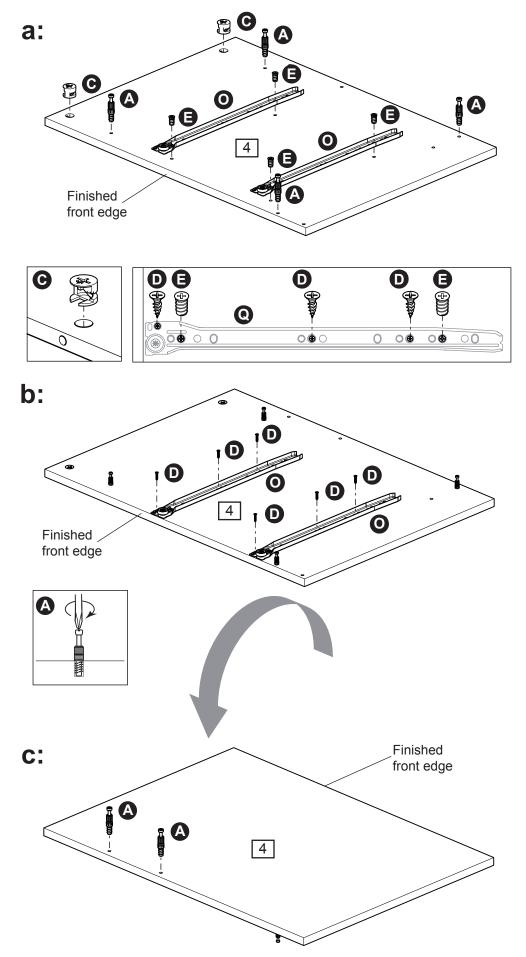



Insert large locking nuts C into shelf 6.

Make sure the 'arrow' on locking nuts \bigcirc points towards the hole in the edge of \bigcirc .

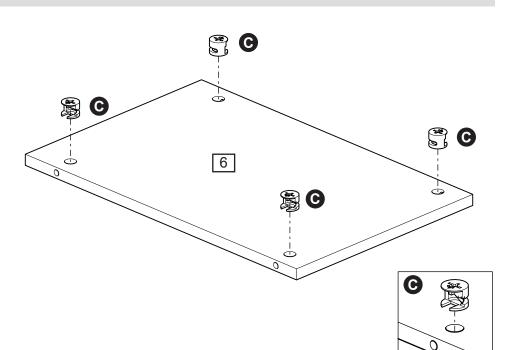


Step - 5


Attaching panels

Put drop of glue **N** into the 2 holes of upright 4 and right side 5 on the bottom of the sides.

Position upright 4 and right side 5 onto plinth 13 and shelf 6.

 Use a screwdriver to turn locking nuts clockwise to lock.

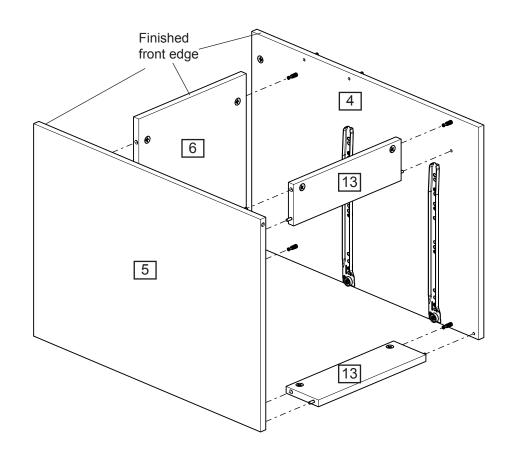



Step - 6

Insert large locking nuts C into segment 7.

Make sure the 'arrow' on locking nuts **(C)** points towards the hole in the edge of **(7)**.

Step - 7

Insert large locking nuts C into left side 3.

Make sure the 'arrow' on locking nuts \bigcirc points towards the hole in the edge of $\boxed{3}$.

Screw 24mm locking screw A into left side 3.


Note: Insert 24mm locking screw (A) as far as shown. **Do not over tighten.**

Step - 8

Attaching panels

Position segment 7 onto upright 4 and left side 3.

Use a screwdriver to turn locking nuts clockwise to lock.

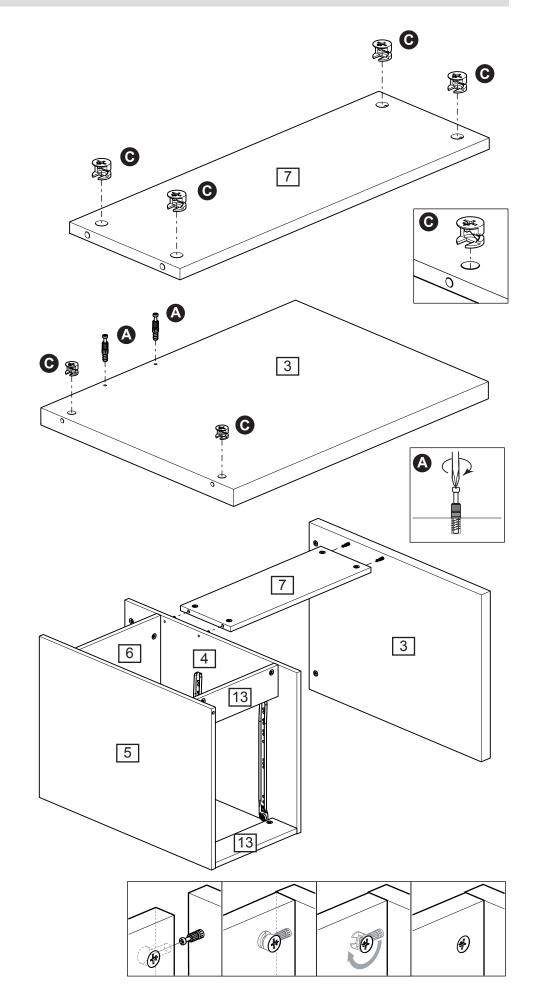


Step - 9

Insert nylon plug **()** into top 1.

Screw 24mm locking screw (A) into the nylon plug (L) and into top 1.

Note: Insert 24mm locking screw (A) as far as shown. **Do not over tighten.**

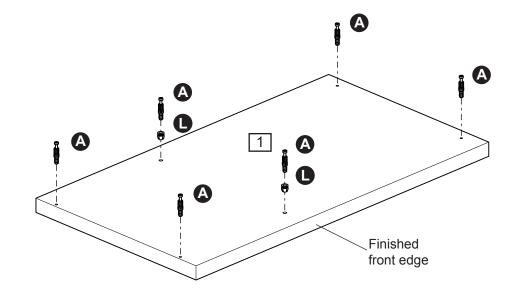



Step - 10

Attaching top

Position top 1 onto left side 3, upright 4 and right side 5.

 Use a screwdriver to turn locking nuts clockwise to lock.

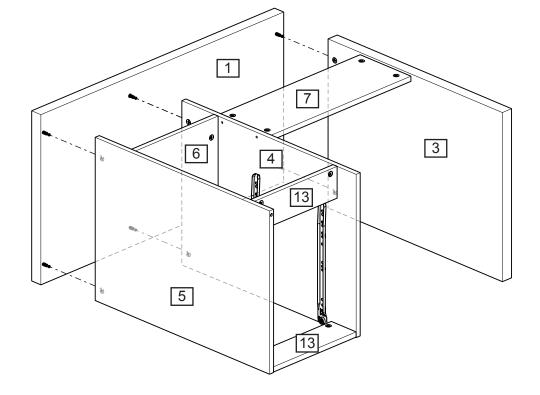




Step - 11

Fitting back panel

Attach back 2 to the back with the coloured surface facing the inside using nails **G**. Use nail holder **M** to hold the nails **G** vertical and at correct distance as you secure the back 2. Nails **G** should be spaced about 150mm apart.



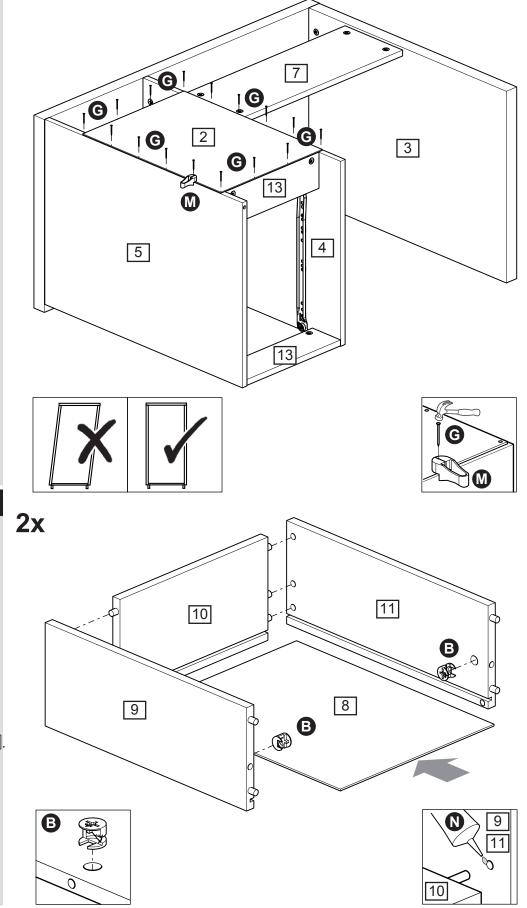

Step - 12

Preparing drawer Insert locking nuts **(B)** into left drawer side **(9)** and right drawer side **(11)**.

Make sure the 'arrow' on locking nuts **B** points towards the hole in the edge of **9** and **11**.

Put drop of glue **N** into the 3 holes of left drawer side 9 and right drawer side 11.


Attach left drawer side 9 and right drawer side 11 onto drawer back 10.

Insert drawer back 5.

Step - 13

Screw 24mm locking screw A into drawer front 12.

Note: Insert 24mm locking screw A as far as shown. **Do not over tighten.**

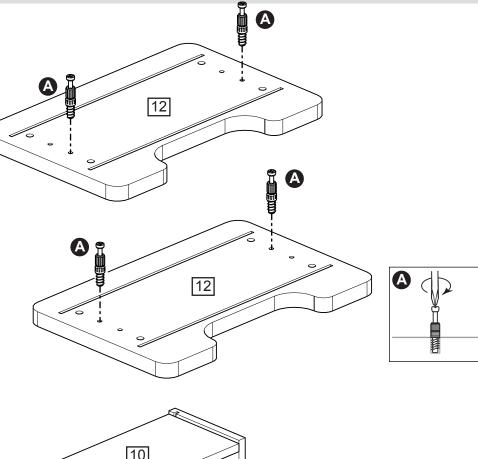





Position drawer onto drawer front 12.

Use a screwdriver to turn locking nuts clockwise to lock.

 Note: look carefully to the posiions of drawer front 12.

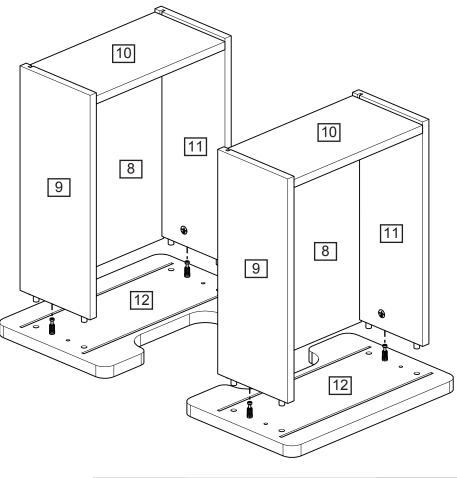




Step - 15

a: Turn over drawer. Fix runner left part B P on left drawer side 9 as shown using 12,5mm pozi screw D. Fix runner right part B R on right drawer side 11 as shown using 12,5mm pozi screw D.

b: Fix runner left part B P and runner right part B R using 12,5mm pozi screw
D. Slide drawer base support I in corner as shown and fix them, using the attached nail.

Step - 16

Inserting drawers as shown. For adjusting the drawers see 'adjustment' on page 'drawer adjustment'.

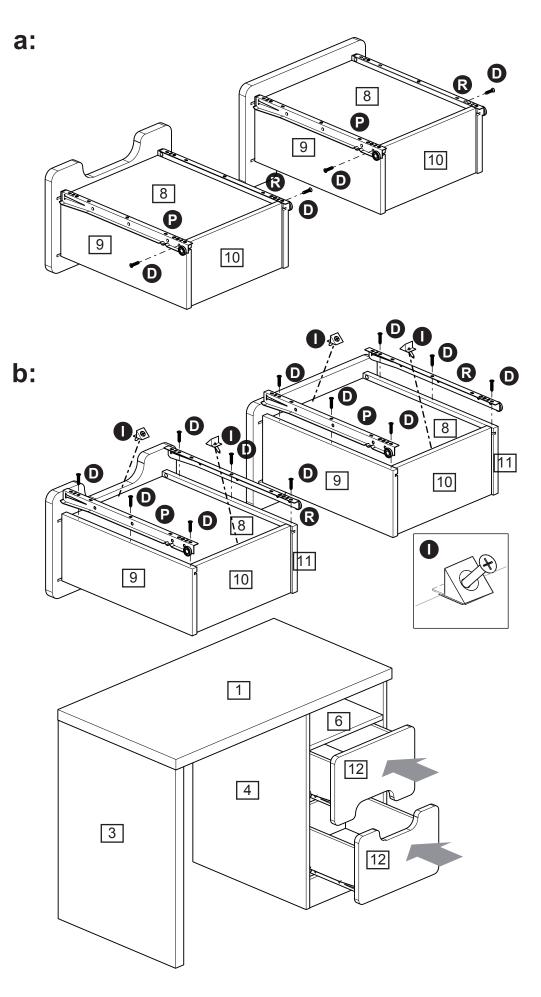


Step - 17

Position L-bracket \bigcirc under top $\boxed{1}$ as shown, fix using screw \bigcirc .

Note: there is no pre-drilled hole for screw **•**.

Use **S** to fix on the wall, please see last page for more information.

Use peg **(**) to square your furniture. Knock peg **(**) in, as far as you require, under the end of the side of the forniture. Then snap off flush with the side.

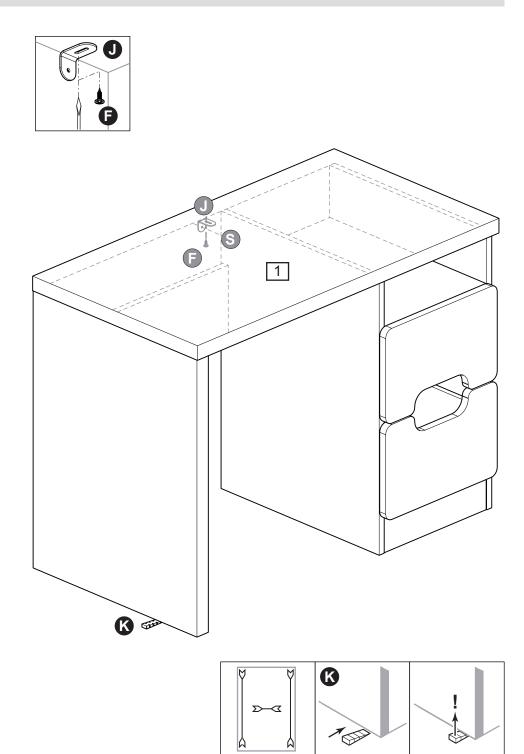

A Guide to - Drawer adjustment


Adjustment

Note: Each drawer can be adjust for approximately 1mm up or down on each site of the drawer.

Remove drawer, adjust the wheel from runner left part and runner right part as shown.

Insert drawer.

Repeat above steps until the desired result is achieved.

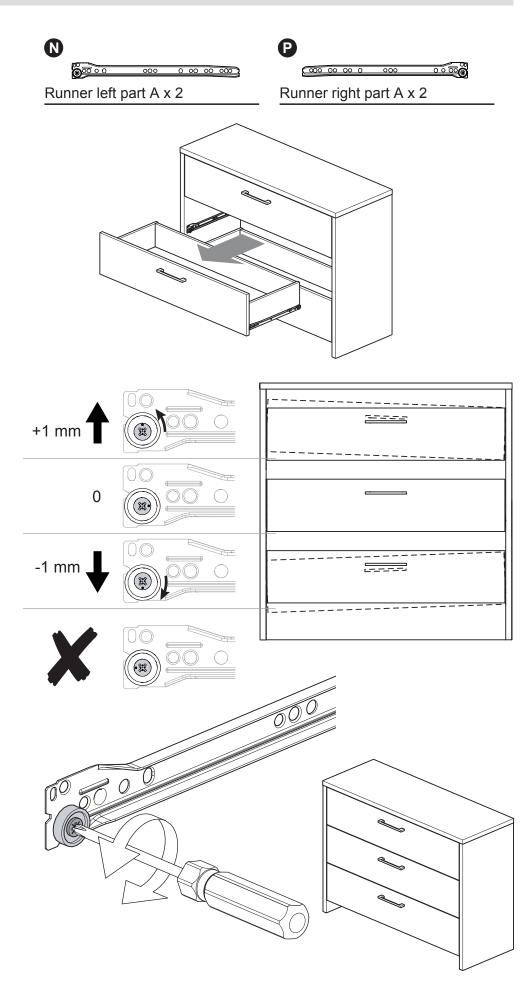

A Guide to - Wall Mounting & Fixings

Important note:

If plastic wall plugs are supplied with your product:




- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.


Failure of the product due to using incorrect fixings is the responsibility of the installer.

Types of walls

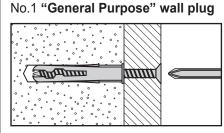

Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

 No.2 "Plasterboard" wall plug



For use when attaching light loads on to plasterboard partitions.



Important: When drilling into walls always check that there are no hidden wires or pipes etc.

 
Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.

Hints:

- 1: General rule: Always use a larger screw and wall plug if you are not sure.
- **2:** Ensure you use the recommended drill bit to match the wall plug and hole size.
- **3:** Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
- **4:** Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
- **5:** Ensure wall plugs are well fitted and are a tight fit in the drilled hole.


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.3 "Cavity Fixing" wall plug



 For use with plasterboard partitions or hollow wooden doors.






For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.


Safety: Always check the fitting and location to ensure your safety in and around the home.

 No.5 "Hammer Fixing" wall plug



For use with walls stuck with plasterboard. The hamemr fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

 No.6 "Shield Anchor" wall plug Heavy loads



For use with heavier loads such as TV & HiFi speakers and satelite dishes etc.

Fitting: From time to time check the fitting to ensure the wall plugs or screws do not become loose.