# HOH Ellingham - table

Assembly Instruction - Please keep for future reference

257/9704



## Important - Please read these instruction fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline**: Argos = 0845 6400800



## Safety and Care Advice

#### Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2 and 3.
- •Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before easier with 2 people. starting.
- Retain these instructions for future reference

- •Do not stand or put weight on the product during assembly, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be



 To reduce the likelihood of damaging your product please ensure that your

power drill is set on a low torque setting.

#### Care and maintenance

- Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.


#### **Handy Hints**

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightened properly.

**Note:** if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

# Components - Panels If you have damaged or missing components, call the Customer Helpline: Argos = 0845 6400800

## Please check you have all the panels listed below

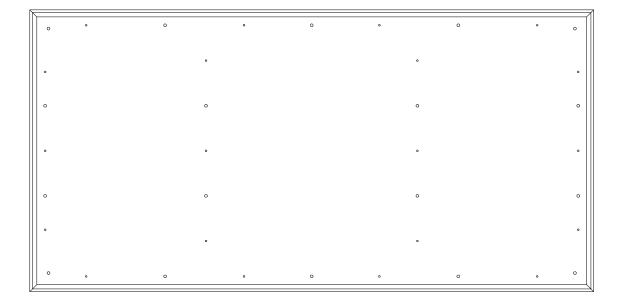

1 Top panel (160x80cm)



2 Short apron x2 (63.4x9cm)

3 Connection bar x2 (69.2x9cm)



4 Long apron x2 (143.4x9cm)



7 Long rail x2 (143.4x3cm)



## **Components - Fittings**

## Please check you have all the fittings listed below

 
**Note:** The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A P D D D D D D D D D D D D D D D D D D	<b>B</b> Ø15x12mm Locking cam x 24	Ø8x30mm Wooden dowel x 32
Ø8x40mm Long wooden dowel x 16	<b>⑤ ⑤ □ □ □ □ □ □ □ □ □ □</b>	Ø20mm Felt feet x 4
Cap x 8	Spring washer x 8	Nut x8
Long bolt x 8	Semi-circle washer x 8	Wrench x 1

## Tools required



Phillips screwdriver (medium & large)

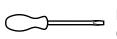

Flatblade screwdriver (medium)



7mm Suitable drill bit (for use with wall plug)





Small hammer




Ruler/tape measure



Eye protection (when using a hammer or glue)

## Ruler - Use this ruler to help correctly identify the screws



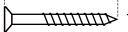 

The screws length is measured from the head to the point (30mm screw shown).

## Step 1

Fitting dowels
Insert wooden
dowels into short
aprons 2 .

## Step 2


Attaching rails
Attach short rails 6
onto short aprons 2
with screws 3.

## Step 3

Fitting dowels
Insert wooden
dowels into long
aprons 4.

## Step 4

Attaching rails
Attach long rails 7
onto short aprons 4
with screws 3.

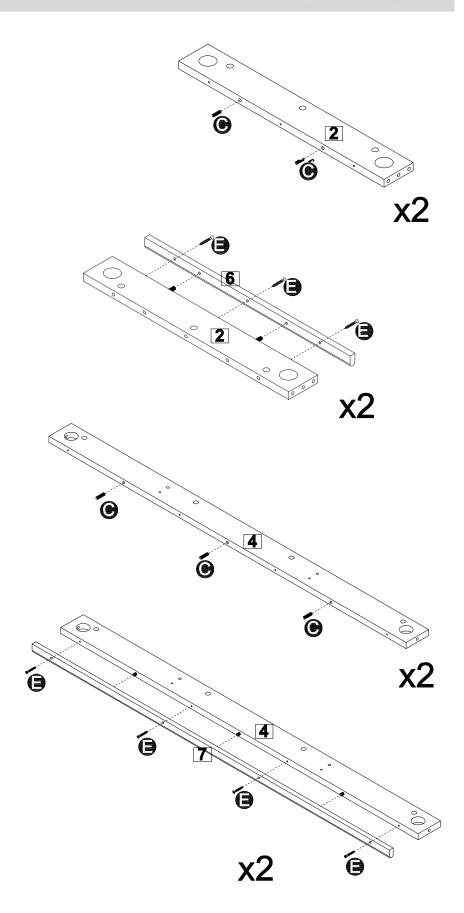

## Step 5

Fitting dowels
Insert long wooden
dowels and
locking cams into
short aprons .
Note: The slot
position of locking
cams should be
as shown.

#### Step 6

Fitting bolts
Screw long bolts 
into legs 5 .

## Step 7

#### **Attaching legs**


a: Attach legs 5 onto short aprons 2 with semi-circle washers 6 & spring washers 7 & nut 9 with wrench 6 .

b: Cover holes with cap 😉 .

## Step 8

# Fitting dowels and cams

Screw long bolts into legs 5.
Insert wooden dowels into legs 5 and short aprons 2.

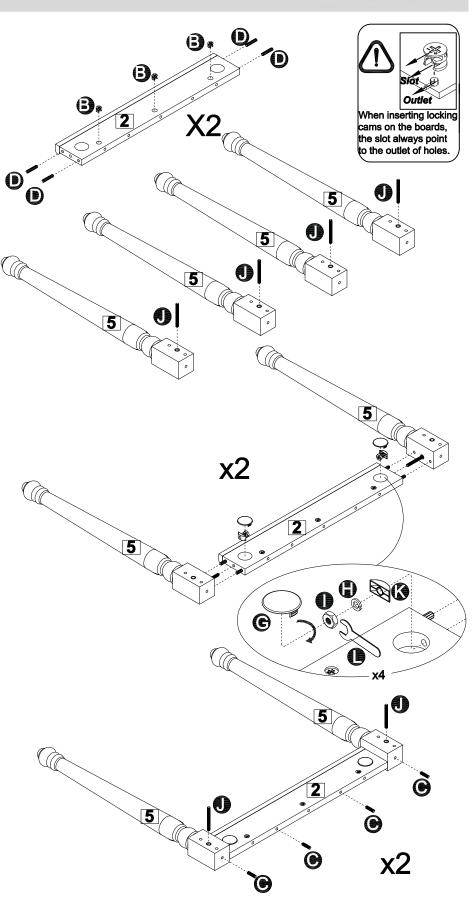

## Step 9

#### **Fixing fittings**

a: Fix connecting bolts (4).

Note:Insert bolt (4)

as far as shown.

Do not over tighten.

b: Insert long wooden dowels and locking cams into long aprons 4. Note: The slot position of locking cams shown.

## Step 10


## Fixing fittings

Insert wooden dowels and locking cams into connection bars 3. Note: The slot position of locking cams should be as shown.

## Step 11

## **Attaching panels**

Position connection bars 3 onto long aprons 4 as shown. Use screw driver to turn locking cams 5 clockwise to lock.

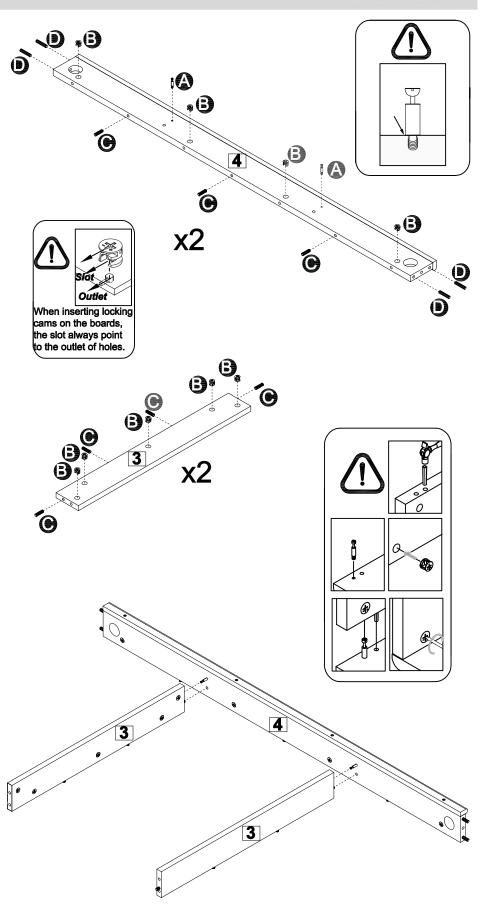

## Step 12

#### **Attaching panels**

Position connection bars 3 onto another long apron 4 as shown.
Use screw driver to turn locking cams 5


clockwise to lock.

## Step 13

## Attaching legs

a: Attach legs 5 onto long aprons 4 with semi-circle washers 6 & spring washers 6 & nut 6 with wrench 6 .

b: Cover holes with cap (c) .

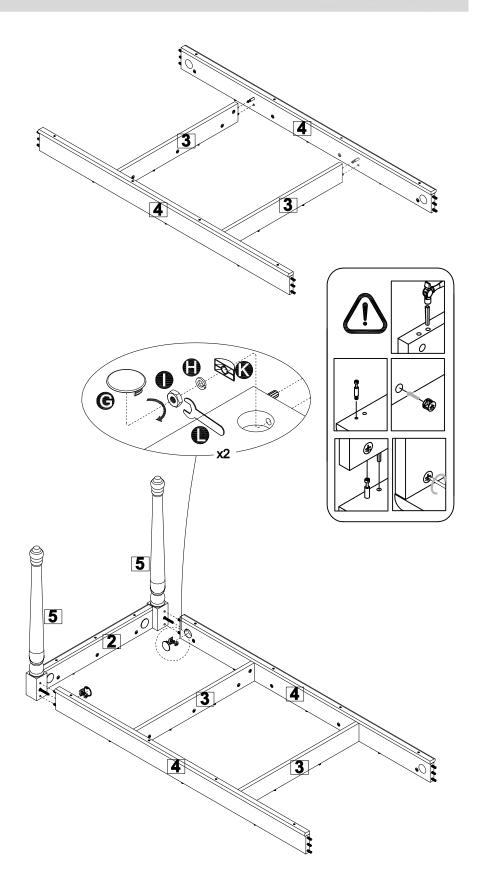


## Step 14

#### **Attaching legs**

a: Attaching legs 5 onto another side of long aprons 4 with semi-circle washers 6 & spring washers 7 & nut 1 with wrench 6 .

b: Cover holes with cap 😉 .

c: Paste felt feet **()** on legs as shown.

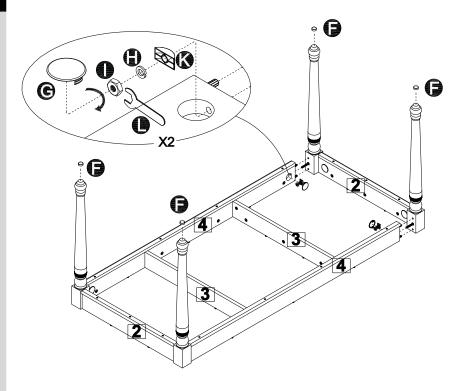


## Step 15

#### **Fitting bolts**

Fix connecting bolts **(A)**.

Note:Insert bolt (2) as far as shown.

Do not over tighten.

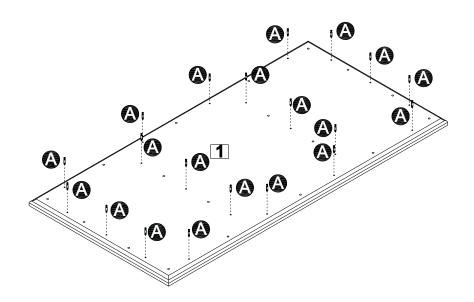

## Step 16

#### **Attaching panels**


Two people are needed for this assembly.

Position top panel 1 onto table frame panels 2, 3, 4 and legs 5 as shown at same time.

Use screw driver to turn locking cams clockwise to lock.

## Step 17

Assembly is complete.

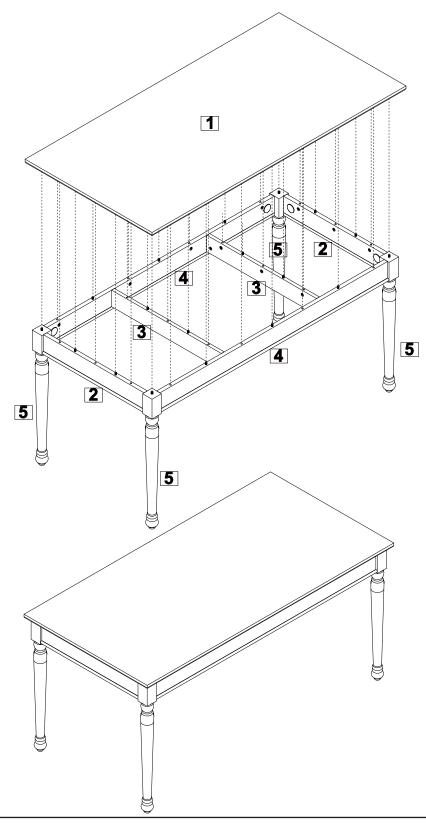

If you need help or have damaged or missing parts, call the **Customer Helpline: Argos = 0845 6400800** 

## **Care Instruction**

#### Care and Maintenance

- Use a soft, clean cloth that will not scratch the surface when dusting.
- Use of furniture polish is not necessary. Should you choose to use polish, test first in an inconspicuous area.
- Using solvents of any kind on your furniture may damage your furniture's finish.
- Never use water to clean your furniture as it may cause damage to the finish.
- Always use coasters under beverage glasses and flowerpots.
- Liquid spills should be removed immediately. Using a soft clean cloth, blot the spill gently. Avoid rubbing.
- Always use protective pads under hot dishes and plates. Heat can cause chemical changes that may create spotting within the furniture finish.
- Stains or marks from crayons or ink markers will be difficult to remove.
- In the event that your furniture is stained or otherwise damaged during use, we recommend that you call a professional to repair your furniture.

#### Further advice about wood furniture care

It is best to keep your furniture in a climate controlled environment. Extreme temperature and humidity changes can cause warping, shrinking and splitting of wood. Please keep furniture away from direct sunlight as this may damage the finish. Proper care and cleaning at home will extend the life of your purchase. Following these important and helpful tips will enhance your furniture as it ages.