



You're home.™

Energise Tempo

User Guide



U86-E1e Series



Contents	1
Machine Overview	2
General Safety Information	3
Getting Started	4
How to Use	5
Looking After Your Machine	8
FAQs	11
Other Information	12
Guarantee	13

- 1 Handle
- 2 2-in-1 tool (crevice tool and dusting brush)
- 3 Brushbar height adjust
- 4 Cord wrap (hidden)
- 5 Separator
- 6 Dirt container
- 7 On/off button (hidden)
- 8 HEPA Media filter
- 9 Hose
- 10 TurboTool (some models only)
- 11 Tool Connector
- 12 TurboTool holder (some models only)
- 13 Hard floor adaptor

PLEASE NOTE: Some parts may vary according to model. Please check inside flap of box for more details.

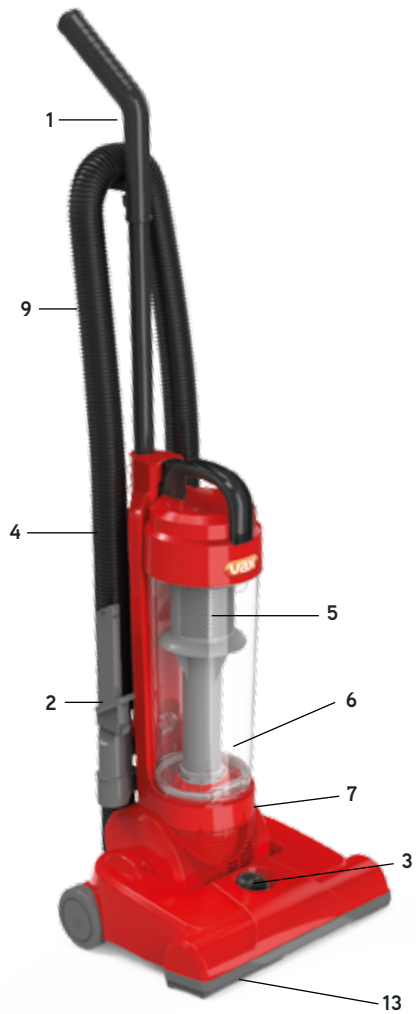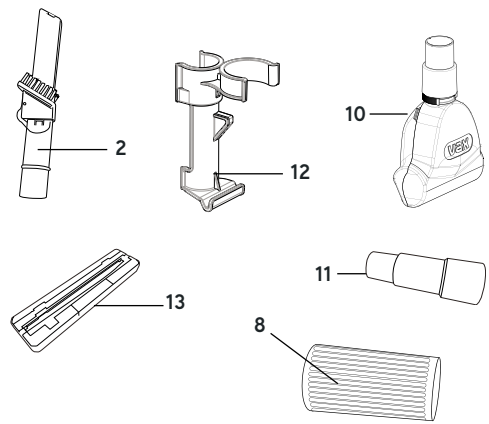

General Safety Information

This vacuum cleaner is intended for household use only and NOT for commercial or industrial use.

Please keep instructions for further use. When using the vacuum cleaner, basic safety precautions should always be observed, including the following:

1. Do not leave the vacuum cleaner unattended when plugged in. Unplug the appliance from the socket when not in use.
2. Only use the vacuum cleaner indoors on dry surfaces.
3. Turn off the on/off switch on the vacuum cleaner controls before disconnecting or connecting from the mains supply.
4. Always unplug the vacuum cleaner before connecting or disconnecting the vacuum hose and accessories.
5. Children should be supervised to ensure that they do not play with the appliance.
6. This appliance is not intended for use by children under eight years of age and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance in a safe way and understands the hazards involved.
7. Cleaning and maintenance shall not be made by children without supervision.
8. The appliance should only be used as described in the quick start guide or in the full online user guide.
9. Only Vax recommended attachments should be used with this appliance.
10. Do not use this vacuum cleaner if it has been dropped, damaged, left outdoors or dropped into water. Do not use this vacuum cleaner with a damaged cord or plug. If the supply cord is damaged return the vacuum cleaner to a Vax authorised Service Agent or a suitably qualified person for examination, repair or adjustment.
11. Do not pull or carry this appliance by the cord. Do not use the cord as a handle, close a door on the cord or pull the cord around sharp edges or corners. Do not run the vacuum cleaner over the cord. Keep the cord away from heated surfaces.
12. Do not handle the plug or the vacuum cleaner with wet hands.
13. Keep hair, loose clothing, fingers and all parts of the body away from openings and moving parts.
14. Do not vacuum any hot coals, cigarette butts, matches or any hot, smoking or burning objects.
15. Do not vacuum any flammable or combustible materials (lighter fluid, petrol, kerosene etc.) or use in the presence of explosive liquids or vapours.
16. Do not vacuum up harmful or toxic material (chlorine, bleach, ammonia, drain cleaner etc.)
17. Do not vacuum up hard or sharp objects such as glass, nails, screws, coins etc.
18. Store the vacuum cleaner in a cool, dry area.
19. Use only CE approved 13 amp extension cords. Non-approved cords may overheat. Care should be taken to arrange the cord so that the cord cannot be tripped over.
20. Do not put any objects into openings. Do not use with any openings blocked and do not restrict airflow. Keep all openings free of dust, lint, hair or anything that might reduce airflow.
21. Do not use without all of the filters in place.
22. Take extra care when vacuuming on the stairs.
23. Keep vacuuming area well lit.

Initial setup for normal operation


1. Use the base accessories.
 - a) Shortest hose
 - b) Extension tube set to shortest practicable length.
2. Clean filters installed.
3. Dust receptacle empty.
4. All Bleeds must be closed.
5. Variable Power set to Maximum.
6. Floor heads/tools set to Carpet Mode for carpet cleaning.
7. Mechanical Agitation turned ON for carpet cleaning.
8. Floor heads/tools set to Hard Floor Mode for hard floor cleaning.
9. Mechanical Agitation turned OFF for hard floor cleaning.

Getting Started


PLEASE READ SAFETY INFORMATION BEFORE USE (p3)

Before plugging the cord into the electrical socket, make sure the switch is in the 'off' position.


Assembling your upright

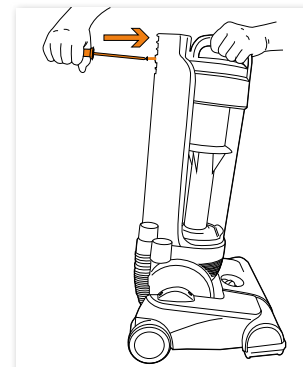


Using a crosshead screwdriver, remove the screw from the back of the unit as shown.

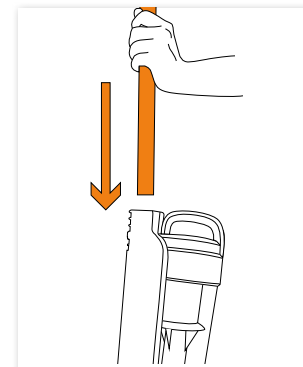


Slide the handle down onto the main body of the unit.

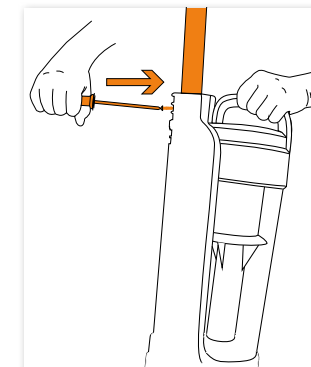


Return the screw and tighten, securing the handle into the main body of the unit.

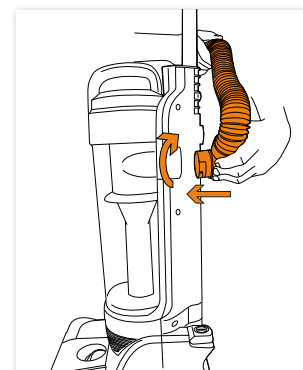

Connect the upper hose to the upper hose connector, rotate hose clockwise to secure.

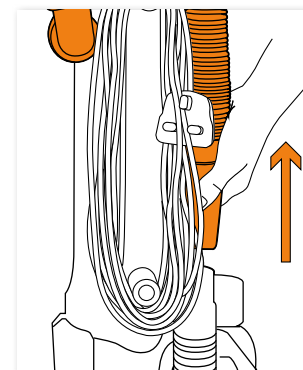


Wrap the hose around the machine and insert the lower hose to the lower hose connector.

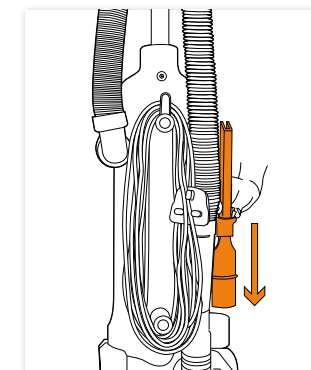

Place the 2-in-1 tool into the holder.

How to Use


Attaching the TurboTool holder

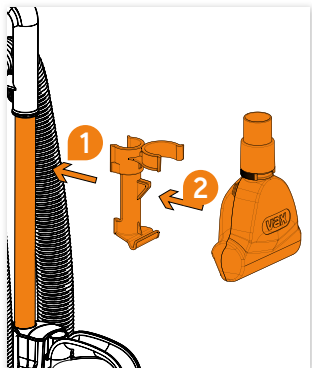


Attach the TurboTool holder to handle. Then fit the TurboTool to the TurboTool holder.

Using the Hard Floor Adaptor

Apply the Hard Floor Adaptor for optimum results on hard floors. The Hard Floor Adaptor can be used on any floor setting.

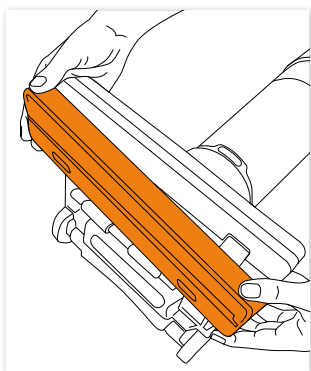


Lie vacuum cleaner on its back exposing brush bar

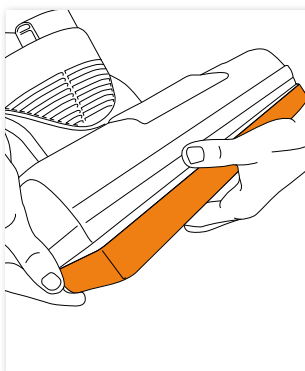


Align Hard Floor Adaptor with base of vacuum cleaner, push until its clicks into place

How to Use

Operating the appliance

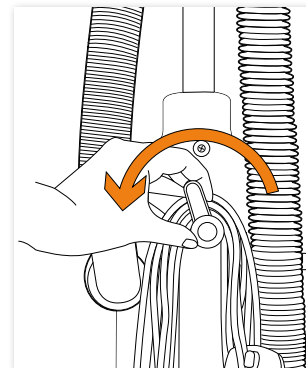


Twist the upper cord wrap to fully unwrap the cord then plug the unit into the electrical socket and turn on.

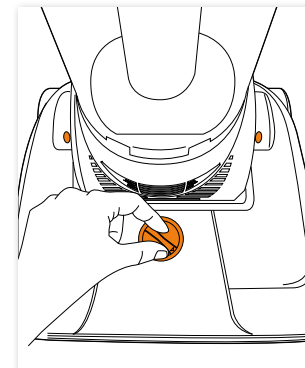


IMPORTANT: Vax recommends that you raise the height of the brush bar to the hard floor position when using this cleaner on lino and hard floor due to constant rotation. Vax cannot be held responsible for damage to these surfaces if the consumer fails to take notice of this recommendation.

Select a floor height setting by adjusting the brush bar height.
High – long carpet pile.
Low – short carpet pile.
Hard floors – see 'Using the Hard floor adaptor

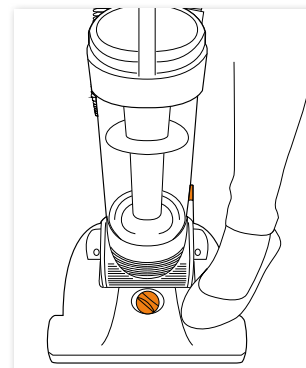


Place foot on the vacuum to recline the vacuum body as desired.

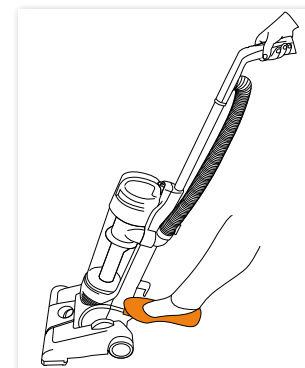

Place foot on the on/off button to switch the vacuum cleaner on.

How to Use

Using the accessories

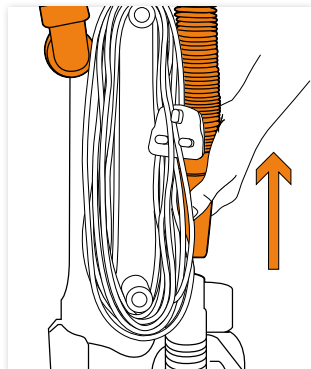


Pull out the lower hose from the lower hose connector.




Choose an accessory.




Attach accessory to hose end

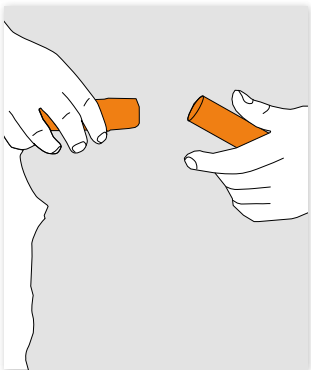

If required use tool connector

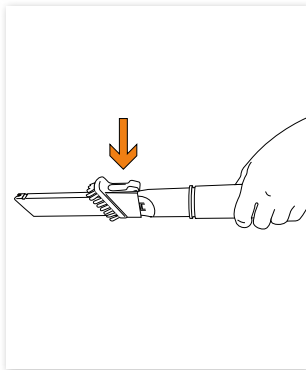

To use the 2-in-1 dusting brush, push the tab and slide up the dusting brush until it clicks into place.

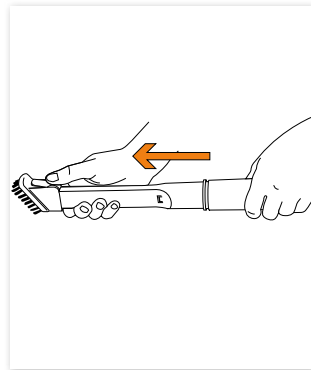


IMPORTANT: When the vacuum cleaner is stood in the upright position, or when using the hose and tools, the brush bar height adjust must be set to the highest position.


Looking After Your Machine

Emptying and cleaning the dirt container

Always switch off the appliance and unplug the mains socket before carrying out any maintenance.

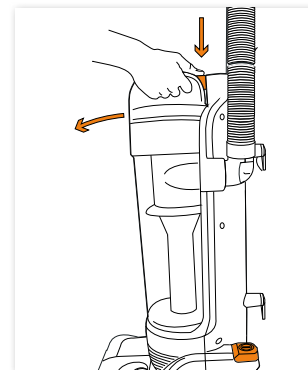


Press dirt container release button to remove the dirt container.

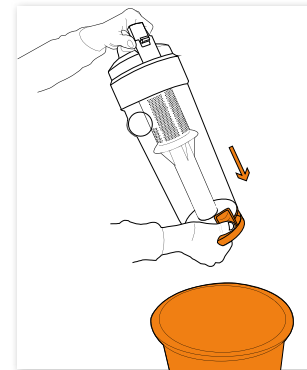


Hold dirt container over a bin and press the dirt container latch to open, allowing dirt to fall out.

Cleaning the separator

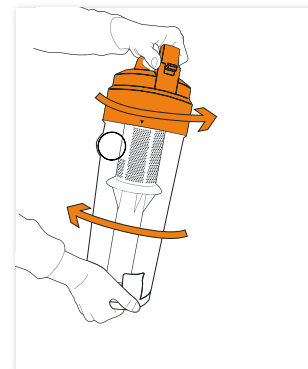

Turn the lid of the dirt container anticlockwise to remove.

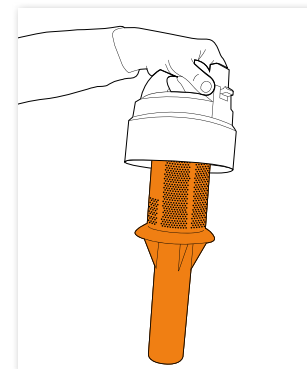


Wipe the separator with a cloth to remove any dirt.


Looking After Your Machine

Cleaning the HEPA filter

IMPORTANT: It is very important to keep the filters clean to maintain maximum performance of the vacuum. Vax recommend that your filters should be cleaned at least every 3 months (depending on the level of use). Do not use detergent to clean the filters.

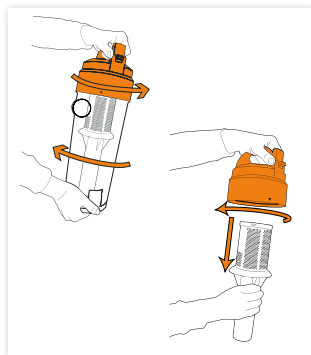

Turn the lid of the dirt container anticlockwise to remove the lid. Then turn the separator clockwise to remove filter from the dirt container lid.

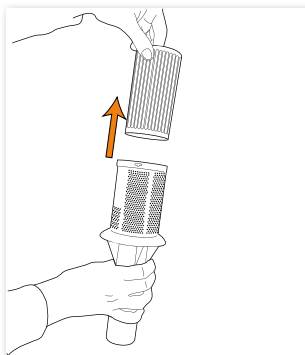

Remove the HEPA central filter from the separator.



Tap the HEPA central filter against a bin to release dirt and then return to the unit.

Clearing blockages

Hose blockages


The flexible hose may be disconnected from the vacuum cleaner. Carefully remove any blockages found and reconnect the hose securely.

Accessory blockages


Remove accessory from the hose. Carefully remove the blockage and return to the cleaner.

Looking After Your Machine


TurboTool blockages

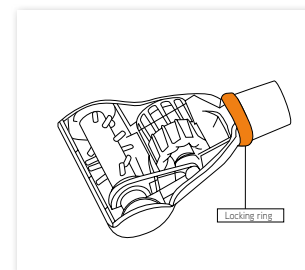

Slide off the locking ring.

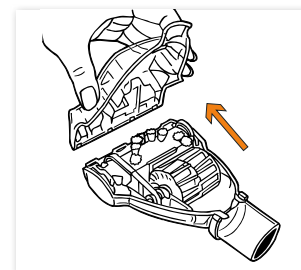


Detach lower housing and remove blockage.

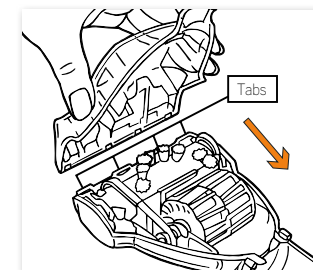


To re-assemble the TurboTool, ensure that the tabs are engaged and pivot the lower housing closed. Slip the locking ring over the neck of the TurboTool and into the groove to secure.


Replacing the belt

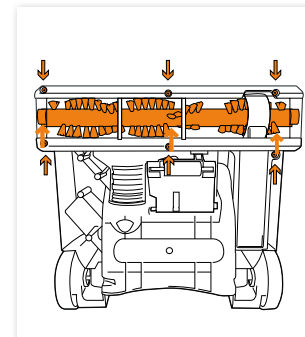

Turn unit over and remove the six screws using a crosshead screwdriver as indicated by arrows.

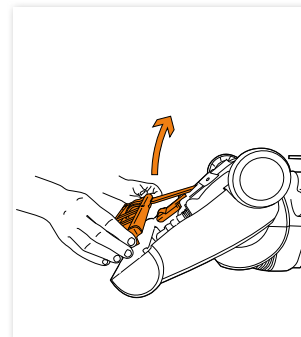

Remove the brushbar cover from the base of the unit.

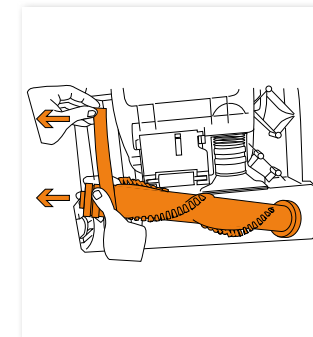

Lift the brush bar out of the base of the unit. Next, remove the belt from the brushbar and from the motor spindle towards the rear of the floor head. Replace the belt.

WARNING: To reduce the risk of personal injury, unplug the vacuum cleaner before performing maintenance/troubleshooting checks.

Is there an accessory missing?

- Check the 'Machine Overview' page in this guide to make sure the part is definitely included in your unit.
- If it is missing, we're here to help. Simply call us on **0844 412 8455**

Why won't the vacuum cleaner pick up?

- The Filters may be clogged: Refer to the Maintenance sections (Page 5).
- The Dirt Container is full or blocked: Refer to the Maintenance sections (Page 5).
- The Dirt Container may be incorrectly installed: Refer to the Maintenance sections (Page 5).

Why is dust escaping from the vacuum?

- The filters may not be installed correctly. Refer to the Maintenance sections (Page 5).
- The Dirt container may be incorrectly installed: Remove the Dirt Container from the unit by pressing the Dirt Container Release Button (6) and reattach it to the unit, ensuring it is locked firmly back into place.
- The filters may be clogged: Refer to the Maintenance sections (Page 5).

What do I do if an accessory/the unit becomes damaged or broken?

- Visit **www.vax.co.uk** for parts and spares.
- Please call our Vax careline to purchase new spares or order a replacement: **0844 412 8455**

Why will the vacuum cleaner not run?

- It may not be plugged into the electrical socket correctly: Ensure that the plug is pushed into the electrical socket securely
- The electrical socket may not be working: Check the fuse or breaker and consult an electrician.
- The motor Thermostat may have tripped: Switch off and unplug the vacuum cleaner. Leave for one hour before switching the vacuum cleaner back on.

UK Service & Help

Any queries or concerns about using your Vax, simply visit; **vax.co.uk/support** – **vaxireland.ie** or call the Vax Careline. Calls are charged at the UK local rate. Please make a note of the serial number and model number of the vacuum cleaner before calling.

Vax Careline:
(UK) 0844 412 8455
(ROI) 1-800 928 308

Monday-Friday 8.30am to 6.30pm
Saturday 9.00am to 5.00pm

Consumables

To purchase spares and accessories, please visit vax.co.uk

The use of genuine Vaux spare parts helps to maintain optimised performance and validates your guarantee

Filter kit: (Type 94) 1-1-134293-00
Belt kit: (Type 17) 1-1-132048-00

Technical Specification

Voltage:	220-240V -50Hz
Wattage:	850W
Capacity:	2.4L
Cord length:	7m
Weight:	4.7kg (dependant on model)

Subject to technical change without notice.



EEC Statement of Compliance

Manufacturer/EEC importer: Vax Limited, hereby on our own responsibility, declare that the **U86-E1e Series** is manufactured in compliance with the following Directives:

Safety: 2006/95/EC Low Voltage Directive

EMC: 2004/108/EC Electromagnetic Compatibility Directive



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.



It's quick and easy to register for your
FREE 2 year guarantee
online at: vax.co.uk/guarantees


Please retain your original receipt for proof of purchase.

UK based customer care centre — Open 6 days a week

Monday-Friday	8:30am-6:30pm
Saturday	9:00am-5:00pm

we're here if you need us

Instead of taking me back to the shop, simply visit:
vax.co.uk/support or call (UK) 0844 412 8455 (ROI) 1-800 928 308

Let us know what you think @VaxUK 



**2 year
guarantee**



You're home.™

Vax Ltd., Kingswood Road, Hampton Lovett, Droitwich, Worcestershire, WR9 0QH, UK
email: info@vax.co.uk website: vax.co.uk