




REFRIGERATOR

Larder	1~ 2	IT
Larder	3~4	GB
Larder	5~ 6	FR
Larder	7 ~ 8	DE
Larder	9 ~10	ES
Larder	11 ~12	PT
Larder	13 ~ 14	EL
Larder	15 ~16	PL
Larder	17 ~ 18	CZ
Larder	19 ~ 20	NL
Larder	21~22	FI
Larder	23 ~ 24	NO
Larder	25~ 26	SV
Larder	27 ~28	DA
Larder	29 ~31	DU
Larder	32 ~35	RU

Larder

Wait at least two hours before switching the appliance on, in order to ensure that the refrigerant circuit is fully efficient.

CONTROL PANEL

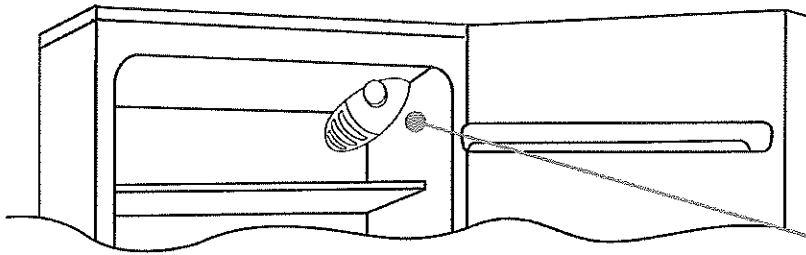


The thermostat box to control the appliance is located inside the fridge compartment on the top right. To check whether the appliance is functioning, make sure that the thermostat knob is not set on "0".

DEFROSTING and FREEZING

The rating plate states the maximum quantity of foods that can be frozen, (see "gure 2). Freezing is guaranteed with any knob setting.

(Figure 2)

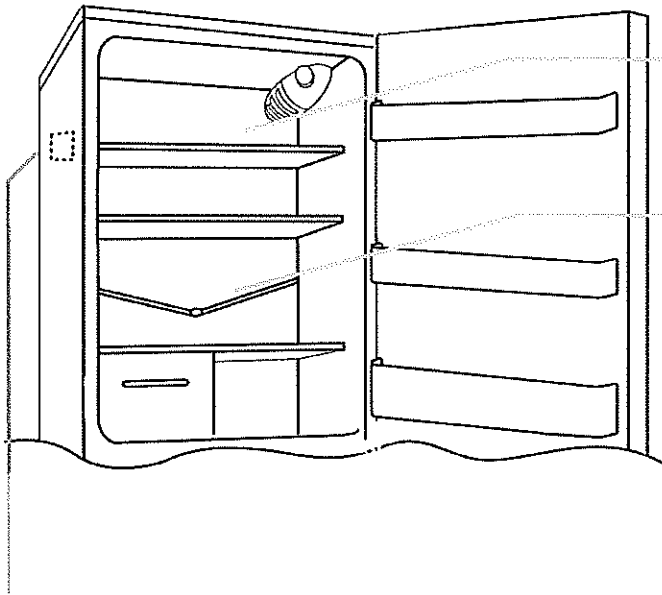


Defrosting of the fridge compartment occurs automatically in this product.

Make sure the water outlet is always clean. Make sure foods do not touch the back or sides of the fridge compartment

A small amount of frost or drops of water on the back of the fridge compartment when the fridge is working is normal

NB. This is the rating plate. If you need to contact our Service Department in the event of faults, remember to give them the information on the plate.

Important: If the room temperature is very warm, the appliance may work continuously and a layer of frost will deposit on the back of the fridge compartment. In this case, turn the knob to lower settings (1-2).

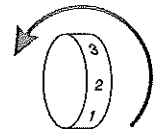

REVERSING THE OPENING OF THE DOORS

In order to reverse the opening of the doors, follow the indications in relation to the Insert and hinge type your product is made up of.

(A)

Place or tilt the fridge at a 45° angle, since it is necessary to work on the bottom of the appliance

1

Remove the bottom hinge by removing the screws, the plug and washers, then remove the bottom door

2


Remove the caps (A) and (B), loosen the screws and partially remove the panel.

3

The diagram shows three steps for reversing the door opening. Step 1: Tilt the refrigerator at a 45-degree angle. Step 2: Remove the bottom hinge by unscrewing it and removing the plug and washers. Step 3: Remove caps (A) and (B), loosen the screws, and partially remove the panel.


Unscrew the right hinge

4

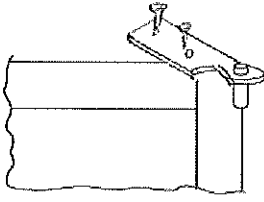

Before reassemble the hinge to the left side, reverse the direction of the hinge.

5

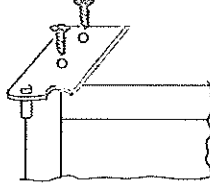

Remove the plug on the left-hand side and insert it on the right hand-side of the door.

6



Reassemble the hinges and doors working from bottom to top, 1 □ 2

7

